

Operation Guide

TASKalfa MZI0500i TASKalfa MZ9500i
TASKalfa MZ8500i TASKalfa MZ7500i

2025.12
2ZWKDEN002



Preface

Thank you for purchasing this machine.

This Operation Guide is intended to help you operate the machine correctly, perform routine maintenance, and take simple troubleshooting measures as needed so that the machine can always be used in the optimum condition.


Please read this Operation Guide before using the machine.

We recommend the use of our genuine toner containers, which have passed rigorous quality control testing, to maintain quality.

The use of non-genuine toner containers may cause failure.


We will not be liable for any damages caused by the use of third party supplies in this machine.

A label is affixed to our genuine supplies, as shown below.

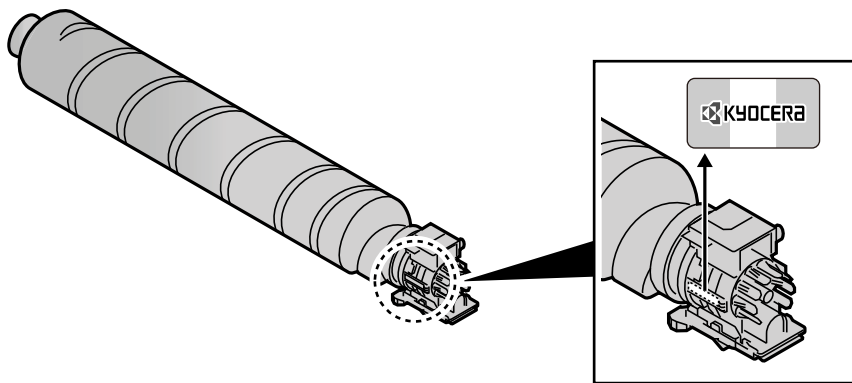

Checking the Equipment's Serial Number

The equipment's serial number is printed in the location shown in the figure.

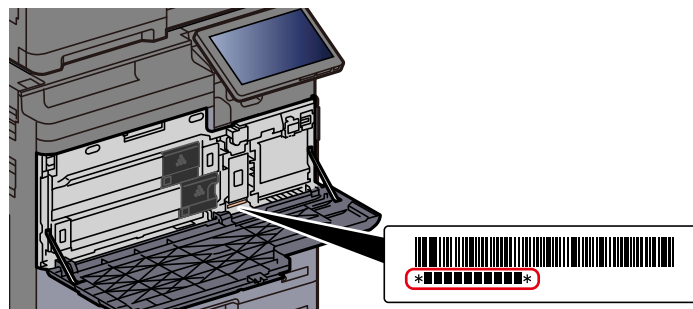

You'll need the equipment's serial number when contacting your Service Representative. Please check the number before contacting your Service Representative.

Contents

Preface	i
Contents	ii
Machine Features	xii
Optimize your office workflow	xii
Save energy and cost.....	xv
Create attractive documents	xvi
Strengthen security	xvii
Use functions more efficiently.....	xix
Color and Image Quality Functions	xxii
Basic Color Modes.....	xxii
Adjusting Image Quality and Color.....	xxiii
Guides Provided with the Machine	xxv
About the Operation Guide (this Guide)	xxvi
Structure of the guide	xxvi
Conventions Used in This Guide	xxvii
Menu Map	xxx

1 Legal and Safety Information 1-1

Notice	1-2
Safety Conventions in This Guide	1-2
Environment	1-3
Precautions for Use	1-4
Laser Safety (Europe)	1-5
SAFETY OF LASER BEAM (USA)	1-6
Safety Instructions Regarding the Disconnection of Power	1-7
Compliance and Conformity	1-7
Radio Tag Technology	1-9
Other precautions (for users in California, the United States)	1-9
Legal Restriction on Copying/Scanning	1-9
EN ISO 7779	1-9
EK1-ITB 2000	1-9
Wireless Connection (Mexico only)	1-9
Security Precautions when Using Wireless LAN (If equipped)	1-10
Limited Use of This Product (If equipped)	1-10
Legal Information	1-11
Energy Saving Control Function	1-13
Automatic 2-Sided Print Function	1-13
Resource Saving - Paper	1-13
Environmental benefits of "Power Management"	1-13
Energy Star Program (for USA, Canada Only)	1-13
Warranty (the United States and Canada)	1-14

2 Installing and Setting up the Machine 2-1

Part Names (Machine Exterior)	2-2
Part Names (Connectors/Interior)	2-4
Part Names (With Optional Equipments Attached)	2-5
Connecting the Machine and Other Devices	2-6
Connecting Cables	2-8
Connecting LAN Cable	2-8
Connecting USB Cable	2-9
Connecting the Power Cable	2-9
Power On/Off	2-10
Power On	2-10
Power Off	2-10
Using the Operation Panel	2-11
Operation Panel Keys	2-11

Adjusting the Operation Panel Angle	2-11
Touch Panel	2-12
Using the Touch Panel	2-12
Home Screen	2-14
Assigning Functions to Function Keys	2-19
Display for Device Information	2-20
Display Setting Screen	2-21
Display of Keys That Cannot Be Set	2-22
Original Preview	2-23
Enlarge the Preview Screen	2-25
Entering Numbers	2-26
Help Screen	2-28
Accessibility Functions (Magnifying the View)	2-29
Login/Logout	2-30
Login	2-30
Simple Login	2-31
Logout	2-31
Default Settings of the Machine	2-32
Setting Date and Time	2-32
Network Setup	2-33
Configuring the Wired Network	2-33
Configuring the Wireless Network	2-35
Setting Wi-Fi Direct	2-41
Configuring NFC	2-43
Motion Sensor	2-44
Energy Saver function	2-45
Low Power Mode	2-45
Sleep	2-46
Auto Sleep	2-46
Sleep Rules (models for Europe)	2-46
Sleep Level (Energy Saver) (models except for Europe)	2-47
Energy Saver Recovery Level	2-47
Weekly Timer Settings	2-47
Power Off Timer (models for Europe)	2-47
Quick Setup Wizard	2-48
Configuring Settings Quick Setup Wizard	2-50
Installing Software	2-51
Published Software (Windows)	2-51
Installing Software in Windows	2-52
Uninstalling the Software	2-57
Installing Software in Mac Computer	2-58
Setting TWAIN Driver	2-62
Setting WIA Driver	2-64
Checking the Counter	2-65
Additional Preparations for the Administrator	2-66
Administrator Privileges Overview	2-66
Log in as Machine Administrator or Administrator	2-66
Strengthening the Security	2-67
Command Center RX	2-69
Accessing Command Center RX	2-70
Changing Security Settings	2-71
Changing Device Information	2-72
E-mail Settings	2-73
Registering Destinations	2-77
Creating a New Custom Box	2-78
Printing a Document Stored in a Custom Box	2-79
Transferring Data from Our Other Products	2-80
Migrating the Address Book	2-80

3	Preparation before Use	3-1
	Loading Paper	3-2
	Precaution for Loading Paper	3-3
	Loading in Cassettes	3-4
	Loading Envelopes or Cardstock in the Cassettes	3-7
	Loading in the Large Capacity Feeder	3-11
	Loading Paper in the Multipurpose Tray	3-13
	Loading in the Side Feeder (3,000-sheet)	3-18
	Loading in the Side Feeder (3,500-sheet)	3-20
	Loading Envelopes or Cardstock in the Side Feeder (3,500-sheet)	3-23
	Loading in the Inserter	3-26
	Specifying Paper Size and Media Type	3-27
	Using Media Catalog	3-31
	About Media Catalog	3-31
	Link Media Catalog and Paper Source	3-32
	Correct Paper Skewing	3-34
	Adjust the Print Position to Correct Image Misalignment	3-36
	Precautions for Outputting Paper	3-41
	Right Tray	3-41
	Finisher Tray B	3-42
	Folding Unit (For Finisher)	3-43
	Preparation for Sending a Document to a Shared Folder in a PC	3-44
	Making a Note of the Device Name and Full Device Name	3-44
	Making a Note of the User Name and Domain Name	3-45
	Creating a Shared Folder, Making a Note of a Shared Folder	3-46
	Configuring Windows Firewall	3-50
	Scan to Folder Setup Tool for SMB	3-54
	Registering Destinations in the Address Book	3-59
	Adding a Destination (Common Address Book)	3-59
	Adding a Destination (Departmental Address Book)	3-67
	Adding a Destination on One Touch Key	3-77
4	Printing from PC	4-1
	Printer Driver Print Settings Screen	4-2
	Displaying the Printer Driver Help	4-3
	Changing the Default Printer Driver Settings (Windows)	4-3
	Printing from PC	4-4
	Printing on Standard Sized Paper	4-4
	Printing on Non-standard Sized Paper	4-6
	Printing with Universal Print	4-9
	Banner Printing	4-12
	Canceling Printing from a Computer	4-18
	Printing from the Handheld Device	4-19
	Printing by AirPrint	4-19
	Printing by Mopria	4-19
	Printing with Wi-Fi Direct	4-19
	Printing with NFC	4-19
	Printing Data Saved in the Printer	4-20
	Specifying the Job Box from a Computer and Storing the Job	4-20
	Printing Documents from Private Print Box	4-21
	Deleting the Documents Stored in the Private Print Box	4-21
	Printing Document from Stored Job Box	4-22
	Deleting the Documents Stored in the Stored Job Box	4-23
	Printing Document from Quick Copy Box	4-24
	Deleting the Documents Stored in the Quick Copy Box	4-24
	Printing Document from Proof and Hold Box	4-25
	Deleting the Documents Stored in the Proof and Hold Box	4-25
	Printing Documents from PIN Print Box	4-26
	Deleting the Documents Stored in the PIN Print Box	4-26

Printing Document from the Universal Print box	4-27
Deleting the Documents Stored in the Universal Print Box	4-28
Monitoring the Printer Status (Status Monitor)	4-29
Accessing the Status Monitor	4-29
Exiting the Status Monitor	4-29
Quick View State	4-29
Printing Progress Tab	4-30
Paper Tray Status Tab	4-30
Toner Status Tab	4-30
Alert Tab	4-31
Status Monitor Context Menu	4-31
Status Monitor Notification Settings	4-32

5 Operation on the Machine 5-1

Loading Originals	5-2
Placing Originals on the Platen	5-2
Loading Originals in the Document Processor	5-4
Favorites	5-7
Registering Favorites	5-8
Recalling Favorites	5-8
Editing Favorites	5-9
Deleting Favorites	5-9
Application	5-10
Installing Applications	5-10
Activating Applications	5-11
Deactivating Applications	5-11
Uninstalling Applications	5-12
Registering Shortcuts	5-13
Adding Shortcuts	5-13
Editing Shortcuts	5-14
Deleting Shortcuts	5-14
Copying	5-15
Basic Operation	5-15
Proof Copy	5-17
Interrupt Copy	5-18
Canceling Jobs	5-18
Frequently-Used Sending Method	5-19
Sending Document via E-mail	5-20
Sending Document to Desired Shared Folder on a Computer (Scan to PC)	5-22
Sending Document to Folder on an FTP Server (Scan to FTP)	5-25
Scanning using TWAIN or WIA	5-27
Scanning Document stored in a Custom Box	5-28
Scan to Cloud Function (Kyocera Cloud Capture)	5-29
Uploading Scanned Data to Google Drive	5-29
Useful Sending Method	5-32
WSD Scan	5-33
Installing the Driver (for Windows)	5-33
Executing WSD scan	5-34
Scanning with File Management Utility	5-35
Using MultiCrop Scan	5-36
Sending to Different Types of Destinations (Multi Sending)	5-38
Send to Me (Email)	5-39
Using a Fax Server to Send (Fax Server Send)	5-40
Canceling Sending Jobs	5-42
Handling Destination	5-43
Specifying Destination	5-43
Choosing from the Address Book	5-43
Choosing from the One Touch Key	5-46
Choosing from the Search (No.)	5-46

Checking and Editing Destinations	5-47
Confirmation Screen of Destinations	5-48
Re-enter new recipient information.	5-49
Recall	5-49
How to use the FAX Function	5-50
Using Document Boxes	5-51
What is Custom Box?	5-51
What is Job Box?	5-51
What is USB Drive Box?	5-52
What is a Fax Memory RX Box/F-Code Communication Box/Polling Box?	5-52
Basic Operation for Document Box	5-53
Creating a New Custom Box	5-58
Editing Custom Box	5-59
Deleting Custom Box	5-60
Storing Documents to a Custom Box	5-60
Printing Documents in Custom Box	5-61
Saving Scanned Documents to a Custom Box	5-62
Sending Documents in Custom Box	5-63
Sending Documents in Custom Box to E-mail Address of Logged in User	5-64
Moving Documents in Custom Box	5-64
Copying Documents in Custom Box into Other Boxes	5-65
Copying Documents in Custom Box to USB Drive	5-65
Joining Documents in Custom Box	5-66
Deleting Documents in Custom Box	5-67
Job Box	5-68
Outputting Repeat Copy Jobs	5-68
Form for Form Overlay	5-69
Operating using Removable USB Drive	5-70
Printing Documents Stored in Removable USB Drive	5-71
Saving Documents to USB Drive (Scan to USB)	5-72
Check the USB Drive Information	5-73
Removing USB Drive	5-73
Using the Internet Browser	5-74
Launching and Exiting the Browser	5-74
Using the Browser Screen	5-75
Manual Staple	5-76

6 Using Various Functions 6-1

Functions Available on the Machine	6-2
About Functions Available on the Machine	6-2
Copy	6-2
Send	6-6
Custom Box (Store File, Printing, Send)	6-10
USB Drive (Store File, Printing Documents)	6-16
Functions	6-19
Original Size	6-20
Paper Selection	6-21
Mixed Size Originals	6-23
Original Orientation	6-26
Fold	6-27
Collate/Offset	6-29
Staple/Punch	6-30
Paper Output	6-34
ID Card Copy/Scan	6-35
Org. Manual Feed (DP)	6-35
Zoom	6-36
Combine	6-38
Margin/Centering, Margin, Centering	6-40
Border Erase, Border Erase/Full Scan	6-41

Erase Shadowed Areas	6-43
Booklet	6-43
Duplex	6-48
Cover	6-51
Form Overlay	6-52
Page #	6-53
Memo Page	6-55
Insert Sheets/Chapters	6-56
Image Repeat	6-57
Text Stamp	6-58
Bates Stamp	6-61
Density	6-64
Original Image	6-64
Color Selection	6-66
EcoPrint	6-66
Sharpness	6-67
Background Density Adj. (Background Density Adjustment)	6-67
Saturation	6-68
Prevent Bleed-thru	6-68
Contrast	6-69
Erase Colors	6-69
Continuous Scan	6-70
Auto Image Rotation	6-70
Negative Image	6-71
Mirror Image	6-71
Job Finish Notice	6-71
File Name Entry	6-72
Priority Override	6-72
Repeat Copy	6-72
DP Read Action	6-73
Detect Multi-fed Originals	6-73
Detect Stapled Originals	6-73
Detect Scan Failure	6-74
Skip Blank Page	6-74
Document Processor Straight Path	6-74
2-sided/Book Original	6-75
Sending Size	6-76
Long Original	6-76
File Format	6-77
File Separation	6-84
Scan Resolution	6-84
Clarify Text (Noise Removal)	6-84
Email Subject/Body	6-85
Send and Print	6-85
Send and Store	6-85
FTP Encrypted TX	6-86
Email Encrypted TX	6-86
Digital Signature Email	6-87
Handwriting Enhancement	6-88
File Size Confirmation	6-88
Delete after Printed	6-88
Delete after Transmitted	6-88
Storing Size	6-89
Encrypted PDF Password	6-89
JPEG/TIFF Print	6-90
XPS Fit to Page	6-90

7	Status/Job Cancel	7-1
	Checking Job Status	7-2
	Details of the Status Screens	7-3
	Checking Detailed Information of Jobs	7-8
	Checking Job History	7-9
	Checking the Detailed Information of Histories	7-10
	Sending the Log History	7-10
	Job Operation	7-11
	Pause and Resumption of Jobs	7-11
	Canceling of Jobs	7-11
	Priority Override for Waiting Jobs	7-11
	Reordering Print Jobs	7-12
	Device Information	7-13
	Updating the Software	7-15
	Checking the Remaining Amount of Toner and Paper (Supplies/Paper)	7-16
	Checking the CO2 Emission Chart	7-17
8	Setup and Registration (System Menu)	8-1
	System Menu	8-2
	Operation Method	8-2
	System Menu Settings	8-4
	Device Settings	8-7
	Notification/Report	8-27
	Function Settings	8-35
	Network Settings	8-57
	Security Settings	8-75
	Job Accounting/Authentication	8-91
	Add/Delete Application	8-91
	Adjustment/Maintenance	8-92
9	User Authentication and Accounting (User Login, Job Accounting) .	
9-1		
	Overview of User Login Administration	9-2
	Managing the Job Account from PC	9-2
	Enabling User Login Administration	9-3
	Setting User Login Administration	9-4
	Authentication Security	9-4
	Adding a User (Local User List)	9-6
	Changing User Properties	9-8
	Delete a user	9-9
	User Login Administration for Printing	9-10
	Managing the Users to Scan Using TWAIN	9-11
	Managing the Users to Scan Using WIA	9-12
	Managing the Users that Send Faxes from a PC	9-13
	Local Authorization	9-14
	Server Settings	9-15
	Configuring Network User Privileges	9-16
	Group Authorization Settings	9-17
	Guest Authorization Settings	9-19
	Obtain NW User Property	9-21
	Simple Login Settings	9-22
	ID Card Settings	9-25
	PIN Login	9-27
	Using User Login Administration	9-28
	Login/Logout	9-28
	Overview of Job Accounting	9-29
	To Manage the Number of Sheets Used on Jobs Printed from a PC	9-29

Enabling Job Accounting	9-31
Job Accounting (Local)	9-32
Adding an Account	9-32
Restricting the Use of the Machine	9-33
Editing an Account	9-34
Deleting an Account	9-34
Job Accounting for Printing	9-35
Job Accounting for Scan Using TWAIN	9-36
Job Accounting for Scan Using WIA	9-37
Job Accounting for the FAX Transmitted from a Computer	9-38
Configuring Job Accounting	9-39
Default Counter Limit	9-39
Count by Paper Size	9-40
Counting the Number of Pages Printed	9-41
Print Accounting Report	9-43
Using Job Accounting	9-44
Login	9-44
Logout	9-44
Apply Limit	9-45
Copier/Printer Count	9-46
Unknown User Settings	9-47
Unknown ID Job	9-47
Registering Information for a User whose ID is Unknown	9-48

10 Troubleshooting 10-1

Regular Maintenance	10-2
Cleaning	10-2
Cleaning Glass Platen	10-2
Cleaning inside of the Document Processor	10-2
Cleaning Slit Glass	10-3
Toner Container Replacement	10-4
Replace the Waste Toner Box	10-7
Loading Paper	10-9
Replacing Staples (65-sheet Staple Finisher)	10-10
Replacing Staples (100-sheet Staple Finisher)	10-11
Replacing Staples (Folding Unit)	10-13
Disposing of the Staple Waste (100-sheet Staple Finisher)	10-15
Disposing of the Punch Waste	10-17
Troubleshooting	10-19
Solving Malfunctions	10-19
Machine Operation Trouble	10-19
Printed Image Trouble	10-24
Remote Operation	10-26
Responding to Messages	10-28
Adjustment/Maintenance	10-47
Overview of Adjustment/Maintenance	10-47
Tone Curve Adjustment	10-48
Image Adjustment	10-52
Calibration	10-53
Clearing Paper Jams	10-54
Jam Location Indicators	10-54
Remove any jammed paper in Cassette 1	10-57
Remove any jammed paper in Cassette 2	10-59
Remove any jammed paper in Cassette 3	10-61
Remove any jammed paper in Cassette 4	10-63
Remove any jammed paper in Cassette 5 (Side Feeder (3,000-sheet))	10-66
Remove any jammed paper in Cassette 5 (Side Feeder (3,500-sheet))	10-67
Remove any jammed paper in the Multipurpose Tray	10-69
Remove any jammed paper in Right Cover 1	10-70

Remove any jammed paper in Right Cover 2	10-73
Remove any jammed paper in the Upper Left Tray/Finisher (Tray C)	10-74
Remove any jammed paper in the Lower Left Tray	10-76
Remove any jammed paper in the Right Tray	10-77
Remove any jammed paper in the Document Processor	10-78
Remove any jammed paper in the Inserter	10-81
Remove any jammed paper in the Finisher (Inner)	10-84
Remove any jammed paper in the Finisher (Tray A)	10-86
Remove any jammed paper in the Finisher (Tray B)	10-90
Remove any jammed paper in the Mailbox	10-93
Remove any jammed paper in the Folding Unit (Finisher)	10-94
Remove any jammed paper in the Folding Tray (Finisher)	10-101
Clearing a Staple Jam	10-105
Clearing a Staple Jam of the 65-sheet Staple Finisher	10-105
Clearing a Staple Jam of the 100-sheet Staple Finisher	10-107
Clearing a Staple Jam of the Folding Unit (Finisher)	10-110

11	Appendix	11-1
	Optional Equipment	11-2
	Overview of Optional Equipment	11-2
	Applications	11-7
	Starting Application Use	11-7
	Checking Details of Application	11-8
	Character Entry Method	11-9
	Entry Screens	11-9
	Entering Characters	11-11
	Paper	11-12
	Basic Paper Specifications	11-12
	Choosing the Appropriate Paper	11-13
	Special Paper	11-16
	Specifications	11-20
	Machine	11-20
	Copy Functions	11-23
	Printer Functions	11-24
	Scanner Functions	11-25
	Document Processor	11-25
	Side Feeder (3,000-sheet)	11-26
	Side Feeder (3,500-sheet)	11-26
	65-sheet Staple Finisher	11-27
	100-sheet Staple Finisher	11-28
	Punch Unit (For Finisher)	11-28
	Mailbox (For Finisher)	11-29
	Folding Unit (For Finisher)	11-29
	Z-Fold (For Finisher)	11-30
	Banner Tray	11-30
	Inserter Tray (For Finisher)	11-31
	Backing up your data	11-32
	Backing up your data using KYOCERA Net Viewer	11-32
	Backing up your data using Command Center RX	11-32
	Backing up your date using USB Drive	11-32
	Functions List of Security Quick Setup	11-33
	TLS	11-33
	Serverside Settings	11-33
	Clientside Settings	11-34
	IPv4 Settings (Wired Network)	11-34
	IPv4 Settings (Wireless Network)	11-35
	IPv6 Settings (Wired Network)	11-35
	IPv6 Settings (Wireless Network)	11-35
	Send Protocols: FTP Client (Transmission)	11-36

Other Protocols: HTTP (Client)	11-36
Other Protocols: SOAP	11-37
Other Protocols: LDAP	11-37
Send Protocols: SMTP (E-mail TX)	11-37
E-mail: POP3 User Settings	11-38
Print protocols	11-38
Send Protocols	11-39
Other Protocols	11-40
TCP/IP: Bonjour Settings	11-41
Network Settings	11-42
Connectivity	11-42
Interface Block	11-42
Energy Saver/Timer	11-43
User Account Lockout Setting	11-43
Job Status/Job Logs Settings	11-43
Edit Restriction	11-43
Prevent Mis-sending Settings	11-44
History Settings	11-45
Glossary	11-46
Index	Index-1

Machine Features

The machine is equipped with many useful functions.

➔ [Using Various Functions \(page 6-1\)](#)


Here are some examples.

Optimize your office workflow

Access to frequently used functions with just one touch (Favorites)

You can preset frequently used functions.

Once you register frequently used settings as favorite, you can call up the settings easily. Using this favorite brings the same results even if operated by another person.

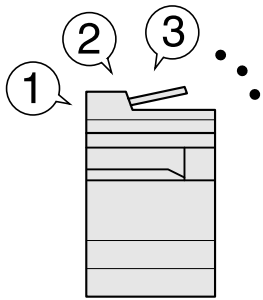


➔ [Favorites \(page 5-7\)](#)

Interrupt other running jobs and execute your copy job immediately (Interrupt Copy)

You can interrupt other running jobs and execute your copy job immediately. When other users are copying a large number of sheets, this function allows you to interrupt those jobs and make your copies immediately.


When the interruption copy ends, the machine resumes the paused print jobs.

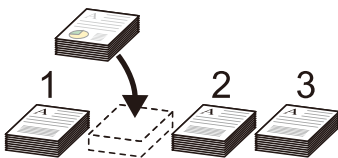

➔ [Interrupt Copy \(page 5-18\)](#)

Check the finishing before copying a large number of sheets (Proof Copy)

It is possible to copy one sheet before copying a large number of sheets. This enables you to check the contents and finishing and copy the desired number of sheets without scanning the original again if you are satisfied with the result. If you want to make changes, you can change the settings and copy only one sheet again.

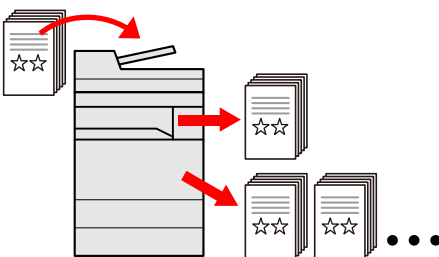


➔ [Proof Copy \(page 5-17\)](#)

Scan originals of different sizes at a time (Mixed Size Originals)

It is useful when preparing conference materials.

You can set the different sized originals at one time so you don't need to reset the originals regardless of size.

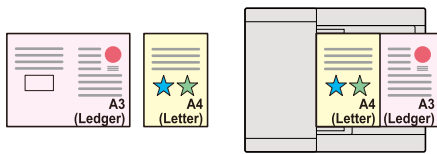


➔ [Mixed Size Originals \(page 6-23\)](#)

Scan a large number of originals in separate batches and produce as one job (Continuous Scan)

It is useful when preparing many-page handouts.

When a large number of originals cannot be placed in the document processor at one time, the originals can be scanned in separate batches and then copied or sent as one job.

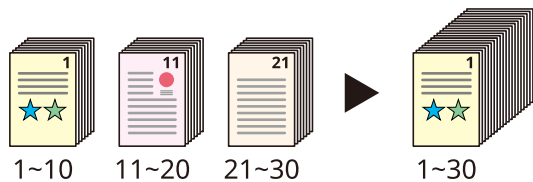


➔ [Continuous Scan \(page 6-70\)](#)

Recover from low power mode or sleep mode automatically (Motion Sensor)


This model detects that the person is approaching and recover from low power mode or sleep mode automatically.

Reduce waiting time before starting to work.

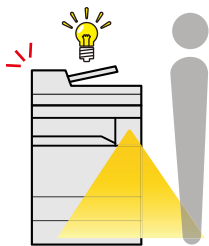

➔ [Motion Sensor \(page 2-44\)](#)

Directly upload scanned data to a cloud service

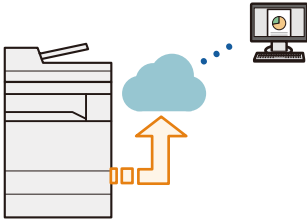


You can upload data scanned on the machine directly to cloud services. You can easily share data and access it from outside the company.

For details on how to use the cloud link function (Kyocera Cloud Capture), refer to the manual at the following URL.

<https://www.kyoceradocumentsolutions.com/re/bs001.html>

Add attribute information to scanned data and store it on a cloud service

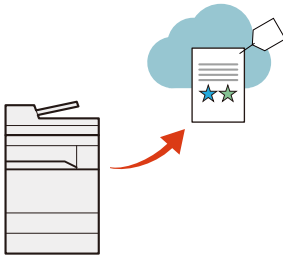

Registering the workflow, document type, and necessary attribute information in advance allows you to add the required attribute information via the panel and store documents directly on a cloud service.


For details on how to use the cloud link function (Kyocera Cloud Capture), refer to the manual at the following URL.

<https://www.kyoceradocumentsolutions.com/re/bs001.html>

Detect scan failure (image defect detection)

This function detects and notifies you of image defects due to paper creases and sticky notes.

It helps eliminate the need to manually check each page and re-scan documents.

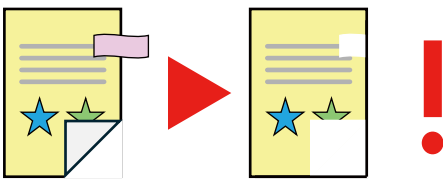


➔ [Detect Scan Failure \(page 6-74\)](#)

Save energy and cost

Save energy as needed (Energy Saver function)

The machine is equipped with Energy Saver function that automatically switched into Low Power Mode or Sleep Mode. You can set appropriate Energy Saver Recovery Level depending on the operation.


In addition, the machine can automatically be switched into Sleep and recovered at a specified time for each day of the week.

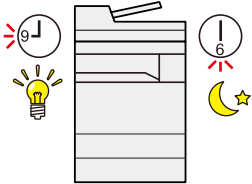

➔ [Energy Saver function \(page 2-45\)](#)

Reduce paper use (Paper Saving Printing)

You can print originals on both sides of the paper. You can also print multiple originals onto one sheet.

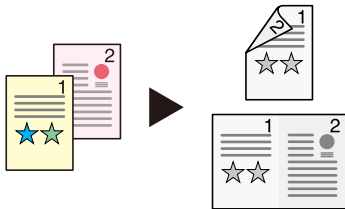


➔ [Combine \(page 6-38\)](#)

➔ [Duplex \(page 6-48\)](#)

Skip blank pages when printing (Skip Blank Page)

When there are blank pages in a scanned document, this function skips the blank pages and prints only pages that are not blank.

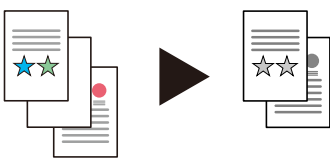


➔ [Skip Blank Page \(page 6-74\)](#)

Create attractive documents

Prevent image bleed-through (Prevent Bleed-through)


You can prevent image bleed-through from the reverse side when scanning thin originals.

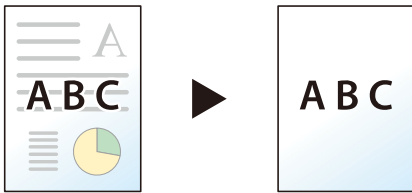

➔ [Prevent Bleed-thru \(page 6-68\)](#)

Erase the extra shaded area (Erase Shadowed Areas)

When scanning with the document processor open, erase the extra shaded area.

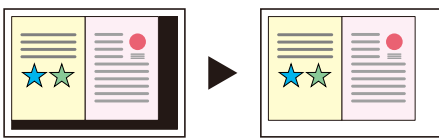


➔ [Erase Shadowed Areas \(page 6-43\)](#)

Create a booklet (Booklet)

It is useful when preparing handout. You can create a magazine, pamphlet, or other booklet from sheet originals.

Facing-page, two-sided copies of originals can be folded down the center to create a booklet.

The cover page can be printed onto colored paper or heavy paper.

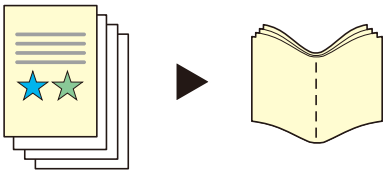

➔ [Booklet \(page 6-43\)](#)

Print a stamp on copies (Text Stamp / Bates Stamp)

It is useful when adding text or date that is not included in originals.

You can add desired text and date as a stamp.




➔ [Text Stamp \(page 6-58\)](#)

➔ [Bates Stamp \(page 6-61\)](#)

Strengthen security

Password-protect a PDF file (PDF Encryption Functions)

Use the PDF format's password security options to restrict document viewing, printing and editing.

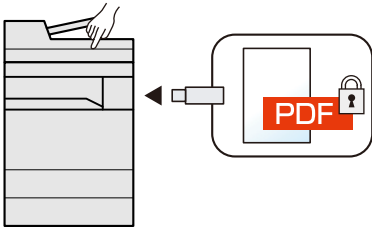


➔ [Encrypted PDF Password \(page 6-89\)](#)

Protect data on the SSD (Encryption / Overwrite)

You can overwrite the unnecessary data that remains on the SSD automatically.


To prevent an external leakage, the machine is able to encrypt data before writing it to the SSD.

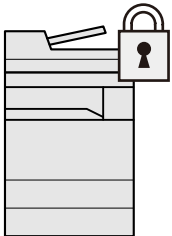

➔ [Data Security \(page 8-78\)](#)


Prevent loss of finished documents (Private Print)

Temporarily saving print jobs in the main unit document box and outputting them when in front of the device can prevent documents from being taken by others.

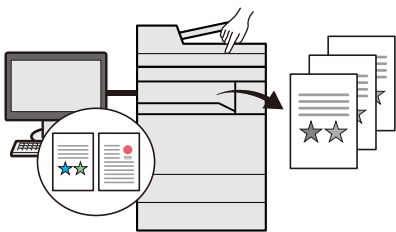

➔ [Printing Data Saved in the Printer \(page 4-20\)](#)

Log in by ID card (Card Authentication)

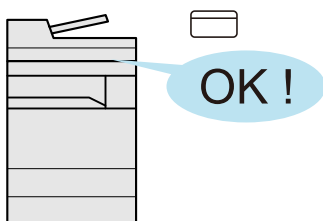


You can log in simply by touching an ID card. You don't need to enter your user name and password.

➔ [Card Authentication Kit\(B\) "Card Authentication Kit" \(page 11-6\)](#)

Strengthen security (Settings for Administrator)


Various functions are available for administrators to strengthen security.

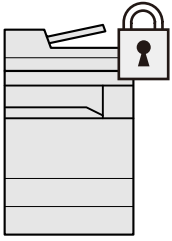

➔ [Strengthening the Security \(page 2-67\)](#)

Preventing from execution of the unauthorized programs (Allowlisting)

Execution of the unauthorized software or the tampering of the software can be prevented, and possible to maintain the reliability of the system.

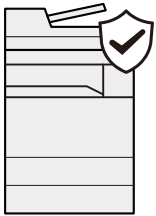

➔ [Allowlisting \(page 8-77\)](#)

Prevent leaks of confidential document data

The machine detects and notifies you of information that identifies documents as confidential during scanning.




➔ [Confidential Document Detection Setting \(page 8-83\)](#)

Use functions more efficiently

Expand functions as necessary (Application)

The functionality of the machine can be expanded by installing applications.

Applications that help you perform your daily more efficiently such as a scan feature and an authentication feature are available.

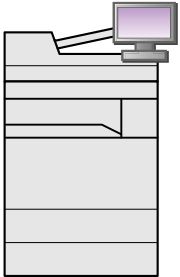


➔ [Energy Saver function \(page 2-45\)](#)

Display file size before sending / storing a job (File Size Confirmation)

You can check the file size before sending/storing the document.

If your server specifies an e-mail size limit, you can check and change the size in advance.

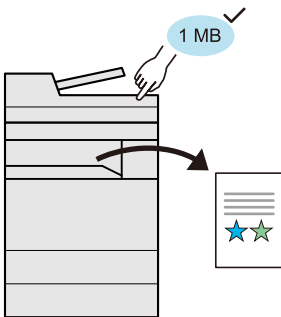

➔ [File Size Confirmation \(page 6-88\)](#)

Install the machine without concerning the network cables (Wireless Network)

If there is a wireless LAN environment, it is possible to install the unit without worrying about the network wiring. In addition, Wi-Fi Direct, etc. are supported.




➔ [Configuring the Wireless Network \(page 2-35\)](#)

➔ [Setting Wi-Fi Direct \(page 2-41\)](#)

Use USB drive (USB Drive)

It is useful when you need to print documents outside your office or you cannot print documents from your PC. You can print the document from the USB drive by plugging it directly into the machine. Original scanned at the machine can be saved in the USB drive also.

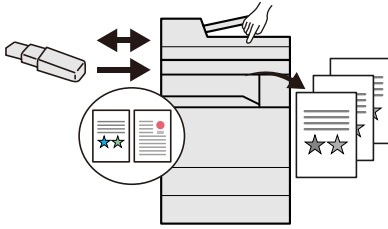


➔ [Printing Documents Stored in Removable USB Drive \(page 5-71\)](#)

➔ [Saving Documents to USB Drive \(Scan to USB\) \(page 5-72\)](#)

Specify image file format (File Format)


You can select the various file formats when sending/storing images.

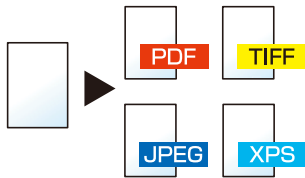

➔ [File Format \(page 6-77\)](#)

Scan the long originals (Long Original)


You can scan the long originals such as Contract and Data log.

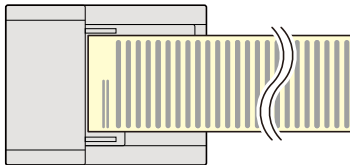

➔ [Long Original \(page 6-76\)](#)

Detect the multiple feeding of originals (Detect Multi-fed Originals)


When reading a document from the document processor, if the multiple feeding of documents is detected, then the reading stops automatically.

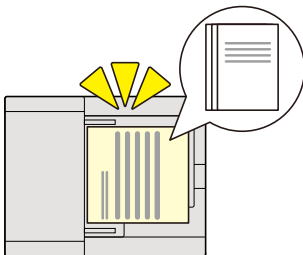

➔ [Detect Multi-fed Originals \(page 6-73\)](#)

Detect originals fastened with staples (Detect Stapled Originals)


When reading a document from the document processor, if a stapled document is detected, then the reading stops automatically.

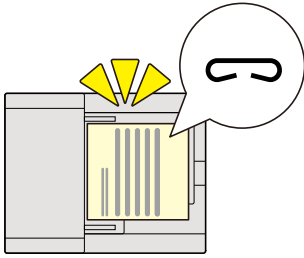

➔ [Detect Stapled Originals \(page 6-73\)](#)

Skip the error job (Job Skip Functions)


When paper empty error occurs at the cassette by specifying the special paper size or type, the machine skips the error job and perform the next job.

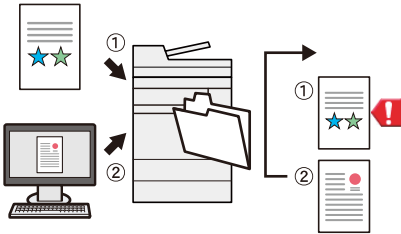

➔ [Error Job Skip \(page 8-26\)](#)

Perform remote operation (Command Center RX)

You can access to the machine remotely to print, send or download data. Administrators can configure the machine behavior or management settings.

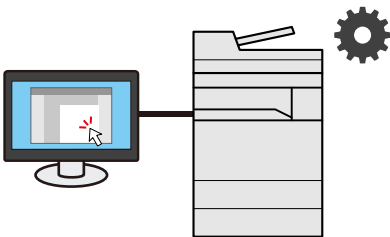

➔ [Command Center RX \(page 2-69\)](#)

Color and Image Quality Functions

The machine is equipped with various color and image quality functions. You can adjust the scanned image as desired.


Basic Color Modes

The basic color modes are as follows.

Color/Gray Color/B & W

Automatically recognizes whether a document being scanned is color or black & white.


Reference image

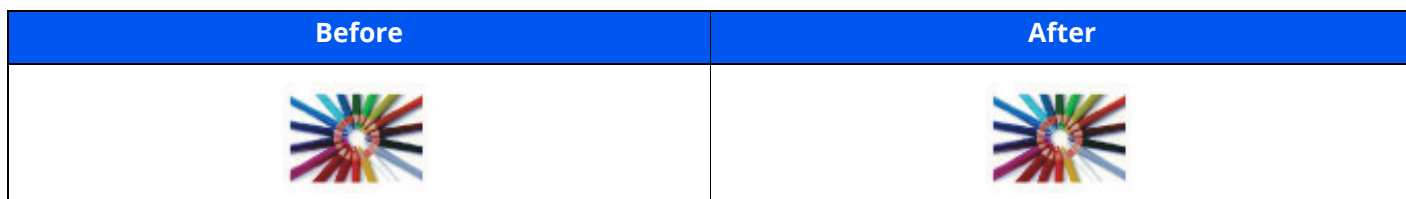

Full Color

Scans a document in full color.


Reference image

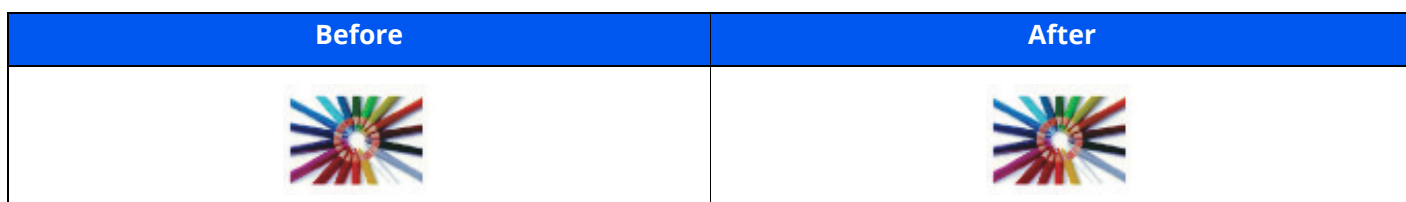

Grayscale

Scans a document in grayscale.


Reference image

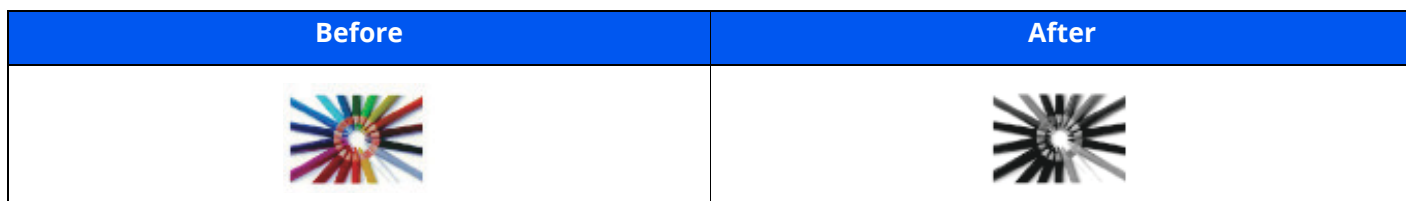

Black & White

Scans a document in black & white.

Reference image

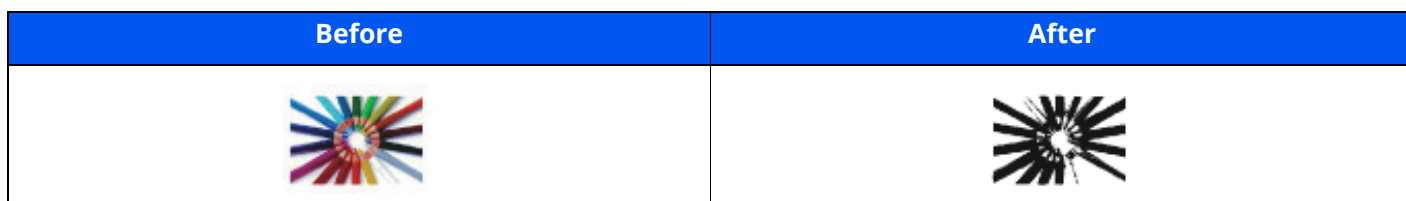





For details, refer to the following:

➔ [Color Selection \(page 6-66\)](#)

Adjusting Image Quality and Color

To adjust the image quality or color of an image, use the following functions.



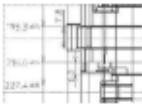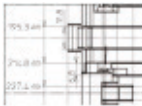







Easily adjust the image quality to match your own image

I want to...	Sample image (before)	Sample image (after)	Function
Remove dark background or bleed-through from the original such as a newspaper.			Favorites [Newspaper Copy]
Clearly reproduce fine lines, faint lines, broken lines, and other fine details in a CAD or other drawings.			Favorites [Drawing Copy]

For details, refer to the following:

[Favorites \(page 5-7\)](#)





Adjust the color precisely

I want to...	Sample image (before)	Sample image (after)	Function
Adjust the density.			Density
Emphasize or blur the image outline. Example: Emphasize the image outlines			Sharpness
Adjust the difference between dark and light parts of the image.			Contrast
Darken or lighten the background (the area with no texts or images) of a document. Example: Lightening the background			Background Density
Prevent bleed-through in 2-sided originals.			Prevent Bleed-through

For details, refer to the following:

- ➔ [Density \(page 6-64\)](#)
- ➔ [Sharpness \(page 6-67\)](#)
- ➔ [Contrast \(page 6-69\)](#)
- ➔ [Background Density Adj. \(Background Density Adjustment\) \(page 6-67\)](#)
- ➔ [Prevent Bleed-thru \(page 6-68\)](#)

Adjust the scanned image

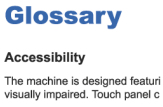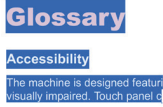I want to...	Sample image (before)	Sample image (after)	Function
<p>Decrease the file size and produce the characters clearly.</p>			<p>File format [High Comp. PDF]</p>
<p>Convert a paper document to PDF with searchable text.</p>			<p>File format [PDF] or [High Comp. PDF] with [OCR]</p>

For details, refer to the following:

➔ [File Format \(page 6-77\)](#)

Guides Provided with the Machine

The following guides are provided with the machine. Refer to each guide as needed.

The contents of the guides are subject to change without notice for the purpose of improvement of machine performance.

Printed guides

Start using the machine quickly	Quick Guide Explains how to use basic functions of the machine, how to use convenient features, how to perform routine maintenance, and what to do when problems occur.
For safe use of the machine	Safety Guide Provides safety and cautionary information for installation environment and use of the machine. Be sure to read this guide before using the machine.
	Safety Guide (TASKalfa MZ10500i/TASKalfa MZ9500i/TASKalfa MZ8500i/TASKalfa MZ7500i) Indicates the space required for machine installation, and describes the cautionary labels and other safety information. Be sure to read this guide before using the machine.

Guides (PDF) on the user support page

Use the machine thoughtfully	Operation Guide (This Guide)*¹ Explains how to load paper and perform copy, print and scan operations, and indicates default settings and other information.
Use the fax functions	FAX Operation Guide*¹ Explains how to use the fax function.
Use the ID card	Card Authentication Kit (B) Operation Guide Explains how to perform authentication using the ID card.
Strengthen security	Data Encryption/Overwrite Operation Guide Explains how to introduce and use the Data Encryption/Overwrite Function, and how to overwrite and encrypt data.
Easily register machine information and configure settings	Command Center RX User Guide Explains how to access the machine from a Web browser on your computer to check and change settings.
Print data from a computer	Printer Driver User Guide Explains how to install the printer driver and use the printer function.
Directly print a PDF file	KYOCERA Net Direct Print Operation Guide Explains how to print PDF files without launching Adobe Acrobat or Reader.
Monitor the machine and printers on the network	KYOCERA Net Viewer User Guide Explains how to monitor your network printing system (the machine) with KYOCERA Net Viewer.
Scan images and save with information	File Management Utility User Guide Explains how to use File Management Utility to set various parameters and send and save scanned documents.
Print without using the printer driver	PRESCRIBE Commands Command Reference Describes the native printer language (PRESCRIBE commands).
	PRESCRIBE Commands Technical Reference Describes the PRESCRIBE command functions and control for each type of emulation.

*1 Refer to the manual on the user support page (<https://kyocera.info/support>).

Install the following versions of Adobe Reader to view the manuals.
Version 8.0 or later

About the Operation Guide (this Guide)


Structure of the guide

The Operation Guide contains the following chapters.

Chapter		Contents
1	Legal and Safety Information	Provides precautions regarding use of the machine and trademark information.
2	Installing and Setting up the Machine	Explains part names, cable connections, installation of the software, login, logout, and other matters related to administration of the machine.
3	Preparation before Use	Explains preparations and settings that are required in order to use the machine, such as how to load paper and create an address book.
4	Printing from PC	Explains functions that are available when the machine is used as a printer.
5	Operation on the Machine	Explains the basic procedures for using the machine, such as placing originals, making copies, sending documents, and using document boxes.
6	Using Various Functions	Explains convenient functions that are available on the machine.
7	Status/Job Cancel	Explains how to check the status of a job and the job history, and how to cancel jobs being printed or waiting to print. Also explains how to check paper and toner levels, how to check the device status, and how to cancel fax transmission.
8	Setup and Registration (System Menu)	Explains System Menu and how it relates to the operation of the machine.
9	User Authentication and Accounting (User Login, Job Accounting)	Explains user login and job accounting.
10	Troubleshooting	Explains what to do when toner runs out, an error is displayed, or a paper jam or other problem occurs.
11	Appendix	Describes convenient options that are available for the machine. Provides information on media types and paper sizes, and gives a glossary of terms. Explains how to enter characters, and lists the specifications of the machine.

Conventions Used in This Guide

Adobe Reader is used as an example in the explanations below.

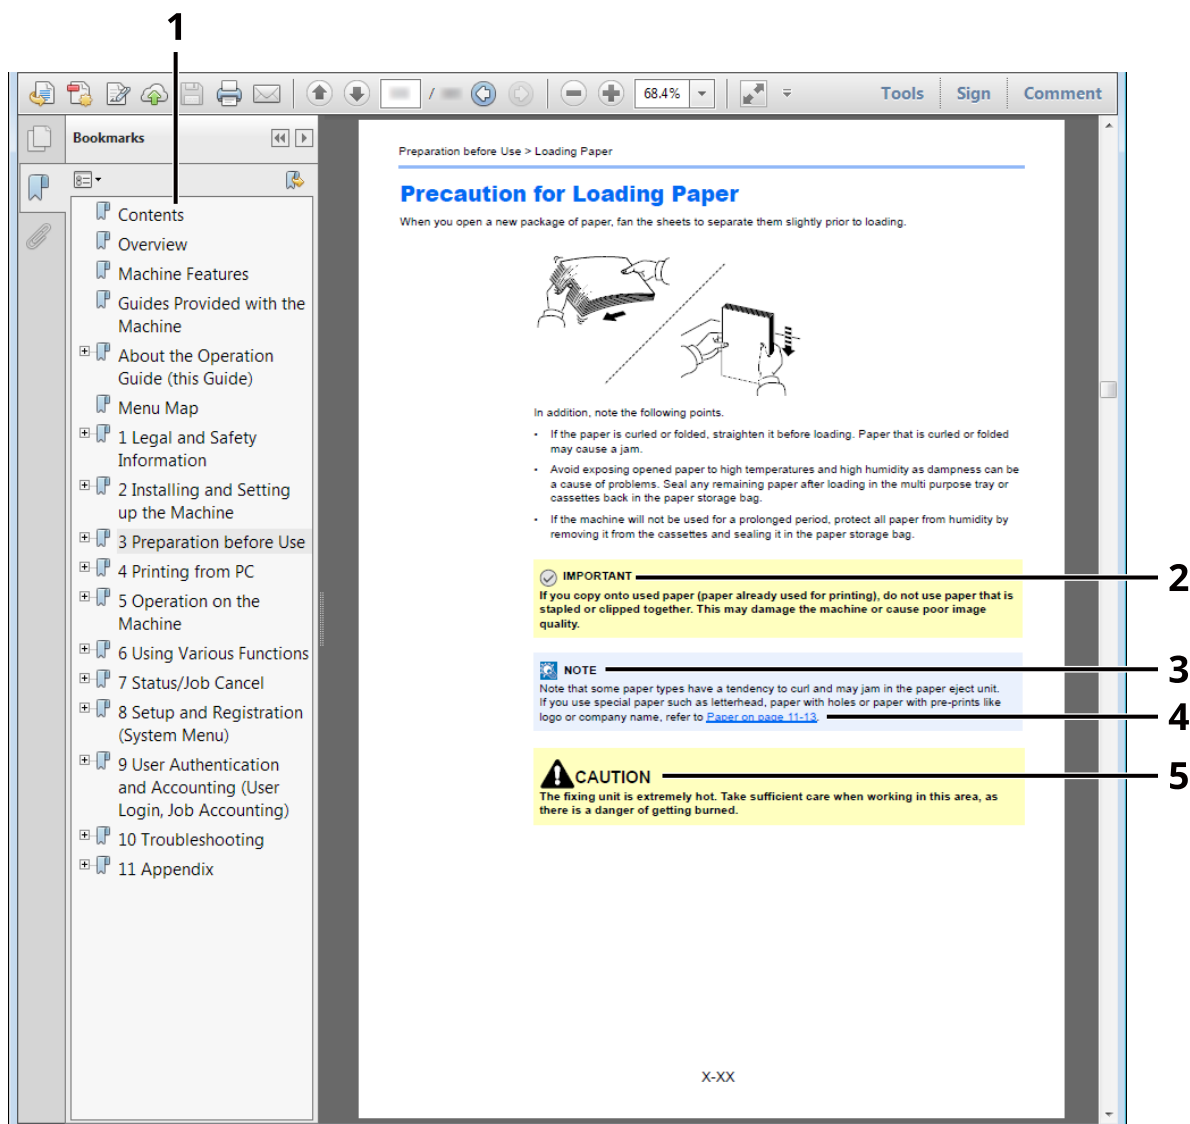

- 1 Click an item in the Table of Contents to jump to the corresponding page.
- 2 Indicates operational requirements and restrictions to operate the machine correctly, and avoid damage to the machine or property.
- 3 Indicates supplemental explanations and reference information for operations.
- 4 Click the underlined text to jump to the corresponding page.
- 5 Indicates that personal injury or mechanical damage may result from insufficient attention to or incorrect compliance with the related points.

NOTE
 The items that appear in Adobe Reader vary depending on how it is used. If the Table of Contents or tools do not appear, refer to Adobe Reader Help.

Certain items are indicated in this guide by the conventions described below.

Convention	Description
[Bold]	Indicates keys and buttons.
"Regular"	Indicates a message or setting.

Conventions used in procedures for operating the machine

In this Operation Guide, continuous operation of the keys on the touch panel is as follows:

Actual procedure


- 1 Select the [**Home**] key.
- 2 Select the [...].
- 3 Select the [**System Menu**].
- 4 Select [**Device Settings**].
- 5 Move the screen downwards (i.e. swiping)
- 6 Select [**Sound**].

Procedure indicated in this guide


[**Home**] key > [...] > [**System Menu**] > [**Device Settings**] > [**Sound**]

Actual procedure

- 7 Select [**Job Accounting/Authentication**].

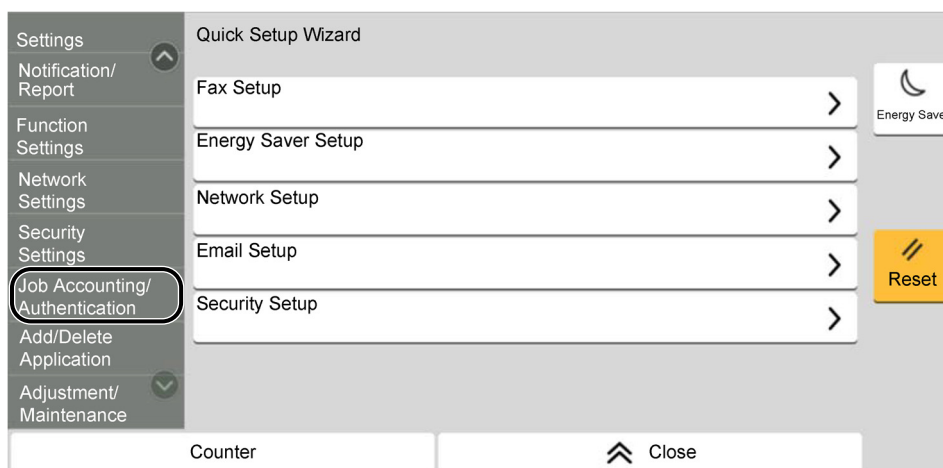

- 8 Select [**Job Accounting**] in " Job Accounting Setting".

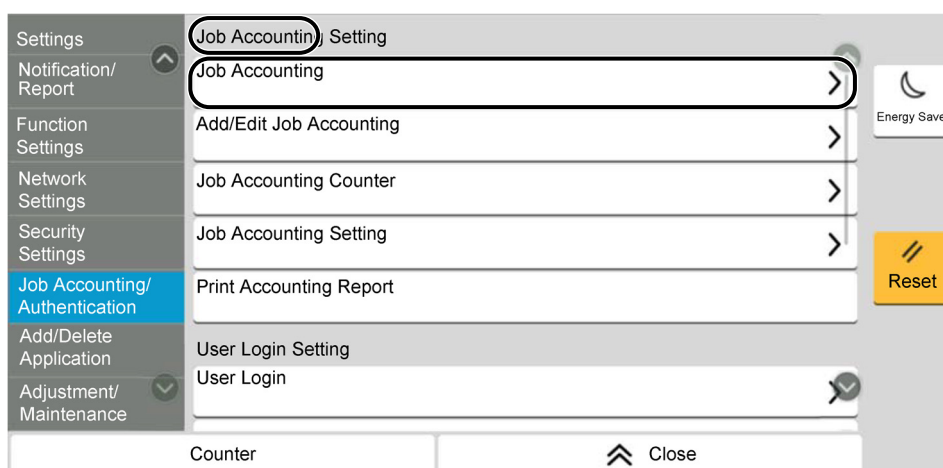

Procedure indicated in this guide



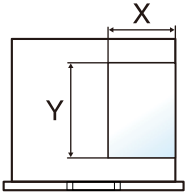

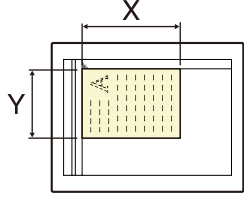

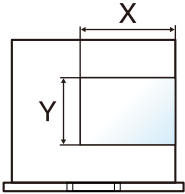

[**Job Accounting/Authentication**] > " Job Accounting Setting" [**Job Accounting**]

For details on touch panel operation, refer to the following:

➔ [Using the Touch Panel \(page 2-12\)](#)

Size and Orientation of Originals and Paper

Original sizes and paper sizes such as A4, B5, and Letter can be used in both the horizontal and vertical orientations. To distinguish the orientations when these sizes are used, "R" is added to sizes used in the horizontal orientation. In addition, the following icons are used to indicate original and paper placement orientations on the touch panel.

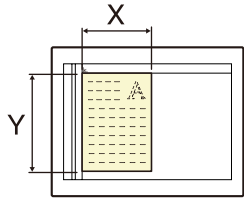Orientation		Setting Position (X=Length, Y=Width)	Icons on the touch panel	Indicated size in this Guide* ¹
Vertical orientation	Original	 Original	 Original	A4, B5, Letter .etc
	Paper	 Paper	 Paper	
Horizontal orientation (-R)	Original	 Original	 Original	A4-R, B5-R, Letter-R .etc
	Paper	 Paper	 Paper	

*1 Original/paper sizes that can be used vary depending on the function and source tray. For details, refer to the following.

➔ [Specifications \(page 11-20\)](#)

Menu Map

This is a list of menus displayed on the touch panel. Depending on the settings, some menus may not be displayed. Some menu names may differ from their reference titles.



Copy



Org./Paper/Finishing	Original Size (page 6-20)	
	Paper Selection (page 6-21)	
	Mixed Size Originals (page 6-23)	
	Original Orientation (page 6-26)	
	Fold (page 6-27)	
	Collate/Offset (page 6-29)	
	Staple/Punch	Staple (page 6-30)
		Punch (page 6-32)
	Paper Output (page 6-34)	
	ID Card Copy (page 6-35)	
	Org. Manual Feed (DP) (page 6-35)	
Layout/Edit	Zoom (page 6-36)	
	Combine (page 6-38)	
	Margin/Centering (page 6-38)	
	Border Erase (page 6-41)	
	Erase Shadowed Areas (page 6-43)	
	Booklet (page 6-43)	
	Duplex (page 6-48)	
	Cover (page 6-51)	
	Form Overlay (page 6-52)	
	Page # (page 6-53)	
	Memo Page (page 6-55)	
	Insert Sheets/Chapters (page 6-56)	
	Image Repeat (page 6-57)	
	Text Stamp (page 6-58)	
	Bates Stamp (page 6-61)	

Image Quality	Density (page 6-64)
	Original Image (page 6-64)
	EcoPrint (page 6-66)
	Sharpness (page 6-67)
	Background Density Adj. (page 6-67)
	Prevent Bleed-thru (page 6-68)
	Contrast (page 6-69)
	Erase Colors (page 6-69)
Advanced Setup	Continuous Scan (page 6-70)
	Auto Image Rotation (page 6-70)
	Negative Image (page 6-71)
	Mirror Image (page 6-71)
	Job Finish Notice (page 6-71)
	File Name Entry (page 6-72)
	Priority Override (page 6-72)
	Repeat Copy (page 6-72)
	DP Read Action (page 6-73)
	Detect Multi-fed Originals (page 6-73)
	Detect Stapled Originals (page 6-73)
	Detect Scan Failure (page 6-74)
	Skip Blank Page (page 6-74)
Document Processor Straight Path (page 6-74)	
Favorites (page 5-7)	
Shortcut (page 5-13)	



Send



Destination	Email (page 5-20)
	SMB (page 5-22)
	FTP (page 5-25)
	Fax (refer to FAX Operation Guide)
	iFax (refer to FAX Operation Guide)
	Fax Server (page 5-40)
	WSD Scan (page 5-33)
	Address Book (page 5-43)
Org./Sending Data Format	Original Size (page 6-20)
	Mixed Size Originals (page 6-23)
	2-sided/Book Original (page 6-75)
	Sending Size (page 6-76)
	Original Orientation (page 6-26)
	Long Original (page 6-76)
	File Format (page 6-77)
	File Separation (page 6-84)
	ID Card Scan (page 6-35)
	Org. Manual Feed (DP) (page 6-35)
Color/Image Quality	Density (page 6-64)
	Original Image (page 6-64)
	Scan Resolution (page 6-84)
	Fax TX Resolution (refer to FAX Operation Guide)
	Color Selection (page 6-66)
	Sharpness (page 6-67)
	Clarify Text (Noise Removal) (page 6-84)
	Background Density Adj. (page 6-67)
	Saturation (page 6-68)
	Prevent Bleed-thru (page 6-68)
	Contrast (page 6-69)
Erase Colors (page 6-69)	

Advanced Setup	Border Erase/Full Scan (page 6-41)
	Erase Shadowed Areas (page 6-43)
	Zoom (page 6-36)
	Job Finish Notice (page 6-71)
	Fax Delayed Transmission (refer to FAX Operation Guide)
	File Name Entry (page 6-72)
	Continuous Scan (page 6-70)
	Email Subject/Body (page 6-85)
	iFax Subject/Body (refer to FAX Operation Guide)
	Fax Direct Transmission (refer to FAX Operation Guide)
	Centering (page 6-38)
	Fax Polling RX (refer to FAX Operation Guide)
	Send and Print (page 6-85)
	Send and Store (page 6-85)
	FTP Encrypted TX (page 6-86)
	Email Encrypted TX (page 6-86)
	Digital Signature to Email (page 6-87)
	Text Stamp (page 6-58)
	Bates Stamp (page 6-61)
	Handwriting Enhancement (page 6-88)
	File Size Confirmation (page 6-88)
	Fax TX Report (refer to FAX Operation Guide)
	Detect Multi-fed Originals (page 6-73)
	Detect Stapled Originals (page 6-73)
	Detect Scan Failure (page 6-74)
	Skip Blank Page (page 6-74)
	Document Processor Straight Path (page 6-74)
Favorites (page 5-7)	
Shortcut (page 5-13)	




Custom Box



Add/Edit (page 5-58)			
No. (page 5-53)			
Name (page 5-53)			
(Open any box)	Store File	Functions	Original Size (page 6-20)
			Mixed Size Originals (page 6-23)
			2-sided/Book Original (page 6-75)
			Original Orientation (page 6-26)
			Storing Size (page 6-89)
			Org. Manual Feed (DP) (page 6-35)
			Prevent Bleed-thru (page 6-68)
			Density (page 6-64)
			Original Image (page 6-64)
			Scan Resolution (page 6-84)
			Color Selection (page 6-66)
			Erase Colors (page 6-69)
			Sharpness (page 6-67)
			Background Density Adj. (page 6-67)
			Saturation (page 6-68)
			Zoom (page 6-36)
			Centering (page 6-38)
			Border Erase/Full Scan (page 6-41)
			Erase Shadowed Areas (page 6-43)
			Continuous Scan (page 6-70)
			Job Finish Notice (page 6-71)
			File Name Entry (page 6-72)
			Detect Multi-fed Originals (page 6-73)
			Detect Stapled Originals (page 6-73)
			Detect Scan Failure (page 6-74)
			Skip Blank Page (page 6-74)
Contrast (page 6-69)			
Document Processor Straight Path (page 6-74)			
Favorites (page 5-7)			
Shortcut (page 5-13)			

(Open any box)	Print	Functions	Paper Selection (page 6-21)	
			Collate/Offset (page 6-29)	
			Paper Output (page 6-34)	
			Staple/Punch (page 6-30)	Staple (page 6-30)
				Punch (page 6-32)
			Combine (page 6-38)	
			Duplex (page 6-48)	
			Margin/Centering (page 6-40)	
			Page # (page 6-53)	
			Booklet (page 6-43)	
			Form Overlay (page 6-52)	
			Cover (page 6-51)	
			File Name Entry (page 6-72)	
			Job Finish Notice (page 6-71)	
			EcoPrint (page 6-66)	
			Priority Override (page 6-72)	
			Delete after Printed (page 6-88)	
			Zoom (page 6-36)	
			Fold (page 6-27)	
			Text Stamp (page 6-58)	
		Bates Stamp (page 6-61)		
		Image Quality	Density (page 6-64)	
			Original Image (page 6-64)	
			Sharpness (page 6-67)	
			Background Density Adj. (page 6-67)	
			Prevent Bleed-thru (page 6-68)	
			Contrast (page 6-69)	
		Favorites (page 5-7)		
		Shortcuts (page 5-13)		

(Open any box)	Send	Destination (page 5-43)	
		Functions	File Format (page 6-77)
			Sending Size (page 6-76)
			Centering (page 6-38)
			Fax TX Resolution (refer to FAX Operation Guide)
			Job Finish Notice (page 6-71)
			Fax Delayed Transmission (refer to FAX Operation Guide)
			File Name Entry (page 6-72)
			Email Subject/Body (page 6-85)
			iFax Subject/Body (refer to FAX Operation Guide)
			Delete after Transmitted (page 6-88)
			FTP Encrypted TX (page 6-86)
			Email Encrypted TX (page 6-86)
			Digital Signature to Email (page 6-87)
			Zoom (page 6-36)
			File Separation (page 6-84)
			Text Stamp (page 6-58)
			Bates Stamp (page 6-61)
			File Size Confirmation (page 6-88)
			Fax TX Report (refer to FAX Operation Guide)
			Image Quality
		Original Image (page 6-64)	
		Resolution (page 6-84)	
		Color Selection (page 6-66)	
		Sharpness (page 6-67)	
		Clarify Text (Noise Removal)(page 6-84)	
		Background Density Adj. (page 6-67)	
Saturation (page 6-68)			
Prevent Bleed-thru (page 6-68)			
Contrast (page 6-69)			
Favorites (page 5-7)			
Shortcuts (page 5-13)			

(Open any box)	Others	Join (page 5-69)
		Move/Copy (page 5-64)
		Preview (page 5-56)
		Page Selection (page 5-53)
		Delete (page 5-67)
	Name (page 5-53)	
	 (page 5-53)	



Job Box



Private Print/Stored Job (page 4-21, page 4-22)
Quick Copy/Proof and Hold (page 4-24, page 4-25)
PIN Print (page 4-26)
Repeat Copy (page 6-72)
Form for Form Overlay (page 5-69)



USB Drive



Print	Functions		
		Paper Selection (page 6-21)	
		Collate/Offset (page 6-29)	
		Paper Output (page 6-34)	
		Staple/Punch (page 6-30)	Staple (page 6-30)
			Punch (page 6-32)
		Duplex (page 6-48)	
		Margin (page 6-40)	
		Job Finish Notice (page 6-71)	
		EcoPrint (page 6-66)	
		Priority Override (page 6-72)	
		Fold (page 6-27)	
		Text Stamp (page 6-58)	
		Bates Stamp (page 6-61)	
		Encrypted PDF Password (page 6-89)	
		JPEG/TIFF Print (page 6-90)	
		XPS Fit to Page (page 6-90)	

Store File	Functions	
		Original Size (page 6-20)
		Mixed Size Originals (page 6-23)
		2-sided/Book Original (page 6-75)
		Original Orientation (page 6-26)
		Storing Size (page 6-89)
		Org. Manual Feed (DP) (page 6-35)
		Prevent Bleed-thru (page 6-68)
		Density (page 6-64)
		Original Image (page 6-64)
		Scan Resolution (page 6-84)
		Color Selection (page 6-66)
		Erase Colors (page 6-69)
		Sharpness (page 6-67)
		Clarify Text (Noise Removal) (page 6-84)
		Background Density Adj. (page 6-67)
		Saturation (page 6-68)
		Zoom (page 6-36)
		Centering (page 6-38)
		Border Erase/Full Scan (page 6-41)
		Erase Shadowed Areas (page 6-43)
		Continuous Scan (page 6-70)
		File Name Entry (page 6-72)
		File Format (page 6-77)
		Job Finish Notice (page 6-71)
		File Separation (page 6-84)
		Text Stamp (page 6-58)
		Bates Stamp (page 6-61)
		Detect Multi-fed Originals (page 6-73)
		Detect Stapled Originals (page 6-73)
		Handwriting Enhancement (page 6-88)
		Detect Scan Failure (page 6-74)
		Skip Blank Page (page 6-74)
		Contrast (page 6-69)
		Long Original (page 6-76)
		Document Processor Straight Path (page 6-74)
Remove USB (page 5-73)		
USB Info (page 5-73)		
Delete (page 5-54)		
 (page 5-54)		



Status/
Job Cancel



Printing Jobs	Status (page 7-3)
	Log (page 7-2)
Sending Jobs	Status (page 7-5)
	Scheduled (page 7-7)
	Log (page 7-2)
Storing Jobs	Status (page 7-6)
	Log (page 7-2)
Fax Communication Status (refer to FAX Operation Guide)	
Fax Incoming/Outgoing Log (refer to FAX Operation Guide)	



System Menu



Quick Setup Wizard	Fax Setup (page 2-48)	
	Paper Setup (page 2-48)	
	Energy Saver Setup (page 2-49)	
	Network Setup (page 2-49)	
	Email Setup (page 2-49)	
	Security Setup (page 2-49)	
Device Settings	Language/ System of Units	Language (page 8-7)
		Measurement (page 8-7)
	Keyboard	Keyboard Layout (page 8-7)
		Optional Keyboard Type (page 8-7)
	Numeric Keypad	Default Display (page 8-7)
		Layout (HyPAS Application) (page 8-7)
	Date/Time	Date and Time (page 8-7)
		Date Format (page 8-8)
		Time Zone (page 8-8)
	Energy Saver/ Timer	Auto Panel Reset (page 8-8)
		Panel Reset Timer (page 8-8)
		Low Power Timer (page 8-8)
		Sleep Timer (page 8-8)
		Sleep Rules (models for Europe) (page 8-8)
		Sleep Level (models except for Europe) (page 8-8)
		Weekly Timer Settings (page 8-9)
		Motion Sensor (page 8-9)
		Power Off Timer (models for Europe) (page 8-9)
Power Off Rule (models for Europe) (page 8-9)		
Energy Saver Recovery Level (page 8-9)		
Interrupt Clear Timer (page 8-10)		
Ping Timeout (page 8-10)		

Device Settings	Display Settings	Display Brightness (page 8-10)		
		Default Screen (page 8-10)		
		Wallpaper (page 2-15)		
		Show Power Off Message (page 8-10)		
		Quick Setup Registration (Copy) (page 8-10)		
		Quick Setup Registration (Send) (page 8-10)		
		Quick Setup Registration (Fax) (refer to FAX Operation Guide)		
		Quick Setup Registration (Storing in Box) (page 8-10)		
		Quick Setup Registration (Box Print) (page 8-11)		
		Quick Setup Registration (Sending from Box) (page 8-11)		
	Sound	Buzzer (page 8-11)		
		Fax Speaker Volume (refer to FAX Operation Guide)		
		Fax Monitor Volume (refer to FAX Operation Guide)		
	Original/Scan Settings	Auto Detect Original Size (page 8-12)		
		Custom Original Size (page 8-13)		
		Prevent Light Reflection (page 8-13)		
		Prevent Original Skewing (page 8-13)		
	Paper Feeding	Cassette 1 Settings (page 8-14)		
		Cassette 2 Settings (page 8-14)		
		Cassette 3 Settings (page 8-14)		
		Cassette 4 Settings (page 8-14)		
		Cassette 5 Settings (page 8-14)		
		MP Tray Settings (page 8-15)		
		Inserter Tray 1 (page 8-16)		
		Inserter Tray 2 (page 8-16)		
		Custom Paper Settings (page 8-17)		
		Media Type Setting (page 8-18)		
		Media Catalog (page 8-18)		
		Show Paper Setup Message (page 8-21)		
		Paper Feed Settings	Default Paper Source (page 8-21)	
			Paper Selection (page 8-21)	
			Auto Paper Selection (page 8-22)	
			Media for Auto (B&W) (page 8-22)	
Paper Source for Cover (page 8-22)				
Separator Paper Source (page 8-22)				
Special Paper Action (page 8-22)				

Device Settings	Paper Output	Paper Output (page 8-23)	
		Paper Output Behavior	Offset Documents by Job (page 8-23)
			Offset One Page Documents (page 8-23)
	Function Key Assignment (page 8-24)		
	Operation Assist	Orientation Confirmation (page 8-24)	
		Preset Limit (page 8-24)	
		Clear Settings after Job Started (page 8-24)	
	Error Handling	Duplexing Error (page 8-25)	
		Finishing Error (page 8-25)	
		No Staple Error (page 8-25)	
		Finished Pages Exceeded (page 8-25)	
		Punch Waste Full Error (page 8-25)	
		Paper Mismatch Error (page 8-25)	
		Wrong Size Paper Loaded (page 8-25)	
		Paper Jam before Staple (page 8-26)	
		Error Job Skip (page 8-26)	
		Auto Error Clear (page 8-26)	
		Continue or Cancel Error Job (page 8-26)	
		Image Preview at DP Jam (page 8-26)	
		Staple Waste Full Error(page 8-26)	
Toner Settings	Low Toner Alert (page 8-27)		

Notification/ Report	Printing Report/ List	Status Page (page 8-27)
		Service Status (page 8-27)
		Network Status (page 8-27)
		Optional Network Status (page 8-28)
		Print Accounting Report (page 9-43)
		Font List (page 8-28)
		Outgoing Fax Report (refer to FAX Operation Guide)
		Incoming Fax Report (refer to FAX Operation Guide)
		Address Book (Index) (page 8-28)
		Address Book (No.) (page 8-28)
		One Touch List (page 8-28)
		Fax Box List (refer to FAX Operation Guide)
		Application Status (page 8-28)
		Configuration List (page 8-29)
		Data Sanitization Report (page 8-29)
		Result Report Settings
	RX Result (refer to FAX Operation Guide)	
	Job Finish Notice Setting (refer to FAX Operation Guide)	
	Device Status Notification	Low Toner Alert (page 8-27)
		Periodic Inspection Notification (page 8-29)
	Message Board Settings (page 8-30)	
	Fax Communication Report (refer to FAX Operation Guide)	

Notification/ Report	History Settings	Sending Log History	Auto Sending (page 8-31)
			Destination (page 8-31)
			Subject (page 8-31)
			SSFC (page 8-31)
			Personal Information (page 8-31)
			Sending Log History (page 8-31)
		Login History Settings	Login History (page 8-32)
			Auto Sending (page 8-32)
			Destination (page 8-32)
			Subject (page 8-32)
			Log Reset (page 8-32)
		Device Log History Settings	Device Log History (page 8-32)
			Auto Sending (page 8-32)
			Destination (page 8-32)
			Subject (page 8-32)
		Secure Comm. Error Log	Secure Comm. Error Log (page 8-33)
Auto Sending (page 8-33)			
Destination (page 8-33)			
Subject (page 8-33)			
Function Settings	Function Defaults	Common	Clear Settings after Job Started (page 8-35)
			File Name Entry (page 8-35)
			Border Erase Default (page 8-35)
			Zoom (page 8-35)
			System Stamp (Basic Settings) (page 8-35)
			DP Read Action (page 8-35)
			Detect Multi-fed Originals (page 8-36)
			Detect Stapled Originals (page 8-36)
			Detect Scan Failure (page 8-36)
			ID Card Copy/Scan (page 8-36)

Function Settings	Function Defaults	Copy/Print	
			Original Size (page 8-36)
			Original Orientation (Copy) (page 8-36)
			Original Image (Copy) (page 8-37)
			Background Density Adj. (Copy) (page 8-37)
			Continuous Scan (Copy) (page 8-37)
			Prevent Bleed-through (Copy) (page 8-37)
			Skip Blank Page (Copy) (page 8-37)
			EcoPrint (page 8-37)
			Toner Save Level (EcoPrint) (page 8-37)
			Margin Default (page 8-37)
			Border Erase (Copy) (page 8-37)
			Collate/Offset (page 8-37)
			Auto Image Rotation (Copy) (page 8-37)
			Repeat Copy (page 8-37)
			JPEG/TIFF Print (page 8-37)
			XPS Fit to Page (page 8-37)
			Reserve Next Priority (page 8-38)
			Auto Image Rotation Action (page 8-38)
			Auto % Priority (page 8-38)
			Paper Size for Small Original (page 8-38)
			Original Size of Undetected Original (page 8-38)
			Erase Shadowed Areas (Copy) (page 8-38)
			Duplex (page 8-38)

Function Settings	Function Defaults	Send/Store	
			Original Size (page 8-39)
			Original Orientation (Send/Store) (page 8-39)
			Color Selection (Send/Store) (page 8-39)
			Color Type (page 8-39)
			Scan Resolution (page 8-39)
			Fax TX Resolution (refer to FAX Operation Guide)
			Org. Image (Send/Store) (page 8-39)
			Clarify Text (noise removal) (page 6-84)
			Background Density Adj. (Send/Store) (page 8-39)
			Continuous Scan (Send/Store) (page 8-39)
			Continuous Scan (Fax) (refer to FAX Operation Guide)
			Prevent Bleed-through (Send/Store) (page 8-39)
			Border Erase/Full Scan (Send/Store) (page 8-39)
			Border Erase/Full Scan (Fax) (refer to FAX Operation Guide)
			Skip Blank Page (Send/Store) (page 8-39)
			File Format (page 8-39)
			Image Quality (File Format) (page 8-40)
			High Comp. PDF Image (page 8-40)
			Color TIFF Compression (page 8-40)
			PDF/A (page 8-40)
			OCR Text Recognition Action (page 8-40)
			OCR Text Recognition (page 8-40)
			Primary OCR Language (page 8-40)
			OCR Output Format (page 8-40)
			File Separation (page 8-40)
			Email Subject/Body (page 8-40)
			iFax Subject/Body (page 8-40)
			Erase Shadowed Areas (Send) (page 8-40)
			Erase Shadowed Areas (Store) (page 8-41)
			2-sided/Book Original (page 8-41)

Function Settings	Copy/Print	Quick Setup Registration (Copy) (page 8-41)	
	Send/Store	Default Screen (page 8-41)	
		Prevent Mis-sending Settings	Destination Check before Send (page 8-41)
			Entry Check for New Dest. (page 8-41)
			Destination Check on Selecting (page 8-41)
			New Destination Entry (page 8-41)
			Recall Destination (page 8-41)
			Broadcast (page 8-41)
			Destination History (page 8-41)
			Delete Destination History (page 8-41)
		Quick Setup Registration (Send) (page 8-10)	
	Signature to File	Digital Signature (page 8-42)	
		Digital Signature Format (page 8-42)	
		Password Confirmation on Signature Permission (page 8-42)	
		Password (page 8-42)	
	Email	Email Settings	SMTP (Email TX) (page 8-43)
			SMTP Server Name (page 8-43)
			SMTP Port Number (page 8-43)
			Sender Address (page 8-43)
			SMT Auth and Sender Address (page 8-43)
		POP3	POP3 (page 8-43)
Remote Printing (page 8-43)			
Sending Job - Folder	FTP Settings	FTP Settings (page 8-43)	
	SMB Settings	SMB Settings (page 8-43)	
Fax/iFax (refer to FAX Operation Guide)			
WSD	WSD Scan (page 8-44)		
	WSD Print (page 8-44)		

Function Settings	Address Book	Add/Edit (Common Address Book) (page 8-44)	
		Add/Edit (Departmental Address Book) (page 8-44)	
		Create Departmental Address Book (page 8-44)	
		Other Settings for Address Book	Sort (page 8-44)
			Narrow Down (page 8-44)
			Edit Restriction (page 8-44)
			Sharing Common Address Book (page 8-44)
		External Address Book (page 8-45)	
	Primary Address Book (page 8-45)		
	One-Touch Key	Add/Edit One Touch Key (page 8-45)	
		Edit Restriction (page 8-45)	
	Send and Forward (page 8-45)		
	RX/Forward Rules/Fax Box (refer to FAX Operation Guide)		
	Printer	Emulation (page 8-50)	
		EcoPrint (page 8-50)	
		Toner Save Level (EcoPrint) (page 8-50)	
		Override A4/Letter (page 8-50)	
		Duplex (page 8-50)	
		Copies (page 8-50)	
		Orientation (page 8-50)	
		Form Feed Timeout (page 8-50)	
		LF Action (page 8-51)	
		CR Action (page 8-51)	
		Job Name (page 8-51)	
		User Name (page 8-51)	
		Paper Feed Mode (page 8-51)	
		MP Tray Priority (page 8-51)	
Auto Cassette Change (page 8-51)			
Message Banner Print (page 8-51)			
Wide A4 (page 8-51)			
Resolution (page 8-52)			
KIR (page 8-52)			
Printing Job Terminator (page 8-52)			
Remote Printing (page 8-52)			
Direct Printing from Web (page 8-52)			

Function Settings	Document Box	Custom Box - Add/Edit (page 5-58)	
		Auto File Deletion Time (page 8-52)	
		Quick Setup Registration (Storing in Box) (page 8-10)	
		Quick Setup Registration (Box Print) (page 8-11)	
		Quick Setup Registration (Sending from Box) (page 8-11)	
	Job Box	Quick Copy Job Retention (page 8-53)	
		Repeat Copy Job Retention (page 8-53)	
		Deletion of Job Retention (page 8-53)	
		Deletion of PIN Print at Power Off (page 8-53)	
	Fax Memory RX Box (refer to FAX Operation Guide)		
	Home	Customize Desktop (page 2-15)	
		Customize Taskbar (page 2-15)	
		Wallpaper (page 2-15)	
	Status	Display Settings (page 8-54)	
		Job Status/Job Logs Settings (page 8-54)	
	Internet Browser	Internet Browser (page 8-54)	
		Browser Environment (page 8-54)	
Proxy (page 8-57)			
Manual Staple (page 8-55)			
Remote Services (page 8-55)			
TWAIN/WIA (page 8-55)			
CO2 Emission Chart (page 8-56)			
Network Settings	Network Settings	Host Name (page 8-57)	
		Proxy (page 8-57)	
	Wi-Fi Direct Settings	Wi-Fi Direct (page 8-57)	
		Device Name (page 8-57)	
		IP Address (page 8-57)	
		Auto Disconnect (page 8-58)	
		Persistent Group (page 8-58)	
		Password (page 8-58)	
	Wi-Fi Settings	Wi-Fi (page 8-58)	
		Setup (page 8-59)	
		TCP/IP Setting (page 8-60)	
	Wired Network Settings	TCP/IP Setting (page 8-62)	
		Others (page 8-64)	

Network Settings	Network Settings	Protocol Settings	
			SMTP (Email TX) (page 8-43)
			POP3 (Email RX) (page 8-43)
			FTP Client (Transmission) (page 8-64)
			FTP Server (Reception) (page 8-64)
			SMB Client (Transmission) (page 8-64)
			SMB Server (Reception) (page 8-64)
			WSD Scan (page 8-44)
			WSD Print (page 8-44)
			iFax (page 8-64)
			ThinPrint (page 8-65)
			LPD (page 8-65)
			Raw (page 8-65)
			IPP (page 8-65)
			IPP over TLS (page 8-65)
			HTTP (page 8-66)
			HTTPS (page 8-66)
			LDAP (page 8-66)
			SNMPv1/v2c (page 8-66)
			SNMPv3 (page 8-66)
			Enhanced WSD (page 8-66)
			Enhanced WSD over TLS (page 8-66)
			eSCL (page 8-66)
			eSCL over TLS (page 8-67)
			VNC (RFB) (page 8-67)
			VNC (RFB) over TLS (page 8-67)
			Enhanced VNC over TLS (page 8-67)
			REST (page 8-67)
			REST over TLS (page 8-68)
			Communication Protocol (page 8-68)
			Ping (page 8-68)
			Bonjour (page 8-68)
			IP Filter (IPv4) (page 8-69)
			IP Filter (IPv6) (page 8-69)
			IPSec (page 8-69)
			Restart Network (page 8-69)

Network Settings	Optional Network	Host Name (page 8-69)	
		Wi-Fi Direct Settings	Wi-Fi Direct (page 8-70)
			Device Name (page 8-70)
			Network Name (SSID) (page 8-70)
			Preshared Key (page 8-70)
			IPv4 Settings (page 8-70)
		Wireless Network	Connection Status (page 8-71)
			Setup (page 8-71)
			TCP/IP Setting (page 8-72)
			Others (page 8-72)
	Wired Network Settings	TCP/IP Setting (page 8-73)	
		Others (page 8-73)	
	Restart Network (page 8-73)		
	Connectivity	Bluetooth Settings (page 8-74)	
		Fax Server (page 8-74)	
		NFC (page 8-74)	
		Remote Operation (page 8-74)	
Others	Primary Network (Client) (page 8-75)		
	Restart Entire Device (page 8-75)		

Security Settings	Security Quick Setup (page 8-75)		
	Interface Block Setting	USB Host (page 8-76)	
		USB Device (page 8-76)	
		USB Drive (page 8-76)	
		Optional Interface 1 (page 8-76)	
		Optional Interface 2 (page 8-76)	
		Restart Entire Device (page 8-76)	
	Device Security Settings	Unusable Time (refer to FAX Operation Guide)	
		Job Status/Job Logs Settings (page 8-54)	
		Security Level (page 8-77)	
		Remote Printing (page 8-77)	
		Software Verification (page 8-77)	
		Administrator Authentication on Firm Update (page 8-77)	
		Allowlisting (page 8-77)	
		Remaining Print Jobs on Logging out (page 8-77)	
		Administrator Authentication on Data Import/Export (page 8-77)	
		Data Security	SSD Initialization (page 8-78)
			Data Sanitization (page 8-79)
		OCR Dictionary Installation (page 8-81)	
		Backup and Restore (page 8-82)	
		Confidential Document Detection Setting (page 8-83)	
	System Stamp	Printing Jobs	Text Stamp (page 8-85)
			Bates Stamp (page 8-86)
		Sending Jobs	Text Stamp (page 8-87)
			Bates Stamp (page 8-88)
		Storing Jobs	Text Stamp (page 8-89)
			Bates Stamp (page 8-90)
	Authentication Security	User Account Lockout Settings (page 9-4)	
		Password Policy Settings (page 9-5)	
	Unknown User Settings (page 9-47)		
	Network	TLS (page 8-91)	
		Network Access (page 8-91)	

Job Accounting/ Authentication	Job Accounting Setting	Job Accounting (page 9-31)		
		Add/Edit Job Accounting (page 9-32)		
		Job Accounting Counter (page 9-41)		
		Job Accounting Setting	Default Setting (page 9-45, page 9-46)	
			Default Counter Limit (page 9-39)	
			Count by Paper Size (page 9-40)	
	Print Accounting Report (page 9-43)			
	User Login Setting	User Login (page 9-3)		
		Add/Edit Local User (page 9-6)		
		Local Authorization (page 9-14)		
		Obtain NW User Property (page 9-21)		
		Configuring Network User Privileges (page 9-16)		
		Group Authorization (page 9-17)		
		Group List (page 9-17)		
		Guest Authorization Set. (page 9-19)		
		Guest Property (page 9-19)		
		Simple Login (page 9-22)		
		Simple Login Key (page 9-23)		
		Quick Job Printing (page 9-26)		
		PIN Login (page 9-27)		
	Authentication Security	User Account Lockout Settings (page 9-4)		
		Password Policy Settings (page 9-5)		
	Unknown User Settings (page 9-47)			
ID Card Settings	Keyboard Login (page 9-25)			
	Additional Authentication (page 9-26)			
Add/Delete Application	Application (page 5-10)			
	Optional Function (page 11-7)			

Adjustment/ Maintenance	Image Adjustment	Density	Copy (page 8-92)	
			Send/Box (page 8-92)	
			Fax (refer to FAX Operation Guide)	
		Clarify Text (Noise Removal) Settings (page 8-92)		
		Background Density Adj.	Copy (Auto) (page 8-92)	
			Send/Box (Auto) (page 8-92)	
		Sharpness Adjustment	Copy (page 8-92)	
			Send/Box (page 8-92)	
		Contrast	Copy(page 8-92)	
			Send/Box (page 8-92)	
		Auto Color Correction (page 8-93)		
		Correcting Black Lines (page 8-93)		
		Image Adjustment	Drum Refresh (page 8-93)	
			Developer Refresh (page 8-93)	
			Laser Scanner Cleaning (page 8-93)	
			Calibration (page 8-93)	
		Calibration Cycle (page 8-93)		
		Calibration (page 8-94)		
		Tone Curve Adjustment (Simple) (page 8-94)		
		Tone Curve Adjustment (Detail) (page 8-94)		
		Auto Drum Refresh (page 8-94)		
	Behavior Adjustment	Correct Paper Curl (page 8-94)		
		Silent Mode (page 8-94)		
	Others	Diagnostics	Memory Diagnostics (page 8-95)	
			Software Verification (page 8-77)	
		Online Software Update	Firmware (page 8-95)	
			HyPAS Application (page 8-95)	
		Online Software Update Settings	Firmware Update (page 8-95)	
		Restart/ Initialization	Restart Network (page 8-69)	
			Restart Network (Optional Network) (page 8-73)	
			Restart Entire Device (page 8-75)	
Format SD Card (page 8-95)				
System Initialization (page 8-95)				
Disabling Devices/Functions (page 8-95)				

1 Legal and Safety Information


Please read this information before using your machine. This chapter provides information on the following topics.


Notice	1-2
Safety Conventions in This Guide	1-2
Environment	1-3
Precautions for Use	1-4
Laser Safety (Europe)	1-5
SAFETY OF LASER BEAM (USA)	1-6
Safety Instructions Regarding the Disconnection of Power	1-7
Compliance and Conformity	1-7
Radio Tag Technology	1-9
Other precautions (for users in California, the United States)	1-9
Legal Restriction on Copying/Scanning	1-9
EN ISO 7779	1-9
EK1-ITB 2000	1-9
Wireless Connection (Mexico only)	1-9
Security Precautions when Using Wireless LAN (If equipped)	1-10
Limited Use of This Product (If equipped)	1-10
Legal Information	1-11
Energy Saving Control Function	1-13
Automatic 2-Sided Print Function	1-13
Resource Saving - Paper	1-13
Environmental benefits of "Power Management"	1-13
Energy Star Program (for USA, Canada Only)	1-13
Warranty (the United States and Canada)	1-14

Notice


Safety Conventions in This Guide


The sections of this guide and parts of the machine marked with symbols are safety warnings meant to protect the user, other individuals and surrounding objects, and ensure correct and safe usage of the machine. The symbols and their meanings are indicated below.


 **WARNING:** Indicates that serious injury or even death may result from insufficient attention to or incorrect compliance with the related points.


 **CAUTION:** Indicates that personal injury or mechanical damage may result from insufficient attention to or incorrect compliance with the related points.


Symbols


The  symbol indicates that the related section includes safety warnings. Specific points of attention are indicated inside the symbol.


 ... [General warning]


 ... [Warning of high temperature]


The  symbol indicates that the related section includes information on prohibited actions. Specifics of the prohibited action are indicated inside the symbol.


 ... [Warning of prohibited action]


 ... [Disassembly prohibited]

The  symbol indicates that the related section includes information on actions which must be performed. Specifics of the required action are indicated inside the symbol.

 ... [Alert of required action]

 ... [Remove the power plug from the outlet]

 ... [Always connect the machine to an outlet with a ground connection]

 **NOTE**
An original which resembles a bank note closely may not be copied properly in some rare cases because this machine is equipped with a counterfeiting prevention function.

Environment

The service environmental conditions are as follows:

Temperature	50 to 90.5 °F (10 to 32.5 °C) (But humidity should be 70% or less when temperature is 90.5 °F (32.5 °C).)
Humidity	10 to 80% (But temperature should be 86 °F (30 °C) or less when humidity is 80%.)

Avoid the following locations when selecting a site for the machine.

- Avoid locations near a window or with exposure to direct sunlight.
- Avoid locations with vibrations.
- Avoid locations with drastic temperature fluctuations.
- Avoid locations with direct exposure to hot or cold air.
- Avoid poorly ventilated locations.

If the floor is delicate against casters, when this machine is moved after installation, the floor material may be damaged.

During copying, some ozone is released, but the amount does not cause any ill effect to one's health. If, however, the machine is used over a long period of time in a poorly ventilated room or when making an extremely large number of copies, the smell may become unpleasant. To maintain the appropriate environment for copy work, it is suggested that the room be properly ventilated.

Precautions for Use

Cautions when handling consumables

CAUTION

Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.

Keep parts which contain toner out of the reach of children.

If toner happens to spill from parts which contain toner, avoid inhalation and ingestion, as well as contact with your eyes and skin.

- If you do happen to inhale toner, move to a place with fresh air and gargle thoroughly with a large amount of water. If coughing develops, contact a physician.
- If you do happen to ingest toner, rinse your mouth with water and drink 1 or 2 cups of water to dilute the contents of your stomach. If necessary, contact a physician.
- If you do happen to get toner in your eyes, flush them thoroughly with water. If there is any remaining tenderness, contact a physician.
- If toner does happen to get on your skin, wash with soap and water.

Do not attempt to force open or destroy parts which contain toner.

Other precautions

Return the exhausted toner container and waste toner box to your dealer or service representative. The collected toner container and waste toner box will be recycled or disposed in accordance with the relevant regulations.

Store the machine while avoiding exposure to direct sunlight.

Store the machine in a place where the temperature stays below 40 °C while avoiding sharp changes of temperature and humidity.

If the machine will not be used for an extended period of time, remove the paper from the cassette and the Multipurpose (MP) Tray, return it to its original package and reseal it.


Laser Safety (Europe)

Laser radiation could be hazardous to the human body. For this reason, laser radiation emitted inside this machine is hermetically sealed within the protective housing and external cover. In the normal operation of the product by user, no radiation can leak from the machine.

This machine is classified as Class 1 laser product under IEC/EN 60825-1:2014.

Caution: Performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

These labels are attached to the laser scanner unit inside the machine and are not in a user access area.

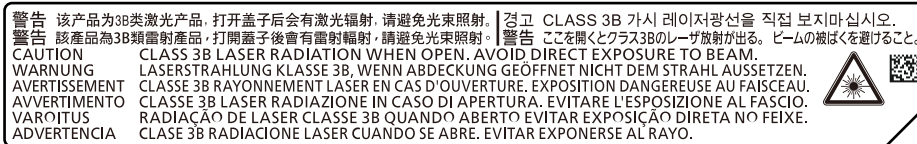

Regarding CLASS 1 laser products, information is provided on the rating label.



SAFETY OF LASER BEAM (USA)


1. Safety of laser beam

This machine has been certified by the manufacturer to Class 1 level under the radiation performance standards established by the U.S.DHHS (Department of Health and Human Services) in 1968. This indicates that the product is safe to use during normal operation and maintenance. The laser optical system, enclosed in a protective housing and sealed within the external covers, never permits the laser beam to escape.

2. The CDRH Act


A laser-product-related act was implemented on Aug. 2, 1976, by the Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration (FDA). This act prohibits the sale of laser products in the U.S. without certification, and applies to laser products manufactured after Aug. 1, 1976. The label shown below indicates compliance with the CDRH regulations and must be attached to laser products marketed in the United States.

The position of the rating label is show below.

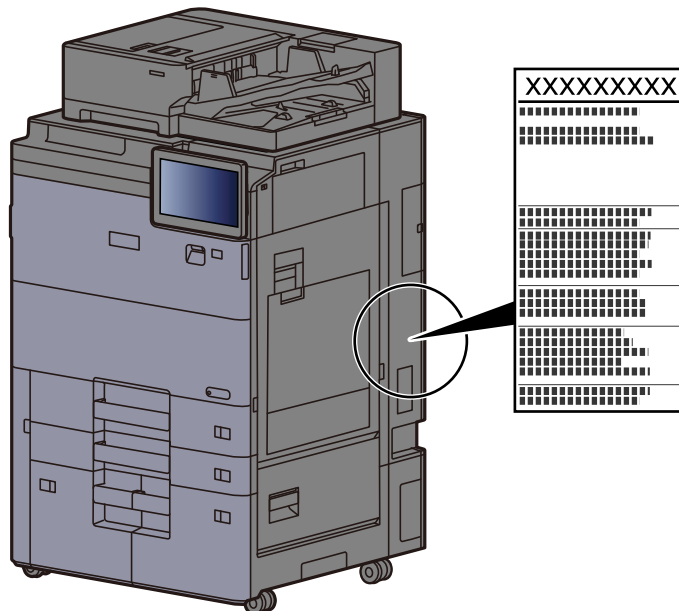

3. Optical unit

When checking the optical unit, avoid direct exposure to the laser beam, which is invisible. Shown at below is the label located on the cover of the optical unit.

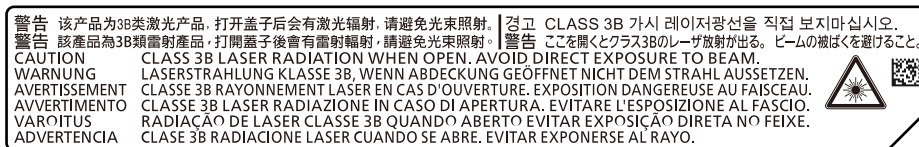

4. Maintenance

For safety of the service personnel, follow the maintenance instructions in the other section of this manual.

5. Safety switch

The power to the laser unit is cut off when the front cover is opened.

Safety Instructions Regarding the Disconnection of Power

Caution: The power plug is the main isolation device! Other switches on the equipment are only functional switches and are not suitable for isolating the equipment from the power source.

Attention: Le débranchement de la fiche secteur est le seul moyen de mettre l'appareil hors tension. Les interrupteurs sur l'appareil ne sont que des interrupteurs de fonctionnement: ils ne mettent pas l'appareil hors tension.

Compliance and Conformity

Hereby, KYOCERA Document Solutions Inc. declares that the radio equipment type TASKalfa MZ10500i, TASKalfa MZ9500i, TASKalfa MZ8500i and TASKalfa MZ7500i are in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://www.kyoceradocumentsolutions.eu/index/service/dlc.html>

Module name, Option	Software Ver.	Frequency band in which the radio equipment operates:	Maximum radio-frequency power transmitted in the frequency band in which the radio equipment operates:
IB-54 (option)	2.2.6	2.4GHz	100mW
IB-37 (option)	1.0	2.4GHz	100mW
		5GHz	50mW - 1W
IB-38 (option)	1.0	2.4GHz	100mW
Transmitter Module(SRD)	2005.11	13.56MHz	0.2nW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 and Part 18 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The use of a non-shielded interface cable with the referenced device is prohibited.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 and Part 18 of the FCC Rules.

*Only when ZF-7100 is installed to this equipment.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Industry Canada statement:

This device contains licence-exempt transmitter(s) / receiver(s) that complies with Innovation, Science and Economic Development Canada's licence-exempt RSS (s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other transmitter.

Industry Canada ICES-003 Compliance Label: CAN ICES-3B/NMB-3B

Caution:

The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

Operations in the 5.25-5.35GHz band are restricted to indoor usage only.

Radiation Exposure Statement:

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

* These above statements are valid in the United States of America, Canada and EU.

For Singapore (IB-37)

Complies with IMDA Standards DB01846
--

For Brazil

IB-37 e IB-38



18780-20-09076

Para maiores informações, consulte o site da ANATEL www.anatel.gov.br

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.

For Paraguay

IB-37

IB-38



CONATEL

NR: 2021-01-I-0031 NR: 2021-01-I-0032

Radio Tag Technology

In some countries the radio tag technology used in this equipment to identify the toner container may be subject to authorization and the use of this equipment may consequently be restricted.

Other precautions (for users in California, the United States)

Perchlorate Material - special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.

Legal Restriction on Copying/Scanning

It may be prohibited to copy/scan copyrighted material without permission of the copyright owner.

Copying/Scanning the following items is prohibited and may be penalized by law. It may not be limited to these items. Do not knowingly copy/scan the items that are not to be copied/scanned.

- Paper money
- Bank note
- Securities
- Stamp
- Passport
- Certificate

Local laws and regulations may prohibit or restrict copying/scanning of other items not mentioned above.

EN ISO 7779

Maschinenlärminformations-Verordnung 3. GPSGV, 06.01.2004: Der höchste Schalldruckpegel beträgt 70 dB (A) oder weniger gemäß EN ISO 7779.

EK1-ITB 2000

Das Gerät ist nicht für die Benutzung im unmittelbaren Gesichtsfeld am Bildschirmarbeitsplatz vorgesehen. Um störende Reflexionen am Bildschirmarbeitsplatz zu vermeiden, darf dieses Produkt nicht im unmittelbaren Gesichtsfeld platziert werden.

Wireless Connection (Mexico only)

The operation of this equipment is subject to the following two conditions:

(1) it is possible that this equipment or device may not cause harmful interference, and (2) this equipment or device must accept any interference, including interference that may cause undesired operation.

La operación de este equipo está sujeta a las siguientes dos condiciones:

(1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Security Precautions when Using Wireless LAN (If equipped)

Wireless LAN allows information to be exchanged between wireless access points instead of using a network cable, which offers the advantage that a WLAN connection can be established freely within an area in which radio waves can be transmitted.

On the other hand, the following problems may occur if security settings are not configured, because radio waves can pass through obstacles (including walls) and reach everywhere within a certain area.

Secretly Viewing Communication Contents

A third person with malicious objectives may intentionally monitor radio waves and gain unauthorized access to the following communication contents.

- Personal information including ID, passwords, and credit card numbers
- Contents of email messages

Illegal Intrusion

A third party with malicious intent may gain unauthorized access to personal or company networks and conduct the following illegal actions.

- Extracting personal and confidential information (information leak)
- Entering into communication while impersonating a specific person and distributing unauthorized information (spoofing)
- Modifying and retransmitting intercepted communications (falsification)
- Transmitting computer viruses and destroying data and systems (destruction)

Wireless LAN cards and wireless access points contain built-in security mechanisms to address these problems and to reduce the possibility of these problems occurring by configuring the security settings of wireless LAN products when the product is used.

We recommend that customers take responsibility and use their judgment when configuring the security settings and that they ensure that they fully understand the problems that can occur when the product is used without configuring the security settings.

See the booklet 'Instructions for Setting Security on Our Products' for important security tips.

Limited Use of This Product (If equipped)

- Radio waves transmitted from this product may affect medical equipment. When using this product in a medical institution or in the vicinity of medical instruments, either use this product according to the instructions and precautions provided by the administrator of the institution or those provided on the medical instruments.
- Radio waves transmitted from this product may affect automatic control equipment including automatic doors and fire alarms. When using this product in the vicinity of the automatic control equipment, use this product according to the instructions and precautions provided on the automatic control equipment.
- If this product is used in devices that are directly related to service including airplanes, trains, ships, and automobiles or this product is used in applications requiring high reliability and safety to function and in devices requiring accuracy including those used in disaster prevention and crime prevention and those used for various safety purposes, please use this product after considering the safety design of the entire system including adoption of a failsafe design and redundancy design for reliability and safety maintenance of the entire system. This product is not intended for use in applications requiring high reliability and safety including aerospace instruments, trunk communication equipment, nuclear power control equipment, and medical equipment; hence, the decision as to whether to use this product in these applications needs to be fully considered and determined.

Sólo México (Mexico only)

Este equipo utiliza el módulo de interfaz de red inalámbrica modelo LBWA1ZZ1CA para conectarse a las redes Inalámbricas.

Legal Information

Copying or other reproduction of all or part of this guide without the prior written consent of KYOCERA Document Solutions Inc. is prohibited.

Regarding Trade Names

- PRESCRIBE is registered trademark of Kyocera Corporation.
- KPDL is a trademark of Kyocera Corporation.
- Active Directory, Azure, Microsoft, Microsoft 365, Microsoft Edge, Windows and Windows Server are registered trademarks or trademarks of Microsoft Corporation in the U.S. and/or other countries.
- PCL is a trademark of Hewlett-Packard Company.
- Adobe, Acrobat, PostScript and Reader are registered trademarks or trademarks of Adobe Inc. in the U.S.A. and/or other countries.
- Ethernet is a registered trademark of Fuji Xerox Co., Ltd.
- IBM and IBM PC/AT are trademarks of International Business Machines Corporation.
- AppleTalk, Bonjour, Mac, and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- All European language fonts installed in this machine are used under licensing agreement with Monotype Imaging Inc.
- Helvetica, Palatino and Times are registered trademarks of Linotype GmbH.
- ITC Avant Garde Gothic, ITC Bookman, ITC ZapfChancery and ITC ZapfDingbats are registered trademarks of International Typeface Corporation.
- ThinPrint is a trademark of Cortado AG in Germany and other countries.
- UFST™ MicroType® fonts by Monotype Imaging Inc. are installed in this machine.
- iPad, iPhone and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- AirPrint and the AirPrint logo are trademarks of Apple Inc.
- iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license by Apple Inc.
- Google, Google Chrome, Google Drive is trademarks and/or registered trademarks of Google LLC.
- Mopria™ is registered trademarks of Mopria™ Alliance.
- Wi-Fi, Wi-Fi Direct and Wi-Fi Protected Setup are trademarks and/or registered trademarks of Wi-Fi Alliance.
- Powered by ABBYY FineReader.
ABBYY and FineReader are trademarks of ABBYY Software Ltd.
- RealVNC, VNC and RFB are registered trademarks of RealVNC Ltd. in the U.S. and in other countries.

All other brands and product names are registered trademarks or trademarks of their respective companies. The designations ™ and ® will not be used in this Operation Guide.

Monotype Imaging License Agreement

- 1 *Software* shall mean the digitally encoded, machine readable, scalable outline data as encoded in a special format as well as the UFST Software.
- 2 You agree to accept a non-exclusive license to use the Software to reproduce and display weights, styles and versions of letters, numerals, characters and symbols (*Typefaces*) solely for your own customary business or personal purposes at the address stated on the registration card you return to Monotype Imaging. Under the terms of this License Agreement, you have the right to use the Fonts on up to three printers. If you need to have access to the fonts on more than three printers, you need to acquire a multiuser license agreement which can be obtained from Monotype Imaging. Monotype Imaging retains all rights, title and interest to the Software and Typefaces and no rights are granted to you other than a License to use the Software on the terms expressly set forth in this Agreement.
- 3 To protect proprietary rights of Monotype Imaging, you agree to maintain the Software and other proprietary information concerning the Typefaces in strict confidence and to establish reasonable procedures regulating access to and use of the Software and Typefaces.
- 4 You agree not to duplicate or copy the Software or Typefaces, except that you may make one backup copy. You agree that any such copy shall contain the same proprietary notices as those appearing on the original.
- 5 This License shall continue until the last use of the Software and Typefaces, unless sooner terminated. This License may be terminated by Monotype Imaging if you fail to comply with the terms of this License and such failure is not remedied within thirty (30) days after notice from Monotype Imaging. When this License expires or is terminated, you shall either return to Monotype Imaging or destroy all copies of the Software and Typefaces and documentation as requested.
- 6 You agree that you will not modify, alter, disassemble, decrypt, reverse engineer or decompile the Software.
- 7 Monotype Imaging warrants that for ninety (90) days after delivery, the Software will perform in accordance with Monotype Imaging-published specifications, and the diskette will be free from defects in material and workmanship. Monotype Imaging does not warrant that the Software is free from all bugs, errors and omissions.

The parties agree that all other warranties, expressed or implied, including warranties of fitness for a particular purpose and merchantability, are excluded.
- 8 Your exclusive remedy and the sole liability of Monotype Imaging in connection with the Software and Typefaces is repair or replacement of defective parts, upon their return to Monotype Imaging.

In no event will Monotype Imaging be liable for lost profits, lost data, or any other incidental or consequential damages, or any damages caused by abuse or misapplication of the Software and Typefaces.
- 9 Massachusetts U.S.A. law governs this Agreement.
- 10 You shall not sublicense, sell, lease, or otherwise transfer the Software and/or Typefaces without the prior written consent of Monotype Imaging.
- 11 Use, duplication or disclosure by the Government is subject to restrictions as set forth in the Rights in Technical Data and Computer Software clause at FAR 252-227-7013, subdivision (b)(3)(ii) or subparagraph (c)(1)(ii), as appropriate. Further use, duplication or disclosure is subject to restrictions applicable to restricted rights software as set forth in FAR 52.227-19 (c)(2).
- 12 You acknowledge that you have read this Agreement, understand it, and agree to be bound by its terms and conditions. Neither party shall be bound by any statement or representation not contained in this Agreement. No change in this Agreement is effective unless written and signed by properly authorized representatives of each party. By opening this diskette package, you agree to accept the terms and conditions of this Agreement.

Open Source Software License

For the "Open Source Software license", go into the following URL and select Country > Product Name > OS > Language and then, refer to the "OSS_Notice" from the manual tab in the "Download".
<https://kyocera.info/support>

Energy Saving Control Function

The device comes equipped with a Low Power Mode where energy consumption is reduced after a certain amount of time elapses since the device was last used, as well as a Sleep where printer and fax functions remain in a waiting state but power consumption is still reduced to a minimum when there is no activity with the device within a set amount of time.

- ➔ [Low Power Mode \(page 2-45\)](#)
- ➔ [Sleep \(page 2-46\)](#)
- ➔ [Power Off Timer \(models for Europe\) \(page 2-47\)](#)

Automatic 2-Sided Print Function

This device includes 2-sided printing as a standard function. For example, by printing two 1-sided originals onto a single sheet of paper as a 2-sided print, it is possible to lower the amount of paper used.

- ➔ [Duplex \(page 6-48\)](#)

Printing in duplex mode reduces paper consumption and contributes to the conservation of forest resources. Duplex mode also reduces the amount of paper that must be purchased, and thereby reduces cost. It is recommended that machines capable of duplex printing be set to use duplex mode by default.

Resource Saving - Paper

For the preservation and sustainable use of forest resources, it is recommended that recycled as well as virgin paper certified under environmental stewardship initiatives or carrying recognised ecolabels, which meet EN 12281:2002* or an equivalent quality standard, be used.

This machine also supports printing on 64 g/m² paper. Using such paper containing less raw materials can lead to further saving of forest resources.

* : EN12281:2002 "Printing and business paper - Requirements for copy paper for dry toner imaging processes"

Your sales or service representative can provide information about recommended paper types.

Environmental benefits of "Power Management"

To reduce power consumption when idle, this machine is equipped with a power management function that automatically activates energy-saving mode when the machine is idle for a certain period of time.

Although it takes the machine a slight amount of time to return to READY mode when in energy-saving mode, a significant reduction in energy consumption is possible. It is recommended that the machine be used with the activation time for energy-saving mode set to the default setting.

Energy Star Program (for USA, Canada Only)



We participate in the ENERGY STAR® Program.

We provide the products complied with ENERGY STAR® to the market.

ENERGY STAR® is an energy efficiency program with the goal of developing and promoting the use of products with high energy efficiency in order to help prevent global warming. By purchasing the products complied with ENERGY STAR®, customers can help reduce emissions of greenhouse gases during product use and cut energy-related costs.

Warranty (the United States and Canada)

**TASKalfa MZ10500i/TASKalfa MZ9500i/TASKalfa MZ8500i/
TASKalfa MZ7500i
COLOR MULTIFUNCTIONAL PRODUCT LIMITED WARRANTY**

KYOCERA Document Solutions America, Inc. and KYOCERA Document Solutions Canada, Ltd. (both referred to as "KYOCERA") warrant the Customer's new color Multifunctional Product (referred to as "MFP"), and the new accessories installed with the initial installation of the MFP, against any defects in material and workmanship for a period of one year, or 600,000 copies/prints from date of installation, whichever first occurs. In the event the MFP or an accessory is found to be defective within the warranty period, KYOCERA's only obligation and the Customer's exclusive remedy shall be replacement of any defective parts. KYOCERA shall have no obligation to furnish labor.

This warranty is valid only for the original retail purchaser (referred to as the "Customer") of a new KYOCERA MFP in the United States of America or Canada, based upon the country of purchase.

In order to obtain performance of this warranty, the Customer must immediately notify the Authorized KYOCERA Dealer from whom the product was purchased. If the KYOCERA Dealer is not able to provide service, write to KYOCERA at the address below for the name and address of the Authorized KYOCERA Dealer in your area, or check KYOCERA's website at <https://www.kyoceradocumentsolutions.com> for KYOCERA Document Solutions America, Inc. or <https://www.kyoceradocumentsolutions.ca> for KYOCERA Document Solutions Canada, Ltd.

This warranty does not cover MFPs or accessories which: (a) have become damaged due to operator negligence, misuse, accidents, improper storage or unusual physical or electrical stress, (b) have used parts or supplies which are not genuine KYOCERA brand parts or supplies, (c) have been installed or serviced by a technician not employed by KYOCERA or an Authorized KYOCERA Dealer, or (d) have had the serial number modified, altered, or removed.

This warranty does not cover Maintenance Kits or the components of Maintenance Kits, which consist of the drum unit, the developing unit, the transfer belt, and the fixing unit which have a separate warranty.

This warranty gives the Customer specific legal rights. The Customer may also have other rights, which vary from state to state, or province to province. Neither the seller, nor any other person, is authorized to extend the time period or expand this warranty on behalf of KYOCERA.

THIS WARRANTY IS MADE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, AND KYOCERA SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY SHALL NOT EXTEND TO, AND KYOCERA SHALL NOT BE LIABLE FOR, ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES WHICH MAY ARISE OUT OF THE USE OF, OR INABILITY TO USE, THE MFP.

KYOCERA Document Solutions America, Inc.

225 Sand Road, P.O. Box 40008
Fairfield, New Jersey 07004-0008, USA

KYOCERA Document Solutions Canada, Ltd.


6120 Kestrel Rd., Mississauga, ON L5T 1S8,
Canada

2 Installing and Setting up the Machine

This chapter provides information for the administrator of this machine, such as part names, cable connection, and software installation.


Part Names (Machine Exterior)	2-2	Sleep	2-46
Part Names (Connectors/Interior)	2-4	Auto Sleep	2-46
Part Names (With Optional Equipments Attached)	2-5	Sleep Rules (models for Europe)	2-46
Connecting the Machine and Other Devices	2-6	Sleep Level (Energy Saver) (models except for Europe)	2-47
Connecting Cables	2-8	Energy Saver Recovery Level	2-47
Connecting LAN Cable	2-8	Weekly Timer Settings	2-47
Connecting USB Cable	2-9	Power Off Timer (models for Europe)	2-47
Connecting the Power Cable	2-9	Quick Setup Wizard	2-48
Power On/Off	2-10	Configuring Settings Quick Setup Wizard	2-50
Power On	2-10	Installing Software	2-51
Power Off	2-10	Published Software (Windows)	2-51
Using the Operation Panel	2-11	Installing Software in Windows	2-52
Operation Panel Keys	2-11	Uninstalling the Software	2-57
Adjusting the Operation Panel Angle	2-11	Installing Software in Mac Computer	2-58
Touch Panel	2-12	Setting TWAIN Driver	2-62
Using the Touch Panel	2-12	Setting WIA Driver	2-64
Home Screen	2-14	Checking the Counter	2-65
Assigning Functions to Function Keys	2-19	Additional Preparations for the Administrator	2-66
Display for Device Information	2-20	Administrator Privileges Overview	2-66
Display Setting Screen	2-21	Log in as Machine Administrator or Administrator	2-66
Display of Keys That Cannot Be Set	2-22	Strengthening the Security	2-67
Original Preview	2-23	Command Center RX	2-69
Enlarge the Preview Screen	2-25	Accessing Command Center RX	2-70
Entering Numbers	2-26	Changing Security Settings	2-71
Help Screen	2-28	Changing Device Information	2-72
Accessibility Functions (Magnifying the View)	2-29	E-mail Settings	2-73
Login/Logout	2-30	Registering Destinations	2-77
Login	2-30	Creating a New Custom Box	2-78
Simple Login	2-31	Printing a Document Stored in a Custom Box	2-79
Logout	2-31	Transferring Data from Our Other Products	2-80
Default Settings of the Machine	2-32	Migrating the Address Book	2-80
Setting Date and Time	2-32		
Network Setup	2-33		
Configuring the Wired Network	2-33		
Configuring the Wireless Network	2-35		
Setting Wi-Fi Direct	2-41		
Configuring NFC	2-43		
Motion Sensor	2-44		
Energy Saver function	2-45		
Low Power Mode	2-45		

Part Names (Machine Exterior)

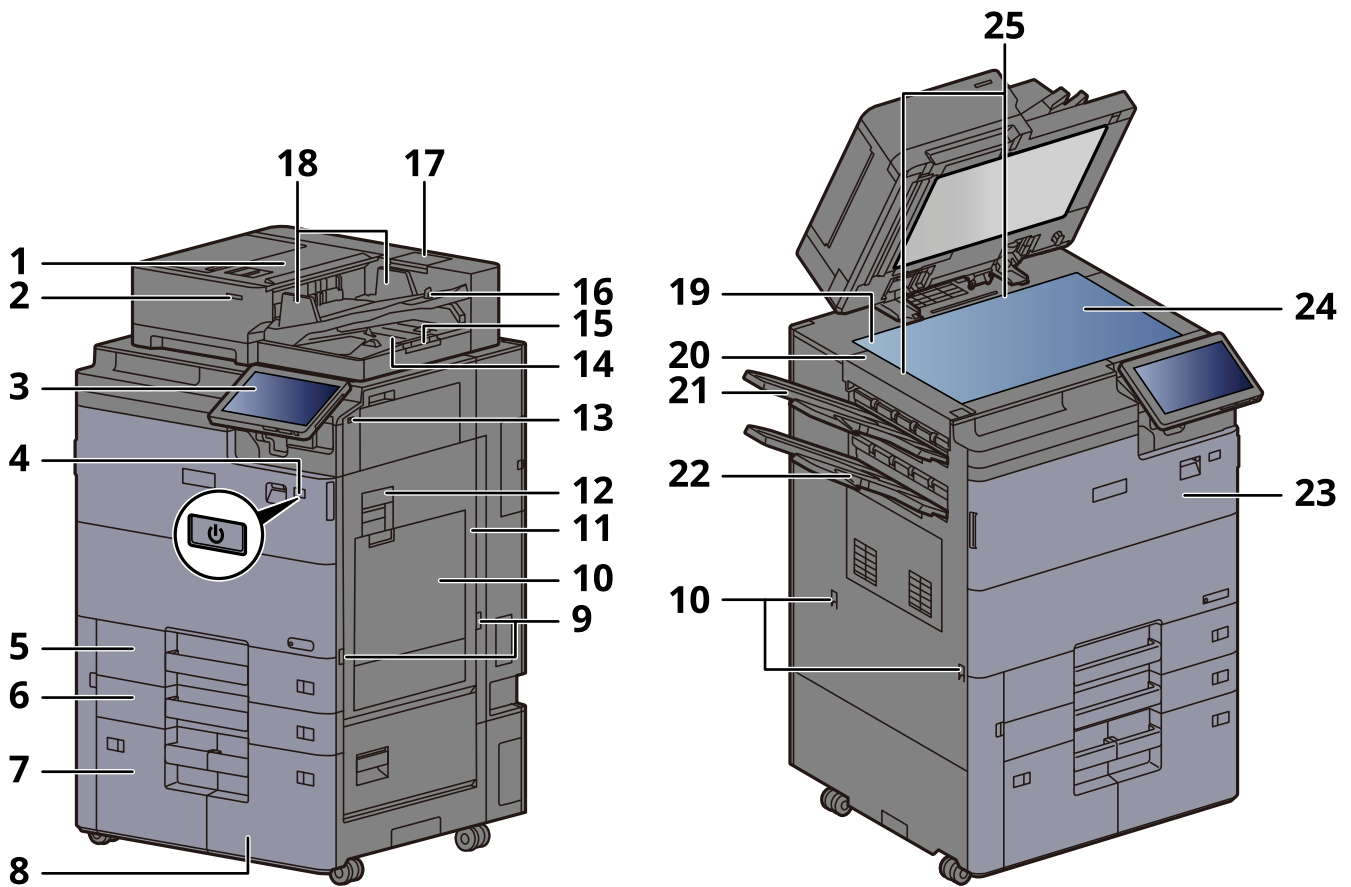

- 1 Document Processor
- 2 Original Loaded Indicator
- 3 Operation Panel
- 4 Power Switch
- 5 Cassette 1
- 6 Cassette 2
- 7 Cassette 4
- 8 Cassette 3
- 9 Handles
- 10 Multipurpose Tray
- 11 Right Cover 1
- 12 Right Cover 1 Lever
- 13 USB Memory Slot

- 14 Original Eject Table
- 15 Original Stopper
- 16 Original Table
- 17 Cleaning Cloth Compartment
- 18 Original Width Guides
- 19 Slit Glass
- 20 Upper Left Cover
- 21 Upper Left Tray
- 22 Lower Left Tray
- 23 Front Cover
- 24 Platen
- 25 Original Size Indicator Plates

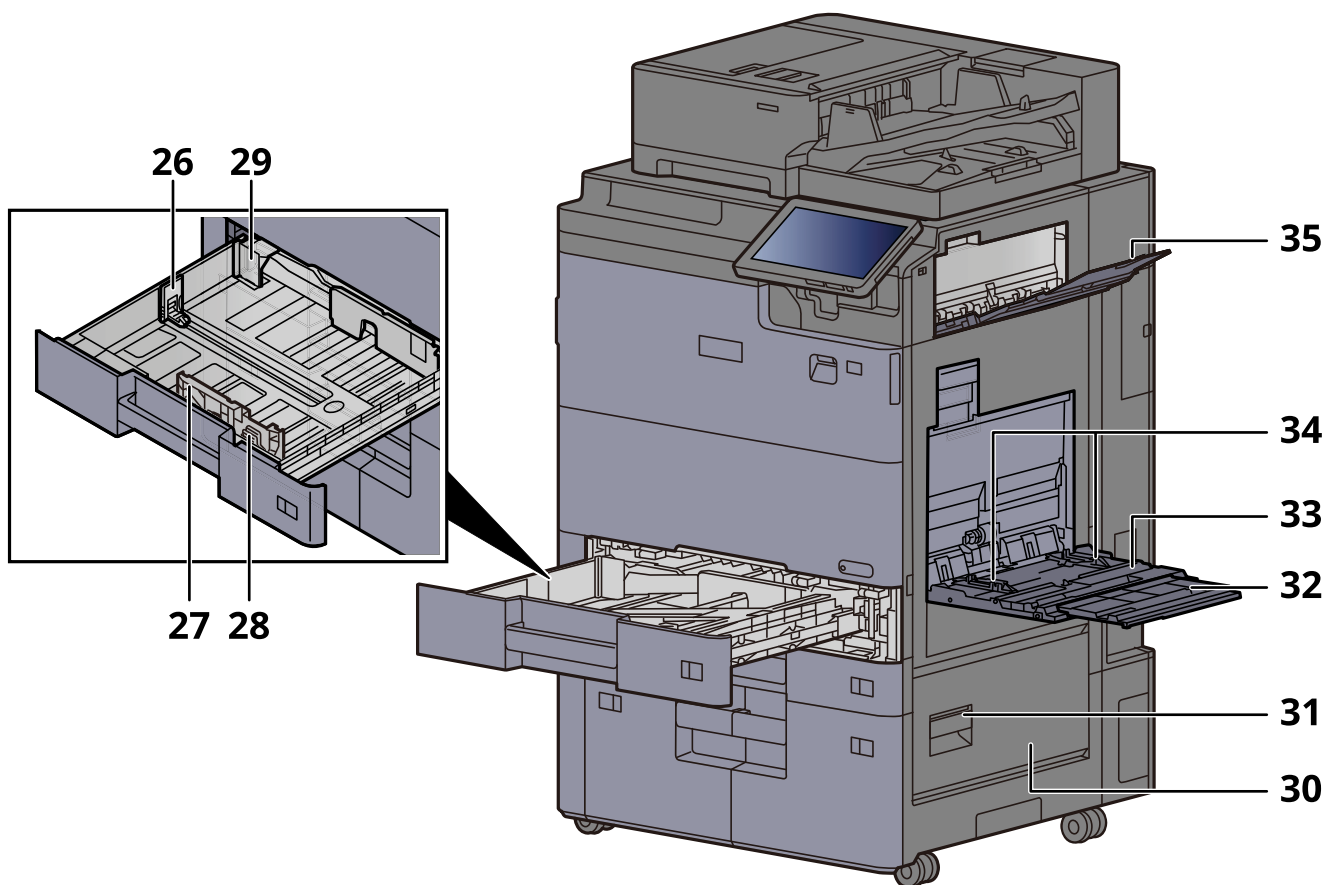

26 Paper Length Guide

27 Paper Width Guide

28 Paper Width Adjusting Tab

29 Paper Width Auxiliary Guides

30 Right Cover 2

31 Right Cover 2 Lever


32 Support Tray Section of the Multipurpose Tray

33 Multipurpose Tray

34 Paper Width Guide

35 Right Tray

Part Names (Connectors/Interior)

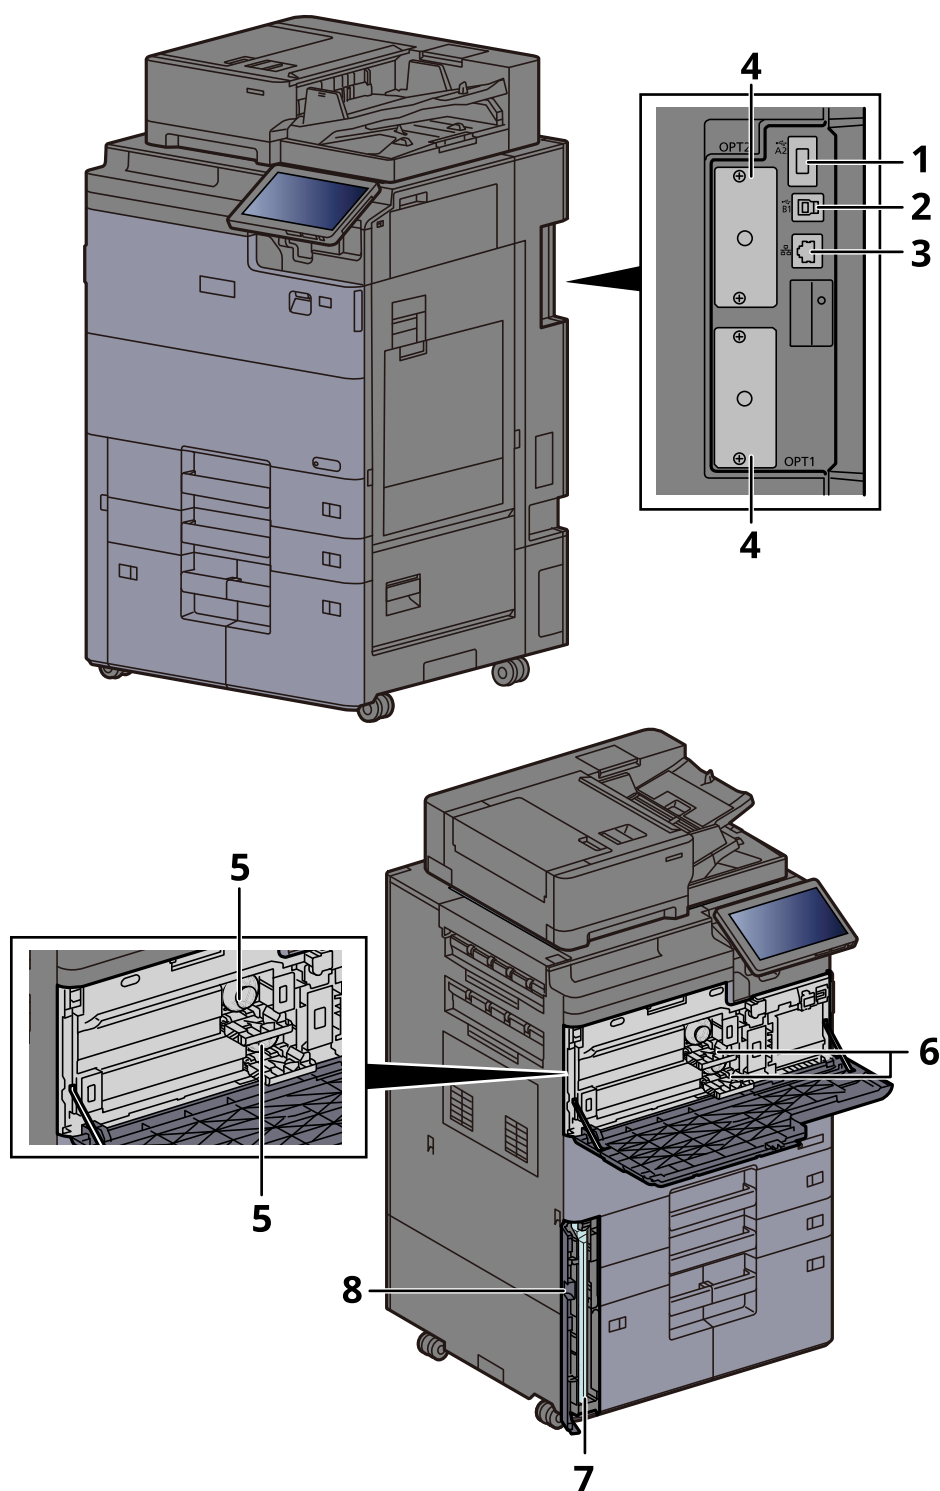

1 USB Interface Connector

2 USB Port

3 Network Interface Connector

4 Option Interface Slot


5 Toner Container (Black)

6 Toner Container Cover

7 Waste Toner Box

8 Waste Toner Box Cover

Part Names (With Optional Equipments Attached)

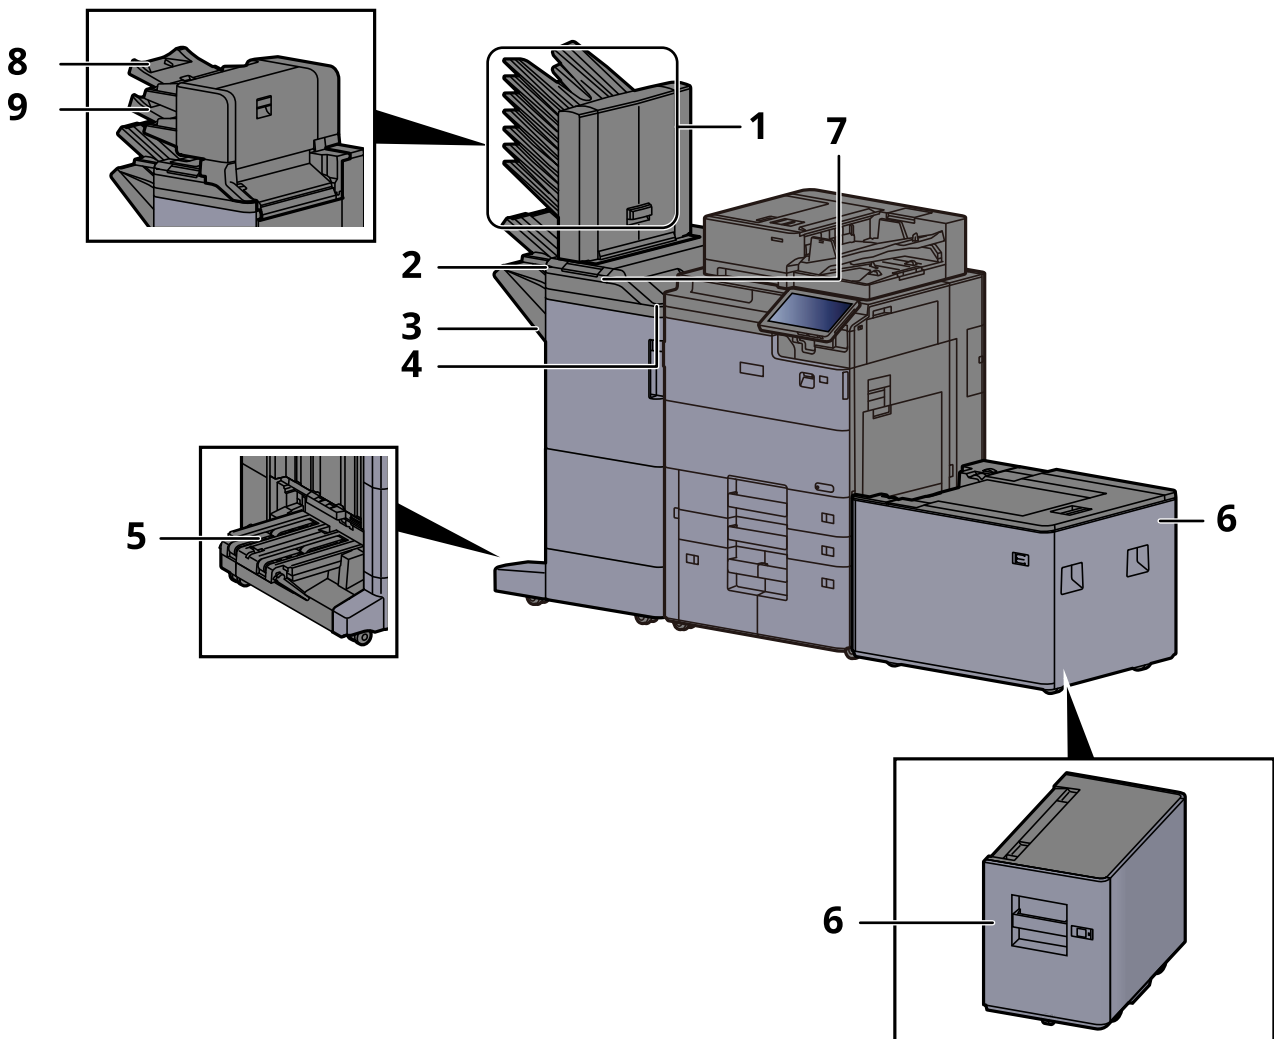

1 Tray 1 to 7 (tray 1 is the top tray)

2 Tray B

3 Tray A

4 Tray C

5 Folding Tray

➔ [Optional Equipment \(page 11-2\)](#)

6 Cassette 5

7 Control Section of the Finisher

8 Inserter Tray 1


9 Inserter Tray 2

➔ [Manual Staple \(page 5-76\)](#)


Connecting the Machine and Other Devices

Prepare the cables necessary to suit the environment and purpose of the machine use.

When Connecting the Machine to the PC via USB

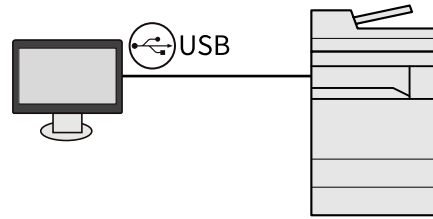

When Connecting the Machine to the PC or Tablet by network cable, Wi-Fi, or Wi-Fi direct

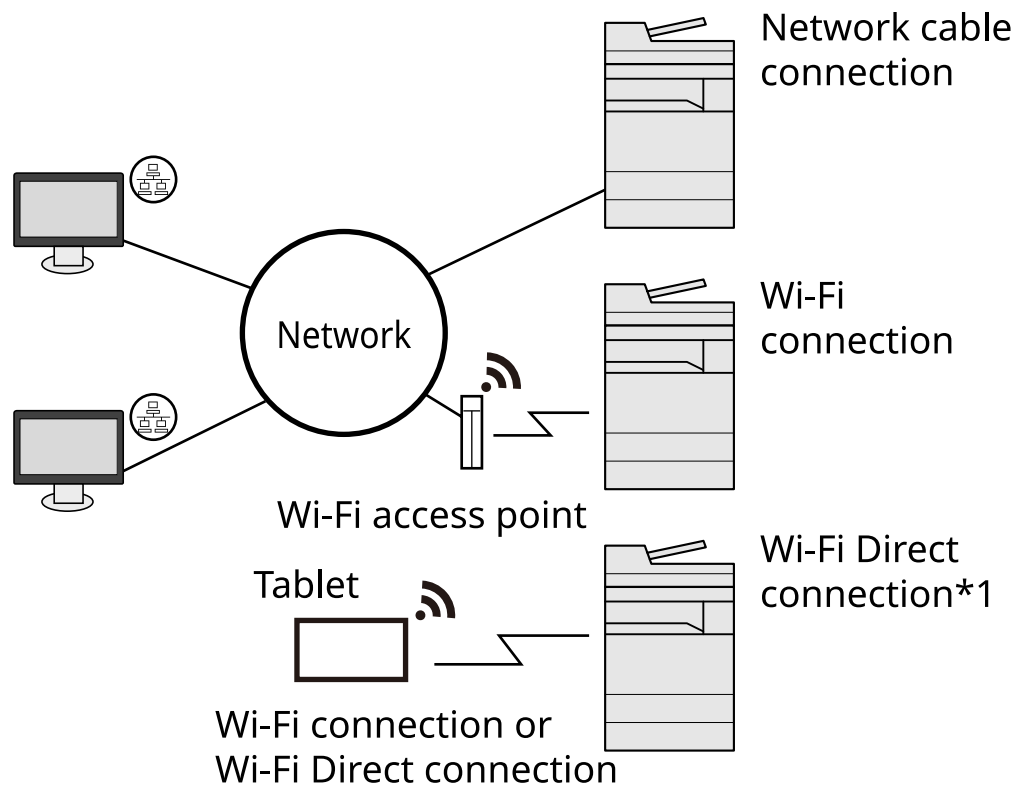

NOTE

If you are using wireless LAN, refer to the following.

➔ [Configuring the Wireless Network \(page 2-35\)](#)

Cables that Can Be Used

Connection Environment	Function	Necessary Cable
Connect a LAN cable to the machine.	Printer/Scanner/Network FAX*1	LAN cable (10BASE-T, 100BASE-TX, 1000BASE-T)
Connect a USB cable to the machine.	Printer	USB 3.0 compatible cable (Hi-Speed USB compliant, max. 5.0 m, shielded)

*1 Function available when using optional FAX kit. For more information on using the Network FAX, refer to the **FAX Operation Guide**.

 **IMPORTANT**

Using a cable other than a USB 3.0 compatible cable may cause failure.

Connecting Cables

Connecting LAN Cable


✔ **IMPORTANT**

Make sure that the power to the machine is turned off.

➔ [Power Off \(page 2-10\)](#)

1 Connect the cable to the machine.

- 1 Connect the LAN cable to the network interface connector.

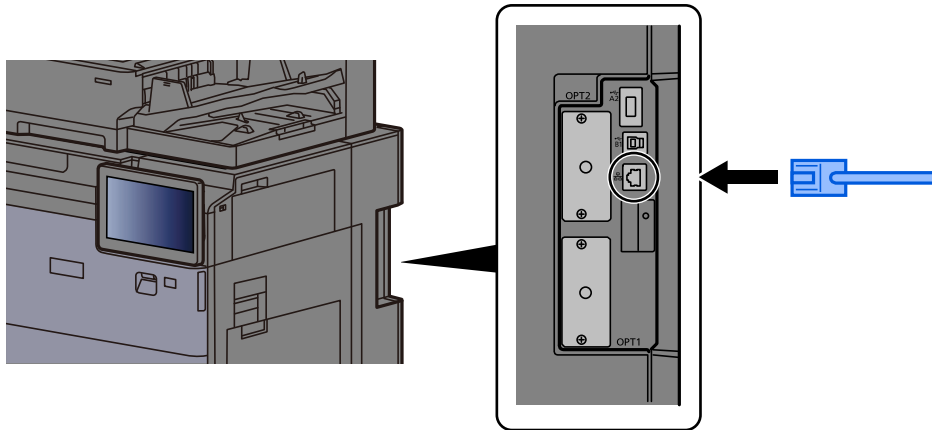

- 2 Connect the other end of the cable to the hub or the PC.

2 Power on the machine and configure the network.

➔ [Network Setup \(page 2-33\)](#)

Connecting USB Cable


✔ **IMPORTANT**

Make sure that the power to the machine is turned off.

➔ [Power Off \(page 2-10\)](#)

1 Connect the cable to the machine.

- 1 Connect the USB cable to the USB interface connector located on the left side of the body.

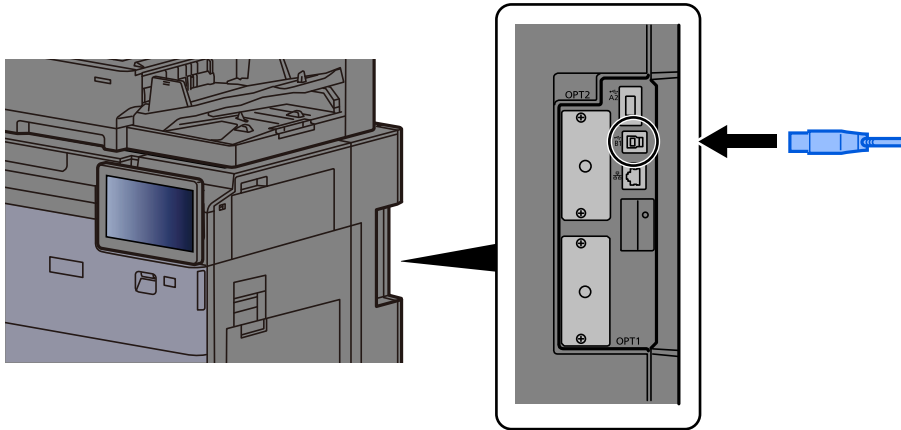

- 2 Connect the other end of the cable to the PC.

2 Power on the machine.

Connecting the Power Cable

1 Connect the cable to the machine.

Connect one end of the supplied power cable to the machine and the other end to a power outlet.


✔ **IMPORTANT**

Only use the power cable that comes with the machine.

Power On/Off


Power On

- 1 Turn the power switch on.

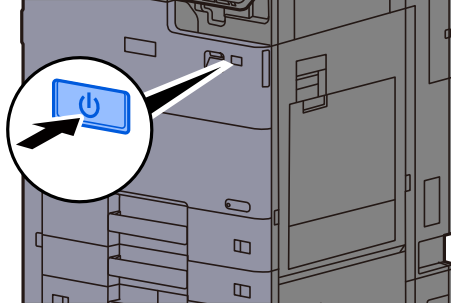

Power Off

- 1 Turn the power switch off.

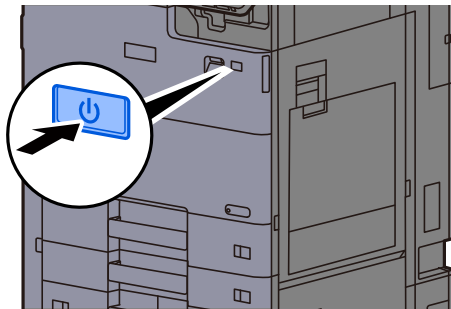

The confirmation message for power supply off is displayed.

➔ [Show Power Off Message \(page 8-10\)](#)

It takes several minutes for power off.

CAUTION


If this machine will be left unused for an extended period (e.g. overnight), turn it off at the power switch. If the machine will not be used for an even longer period of time (e.g. vacation), remove the power plug from the outlet as a safety precaution.

IMPORTANT

- Do not press and hold the power switch more than 5 seconds continuously. Forcibly turning off the power may damage the HDD or the memory so that it causes the failure.
- If using the products equipped with the fax function, note that turning the machine off at the power switch disables fax transmission and reception.
- Remove paper from the cassettes and seal it in the paper storage bag to protect it from humidity.

Using the Operation Panel


Operation Panel Keys

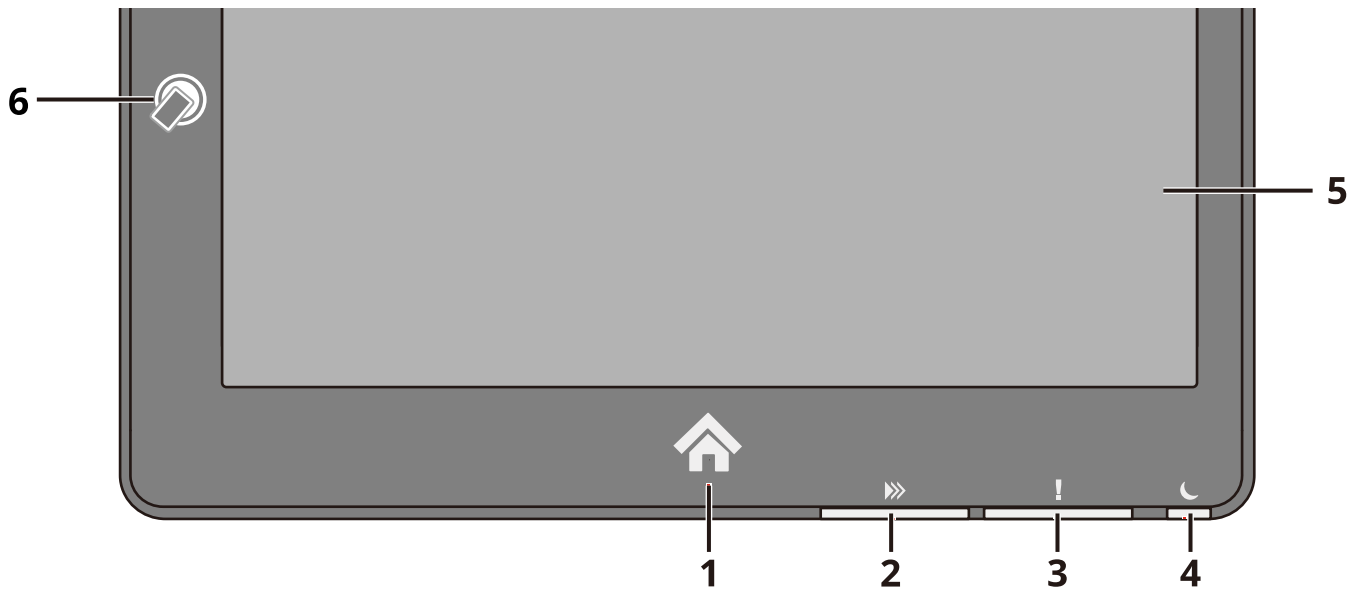

- 1 **[Home]** key: Displays the Home screen.
- 2 **[Data]** indicator: Blinks while the machine is printing or sending/receiving, or accessing the hard disk/SSD. Also, it lights when there is a sending job FAX using delayed transmission.
- 3 **[Attention]** indicator: Lights or blinks when an error occurs and a job is stopped.
- 4 **[Energy Saver]** indicator: Blinks while the machine is asleep.
- 5 Touch Panel: Displays icons for configuring machine settings.
- 6 NFC mark: Hold your NFC-enabled smartphone over this mark.

Adjusting the Operation Panel Angle

The angle of the operation panel can be adjusted.

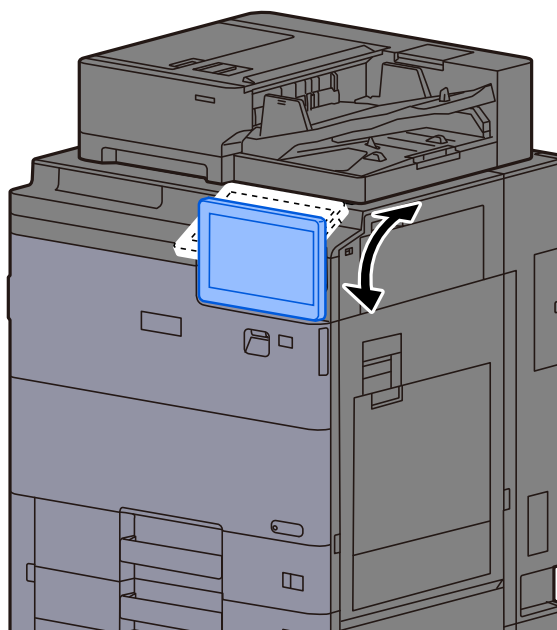

Touch Panel


Using the Touch Panel

This section explains the basic operation of the touch panel.

Tapping

This is the operation used to select an icon or key.

In this document, the tap operation is expressed as "select."

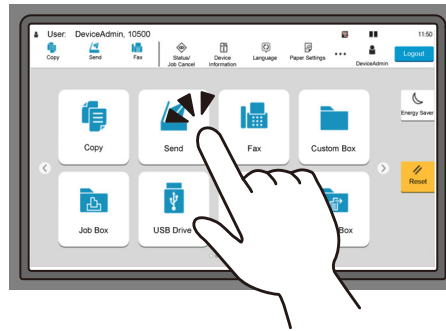

Popover

Tap the icons and keys to display detailed information on the icons and menus. A popover displays information and menus without switching between screens.




Swiping


This is the operation used to switch between screens and to display items that are not displayed in the list.

Move in one direction as if tracing on the screen.


The figure shown below is an example of swiping Home Screen. Move the screen to the left and right.

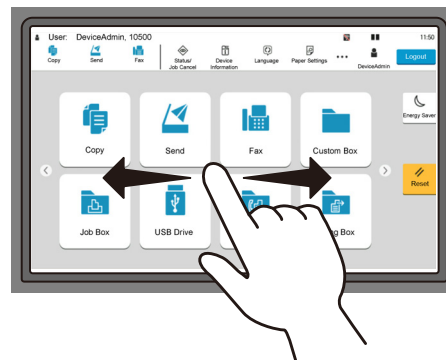

The figure shown below is an example of swiping System Menu Screen. Move the screen up and down.

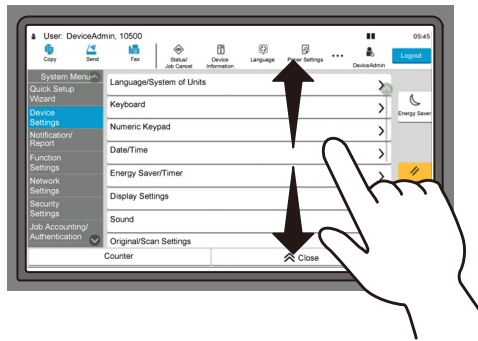

Operating the touch panel

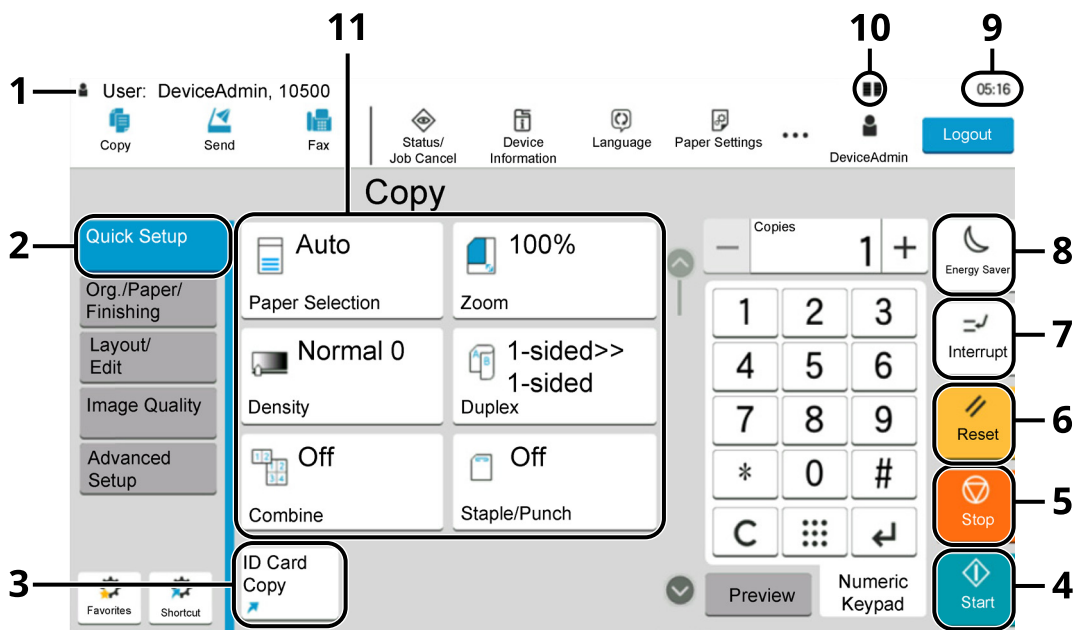


- 1 Displays the status of the equipment as well as necessary operation messages.
- 2 Displays the Quick Setup screen.
- 3 Displays registered shortcuts.
- 4 **[Start]** key: Starts copying and scanning operations and processing for setting operations.
- 5 **[Stop]** key: Cancels or pauses the job in progress.
- 6 **[Reset]** key: Returns settings to their default states.
- 7 **[Interrupt]** key: Displays the Interrupt Copy screen.
- 8 **[Energy Saver]** key: Puts the machine into Sleep Mode.
- 9 Displays the time.
- 10 Remaining amount of toner.
- 11 Set the copy functions.

Home Screen


This screen is displayed by selecting the [**Home**] key on the operation panel. Touching an icon will display the corresponding screen.

You can change the icons to display on the Home screen as well as its background.

➔ [Editing the Home Screen \(page 2-15\)](#)

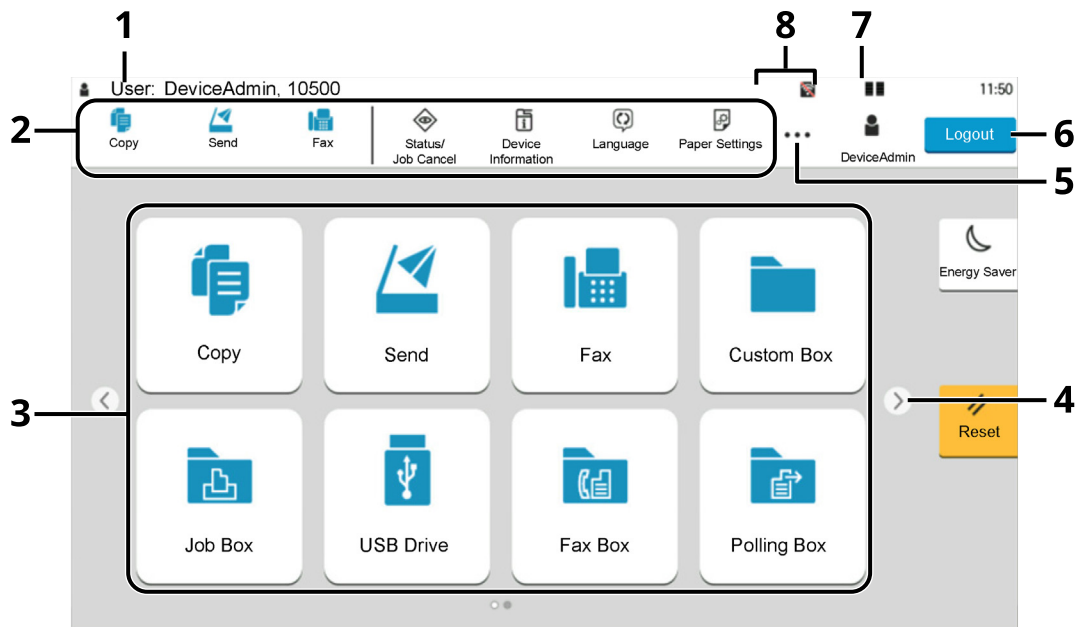

* The appearance may differ from your actual screen, depending on your configuration and option settings.

No.	Item	Description
1	Status Area	Displays the messages and status icons for the current status. Displays the logged-in user name when user login administration is enabled.
2	Taskbar	Displays task icons. If an error occurs, the [Status/Job Cancel] icon will show "!". Once the error clears, the display will return to normal.
3	Desktop	Displays the application icons. Icons that are not displayed on the first page will appear by changing the page.
4	Screen-switching keys	Use these buttons to switch between desktop pages.  NOTE It is also possible to use swiping to switch between displays. ➔ Using the Touch Panel (page 2-12)
5	[...]	Displays every task icons including the icons displayed in an taskbar area in a popover.
6	[Logout]	Logs out when user login administration is enabled.
7	Remaining amount of toner	Displays the remaining amount of toner. Select this icon to display details of the remaining amount of toner in a popover.

No.	Item	Description
8	Sub status icons	Displays the icons that indicate the status of the machine. 5 icons can be displayed. Select this area to display the icon information in a popover.
	Status Icon (Wi-Fi)	The icon "📶" is displayed when Wi-Fi is connected. When Wi-Fi is not connected, "📶" is displayed.
	Status Icon (Security level: Low)	"🛡️" is displayed when the security level is set at [Low].
	Status Icon (Remote operation)	"🖱️" is displayed when using the remote operation.
	Status Icon (Security information)	When you activate the Data Encryption/Overwrite Function, the Security information icon will be displayed. "🗄️" is displayed while the data is overwriting. "🗄️" is displayed if remaining data is in HDD. "🗄️" is displayed if remaining data is not in HDD.
	Status Icon (FAX Memory RX Box capacity)	"📠" is displayed when the capacity of the FAX Memory RX Box is 10% or less.
	Status Icon (USB drive)	"🗄️" is displayed when a USB drive is connected to this machine. Tapping the USB drive icon and selecting [Remove USB] allows you to safely remove the USB drive.

Editing the Home Screen

You can change the background of the Home screen as well as which icons are displayed.

1 Display the screen.


[Home] key > [...] > [System Menu] > [Function Settings] > [Home]

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.



2 Configure the settings.

The available settings are shown below.

Item	Description
Customize Desktop	Specify the function icons to display on the desktop. ^{*1} Select [Add] to display the screen for selecting the function to display. Select [Function Type] to narrow down the functions by applications and favorites. Select the function to display and [OK]. Select an icon and [Previous] or [Next] to change the display position of the selected icon on the Desktop. To delete an icon from desktop, select the desired one and select [Delete].
Customize Taskbar	Specify the task icons to display on the taskbar. Select [Taskbar Button 1 (to 4)]. Select the function to display, and select [OK]. 4 task icons can be displayed.  NOTE Functions that are hidden can be displayed by selecting [...] (popover icon) on the right end of the taskbar. Taskbar buttons for which [None] has been selected will not be displayed. Other taskbar buttons will be displayed in order from the left.
Wallpaper	Configure the wallpaper of the Home screen. Value: Images 1 to 8

*1 Displays a maximum of 60 function icons including the installed applications and the functions that can be used when options are installed.

Available Functions to Display on Desktop

Function	Icon	Description	Reference page
Copy ^{*1}		Displays the Copy screen.	page 5-15
Send ^{*1}		Displays the Send screen.	page 5-19
Fax Server		Displays the FAX Server screen.	page 5-40
Fax ^{*2}		Displays the FAX screen.	Refer to FAX Operation Guide .
Custom Box ^{*1}		Displays the Custom Box screen.	page 5-58
Job Box ^{*1}		Displays the Job Box screen.	page 4-20
USB Drive ^{*1}		Displays the USB Drive screen.	page 5-70
Fax Box ^{*2}		Displays the Fax Box screen.	Refer to FAX Operation Guide .
Polling Box ^{*2}		Displays the Polling Box screen.	Refer to FAX Operation Guide .
Fax Memory RX Box ^{*2}		Displays the Fax Memory RX Box screen.	Refer to FAX Operation Guide .
Internet Browser		Displays the Internet Browser screen.	page 5-74
Send to Me (Email) ^{*3}		Displays the Send screen. The E-mail address of the logged-in user is set as the destination.	page 5-39
Send to Me from Box (Email) ^{*3}		Displays the Custom Box screen. The E-mail address of the logged-in user is set as the destination.	page 5-39
Favorites		Calls up the registered favorite. The icon will change according to the function of the favorite.	page 5-7
Application Name ^{*4}	—	Displays the selected applications.	page 5-10

















*1 Selected at the time of shipment from factory.

*2 Displayed only on products with the fax function installed.

*3 Displayed when user login administration is enabled.

*4 The icon of the application appears.

Available Functions to Display on Taskbar

Function	Icon	Description	Reference page
Status/Job Cancel ^{*1}		Displays the Status/Job Cancel screen.	—
Device Information ^{*1}		Displays the Device Information screen. Check the system and network information, and information on the options that are used. It is possible to print various reports and lists.	page 2-20
Language ^{*1}		Displays the Language setting screen in System Menu.	page 8-7
Paper Settings ^{*1}		Displays the Paper setting screen in System Menu.	page 8-14
Wi-Fi Direct ^{*2}		Wi-Fi Direct is set and a list of information relating to the machine that can use the network appears.	page 2-41
Help		Displays the Help screen.	page 2-28
User Property		Displays the User Property screen.	page 9-8
Incoming Fax Log ^{*3}		Displays the Incoming Fax Log screen.	Refer to FAX Operation Guide .
Outgoing Fax Log ^{*3}		Displays the Outgoing Fax Log screen.	Refer to the FAX Operation Guide .
System Menu		Displays the System Menu screen.	page 8-2
Counter		Displays the Counter screen.	page 2-65
Accessibility/Standard		Magnifies the text and icons on the screen. Select [Accessibility/Standard] again to return to the previous view.	page 2-29
Message Board		Displays the Message Board screen.  NOTE To use this function, set "Message Board" to [ON] in System Menu.	page 8-30
Numeric Keypad		Displays the numeric keys on the touch panel.	—
Favorites		Displays the favorite list screen.	page 5-7

*1 Selected at the time of shipment from factory.

*2 Displayed when the optional Wireless Network Interface Kit is installed.

*3 Displayed only on products with the fax function installed.

Assigning Functions to Function Keys

Function keys are keys to which various functions and applications, including copy and scan, can be assigned. Frequently used functions and applications can be assigned and the screen can easily be displayed.

For this machine, the following functions are pre-assigned; however, alternative functions can be registered by re-assigning these functions.

- [F1] (Function key 1): Copy
- [F2] (Function key 2): Send
- [F3] (Function key 3): FAX (Option)

1 Display the screen.

[Home] key > [...] > [System Menu] > [Device Settings] > [Function Key Assignment]



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 Configure the settings.

- 1 Select the function key to be set.
- 2 Select the function to be assigned.

Function	Description	Reference page
None	No function has been assigned.	—
Copy	Displays the Copy screen.	page 5-15
Send	Displays the Send screen.	page 5-19
Fax Server	Displays the Fax Server screen.	page 5-40
Fax ^{*1}	Displays the Fax screen.	Refer to FAX Operation Guide .
Custom Box	Displays the Custom Box screen.	page 5-51
Job Box	Displays the Job Box screen.	page 4-20
USB Drive	Displays the USB Drive screen.	page 5-70
Fax Box ^{*1}	Displays the Fax Box screen.	Refer to FAX Operation Guide .
Polling Box ^{*1}	Displays the Polling Box screen.	
Fax Memory RX Box ^{*1}	Displays the Fax Memory RX Box screen.	
Send to Me (Email) ^{*2}	Displays the Send screen. The E-mail address of the logged-in user is set as the destination.	page 5-39
Send to Me from Box (Email) ^{*2}	Displays the Custom Box screen. The E-mail address of the logged-in user is set as the destination.	page 5-39
Internet Browser	Displays the Internet Browser screen.	page 5-74
ID Card Copy	Displays the ID Card Copy screen.	page 6-35
Favorites Name	Calls up the registered favorite.	page 5-7
Application Name	Displays the selected applications.	page 5-10

*1 Displayed only on products with the fax function installed.

*2 Displayed when user login administration is enabled.

Display for Device Information

Shows device Information. It is possible to check the status of the system and network, the status of consumables such as toner and paper and the situation of the options being used. It is also possible to print various reports and lists.


- 1 [Home] key > [Device Information]
- 2 Check the device Information.

Tab	Description
Identification/Wired Network	You can check ID information such as the model name, serial number, host name and location, and the IP address of the wired network.
Wi-Fi Direct/Wi-Fi	You can check the status of Wi-Fi connection, such as the device name, network name and IP address.
Supplies/Paper	You can check the remaining amount of toner, and paper.
Fax^{*1}	You can check the local fax number, local fax name, local fax ID and other fax information.
USB/NFC/Bluetooth	You can check the connection status of USB drive, NFC (Near Field Communication) and Bluetooth keyboard.
Option/Application	You can check information on the options and applications that are used.
Capability/Software Version	You can check the software version and performance.
Security	You can check the security information on the machine.
Report	You can print various reports and lists.
Remote Ope. Status	You can check the status of remote operation.

*1 Displayed only on products with the fax function installed.


Display Setting Screen

The following procedure is an example of the Copy screen.

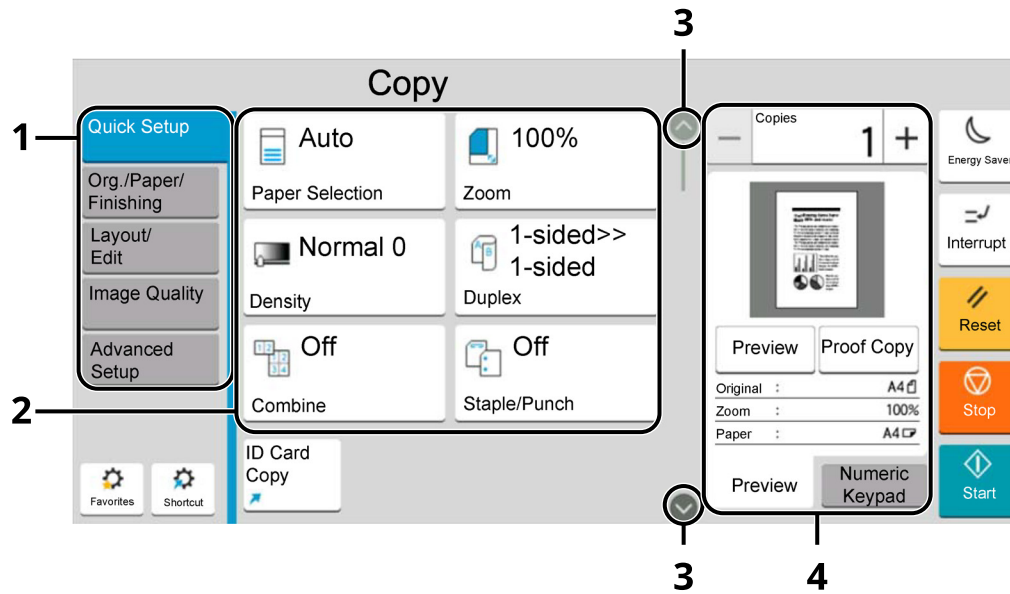


- 1 Global Navigation
Displays the function categories.
- 2 Body
Display functions and shortcuts of copy.
- 3 Arrow Button
Moves the screen up or down.
- 4 Right Pane Area
Displays specific functions such as preview or numeric keypad.

Select Global Navigation and configure each function. Select the Arrow Button to display the following functions.

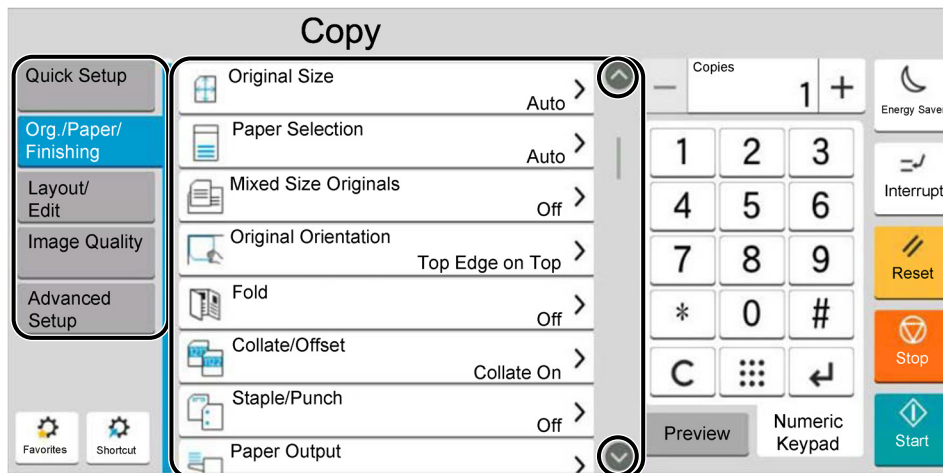

When an On/Off Flipswitch is displayed for a function, select the switch to change between ON and OFF.

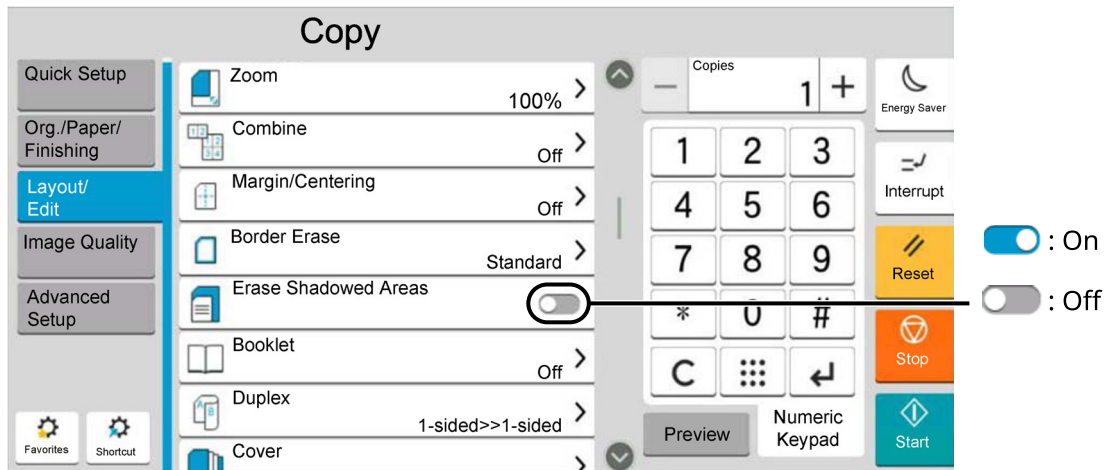

Display of Keys That Cannot Be Set

Keys of features that cannot be used due to feature combination restrictions or non-installation of options are in a non-selectable state.

Normal	Grayed out	Hidden
	<p>In the following cases, the key is grayed out and cannot be selected.</p> <ul style="list-style-type: none"> • Cannot be used in combination with a feature that is already selected. • Use prohibited by user control. • For functions that cannot be changed when using proof copy. 	<p>Cannot be used because an option is not installed.</p>

NOTE

- If a key that you wish to use is grayed out, the settings of the previous user may still be in effect. In this case, select the **[Reset]** key and try again.
- If the key is still grayed out after the **[Reset]** key is selected, it is possible that you are prohibited from using the function by user login administration. Check with the administrator of the machine.

Original Preview

You can display a preview image of the scanned document on the panel.


NOTE

To view a preview of an image stored in a Custom Box, refer to the following:


➔ [Previewing Documents/Checking Document Details \(page 5-56\)](#)

The procedure described here is for copying a single-page original.

- 1 Display the screen.**
[Home] key > [Copy]
- 2 Place the originals.**
- 3 Display a preview image.**
 - 1** Select [Preview] tab > [Preview].

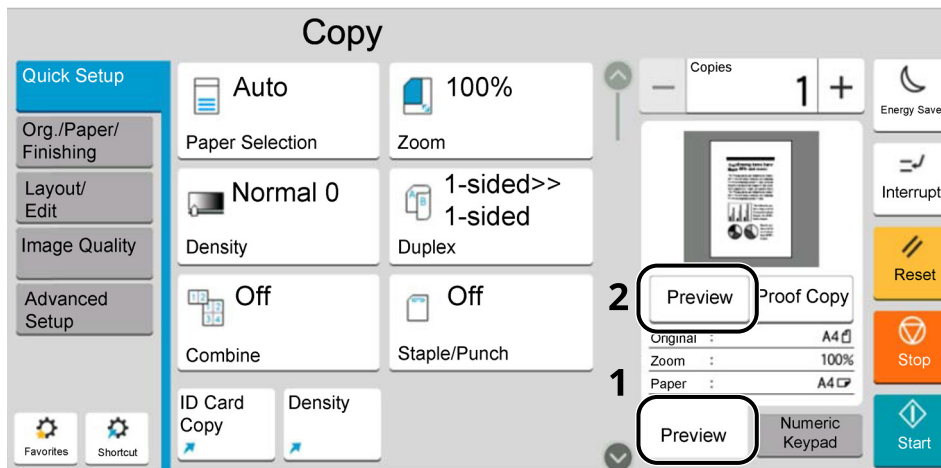


The machine starts scanning the original. When scanning is completed, the preview image appears on the panel.

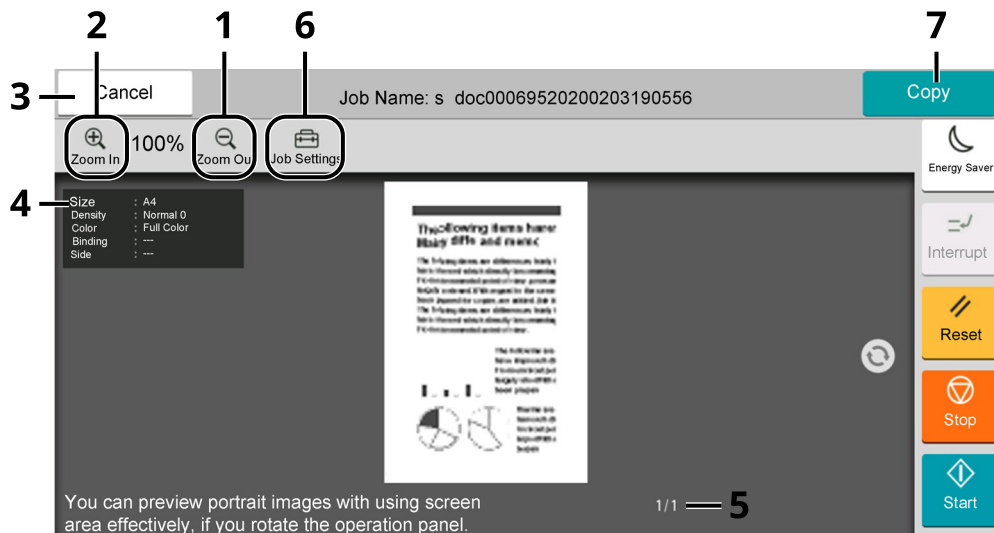

- 1 Zoom out.
- 2 Zoom in.
- 3 Cancel the job.
- 4 Displays the data information.
- 5 Displays the current number of pages and overall number of pages.
- 6 You can change the job settings.
- 7 Start the copying.

Duplex Printing

Settings for duplex printing appear.

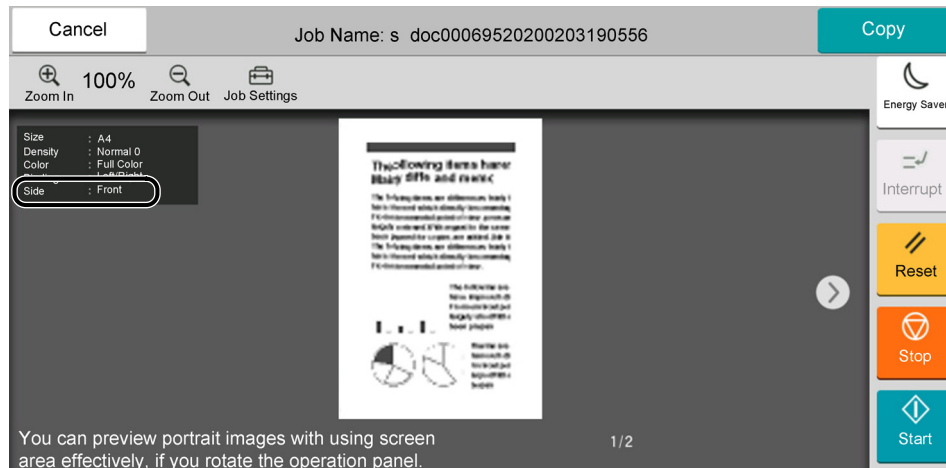

NOTE

- To change the quality or the layout, select [**Cancel**].
Change the settings and select [**Preview**] again to see a preview image with the new settings.
- Depending on the function you are using, even if you scan a multi-page original, only the first page can be previewed.

- 2 If there is no problem with the preview image, select [**Copy**].
Copying starts.


Using the Preview Screen

When the Preview screen is displayed, you can do the following by moving the finger that is touching the touch panel.

Function	Description
Swipe	If a document with multiple pages is placed on the Document Processor, then all of the document is read and then the preview for the first page is displayed. Swipe the preview to the left and right to display a preview of the pages in the order read.
Drag	With the finger touching the touch panel, slide the finger to move the position of the displayed preview.
Pinch in Pinch out	With two fingers touching the touch panel, widen or tighten the space between the two fingers to zoom in and out on the view.

Enlarge the Preview Screen

When the Preview screen is displayed, you can enlarge this by rotating the orientation panel to vertical. This allows you to better check the details of the scanned image.

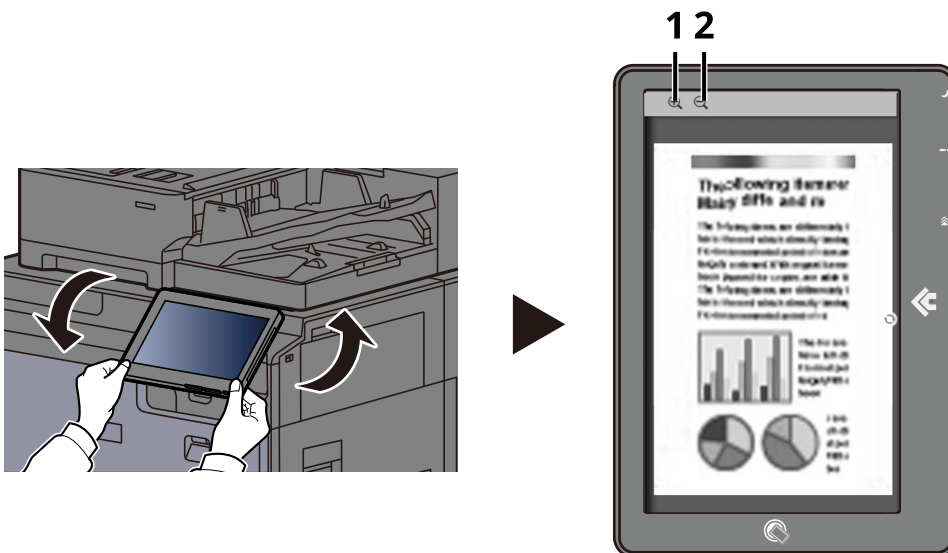


- 1 Zoom in.
- 2 Zoom out.

✔ IMPORTANT

When rotating the control panel, hold the part illustrated above and rotate.

Entering Numbers

When entering numbers, numeric keys appear on the touch panel if you select the area in which the number is entered.

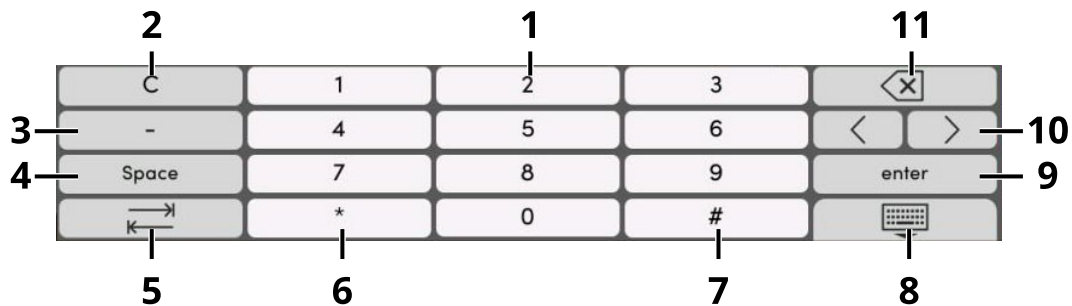


- 1 Enter numbers.
- 2 Clear entered numbers.
- 3 Enters [-].
- 4 Insert a space.
- 5 Move to the next input box.
- 6 When [.] is displayed: Enters the decimal point. The numbers entered after selecting this key will be the numbers after the decimal point.
When [*] is displayed: Enters [*].
- 7 When [+/-] is displayed: Switches between positive and negative numbers.
When [#] is displayed: Enters [#].
- 8 Close the numeric keypad.
- 9 Entry by numeric keys is confirmed.
- 10 Move the cursor.
- 11 Delete a character to the left of the cursor.





NOTE

- Depending on the item being entered, some of the keys other than the number keys may not be usable.
- Numeric keys do not appear on the touch panel if an optional numeric keypad is installed.



Example: When entering the number of copies

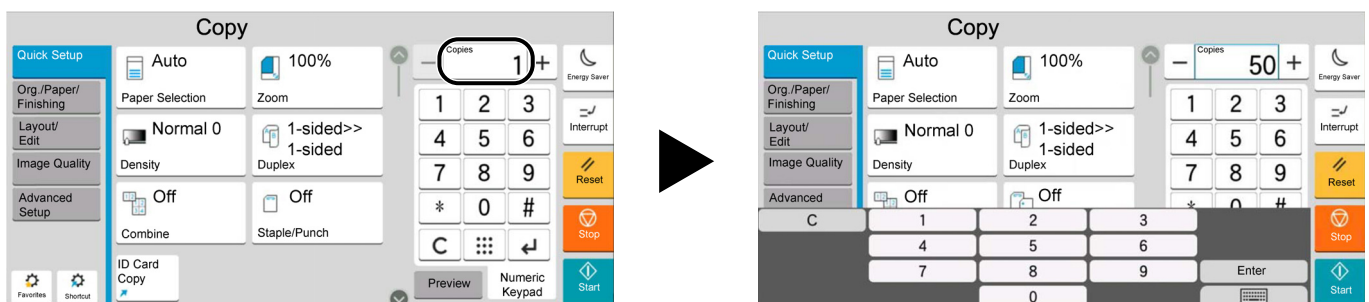

Example: When entering a one-touch key number

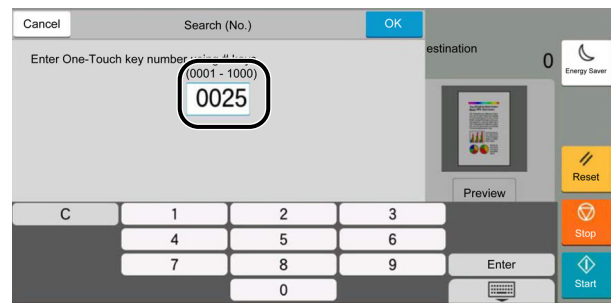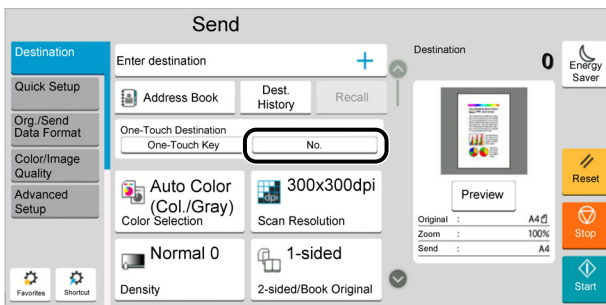

Example: When searching for an address number

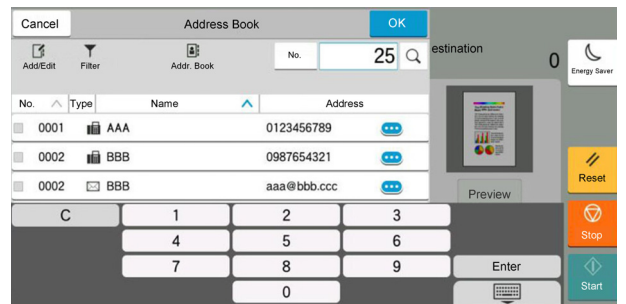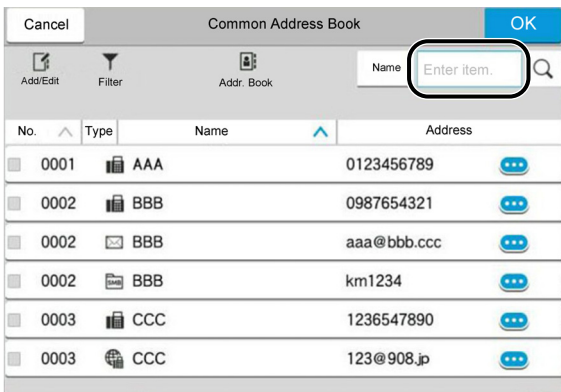

NOTE


For copy and print screens, you can set numeric keys to be displayed in advance. In addition, you can select the layout for numeric keys that are used on the application.

➔ [Numeric Keypad \(page 8-7\)](#)



Help Screen

If you have difficulty operating the machine, you can check how to operate it using the touch panel. Select **[Help]** on the Home screen to show the Help list.

1 [Home] key > [...] > [Help]

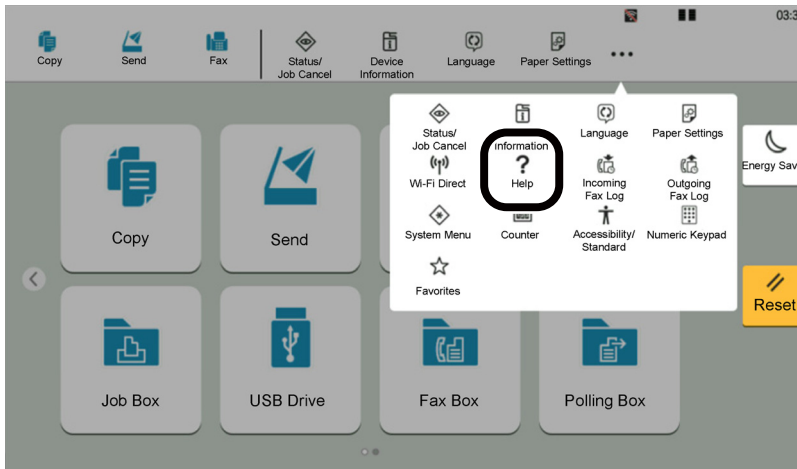

2 Select the items to check from the list.

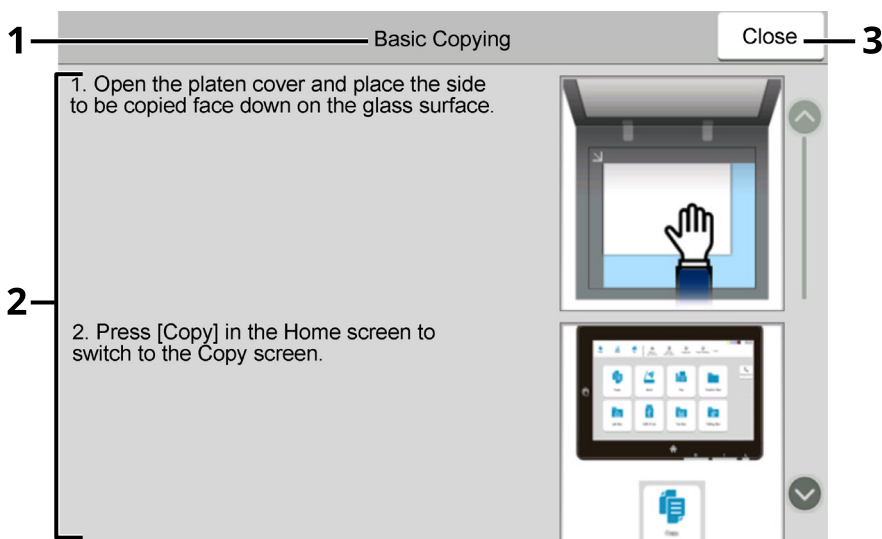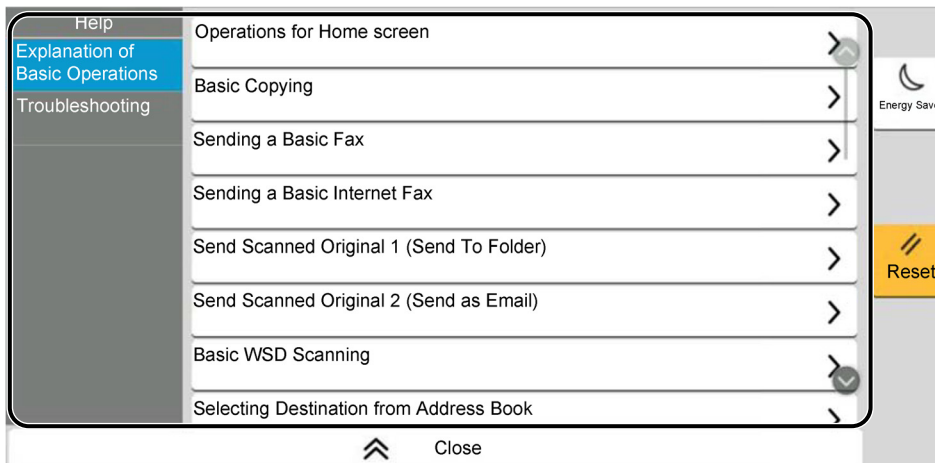


- 1 Help titles
- 2 Displays information about functions and machine operation.
- 3 Closes the Help screen and returns to the original screen.


Accessibility Functions (Magnifying the View)

You can magnify the text and keys displayed on the touch panel. You can also select items and move to the next screen using the numeric keys.

Select [**Home**] key > [...] > [**Accessibility/Standard**]

Large keys and text appear on the touch panel.

-  **NOTE**
- This function can be used on the Home screen and on the functions that were registered via Copy/Send/Fax Quick Setup.
 - To configure any functions that are not displayed on the Accessibility screen, you need to return to the original view. Select [**Accessibility/Standard**] again.
 - Long press the [**Home**] key to switch between the Standard screen and the Accessibility screen.

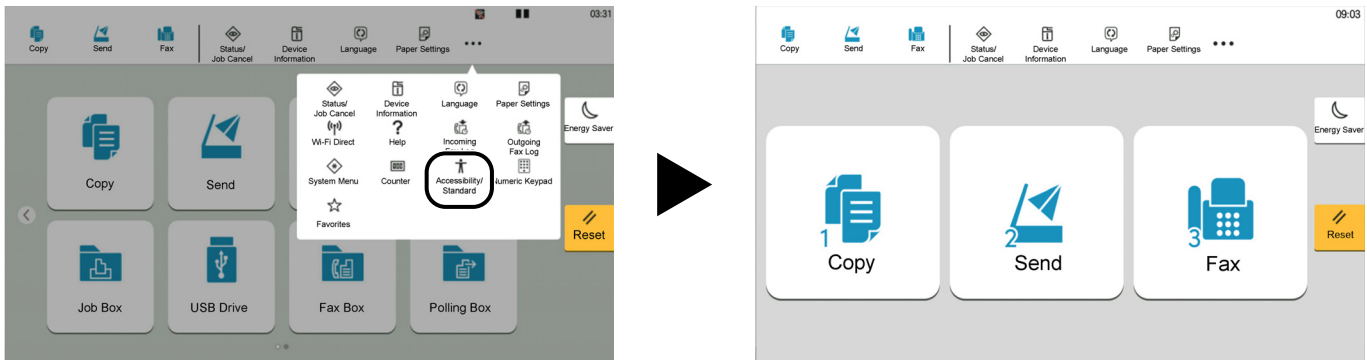

You can also control the screen using the numeric key corresponding to the number in circle. (Example: Select the [**2**] key on the numeric key pad to display the Send screen.)

Control the functions according to the display on the screen.

Login/Logout

Login

Normal login

1 Enter the login user name and login password to login.

If this screen is displayed during operations, enter the login user name and login password.

- 1 If **[Network Authentication]** is selected as the user authentication method, authentication destinations are displayed and either **[Local]** or **[Network]** can be selected as the authentication destination.
- 2 Enter the login user name.
- 3 Enter the login password.
 - ➔ [Character Entry Method \(page 11-9\)](#)
- 4 Select the login method from **[Simple login]**, **[PIN code login]** and **[IC card login]**.
 - ➔ [User Authentication and Accounting \(User Login, Job Accounting\) \(page 9-1\)](#)
- 5 Check the Wi-Fi Direct environment.
- 6 Refer to the number of pages printed and the number of pages scanned. Displayed when job accounting is enabled.
- 7 Set the language to use for the touch panel display.
 - You can try in number of times below with one registered account.
 - If you enter an incorrect password on all tries, the account will be locked.
 - Number of tries: 3


NOTE

Registered accounts are only that the local users and the network users with local user authority.

2 Select **[Login]**.

Simple Login

- 1 If this screen is displayed during operations, select a user and log in.

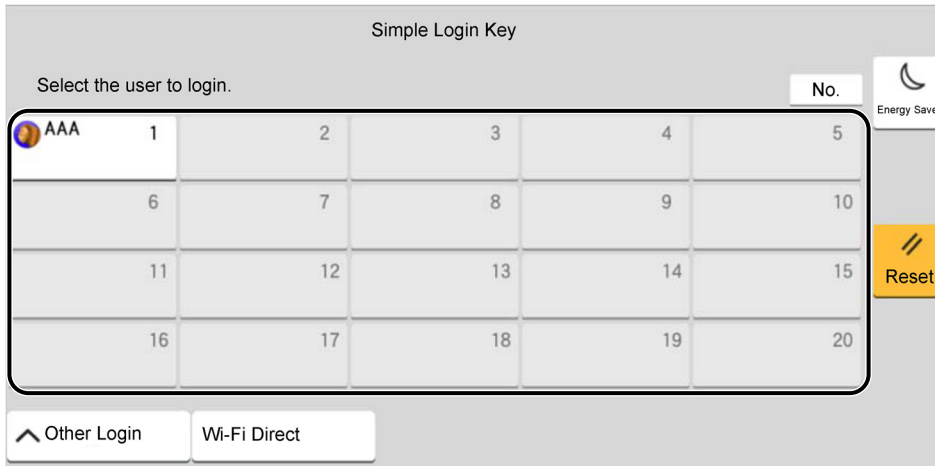

NOTE


If a user password is required, an input screen will be displayed.

- ➔ [Simple Login Settings \(page 9-22\)](#)

Logout

- 1 Select the [Logout] key.

The login user name/login password entry screen is returned.

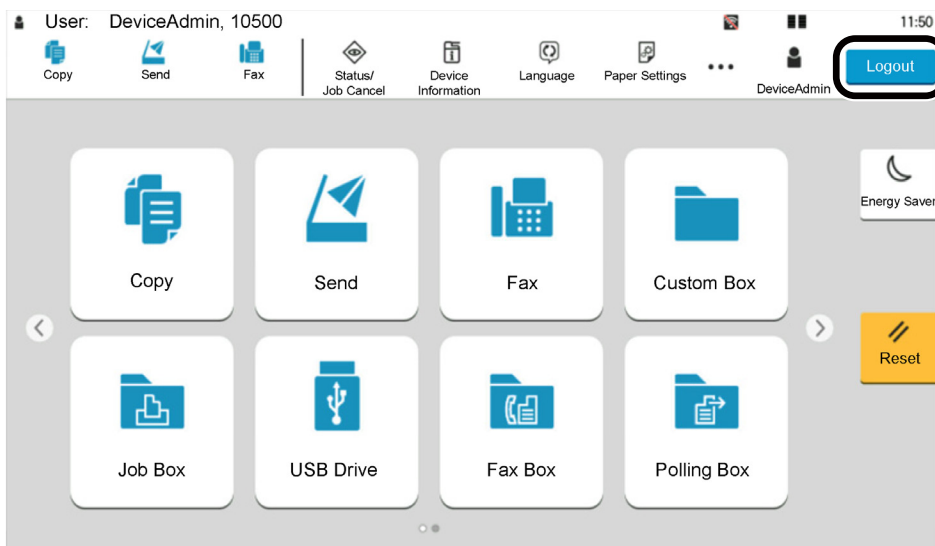

NOTE

Users are automatically logged out in the following circumstances:

- When the machine enters the sleep state.
- When the auto panel reset function is activated.

Default Settings of the Machine

The default settings of the machine can be changed in System Menu. Before using this machine, configure such settings as date and time, network configuration, and energy saving functions as needed.

NOTE

For settings that are configurable from System Menu, refer to the following:

➔ [Setup and Registration \(System Menu\) \(page 8-1\)](#)

Setting Date and Time

Follow the steps below to set the local date and time at the place of installation.

When you send an E-mail using the transmission function, the date and time as set here will be printed in the header of the E-mail message. Set the date, time and time difference from GMT of the region where the machine is used.

NOTE

• To make changes after this initial configuration, refer to the following:

➔ [Date/Time \(page 8-7\)](#)

• The correct time can be periodically set by obtaining the time from the network time server.

➔ [Command Center RX User Guide](#)

1 Display the screen.

[Home] key > [...] > [System Menu] > [Device Settings] > [Date/Time]

2 Configure the settings.

[Time Zone], [Date/Time], [Date Format]

Item	Description
Time Zone	Set the time difference from GMT. Choose the nearest listed location from the list. If you select a region that utilizes summer time, configure settings for summer time.
Date and Time	Set the date and time for the location where you use the machine. If you perform Send as E-mail, the date and time set here will be displayed on the header. Value: Year (2000 to 2035), Month (1 to 12), Day (1 to 31), Hour (0 to 23), Minute (0 to 59), Second (0 to 59)
Date Format	Select the display format of year, month, and date. The year is displayed in Western notation. Value: MM/DD/YYYY (Month/Day/Year), DD/MM/YYYY (Day/Month/Year), YYYY/MM/DD (Year/Month/Day)

Network Setup

Configuring the Wired Network

The machine is equipped with network interface, which is compatible with network protocols such as TCP/IP (IPv4), TCP/IP (IPv6), NetBEUI, and IPsec. It enables network printing on the Windows, Macintosh, UNIX and other platforms.

Set up TCP/IP (IPv4) to connect to the Windows network.

Be sure to connect the network cable before configuring the settings.

➔ [Connecting LAN Cable \(page 2-8\)](#)

Configuration Method	Description	Reference Page
Configuring the Connection from the Operation Panel on This Machine	Use Quick Setup Wizard when configuring the network in a wizard-style screen, without setting individually in System menu.	Quick Setup Wizard (page 2-48)
	Use Wired Network Settings or Optional Network to configure the network in details from System menu.	Wired Network Settings (page 8-62) Optional Network (page 8-69)
Configuring Connections on the Web Page	For the equipped network interface, the connection can be set by using Command Center RX. For the optional IB-53, the connection can be set by using the dedicated Web page.	Command Center RX User Guide IB-53 Operation Guide
Setting the Connection by Using the Setup Utility of IB-53	This is the setup tool included in the CD of IB-53. You can use it on Windows.	IB-53 Operation Guide

NOTE

When you want to switch to the network interface other than Wired (default), select the desired setting on "Primary Network (Client)".

➔ [Primary Network \(Client\) \(page 8-75\)](#)

For other network settings, refer to the following:

➔ [Network Settings \(page 8-57\)](#)

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

IPv4 setting

1 Display the screen.

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Wired Network Settings] > "TCP/IP Setting" [IPv4 Settings]

2 Configure the settings.

When using DHCP server

- [DHCP]: Set to [On].

When setting the static IP address

- [DHCP]: Set to [Off].
- [Auto-IP]: Set to [Off].
- [IP Address]: Enter the address.
- [Subnet Mask]: Enter the subnet mask in decimal representation (0 to 255).
- [Default Gateway]: Enter the address.

When using the Auto-IP

Enter "0.0.0.0" in [IP Address].

When setting the DNS server

In the following cases, set the IP address of DNS (Domain Name System) server.

- When using the host name with "DHCP" setting set to "Off".
- When using the DNS server with IP address that is not assigned by DHCP automatically.

Select [Use DNS Server from DHCP] or [Use following DNS Server]. When [Use following DNS Server] is selected, you can enter static DNS server information in the Primary and Secondary fields provided.



IMPORTANT

After changing the setting, restart the network from System Menu, or turn the machine OFF and then ON.

➔ [Restart Network \(page 8-69\)](#)



NOTE

Ask your network administrator for the IP address in advance, and have it ready when you configure this setting.

Configuring the Wireless Network

When the wireless network function is available or the Wireless Network Interface Kit is installed on the machine and the connection settings are configured, it is possible to print or send in a wireless network (wireless LAN) environment.

➔ [IB-37 "Wireless Network Interface Kit" \(page 11-5\)](#)

➔ [IB-54 "Wireless Network Interface Kit" \(page 11-5\)](#)

The configuration methods are as follows:

Configuration Method	Description	Reference Page
Configuring the Connection from the Operation Panel on This Machine	Use Quick Setup Wizard when configuring the network in a wizard-style screen, without setting individually in System menu.	Quick Setup Wizard (page 2-48)
	Use Wi-Fi Settings or Wireless Network to configure the network in details from System menu.	Wi-Fi Settings (page 8-58) Wireless Network (page 8-71)
Setting the Connection by Using the Wi-Fi Setup Tool	This is a tool that can be downloaded from the user support page (https://kyocera.info/support). You can configure the connection according to the instructions provided by the wizard.	Setting the Connection by Using the Wi-Fi Setup Tool (page 2-35)
Setting the Connection by Using the Setup Utility of IB-54	This is the setup tool included in the CD of IB-54. You can use it on both Windows and Mac OS.	IB-54 Operation Guide
Configuring Connections on the Web Page	The connection can be set from the Command Center RX.	Command Center RX User Guide
	For the IB-54, the connection can be set on the dedicated Web page.	IB-54 Operation Guide



NOTE

When you want to switch to the network interface other than Wired (default), select the desired setting on "Primary Network (Client)".

➔ [Primary Network \(Client\) \(page 8-75\)](#)

Setting the Connection by Using the Wi-Fi Setup Tool

To send the Wi-Fi settings configured in the Wi-Fi Setup Tool to the machine, connect the computer or handheld device with the machine locally. The connection methods are wired connection via LAN cable and wireless LAN connection (Wi-Fi Direct).



NOTE

- To use Wi-Fi Direct, confirm that the Wi-Fi Direct is enabled (Wi-Fi Direct is set to [ON]) and Restart Network from the operation panel, before your computer will be connected to this machine with Wi-Fi Direct.
- To use a wired LAN cable directly connected to the machine, the Auto-IP (Link-local) address will be assigned to the machine and the computer. This machine applies Auto-IP as the default settings.
- Configure the settings on the operation panel if your computer supports WPS.

➔ [Wi-Fi Settings \(page 8-58\)](#)

➔ [Wireless Network \(page 8-71\)](#)

Wired Connection by Using LAN Cable

1 Connect the machine with a computer.


- 1 Connect the machine with a computer via LAN cable when the machine is powered on.
- 2 Turn on the computer.
IP addresses (link local addresses) of the machine and computer are generated automatically.

2 Launch the Wi-Fi Setup Tool.


- 1 Launch a web browser.
- 2 Enter "https://kyocera.info/support" to the browser's address bar or location bar.




- 3 Enter and search the product name, and select this product from the candidate list.

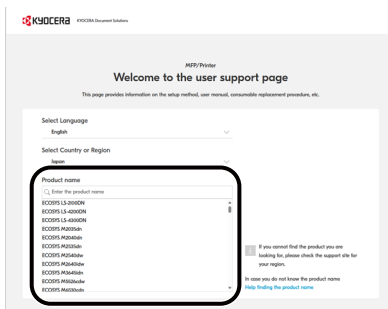

- 4 Change the selected operating system and its language setting as needed.

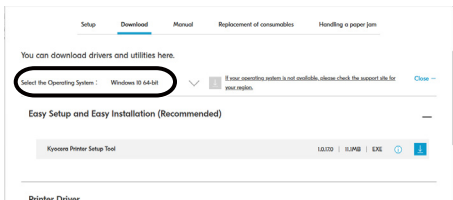


- 5 [Download] tab > "Utility" [Wi-Fi Setup Tool]

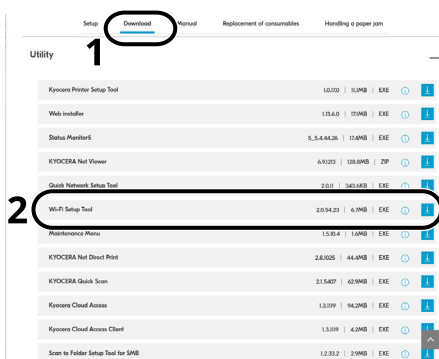

- 6 Read the license agreement.

7 Click **[Agree to contract and download]** if there is no problem.

The Wi-Fi Setup Tool will be downloaded.

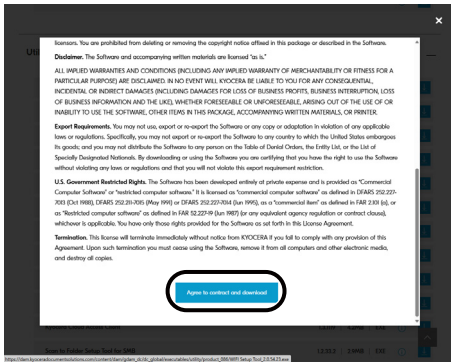

8 Double-click the downloaded installer to launch.



NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- If the user account management window appears, click **[Yes]** (**[Allow]**).

3 Configure the settings.

1 **[Do not use automatic configuration]** > **[Next]** > **[Next]**

2 **[Use LAN cable]** > **[Next]** > **[Next]**

3 **[Easy setup]** > **[Next]**

The machine is detected.



NOTE

- Only one machine can be searched using Wi-Fi Setup Tool. It may take times to search the machine.
- If the machine is not detected, select **[Advanced setup]** > **[Next]**. Select **[Express]** or **[Custom]** as device discovery method and specify the IP address or host name to search the machine.

4 Select the machine > **[Next]**

5 Select **[Use the device settings.]** on **[Authentication mode]**, and enter the login user name and password. Login user name and Password.

Login User Name: Admin

Login Password: xxxxxxxxxx (Serial Number)

➔ [Checking the Equipment's Serial Number \(page i\)](#)

6 Configure the communication settings > **[Next]**

7 Change the settings of access point as necessary > **[Next]**

The network is configured.

Wireless LAN Connection by Using Wi-Fi Direct

1 Display the screen.

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Wi-Fi Direct Settings]

2 Configure the settings.

"Wi-Fi Direct": [On] > [Close]

3 Restart the network.

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Restart Network] > [Restart]

4 Connect a computer or a handheld device with the machine.

➔ [Setting Wi-Fi Direct \(page 2-41\)](#)


5 Launch the Wi-Fi Setup Tool.

1 Launch a web browser.


2 Enter "https://kyocera.info/support" to the browser's address bar or location bar.




3 Enter and search the product name, and select this product from the candidate list.

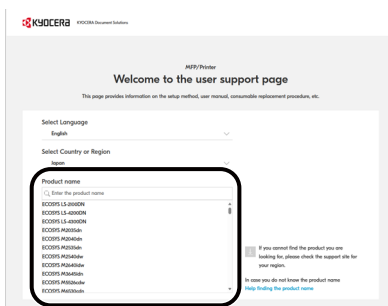

4 Change the selected operating system and its language setting as needed.

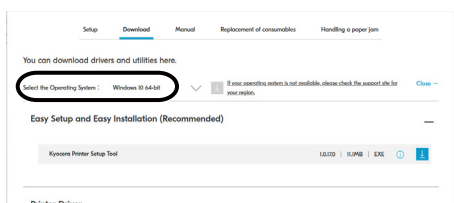


5 [Download] tab > "Utility" [Wi-Fi Setup Tool] 

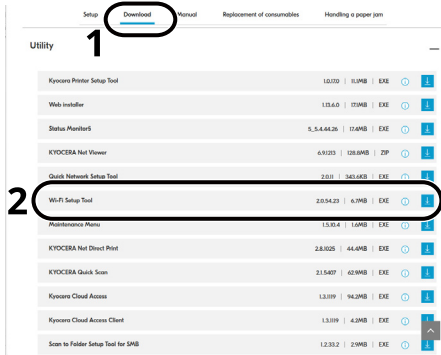

6 Read the license agreement.

7 Click **[Agree to contract and download]** if there is no problem.

The Wi-Fi Setup Tool will be downloaded.

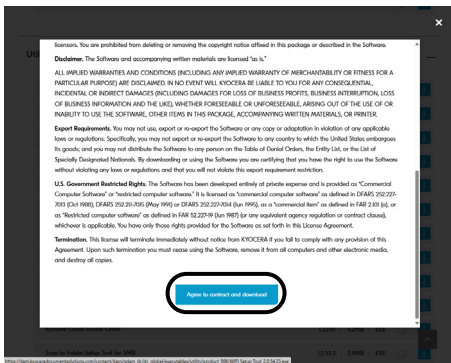

8 Double-click the downloaded installer to launch.



NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- If the user account management window appears, click **[Yes]** (**[Allow]**).

6 Configure the settings.

1 [Do not use automatic configuration] > [Next] > [Next]

2 [Wi-Fi Direct] > [Next] > [Next]

3 [Advanced setup] > [Next]

Select [Express] or [Custom] as device discovery method and specify the IP address or host name to search the machine.

4 Select the machine > [Next]

5 Select [Use the device settings.] on [Authentication mode], and enter the login user name and password. Login user name and Password.

Login User Name: Admin

Login Password: xxxxxxxxxx (Serial Number)

➔ [Checking the Equipment's Serial Number \(page i\)](#)

6 Configure the communication settings > [Next]

7 Change the settings of access point as necessary > [Next]

The network is configured.

Setting Wi-Fi Direct

When the Optional Wireless Network Interface Kit (IB-37/IB-38) is installed on the machine and the connection settings are configured, this enables you to print from the Wi-Fi Direct environment. The configuration methods are as follows:

- Configuring the Connection from the Operation Panel on This Machine
- Configuring the Connection by Using Push Button

Configuring the Connection from the Operation Panel on This Machine

Connecting to Computers or Handheld Devices that Support Wi-Fi Direct

1 Display the screen.

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Wi-Fi Direct Settings]

2 Configure the settings.

"Wi-Fi Direct": [On] > [OK]

3 Restart the network.

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Restart Network] > [Restart]

4 Specify the machine name from the computer or handheld device.

If a confirmation message appears on the operation panel of the machine, select [Yes].

The network between this machine and the handheld device is configured.

Connecting to Computers or Handheld Devices Unsupported Wi-Fi Direct

Here, we'll explain the procedures for connecting to iOS handheld devices.

1 Display the screen.

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Wi-Fi Direct Settings]

2 Configure the settings.

"Wi-Fi Direct": [On] > [OK]

3 Restart the network.

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Restart Network] > [Restart]

4 [Home] key > [Device Information] > [Wi-Fi]

5 Note the "Wi-Fi Direct" network name (SSID), IP address, and password.

6 Configure the handheld device.

- 1 [Settings] > [Wi-Fi]
- 2 Select the network name (SSID) appeared in step 5 from the list.
- 3 Enter the password that was provided in step 5 > [Connect]
The network between this machine and the handheld device is configured.

Configuring the Connection by Using Push Button

When your computer or handheld device does not support Wi-Fi Direct but supports WPS, you can configure the network using push button.

1 Display the screen.

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Wi-Fi Direct Settings]

2 Configure the settings.

"Wi-Fi Direct": [On] > [OK]

3 Restart the network.

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Restart Network] > [Restart]

4 [Home] key > [Device Information] > [Wi-Fi]

5 Press the push button on the computer or handheld device and select "Wi-Fi Direct" [Push Button Setup] > [OK] on the screen of operation panel.

The network between this machine and the computer or handheld device is configured.

IMPORTANT

You can connect up to ten handheld devices at the same time using Wi-Fi Direct setting. When the devices that support Wi-Fi Direct are connected, if you want to connect other device, disconnect the already-connected devices from the network. The disconnection methods are as follows:

- Disconnect the network from the computer or handheld computer
- Disconnecting all devices from the network on the operation panel
Select [Home] key > [Device Information] > [Wi-Fi] > "Wi-Fi Direct" [Device] > [Disconnect] > [Disconnect]
- Configuring auto disconnecting time from the System menu
➔ [Wi-Fi Direct Settings \(page 8-57\)](#)
- Configuring auto disconnecting time from the Command Center RX
➔ [Command Center RX User Guide](#)

Configuring NFC

NFC (Near Field Communication) is the internal standard for near field communication in which the data communication distance is limited to approximately 10 cm. Establishing data communication simply requires you to show the handheld device supporting NFC to this machine.

The configuration methods are as follows:

Configuring Connections on the Web Page

You can set NFC from the Command Center RX.

➔ [Command Center RX User Guide](#)

Configuring the Connection from the Operation Panel on This Machine

Configure the NFC from the System Menu.

➔ [NFC \(page 8-74\)](#)

This section presents an example for configuring the NFC from the System Menu.

1 Display the screen.

[Home] key > [...] > [System Menu] > [Network Settings] > "Connectivity" [NFC]


2 Configure the settings.

"NFC": [On] > [OK]

Motion Sensor

This model detects that the person is approaching and recover from low power mode or sleep mode automatically.

The range of detection of the Motion Sensor can be switched using the lever on the front.

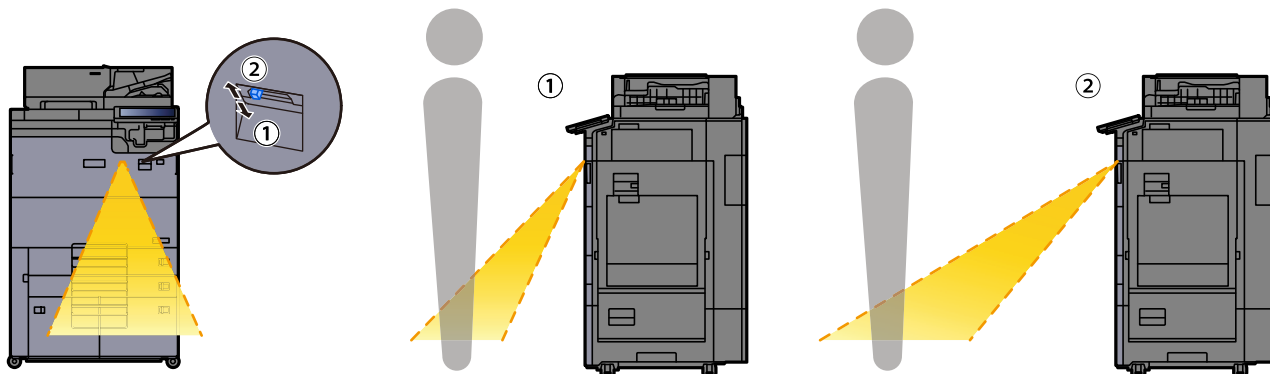

For more information on Motion Sensor settings, refer to the following:

➔ [Motion Sensor \(page 8-9\)](#)

Energy Saver function

If a certain period of time elapses after the machine is last used, the machine automatically enters Low Power Mode to reduce power consumption. If a further period of time elapses without the machine being used, the machine automatically enters sleep mode, which minimizes power consumption.

Low Power Mode

If the machine is not operated for a certain period of time, the energy saver indicator will light up and the screen will become dark to reduce power consumption. This status is referred to as Low Power Mode. In the Low Power Mode, the touch panel turns off and the Energy Saver indicator lights up.

The amount of time before entering Low Power Mode: 2 minutes (default setting).

If print data is received during Low Power Mode, the machine automatically wakes up and starts printing. Also when fax data arrives while the machine is in Low Power Mode, the machine automatically wakes up and starts printing.

To resume, perform one of the following actions.

- Select any key on the operation panel.
- Touch the touch panel.
- Place originals in the document processor.
- Open the document processor.

Recovery time from Low Power Mode is as follows.

- Within 10 seconds

Note that ambient environmental conditions, such as ventilation, may cause the machine to respond more slowly.




NOTE

If the Low Power Timer is equal to the Sleep Timer, a Sleep mode is preceded.

Sleep

To enter Sleep, select the [**Energy Saver**] key. Touch panel and all indicators on the operation panel will go out to save a maximum amount of power except the Energy Saver indicator, and then the Energy Saver indicator is flashing. This status is referred to as Sleep.

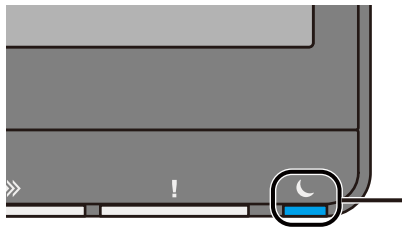

Energy Saver
indicator

If print data is received during Sleep, the machine automatically wakes up and starts printing. Also when fax data arrives while the machine is in Sleep, the machine automatically wakes up and starts printing.

When Using the Machine

When someone approaches the machine, the Motion Sensor detects them and then the machine automatically wakes up.

For more information on Motion Sensor settings, refer to the following:

➔ [Motion Sensor \(page 8-9\)](#)

If the Motion Sensor does not detect anything, perform one of the following actions.

- Select any key on the operation panel.
- Touch the touch panel.
- Place originals in the document processor.
- Open the document processor.

Recovery time from Sleep Mode is as follows.

- TASKalfa MZ10500i: 50 seconds or less
- TASKalfa MZ7500i/TASKalfa MZ8500i/TASKalfa MZ9500i: 30 seconds or less

Note that ambient environmental conditions, such as ventilation, may cause the machine to respond more slowly.

Auto Sleep

Auto Sleep automatically switches the machine into Sleep if left idle for a preset time.

The amount of time before entering Sleep is as follows.

- 20 minutes (default setting)

To change the preset sleep time, refer to the following:

➔ [Quick Setup Wizard \(page 2-48\)](#)



NOTE

If the Low Power Timer is equal to the Sleep Timer, a Sleep mode is preceded.

Sleep Rules (models for Europe)

You can set whether sleep mode operates for each function. When the machine enters sleep mode, the ID card cannot be recognized.

For more information on Sleep Rules settings, refer to the following:

➔ [Sleep Rules \(models for Europe\) \(page 8-8\)](#)

Sleep Level (Energy Saver) (models except for Europe)

This mode reduces power consumption even more than normal Sleep mode, and allows Sleep Mode to be set separately for each function. Printing from a computer connected with a USB cable is not available while the machine is asleep. The time required for the machine to wake up from power save mode and resume normal operation will be longer than for normal Sleep Mode.

NOTE

If the optional network interface kit is installed, Energy Saver cannot be specified.

For more information on Sleep Level [**Home**] Mode settings, refer to the following:

➔ [Quick Setup Wizard \(page 2-48\)](#)

Energy Saver Recovery Level

This machine can reduce power consumption when recovering from Energy Saver Mode.

For EnergySaver RecoveryLevel, "Full Recovery" or "Normal Recovery" can be selected.

The factory default is "Normal Recovery".

For more information on Energy Saver Mode settings, refer to the following:

➔ [Quick Setup Wizard \(page 2-48\)](#)

➔ [Energy Saver Recovery Level \(page 8-9\)](#)

Weekly Timer Settings

Set the machine to automatically sleep and wake up at times specified for each day.

For more information on Weekly Timer Settings, refer to the following:

➔ [Quick Setup Wizard \(page 2-48\)](#)

➔ [Weekly Timer Settings \(page 8-9\)](#)

Power Off Timer (models for Europe)

If the machine is not used while in sleep mode, the power automatically turns off. The Power Off Timer is used to set the time until the power turns off.

The factory setting for the time until the power turns off: 3 days

➔ [Power Off Timer \(models for Europe\) \(page 8-9\)](#)

Quick Setup Wizard

The following settings can be configured in a wizard-style screen.

Fax Setup	Configures basic fax settings. This function is displayed when the optional FAX Kit is installed. ➔ FAX Operation Guide	
	Dialing/RX Mode	Dialing Mode (Port 1, Port 2 ^{*1})* ² Reception Mode Auto (DRD)* ³
	Local Fax Information	Local Fax Name (Fax Port 1, Fax Port 2 ^{*1}) Local Fax Number (Fax Port 1, Fax Port 2 ^{*1}) Local Fax ID TTI
	Volume	Fax Speaker Volume Fax Monitor Volume Job Finish
	Rings	Rings (Normal)* ⁴ Rings (TAD)* ⁴ Rings (Fax/Phone)* ⁴
	Paper Source/Output	Paper Source Settings Specify by Media Type* ⁵ Specify by Cassette* ⁶ Paper Output (Port 1, Port 2 ^{*1}) Reduced RX Size
	Redial	Retry Times
	Show Power Off Message	Show Power Off Message
Paper Setup	Configures the paper size and media type of paper to be used in cassettes and multi purpose tray.	
	Cassette 1	Paper Size Media Type
	Cassette 2	Paper Size Media Type
	Cassette 3	Paper Size Media Type
	Cassette 4	Paper Size Media Type
	Cassette 5* ⁷	Paper Size Media Type
	MP Tray	Paper Size Media Type

Energy Saver Setup	Configures sleep mode and low power mode.	
	Sleep Mode	For Europe Sleep Timer Sleep Rules Except for Europe Sleep Timer Sleep Level
	Low Power Mode	Low Power Timer
	Recovery Mode	Energy Saver Recovery Level
	Weekly Timer	Weekly Timer Settings Schedule ^{*8} Retry ^{*8} Retry Times ^{*8} Retry Interval ^{*8}
Network Setup	Configures network settings.	
	Network	Network Selection Wi-Fi ^{*9} DHCP ^{*10} IP Address ^{*11} Subnet Mask ^{*11} Default Gateway ^{*11}
Email Setup	Set SMTP server name and sender address to enable mail sending.	
	Email	SMTP (Email TX) SMTP Server Name ^{*12} SMTP Port Number ^{*12} Sender Address ^{*12}
Security Setup	Specify the security level.	
	Security Quick Setup	

*1 This is displayed when the option of two FAX Kits has been installed.

*2 Inch version only.

*3 DRD reception mode is available for some countries.

*4 This setting does not appear in some regions.

*5 This function is displayed when [Paper Source Settings] is set to [Specify by Media Type].

*6 This function is displayed when [Paper Source Settings] is set to [Specify by Cassette].

*7 This function is displayed when the optional Side Feeder is installed.

*8 This function is displayed when [Weekly Timer] is set to [On].

*9 This function is displayed when [Network Selection] is set to [Wi-Fi].

*10 This function is displayed when [Network Selection] is set to [Wired Network].

*11 This function is displayed when [DHCP] is set to [Off].

*12 This function is displayed when [SMTP (Email TX)] is set to [On].



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

Configuring Settings Quick Setup Wizard

1 Display the screen.

[Home] key > [...] > [System Menu] > [Quick Setup Wizard]

2 Select a function.

3 Configure the settings.

Start the wizard. Follow the instructions on the screen to configure settings.



NOTE

If you experience difficulty configuring the settings, refer to the following:

➔ [Help Screen \(page 2-28\)](#)

Control	Description
End	Exits the wizard. Settings configured so far are applied.
Previous	Returns to the previous item.
Skip	Advances to the next item without setting the current item.
Next	Advances to the next screen.
Back	Returns to the previous screen.
Complete	Register the settings and exit the wizard.

Installing Software

To use printer function, TWAIN/WIA connection, or network fax function, download and install prerequisite softwares from the user support page (<https://kyocera.info/support>).

Published Software (Windows)

Software	Description	Recommended software
KX DRIVER	This driver enables files on a computer to be printed by the machine. Multiple page description languages (PCL XL, KPDL, etc.) are supported by a single driver. This printer driver allows you to take full advantage of the features of the machine. Use this driver to create PDF files.	○
KPDL mini-driver/PCL mini-driver	This is a Microsoft MiniDriver that supports PCL and KPDL. There are some restrictions on the machine features and option features that can be used with this driver.	-
FAX Driver	This makes it possible to send a document created in a computer software application as a fax via the machine.	-
TWAIN Driver	This driver enables scanning on the machine using a TWAIN-compliant software application.	○
WIA Driver	WIA (Windows Imaging Acquisition) is a function of Windows that enables reciprocal communication between an imaging device such as a scanner and an image processing software application. An image can be acquired using a WIA-compliant software application, which is convenient when a TWAIN-compliant software application is not installed in the computer.	-
KYOCERA Net Viewer	This is a utility that enables monitoring of the machine on the network.	-
Status Monitor	This is a utility that monitors the printer status and provides an ongoing reporting function.	○
File Management Utility	This makes it possible to send and save a scanned document to a specified network folder.	-
KYOCERA Net Direct Print	This makes it possible to print a PDF file without starting Adobe Acrobat/Reader.	-
FONTS	These are display fonts that enable the machine's built-in fonts to be used in a software application.	○
Wi-Fi Setup Tool	This is a tool for wireless network (wireless LAN) configuration of this machine.	-
Scan to Folder Setup Tool for SMB	This is a tool to create a shared folder in personal computers and set the shared folder as a destination.	-



NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- The optional FAX Kit is required in order to make use of fax functionality.

 
Installing Software in Windows

Downloading and installing from the user support page


Download and install a software from the user support page.

1 Download a software from the user support page.


- 1 Launch a web browser.
- 2 Enter "https://kyocera.info/support" to the browser's address bar or location bar.




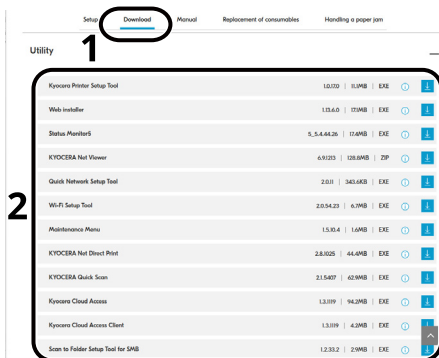
- 3 Enter and search the product name, and select this product from the candidate list.

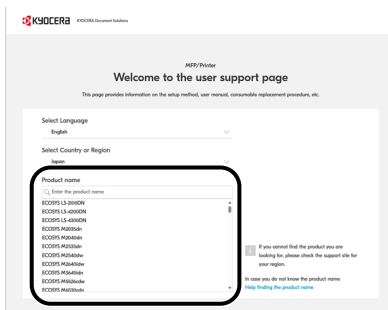

- 4 Change the selected operating system and its language setting as needed.

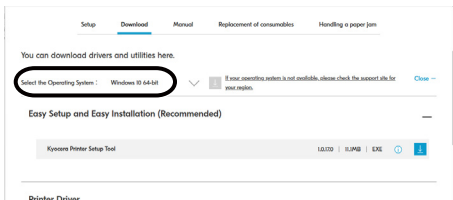


- 5 [Download] tab >  of the software you want to download



- 6 Read the license agreement.

7 Click **[Agree to contract and download]** if there is no problem.

An installer of the selected software will be downloaded.

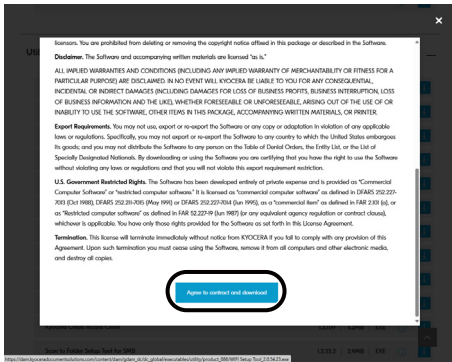

2 Double-click the downloaded installer to launch.

Follow the guidance on the screen to install the software.



NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- If the user account management window appears, click **[Yes]** (**[Allow]**).

Using the web installer


Install a software by using a web installer downloaded from the user support page.

1 Download a software from the user support page.


- 1 Launch a web browser.
- 2 Enter "<https://kyocera.info/support>" to the browser's address bar or location bar.




- 3 Enter and search the product name, and select this product from the candidate list.

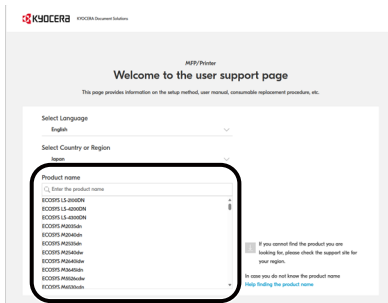

4 Change the selected operating system and its language setting as needed.

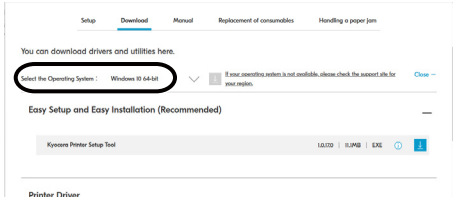


5 [Download] tab > "Utility" [Web installer] 

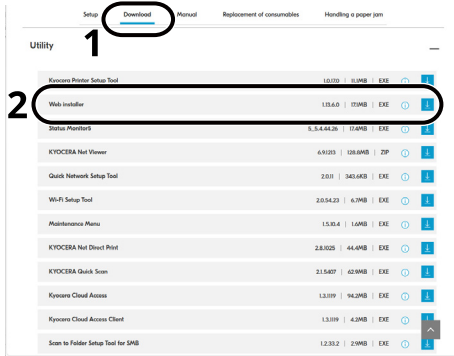

6 Read the license agreement.

7 Click [Agree to contract and download] if there is no problem.

A web installer will be downloaded.

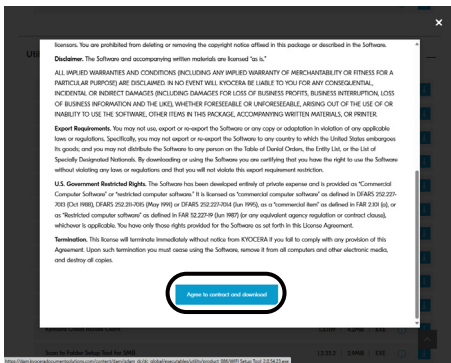


2 Double-click the downloaded installer to launch.

 **NOTE**


- Installation on Windows must be done by a user logged on with administrator privileges.
- If the user account management window appears, click [Yes] ([Allow]).

3 Display the screen.

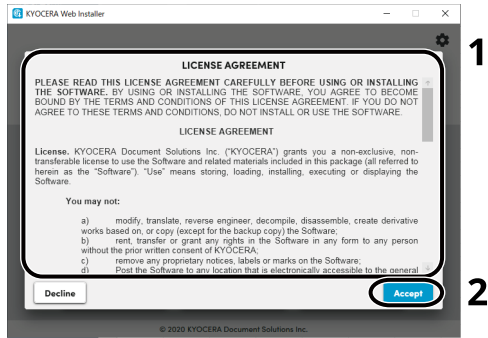


- 1 Read the license agreement.
- 2 Click **[Accept]** if there is no problem.

4 Click **[Install]**.

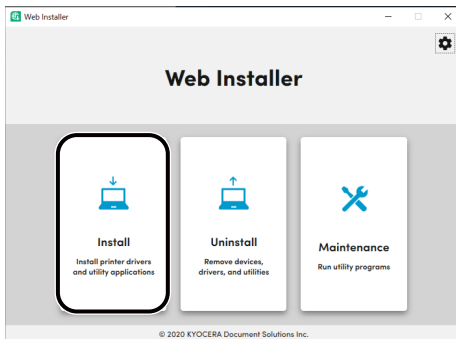

5 Select a model and click **[Next]**.

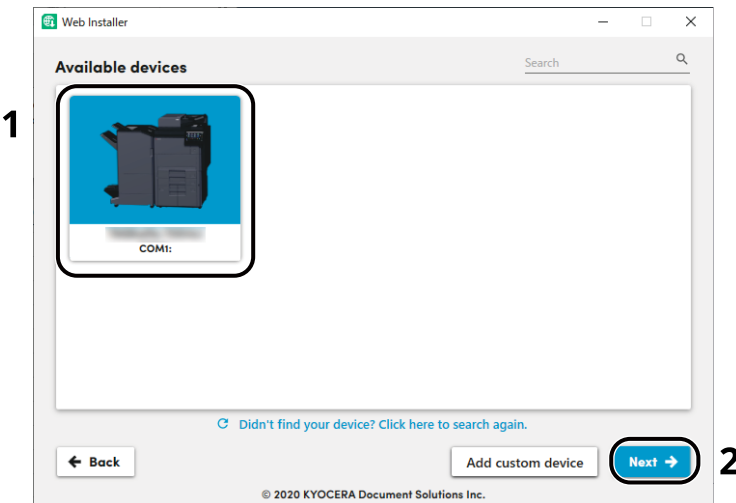

NOTE


- The machine cannot be detected unless it is on. If the computer fails to detect the machine, verify that it is connected to the computer via a network or USB cable.
- If a desired device is not displayed, select **[Add custom device]** to directly select the device you want to use.

6 Install the softwares.

- 1 Select softwares you want to install.

 **NOTE**

Softwares recommended to install have in their checkboxes by default. Configure them as needed.

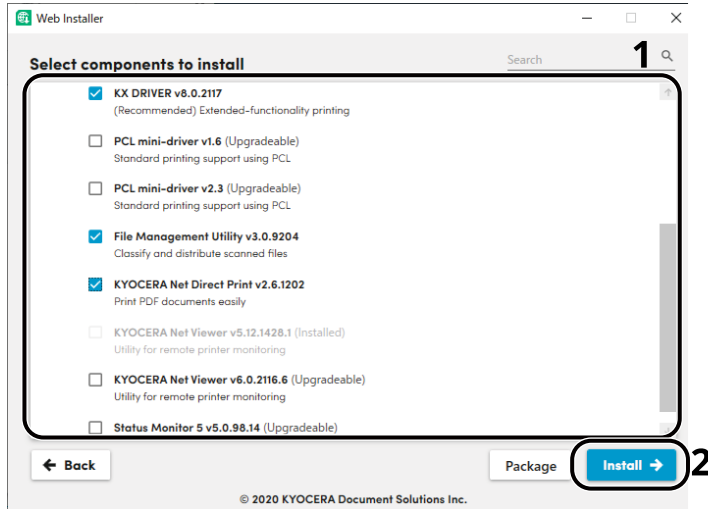



- 2 Click **[Install]**.

When **[Install]** is clicked, a screen which asks for cooperation for data collection may appear. Select one of the answer choices and click **[OK]**.

 **NOTE**

If the Windows security window appears, click **[Install this driver software anyway]**.

7 Finish the installation.

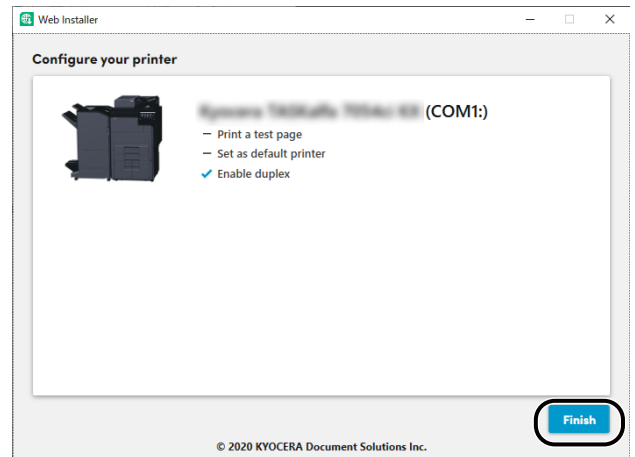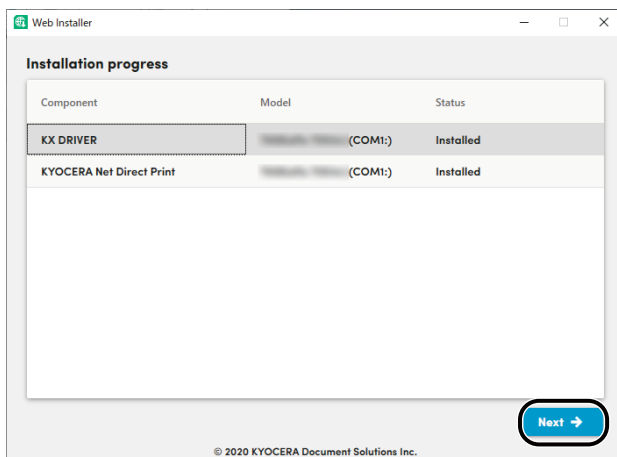

Click **[Next]** > **[Finish]** to finish the installation wizard.

If a system restart message appears, restart the computer by following the screen prompts. This completes the printer driver installation procedure.

If you are installing the TWAIN driver, continue by configuring the following:

- ➔ [Setting TWAIN Driver \(page 2-62\)](#)

Uninstalling the Software

Perform the following procedure to delete the Software from your computer.

NOTE


Uninstallation on Windows must be done by a user logged on with administrator privileges.

1 Display the screen.

Click Search box in taskbar, and enter "Uninstall Kyocera Product Library" in the search box. Select [**Uninstall Kyocera Product Library**] in the search list.

2 Uninstall the software.

Place a check in the check box of the software to be deleted.

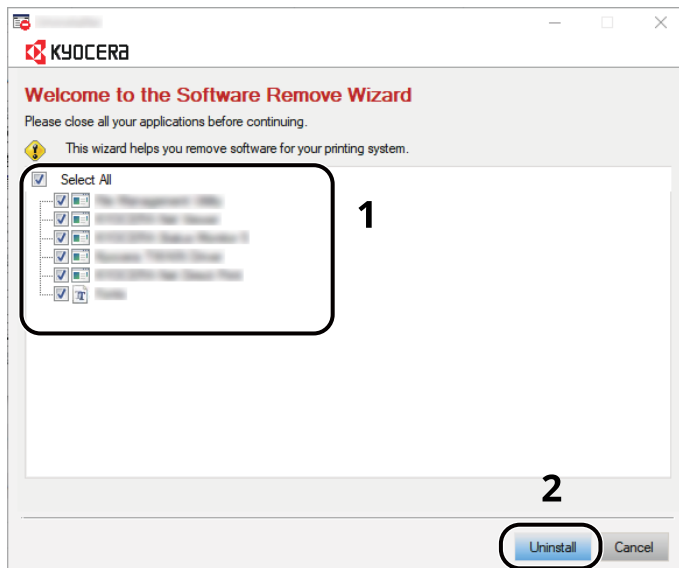

3 Finish uninstalling.

If a system restart message appears, restart the computer by following the screen prompts. This completes the software uninstallation procedure.

NOTE

The software can also be uninstalled using Web Installer. In the screen of Web Installer, click [**Uninstall**], and follow the on-screen instructions to uninstall the software.

Installing Software in Mac Computer

 
Printer driver for Macintosh can be installed.

NOTE


- Installation on Mac OS must be done by a user logged on with administrator privileges.
- When printing from a Macintosh computer, set the machine's emulation to [KPDL] or [KPDL(Auto)].
 - ➔ [Printer \(page 8-50\)](#)
- If connecting by Bonjour, enable Bonjour in the machine's network settings.
 - ➔ [Bonjour \(page 8-68\)](#)
- In the Authenticate screen, enter the name and password used to log in to the operating system.
- When printing via AirPrint, you do not have to install the software.

1 Download a software from the user support page.


- 1 Launch a web browser.
- 2 Enter "https://kyocera.info/support" into the address bar.




- 3 Enter and search the product name, and select this product from the candidate list.

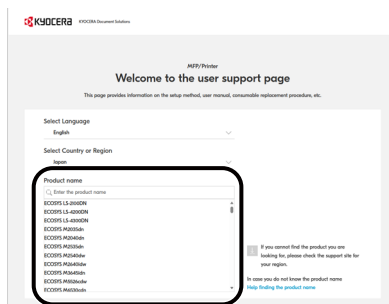


- 4 Change the selected operating system and its language setting as needed.

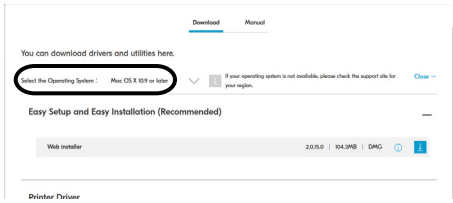

- 5 [Download] tab > "Mac Printer Driver"

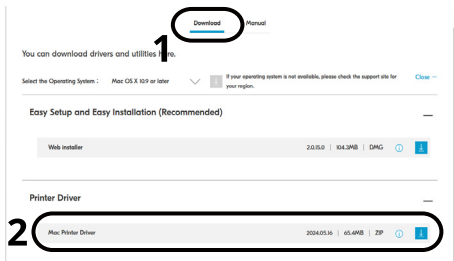


- 6 Read the license agreement.
- 7 Click [Agree to contract and download] if there is no problem.
An installer of the selected software will be downloaded.

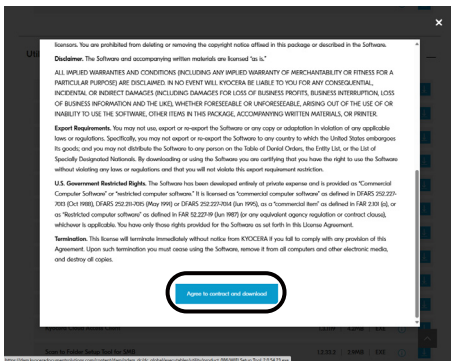

2 Install the Printer Driver.

Double click to launch the downloaded installer.

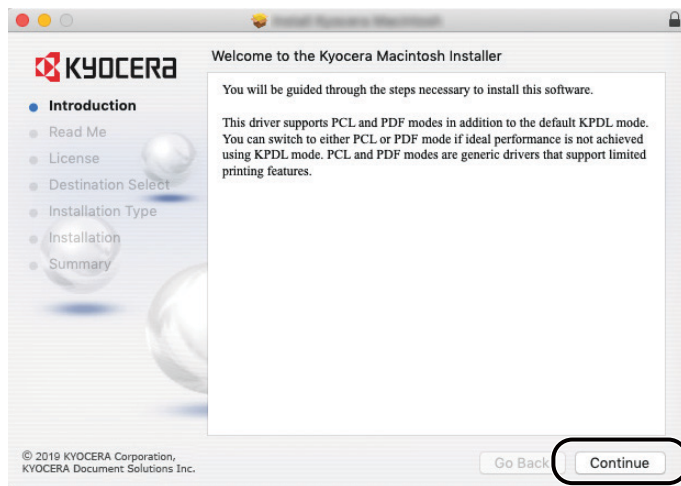

Install the printer driver as directed by the instructions in the installation software.



This completes the printer driver installation.

If a USB connection is used, the machine is automatically recognized and connected.


If an IP connection is used, the settings below are required.

3 Configure the printer.


1 Open System Preferences and add the printer.

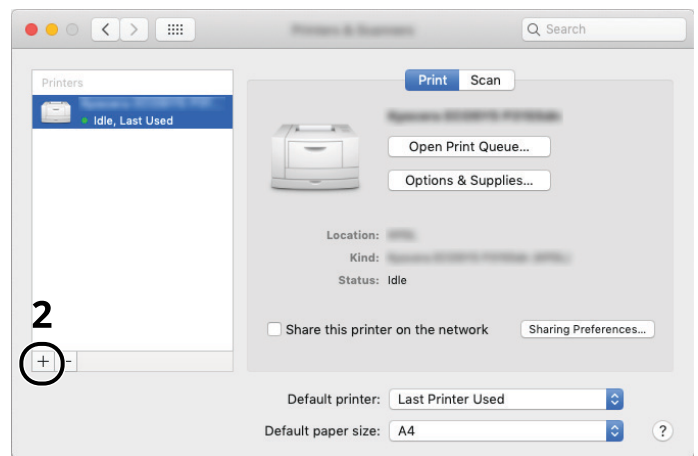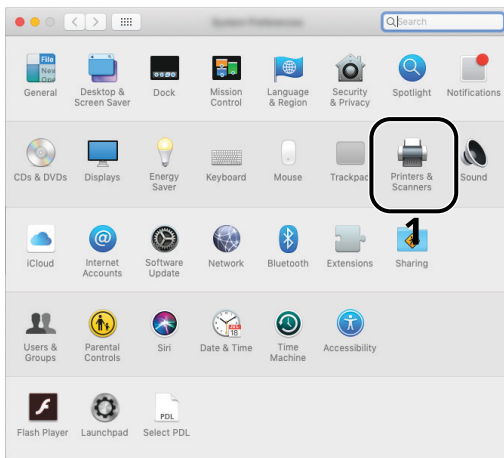

- 2 Select [**Default**] and click the item that appears in "Name" and then select the driver in "Use".

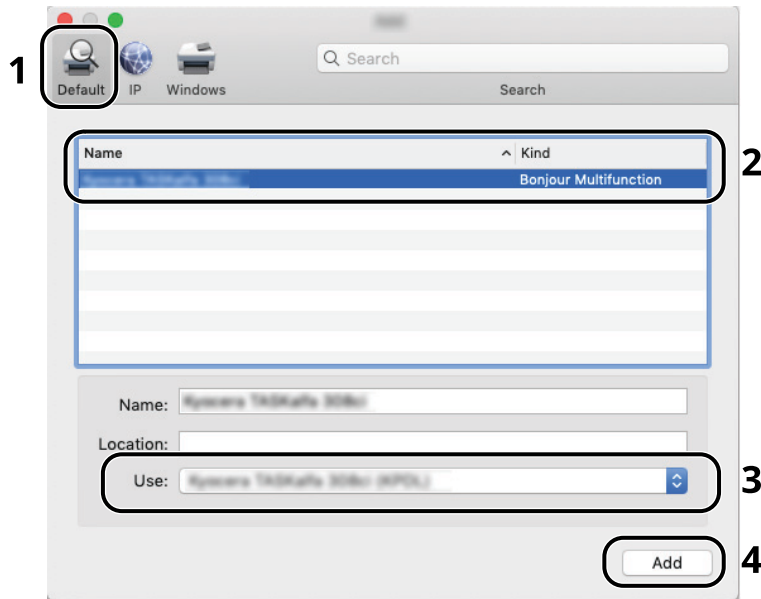



The selected machine is added

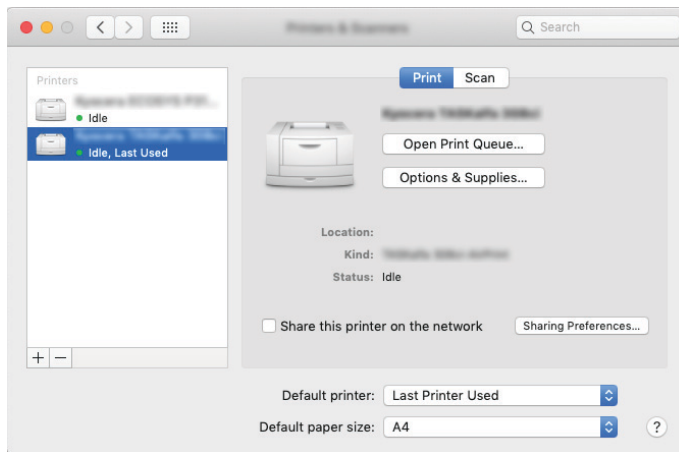

NOTE

When using an IP connection, click the IP icon for an IP connection and then enter the host name or IP address. The number entered in [**Address**] will automatically appear in [**Name**]. Change if needed.

- 3 Select the printer added newly, and click the [**Options & Supplies...**] to select the options equipped with the machine.

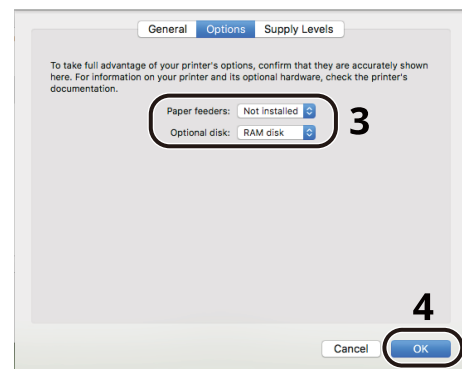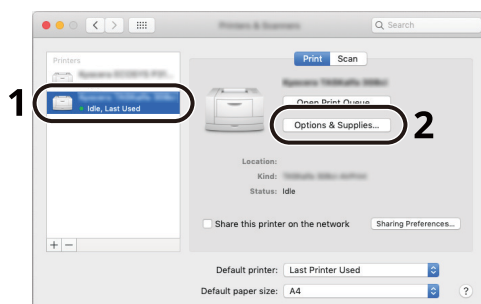


Setting TWAIN Driver


Register this machine to the TWAIN Driver. Instructions are based on interface elements as they appear in Windows.

1 Display the screen.

- 1 Click Search box in taskbar, and enter "TWAIN Driver Setting" in the search box. Select [**TWAIN Driver Setting**] in the search list.
- 2 Click [**Add**].

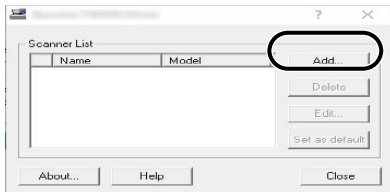

2 Configure TWAIN Driver.

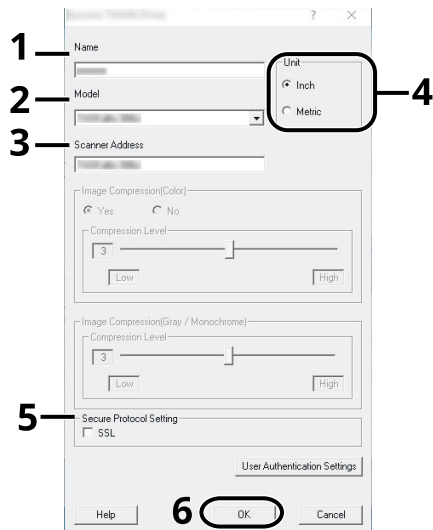


- 1 Enter the machine name.
- 2 Select this machine from the list.
- 3 Enter the machine's IP address or host name.
- 4 Set units of measurement.
- 5 When using TLS, select the checkbox beside TLS.
- 6 Click [**OK**].



NOTE

When the machine's IP address or host name is unknown, contact Administrator.

3 Finish registering.

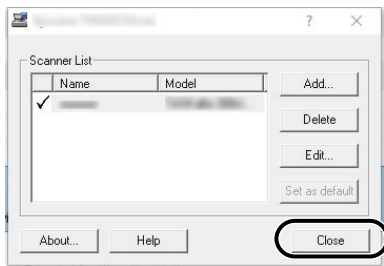

NOTE


Click [**Delete**] to delete the added machine. Click [**Edit**] to change names.

Setting WIA Driver


Register this machine to the WIA Driver. Instructions are based on interface elements as they appear in Windows.

1 Display the screen.

- 1 Select the **[Start]** button, **[All apps]**, **[Windows Tools]** and **[Control Panel]**. Enter "Scanner" into the search field on the control panel. Select **[View scanners and cameras]** in the search list then the Scanners and Cameras screen appears.
- 2 Select the same name as this machine from WIA Drivers, and click **[Properties]**.

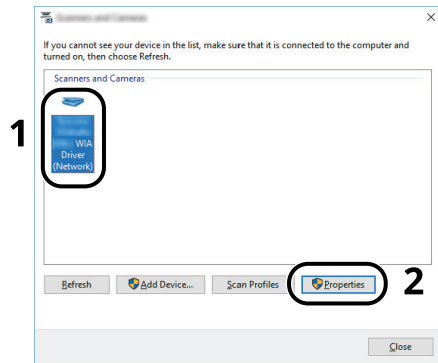

2 Configure WIA Driver.

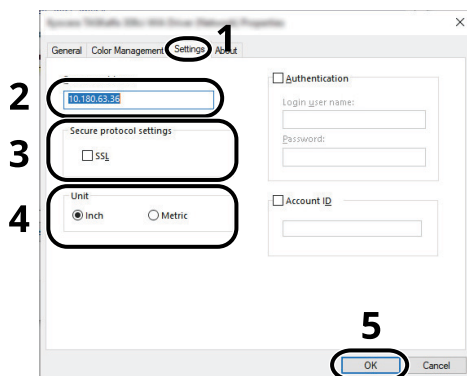

- 1 Click the **[Settings]** tab.
- 2 Enter the machine IP addresses or host name.
- 3 When using TLS, select the checkbox beside TLS.
- 4 Set units of measurement.
- 5 Click **[OK]**.

Checking the Counter

Check the number of sheets printed and scanned.

- 1 Display the screen.**
[Home] key > [...] > [Counter]
- 2 Check the counter.**

Additional Preparations for the Administrator

Administrator Privileges Overview

This machine is shipped with two default users registered one with Machine Administrator privileges, and another with Administrator privileges. The user with Machine Administrator privileges and the user with Administrator privileges can configure important settings for the machine. The differences in the privileges are as follows:

User with Machine Administrator privileges

This user can configure the product's network settings, security settings such as user registration, and the machine's security level.

➔ [Security Level \(page 8-77\)](#)

User with Administrator privileges

This user can configure the product's network settings, user registration, and other security settings. This user cannot set the machine's security level.

Log in as Machine Administrator or Administrator

The user with Machine Administrator privileges or the user with Administrator privileges must log in to configure important settings for the product, such as network settings and security settings. The factory default login user name and login password are set as shown below.

Machine Administrator

User Name	DeviceAdmin
Login User Name	TASKalfa MZ10500i: 10500 TASKalfa MZ9500i: 9500 TASKalfa MZ8500i: 8500 TASKalfa MZ7500i: 7500
Login Password	TASKalfa MZ10500i: 10500 TASKalfa MZ9500i: 9500 TASKalfa MZ8500i: 8500 TASKalfa MZ7500i: 7500

Administrator

User Name	Admin
Login User Name	Admin
Login Password	xxxxxxxxxx (Serial Number) ➔ Checking the Equipment's Serial Number (page i)

✔ IMPORTANT

- To ensure security, be sure to change the factory default user name, login user name, and login password. Also, change your password regularly.
- Change the login password to one of your choice for security reasons.
- Three incorrect entries will lock you out. Re-enter your password after a few moments.
➔ [Changing User Properties \(page 9-8\)](#)

Strengthening the Security

This machine is shipped with two default users registered one with Machine Administrator rights, and another with Administrator rights. Logging in as this user will allow you to configure all settings; therefore, please change the login user name and password.

In addition, this machine is equipped with user authentication function, which can be configured to limit the access to this machine to only those who have a registered login name and password.

➔ [User Authentication and Accounting \(User Login, Job Accounting\) \(page 9-1\)](#)

NOTE

Protection of confidential information by TPM

This product is equipped with the security chip called TPM (Trusted Platform Module). The encryption key used to encrypt confidential information on this machine is stored in a dedicated storage area on the TPM chip. Since this storage area cannot be read from outside the TPM, confidential information can be safely protected.

I want to...	Function	Reference page
Restrict the users of the machine.	User Login	page 9-2
	Authentication Security	page 9-4
	Auto Panel Reset	page 8-8
	ID Card Settings ^{*1}	page 9-25
Restrict the basic functions that can be used.	Local Authorization	page 9-14
	Group Authorization Set.	page 9-17
	Guest Authorization Set.	page 9-19
Prevent another user from handling the documents stored in the machine.	Custom Box	page 5-51
Output the document stored in the machine at the time when user operates the device via operation panel.	Remote Printing	page 8-52
Prevent the data stored in the machine from being leaked.	Data Overwrite ^{*2}	Refer to the Data Encryption/Overwrite Operation Guide.
	Encryption ^{*2}	
	PDF Encryption Functions	page 6-79
Completely delete the data on the machine before disposing of the machine.	Data Sanitization	page 8-79
Record the operation history of users.	Login History Settings	page 8-32
	Device Log History Settings	page 8-32
	Secure Comm. Error Log	page 8-33

I want to...	Function	Reference page
Protect the transmission from interception and wiretapping.	IPP over TLS	page 8-65
	HTTPS	page 8-66
	LDAP Security	Refer to the Command Center RX User Guide .
	SMTP Security	page 8-43
	POP3 Security	page 8-43
	FTP Encrypted TX	page 6-86
	Enhanced WSD (TLS)	page 8-66
	IPSec	page 8-69
	SNMPv3	page 8-66
Verify the software in the machine.	Software Verification	page 8-77
Preventing from execution of the unauthorized programs	Allowlisting	page 8-77

*1 The optional Card Authentication Kit is required.

*2 It is necessary to activate the Data Security Function.

Command Center RX

If the machine is connected to the network, you can configure various settings using Command Center RX. This section explains how to access Command Center RX, and how to change security settings and the host name.

➔ Command Center RX User Guide

NOTE

To fully access the features of the Command Center RX pages, enter the User Name and Password and click [**Login**]. Entering the predefined administrator password allows the user to access all pages, including Document Box, Address Book, and Settings on the navigation menu.

Settings that the administrator and general users can configure in Command Center RX are as follows.

Setting	Description	Administ-rator	General User
Device Information/ Remote Operation	The machine's structure can be checked.	<input type="radio"/>	<input type="radio"/>
Job Status	Displays all device information, including print and scan jobs, storing jobs, scheduled jobs, and job log history.	<input type="radio"/>	<input type="radio"/>
Document Box	Add or delete document boxes, or delete documents within a document box.	<input type="radio"/>	<input type="radio"/> *1
Address Book	Create, edit, or delete addresses and address groups.	<input type="radio"/>	<input type="radio"/> *1
Device Settings	Configure the advanced settings of the machine.	<input type="radio"/>	—
Function Settings	Configure the advanced function settings.	<input type="radio"/>	—
Network Settings	Configure the network advanced settings.	<input type="radio"/>	—
Security Settings	Configure the security advanced settings.	<input type="radio"/>	—
Management Settings	Configure the advanced management settings.	<input type="radio"/>	—

*1 The logged in user may not be able to configure some settings, depending on the permissions of the user.

NOTE

The optional FAX Kit is required in order to make use of fax functionality. Here, information on the FAX settings has been omitted.

➔ FAX Operation Guide

Accessing Command Center RX


1 Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.

Click in the following order to check the machine's IP address and the host name.

[**Device Information**] in the home screen > [**Identification/Wired Network**]

Examples: `https://10.180.81.3/` (for IP address)
`https://MFP001` (if the host name is "MFP001")

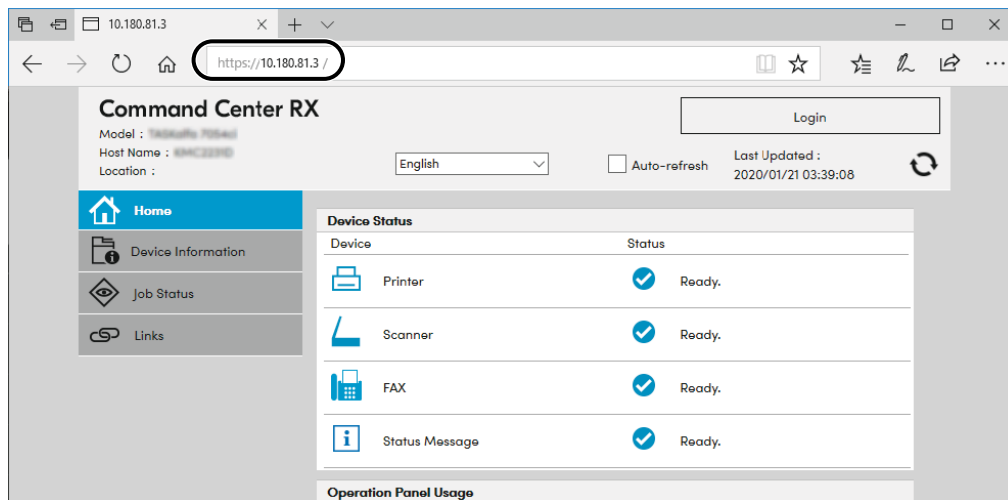

The web page displays basic information about the machine and Command Center RX as well as their current status.

NOTE

If the screen "There is a problem with this website's security certificate." is displayed, configure the certificate.

➔ **Command Center RX User Guide**

You can also continue the operation without configuring the certificate.

2 Configure the function.

Select a category from the navigation bar on the left of the screen.

 
NOTE

To fully access the features of the Command Center RX pages, enter the User Name and Password and click [**Login**]. Entering the predefined administrator password allows the user to access all pages, including Document Box, Address Book, and Settings on the navigation menu.

Changing Security Settings

1 Display the screen.


- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
Click in the following order to check the machine's IP address and the host name.
[Device Information] in the home screen > [Identification/Wired Network]
- 3 Log in with administrator privileges.



- 4 Click [Security Settings].

2 Configure the Security Settings.

From the [Security Settings] menu, select the setting you want to configure.

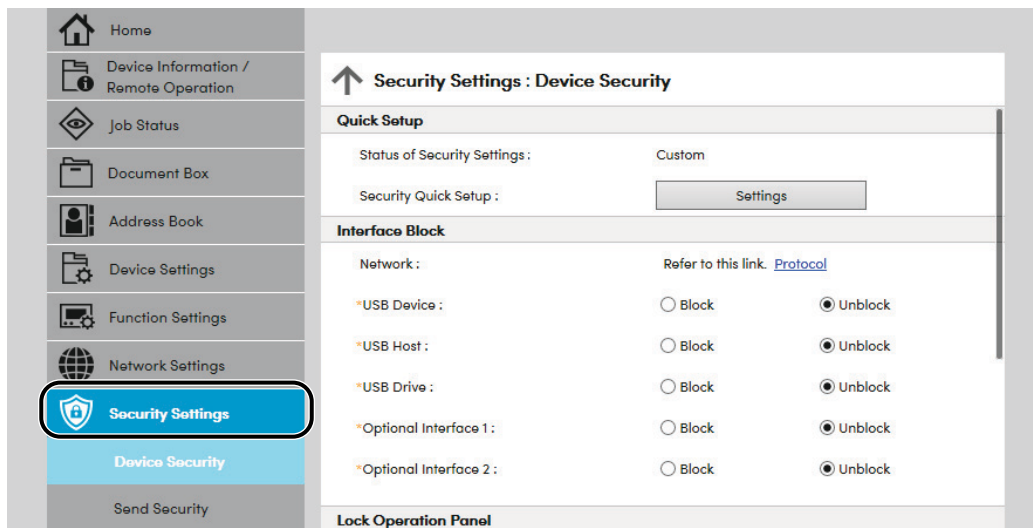

NOTE

 
For details on settings related to certificates, refer to the following:

➔ **Command Center RX User Guide**


Changing Device Information

1 Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
Click in the following order to check the machine's IP address and the host name.
[Device Information] in the home screen > [Identification/Wired Network]
- 3 Log in with administrator privileges.



- 4 From the [Device Settings] menu, click [System].

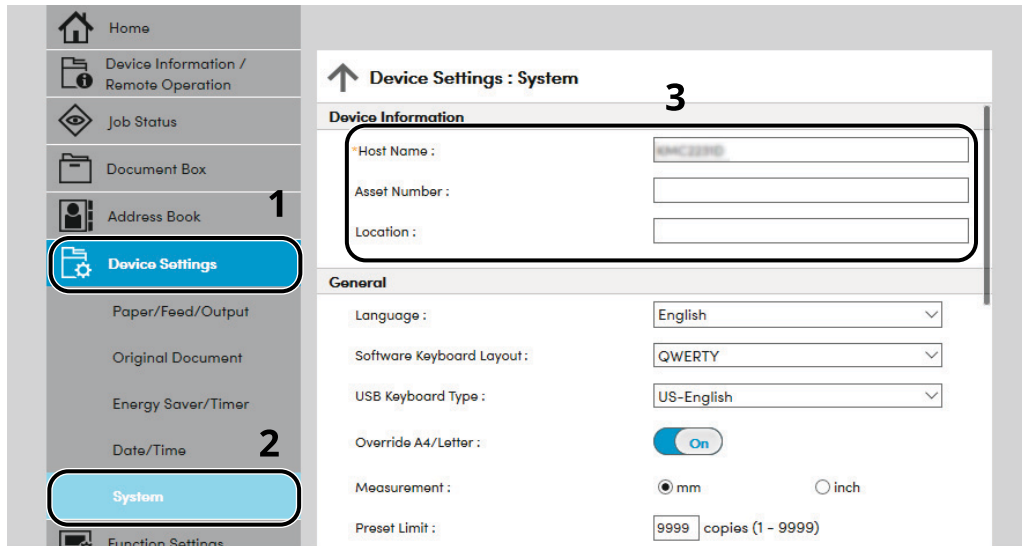

2 Specify the host name.

Enter the device information, and then click [Submit].

✔ IMPORTANT

After changing the setting, restart the network or turn the machine OFF and then ON.

To restart the network interface card, click [Reset] in the [Management Settings] menu, and then click [Restart Network] in "Restart".

E-mail Settings

By configuring the SMTP settings, it is possible to send the images scanned by the machine as E-mail attachments and to send E-mail notices when jobs have been completed.

To use this function, this machine must be connected to a mail server using the SMTP protocol.

In addition, configure the following.

 
- SMTP settings
Item: "SMTP Protocol" and "SMTP Server Name" in "SMTP"
- The sender address when the machine sends E-mails
Item: "Sender Address" in "E-mail Send Settings"
- The setting to limit the size of E-mails
Item: "E-mail Size Limit" in "E-mail Send Settings"

The procedure for specifying the SMTP settings is explained below.


1 Display the screen.

Display the SMTP Protocol screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
Click in the following order to check the machine's IP address and the host name.
[Device Information] in the home screen > [Identification/Wired Network]
- 3 Log in with administrator privileges.




- 4 From the [Network Settings] menu, click [Protocol].

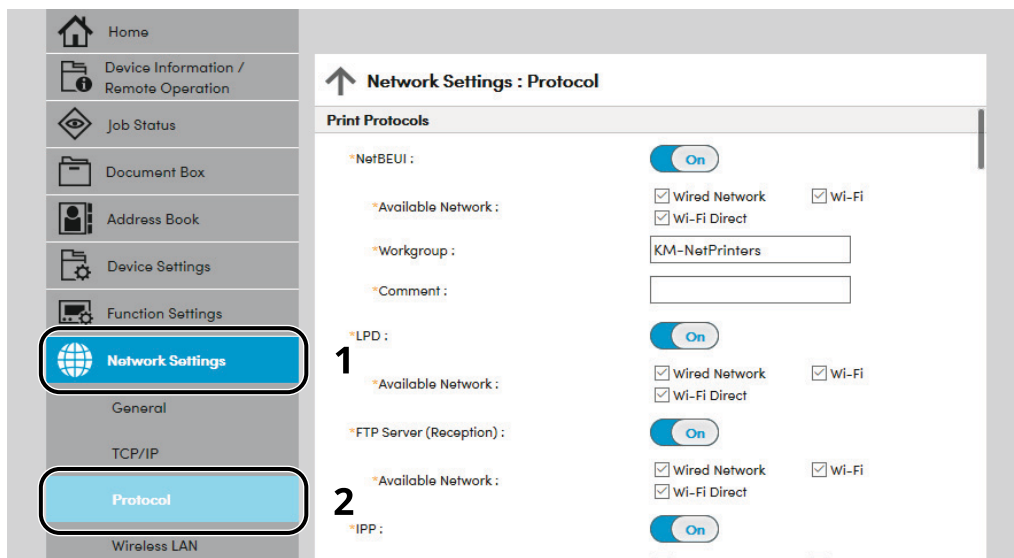

2 Configure the settings.


Set "SMTP (E-mail TX)" to [On] in the "Send Protocols".

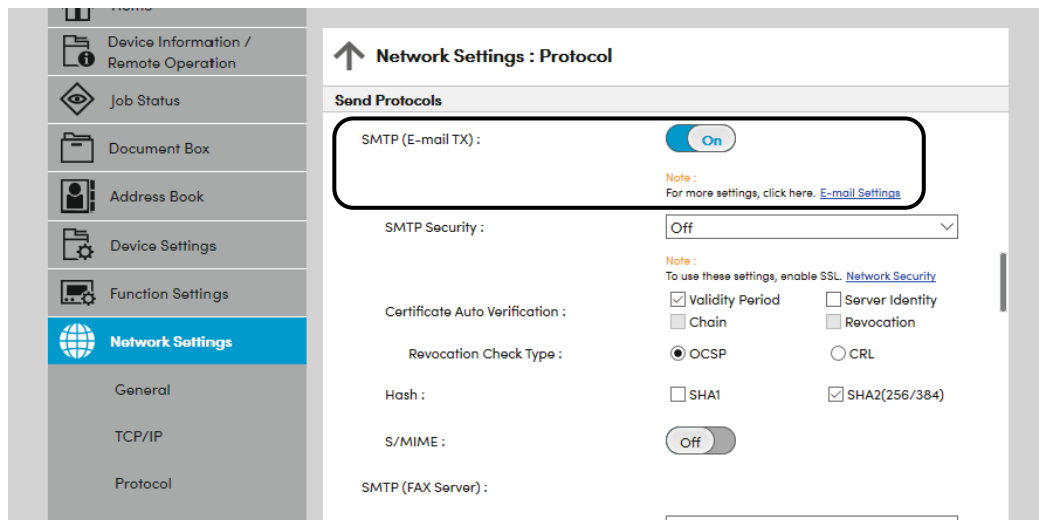

3 Display the screen.

Display the E-mail Settings screen.


From the [Function Settings] menu, click [E-mail].

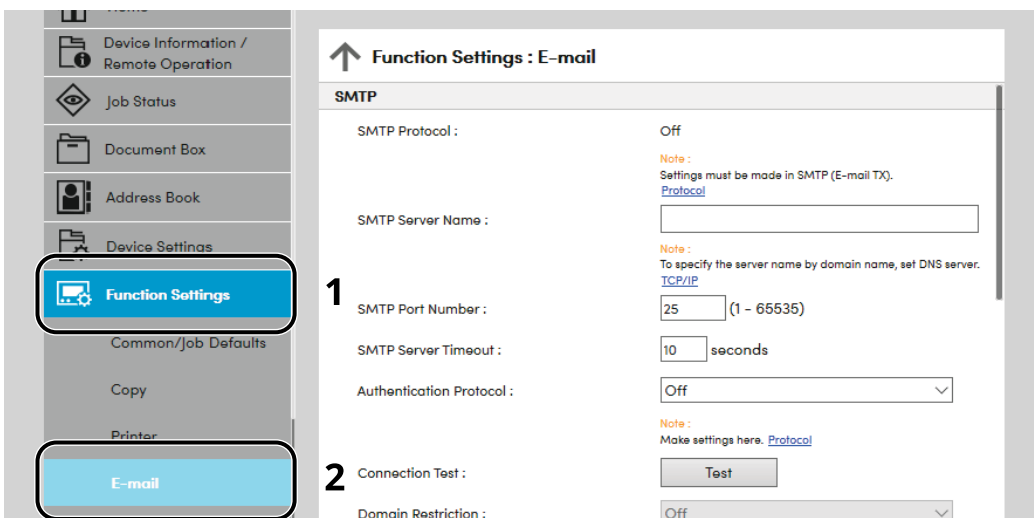

4 Configure the settings.

Enter "SMTP" and "E-mail Send Settings" items.

Setting	Description
SMTP	Set to send e-mail from the machine.
SMTP Protocol	Displays the SMTP protocol settings. Check that "SMTP Protocol" is set to [On] . If [Off] is set, click [Protocol] and set the SMTP protocol to [On] .
SMTP Server Name *1	Enter the host name or IP address of the SMTP server.
SMTP Port Number	Specify the port number to be used for SMTP. The default port number is 25.
SMTP Server Timeout	Set the amount of time to wait before time-out in seconds.
Authentication Protocol	<p>To use SMTP authentication, enter the user information for authentication.</p> <p>On This option enables the authentication protocol.</p> <p>POP before SMTP This is an authentication mode that allows you to send an email from any location and also fetch your email from the same place.</p> <p>Off Select this option to disable the authentication protocol.</p> <p>OAuth2 Select this option to enable OAuth 2.0 as an authorization protocol.</p>
SMTP Security	<p>Set SMTP security.</p> <p>Turn on "SMTP Security" in "SMTP (E-mail TX)" on the [Protocol Settings] page.</p>
Connection Test	Tests to confirm that the E-mail function is operating under the settings without sending a mail.
Domain Restriction	To restrict the domains, click the [Domain List] and enter the domain names of addresses to be allowed or rejected. Restriction can also be specified by e-mail address.
POP3	<p>You don't need to set the following items when you only enable the function of sending e-mail from the machine. Set the following items if you want to enable the function of receiving e-mail on the machine.</p> <p>➔ Command Center RX User Guide</p>
POP3 Protocol	
Check Interval	
Run once now	
Domain Restriction	
POP3 User Settings	

Setting		Description
E-mail Send Settings	E-mail Size Limit	Enter the maximum size of E-mail that can be sent in kilobytes. When E-mail size is greater than this value, an error message appears and E-mail sending is cancelled. Use this setting if you have set E-mail Size Limit for SMTP server. If not, enter a value of 0 (zero) to enable E-mail sending regardless of the size limit.
	Sender Address^{*1}	Specify the sender address for when the machine sends E-mails, such as the machine administrator, so that a reply or non-delivery report will go to a person rather than to the machine. The sender address must be entered correctly for SMTP authentication. The maximum length of the sender address is 256 characters.
	Signature	Enter the signature. The signature is free form text that will appear at the end of the E-mail body. It is often used for further identification of the machine. The maximum length of the signature is 512 characters.
	SMTP Authentication and Sender Address	Select either [Use Device Setting] or [Use Login User Information].
	Function Defaults	Change the function default settings in [Common/Job Default Settings] page.
	S/MIME Settings	 NOTE This function is enabled if you set "SMTP (Email TX)" and "S/MIME" to On in Send Protocols. This function is used for sending and receiving e-mails. Encryption Select an encryption method. Encryption Certificate Configure the encryption certificate and make changes as required. Signing Certificate Configure the signing certificate and make changes as required.
OAuth2 (Microsoft Exchange) Settings	Select [Settings] and go to the authentication endpoint URL to configure your Microsoft account.	

 
*1 Be sure to enter the items.

5 Click [Submit].


Registering Destinations

1 Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
Click in the following order to check the machine's IP address and the host name.
[Device Information] in the home screen > [Identification/Wired Network]
- 3 Log in with administrator privileges.



- 4 From the [Address Book] menu, click [Machine Address Book].

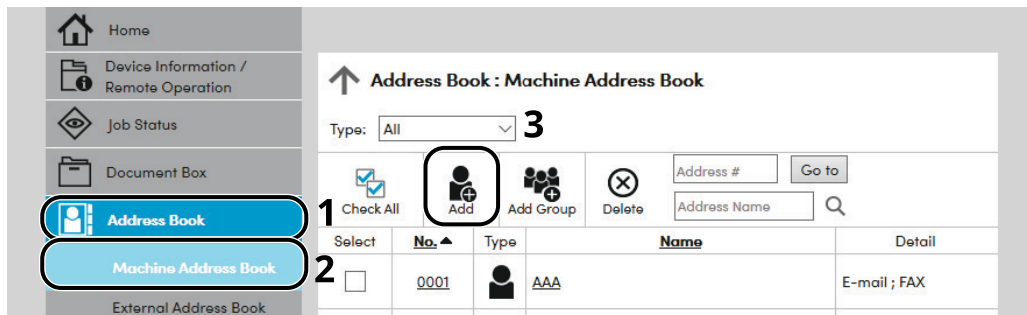

- 5 Click [Add].


2 Populate the fields.

- 1 Enter the destination information.
Enter the information for the destination you want to register. The fields to populate are the same as when registering via operation panel.
➔ [Registering Destinations in the Address Book \(page 3-59\)](#)
- 2 Click [Submit].

Creating a New Custom Box

1 Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
Click in the following order to check the machine's IP address and the host name.
[Device Information] in the home screen > [Identification/Wired Network]
- 3 From the [Document Box] menu, click [Custom Box].

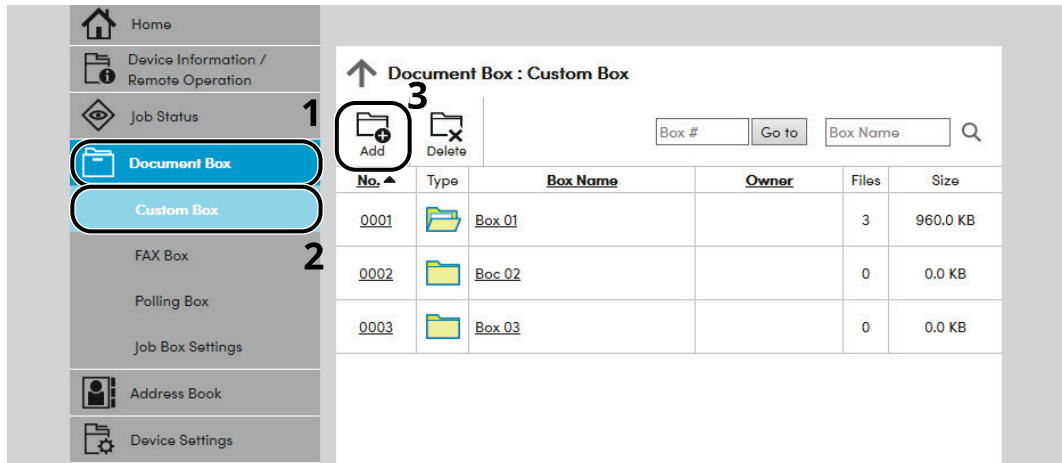

- 4 Click [Add].


2 Configure the Custom Box.

- 1 Enter the box details.
Enter the information for the custom box you want to register. For details on the fields to populate, refer to the following:
➔ [Command Center RX User Guide](#)
- 2 Click [Submit].

Printing a Document Stored in a Custom Box


1 Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
Click in the following order to check the machine's IP address and the host name.
[Device Information] in the home screen > [Identification/Wired Network]
- 3 From the [Document Box] menu, click [Custom Box].

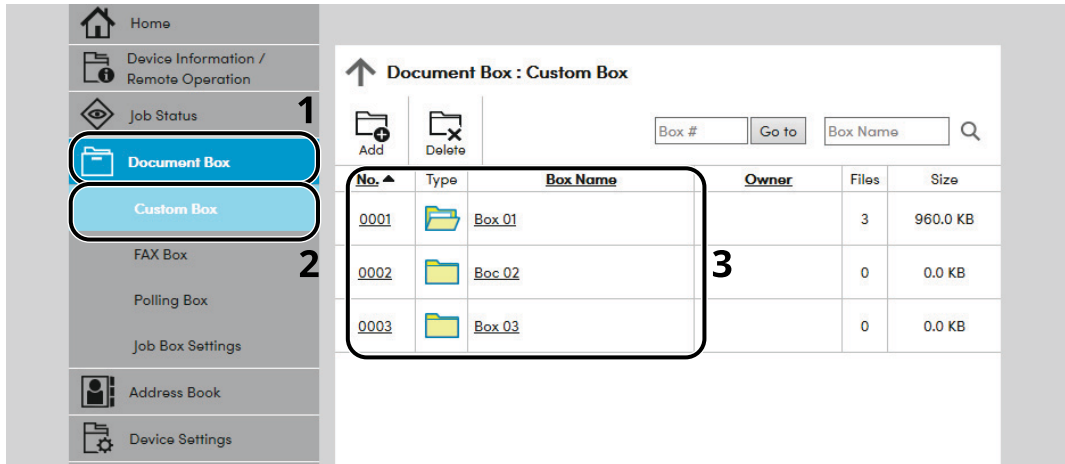

- 4 Click the number or name of the Custom Box in which the document is stored.

2 Print the document.

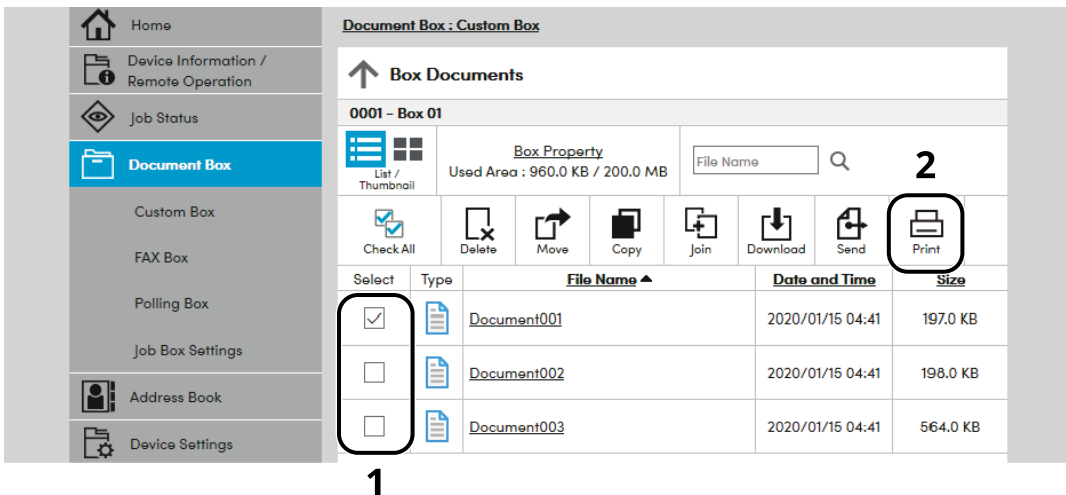

- 1 Select the document you wish to print.
Select the checkbox of the document to be printed.
- 2 Click [Print].
- 3 Configure settings for printing, click [Print].

Transferring Data from Our Other Products

By using the machine's utility, you can smoothly migrate address books when the machine is to be replaced. This section explains how to transfer data between our products.

Migrating the Address Book

The Address Book registered on the machine can be backed up or migrated using the KYOCERA Net Viewer downloaded from the user support page (<https://kyocera.info/support>).

For details on operating the KYOCERA Net Viewer, refer to the following:


➔ **KYOCERA Net Viewer User Guide**

Backing Up Address Book Data to PC


1 Launch the KYOCERA Net Viewer.

2 Create a backup.


- 1 Right-click on the model name from which you want to back up the Address Book, and select **[Advanced]** > **[Set multiple devices]**.

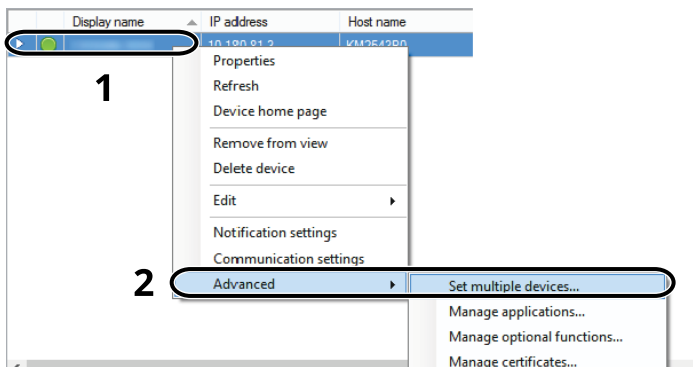


- 2 Select **[Custom mode]** and click **[Next]**.

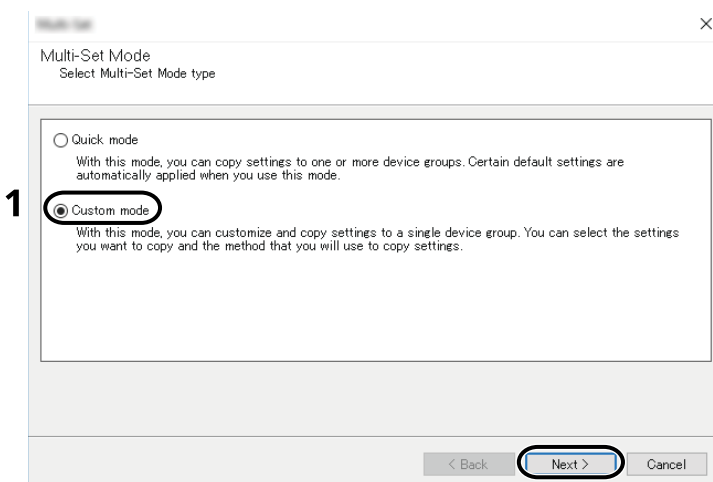


- 3 Select destination device group and click **[Next]**.

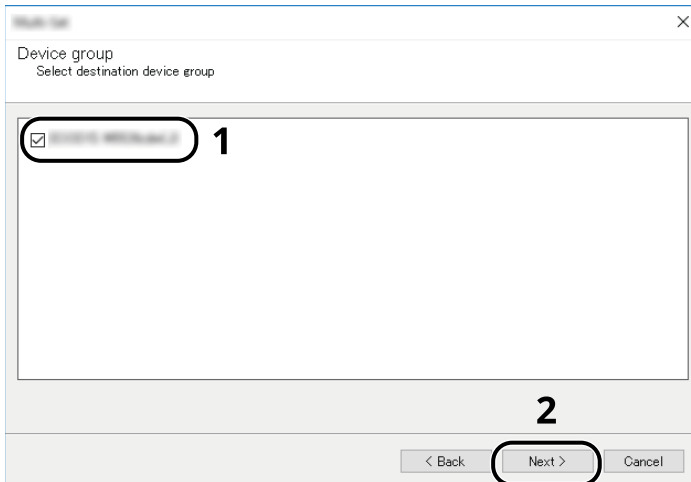


- 4 Select **[Device Address Book]** and click **[Next]**.

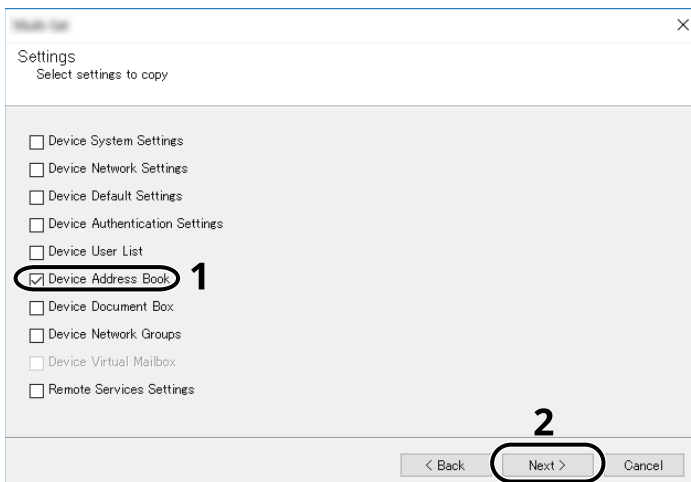

- 5 Select **[Create from device]** and remove the checkmark from **[Overwrite settings on target device]**, and then click **[Next]**.

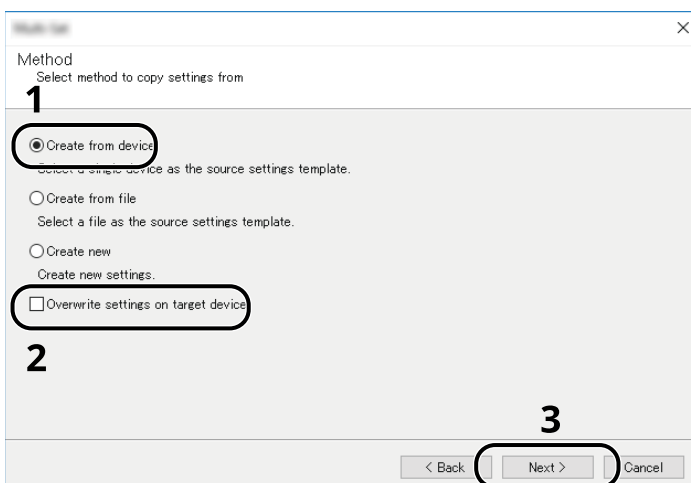

- 6 Select the model you want to back up, and click **[Next]**.

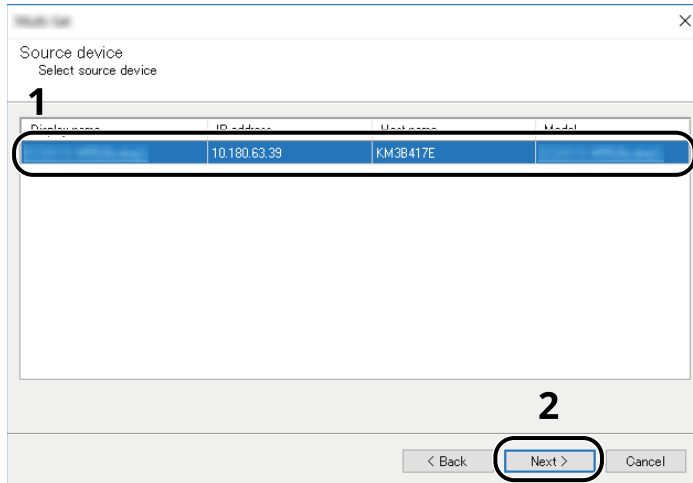


NOTE

If the "Admin Login" screen appears, enter the "Admin Login" and "Login Password", and then click **[OK]**. The default settings are as follows (Upper case and lower case letters are distinguished (case sensitive)).

Login User Name: Admin
Login Password: xxxxxxxxxxx (Serial Number)


➔ [Checking the Equipment's Serial Number \(page i\)](#)

- 7 Click on **[Save to file]**.

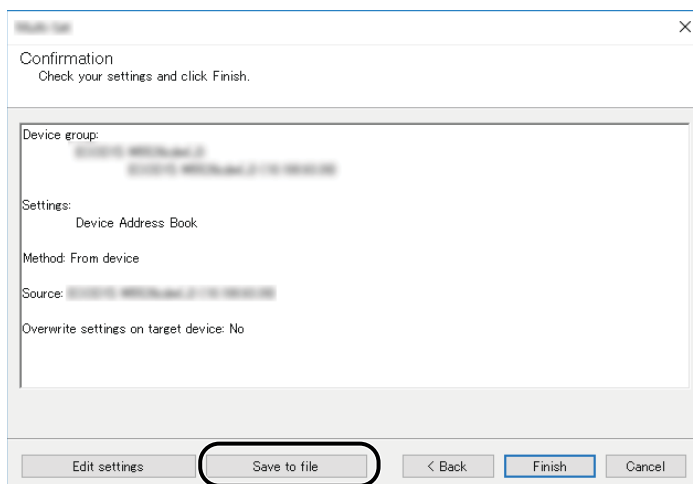

- 8 Specify the location to save the file, enter the file name, and then click **[Save]**.
 For "Save as type", make sure to select "XML File".

- After saving the file, always click **[Cancel]** to close the screen.

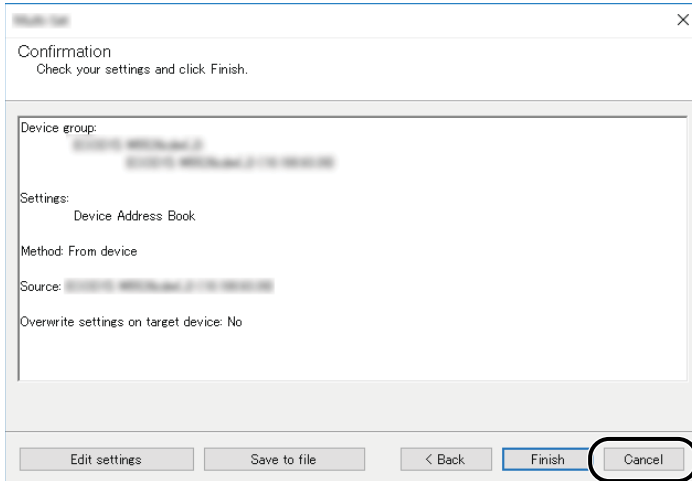


Please note that selecting **[Finish]** will write the data to the machine's Address Book.

Writing Address Book Data to the Machine


1 Launch the KYOCERA Net Viewer.

2 Load the Address Book data.

- Right-click on the model name to which you want to transfer the Address Book, and select **[Advanced]** > **[Set multiple devices]**.

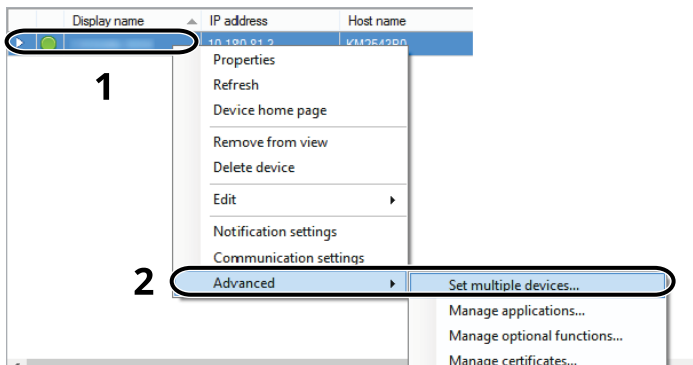


- Select **[Custom Mode]** and click **[Next]**.

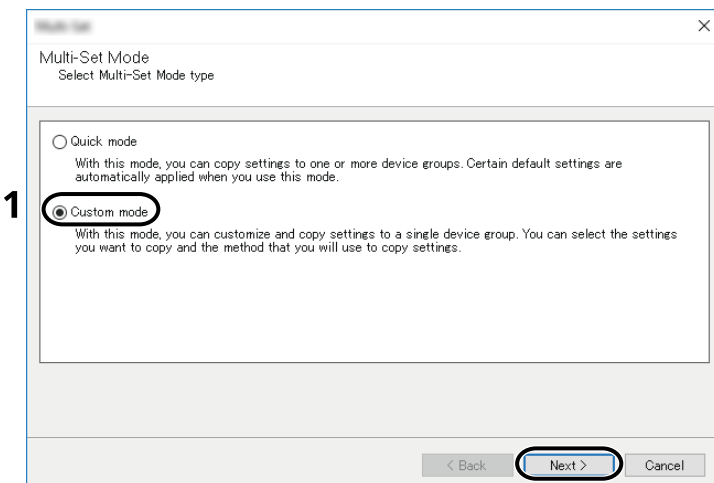


2


- 3 Select destination device group and click [**Next**].

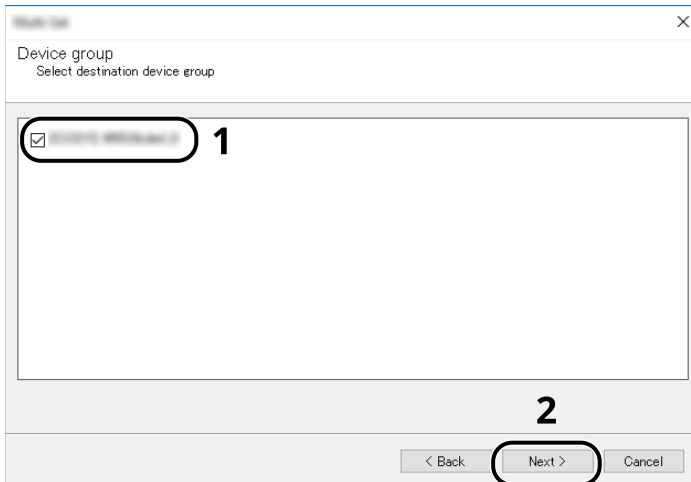

- 4 Select [**Device Address Book**] and click [**Next**].

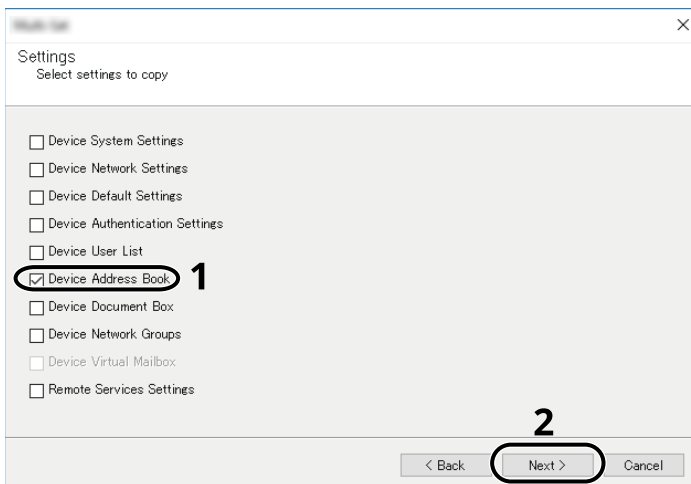


- 5 Select [**Create from file**] and remove the checkmark from [**Overwrite settings on target device**], and then click [**Next**].

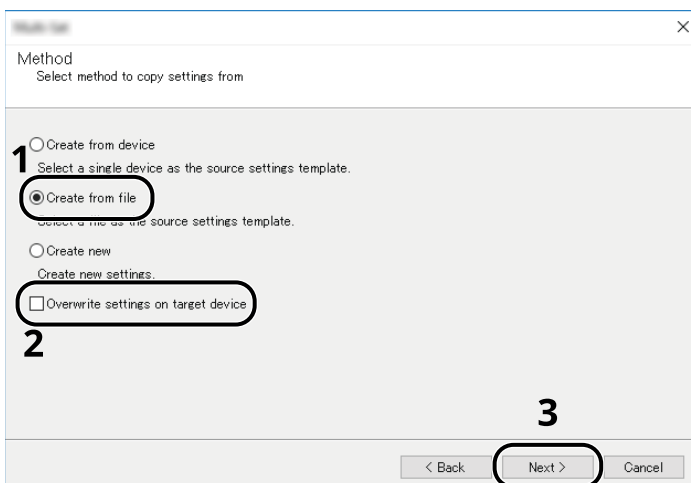


Selecting the [**Overwrite settings on target device**] checkbox will overwrite the machine's Address Book from entry No.1.

- 6 Click [**Browse**] and select the backup Address Book file, and then click [**Next**].

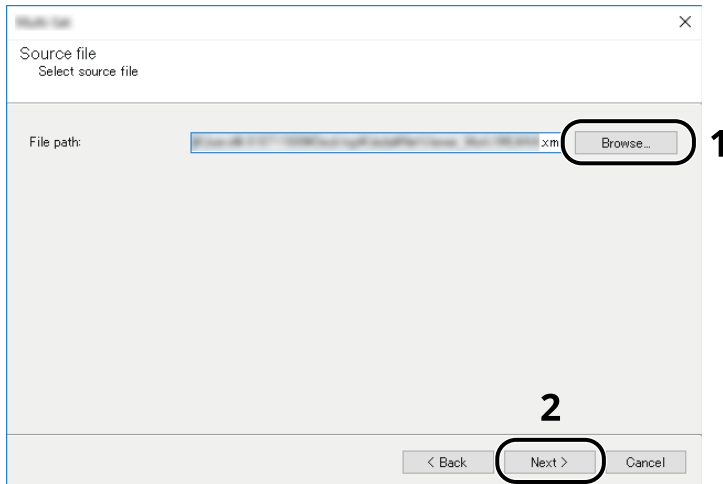

- 7 Click [**Finish**].

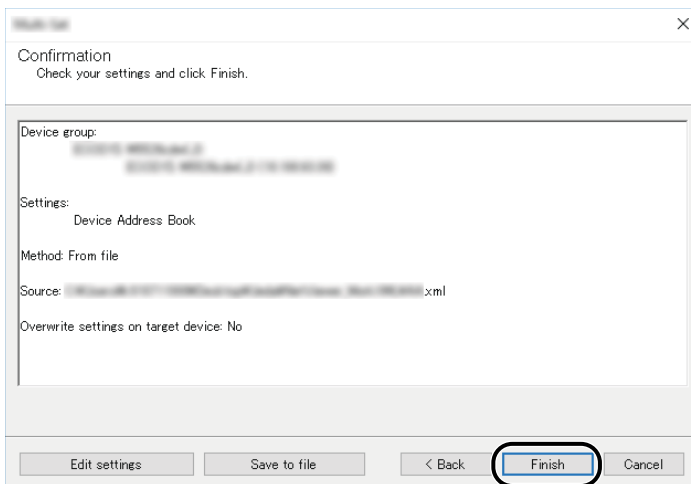

The write process of the Address Book data starts.

- 8 Once the write process is complete, click [**Close**].

3 Preparation before Use


This chapter explains the following operations.

Loading Paper	3-2
Precaution for Loading Paper	3-3
Loading in Cassettes	3-4
Loading Envelopes or Cardstock in the Cassettes	3-7
Loading in the Large Capacity Feeder	3-11
Loading Paper in the Multipurpose Tray	3-13
Loading in the Side Feeder (3,000-sheet)	3-18
Loading in the Side Feeder (3,500-sheet)	3-20
Loading Envelopes or Cardstock in the Side Feeder (3,500-sheet)	3-23
Loading in the Inserter	3-26
Specifying Paper Size and Media Type	3-27
Using Media Catalog	3-31
About Media Catalog	3-31
Link Media Catalog and Paper Source	3-32
Correct Paper Skewing	3-34
Adjust the Print Position to Correct Image Misalignment	3-36
Precautions for Outputting Paper	3-41
Right Tray	3-41
Finisher Tray B	3-42
Folding Unit (For Finisher)	3-43
Preparation for Sending a Document to a Shared Folder in a PC	3-44
Making a Note of the Device Name and Full Device Name	3-44
Making a Note of the User Name and Domain Name	3-45
Creating a Shared Folder, Making a Note of a Shared Folder	3-46
Configuring Windows Firewall	3-50
Scan to Folder Setup Tool for SMB	3-54
Registering Destinations in the Address Book	3-59
Adding a Destination (Common Address Book)	3-59
Adding a Destination (Departmental Address Book)	3-67
Adding a Destination on One Touch Key	3-77

Loading Paper

Load paper in the cassettes and multipurpose tray.

For the paper load methods for each cassette, refer to the page below.

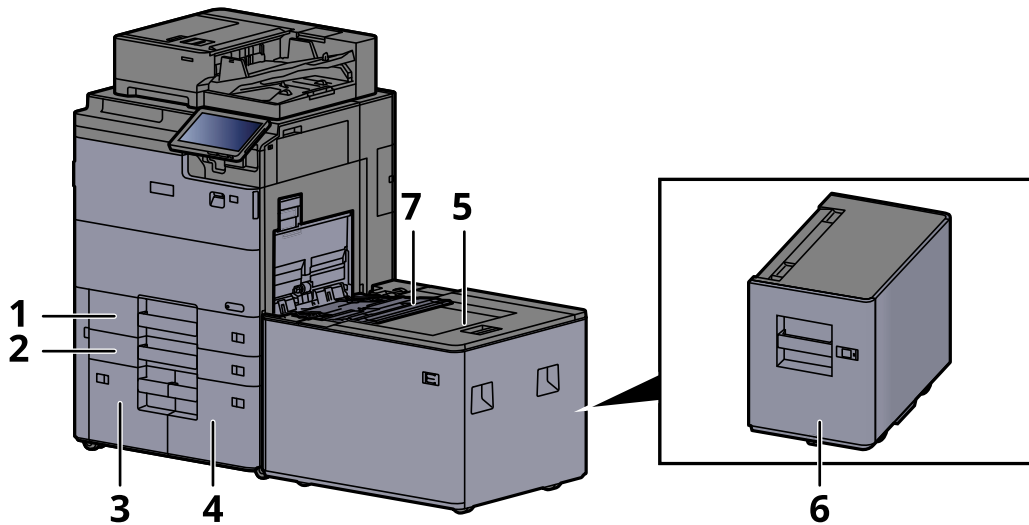


No.	Name	Page
1	Cassette 1	page 3-4
2	Cassette 2	
3	Cassette 3	page 3-11
4	Cassette 4	
5	Cassette 5 (3,500-sheet)	page 3-20
6	Cassette 5 (3,000-sheet)	page 3-18
7	Multi Purpose Tray	page 3-13

NOTE

- The number of sheets that can be held varies depending on your environment and paper type.
- You should not use inkjet printer paper or any paper with a special surface coating. (Such paper may cause paper jams or other faults.)
- For higher quality color printing, use special color paper.

Precaution for Loading Paper

When you open a new package of paper, fan the sheets to separate them slightly prior to loading in the following steps.

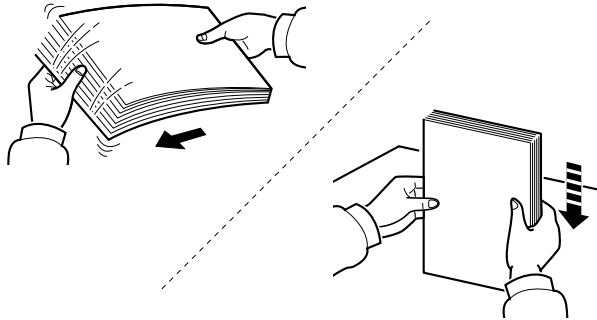

Fan the paper, then tap it on a level surface.

In addition, note the following points.

- If the paper is curled or folded, straighten it before loading. Paper that is curled or folded may cause a jam.
- Avoid exposing opened paper to high humidity as dampness can be a cause of problems. Seal any remaining paper after loading in the multipurpose tray or cassettes back in the paper storage bag.
- Leaving paper in the cassette for a long time may cause a discoloration of paper by heat from the cassette heater.
- If the machine will not be used for a prolonged period, protect all paper from humidity by removing it from the cassettes and sealing it in the paper storage bag.

✔ IMPORTANT

If you copy onto used paper (paper already used for printing), do not use paper that is stapled or clipped together. This may damage the machine or cause poor image quality.

💡 NOTE


If you use special paper such as letterhead, paper with holes or paper with pre-prints like logo or company name, refer to the following:

➔ [Paper \(page 11-12\)](#)

Loading in Cassettes

Load the paper in Cassette. The procedures here represent the Cassette 1.


- 1 Pull the cassette completely out of the machine.**

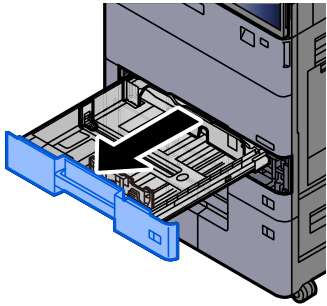


NOTE

Do not pull out more than one cassette at a time.

- 2 Adjust the paper length guide to the paper size required.**

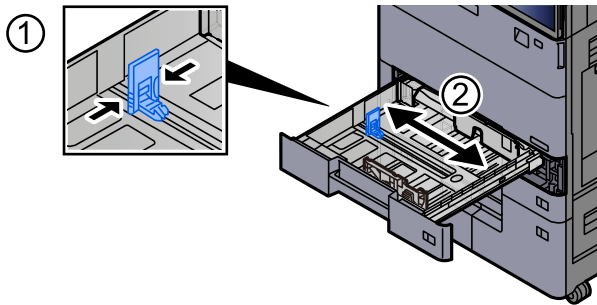


3 Adjust the position of the paper width guides located on the left and right sides of the cassette.

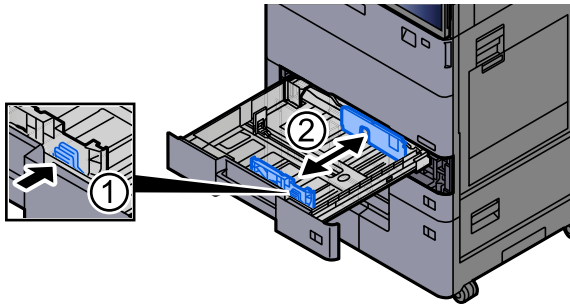


NOTE

When using Ledger, A3 and SRA3 paper, insert the paper width auxiliary guides into the grooves (bottom of tray) according to the paper size to be used.

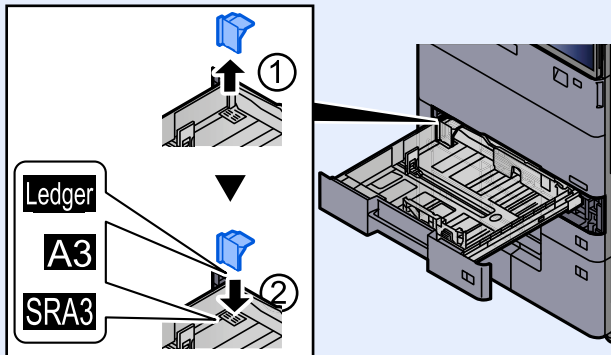

4 Load paper.

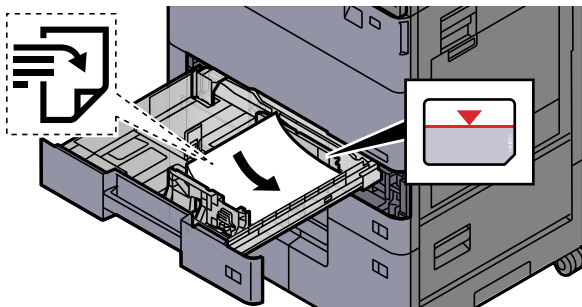


IMPORTANT


- Load the paper with the print side facing up.
- After removing new paper from its packaging, fan the paper before loading it in the cassette.
→ [Precaution for Loading Paper \(page 3-3\)](#)
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator (see illustration above).
- If paper is loaded without adjusting the paper length guide and paper width guide, the paper may skew or become jammed.

5 Be sure that the paper length and width guides rest securely against the paper.


If there is a gap, readjust the guides to fit the paper.

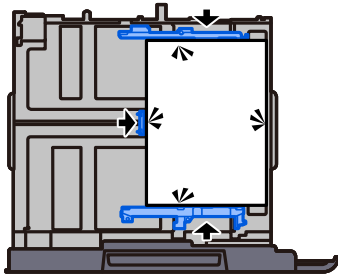

6 For Cassette 1 and 2, insert a sheet of the required paper size and type, as shown in the illustration.

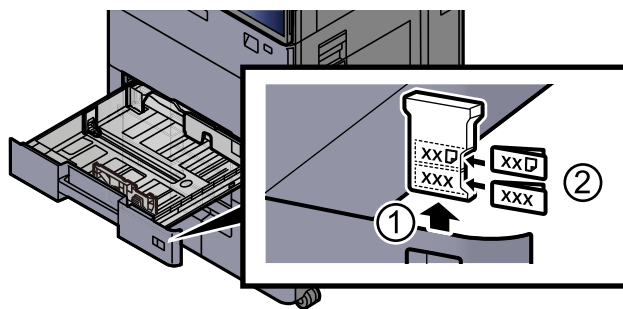

7 Gently push the cassette back in.

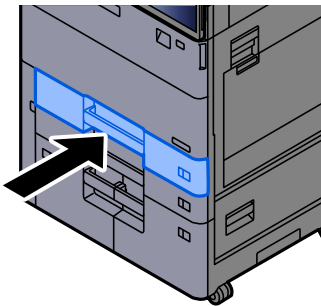

8 Display the screen.

[Home] key > [...] > [System Menu] > [Device Setting] > [Paper Feeding] > [Cassette 1 Settings]

9 Configure the function.

Select the paper size and paper type.

➔ [Cassette 1 \(to 5\) Settings \(page 8-14\)](#)

NOTE

Paper size can be automatically detected and selected, refer to the following.


➔ [Paper Selection \(page 6-21\)](#)

➔ [Cassette 1 \(to 5\) Settings \(page 8-14\)](#)

Loading Envelopes or Cardstock in the Cassettes

Load envelope or cardstock in the cassettes. Here, we'll explain the procedures for cassette 1, as an example.

1 Pull Cassette 1 completely out of the machine.

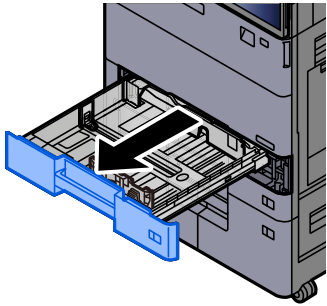


NOTE


Do not pull out more than one cassette at a time.

2 Remove the envelope feed guide.

When loading cardstock, go to step 5.

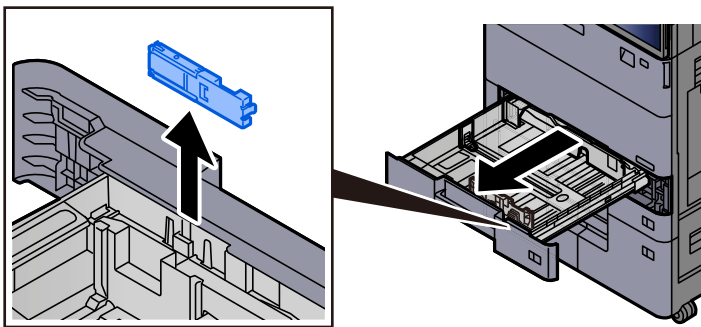


3 Expand the lever of the envelope feed guide when loading envelopes larger than Envelope C5 which has a width of 162 mm (6.4").

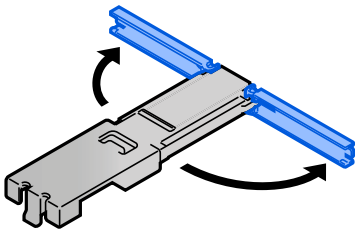


4 Attach the envelope feed guide as shown in the illustration.


The illustration below shows that the lever of the envelope feed guide is expanded.

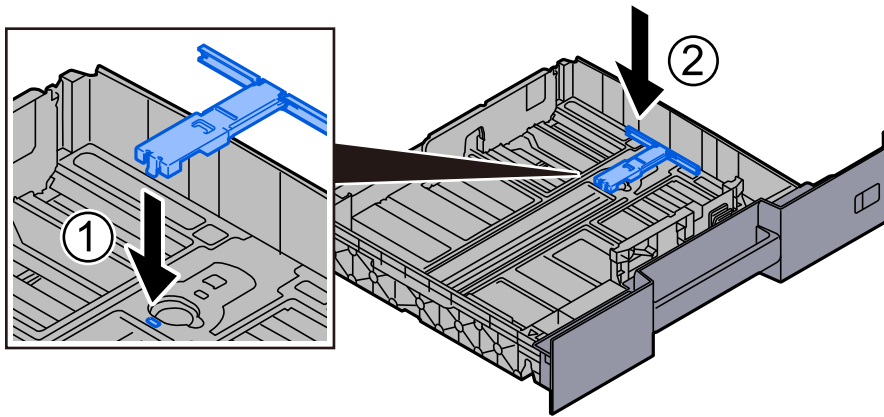

5 Adjust the paper length guide to the paper size required.

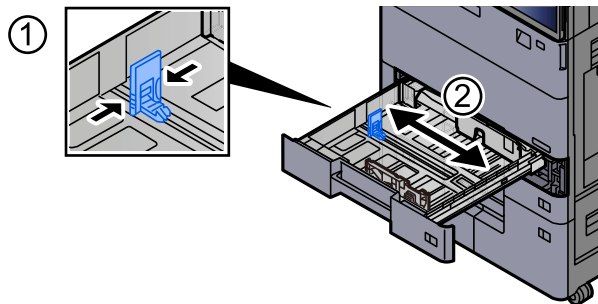


6 Adjust the position of the paper width guides located on the left and right sides of the cassette.

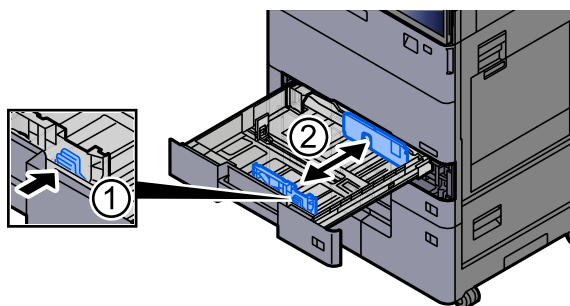

7 Load the envelope with the print side facing up.

Example: When printing the address.

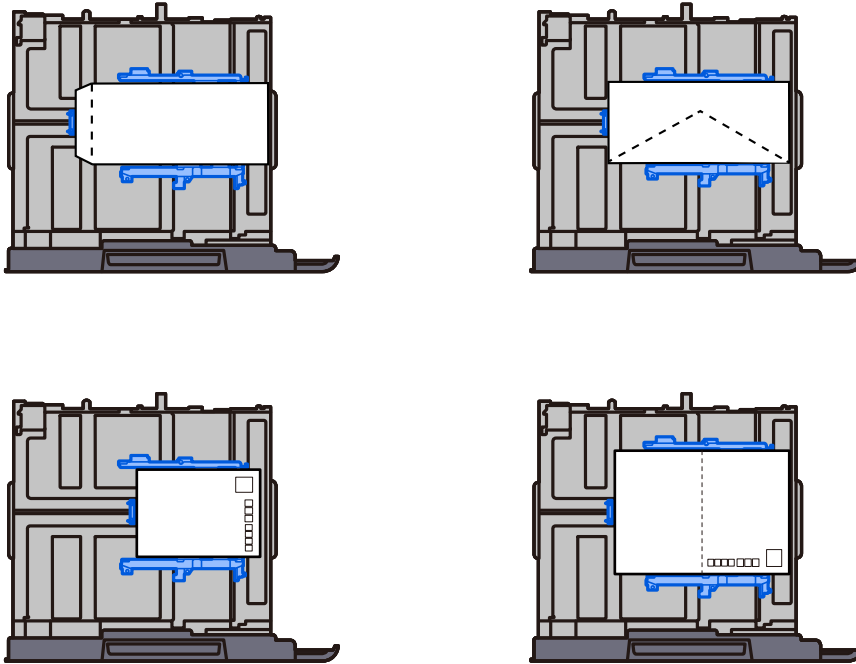

✔ IMPORTANT


- How to load envelopes (orientation and facing) will differ depending on the type of envelope. Be sure to load it in correctly, otherwise printing may be done in the wrong direction or on the wrong face.
- Ensure that loaded envelopes do not exceed the level indicator.

👁 NOTE


Approximately 100 post cards or 30 envelopes can be set.

8 Be sure that the paper length and width guides rest securely against the paper.

If there is a gap, readjust the guides to fit the paper.

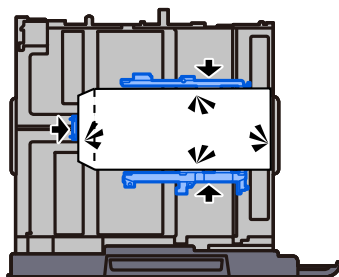

9 Gently push the cassette back in.

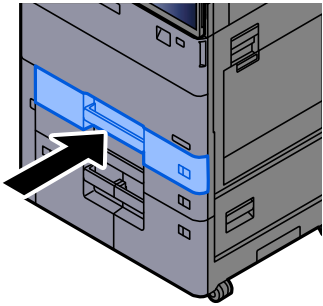

10 Display the screen.

[Home] key > [...] > [System Menu] > [Device Setting] > [Paper Feeding] > [Cassette 1 Settings]

11 Configure the function.

Select the paper size and type of envelope.

➔ [Cassette 1 \(to 5\) Settings \(page 8-14\)](#)

12 Set by using the printer driver on the PC.

Select the paper size and type of envelope using the printer driver on the PC.


➔ [Printing on Standard Sized Paper \(page 4-4\)](#)

➔ [Printing on Non-standard Sized Paper \(page 4-6\)](#)


Loading in the Large Capacity Feeder

Load the paper in the Large Capacity Feeder. The procedures here represent the cassette 3.

1 Pull the cassette completely out of the machine.

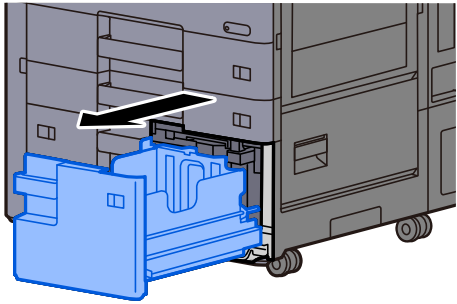


2 Load paper.

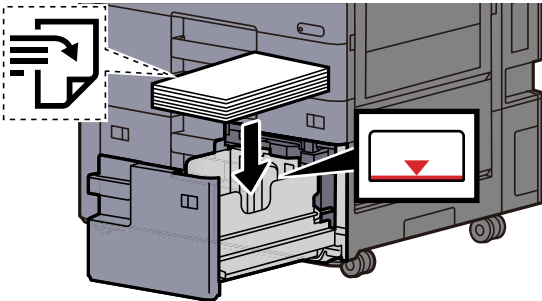


✔ IMPORTANT

- Load the paper with the print side facing up.
- After removing new paper from its packaging, fan the paper before loading it in the cassette.
➔ [Precaution for Loading Paper \(page 3-3\)](#)
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator.
- If you want to change the paper size, consult your sales representative or dealer.

3 For Cassette 3 and 4, insert a sheet of the required paper size and type, as shown in the illustration.

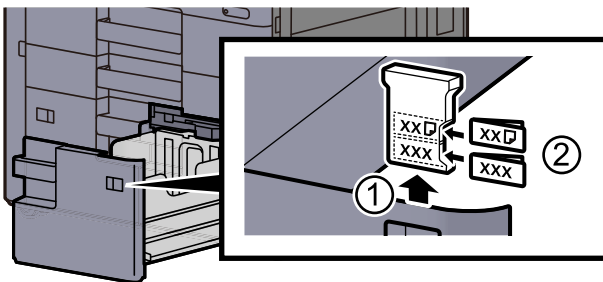

4 Gently push the cassette back in.

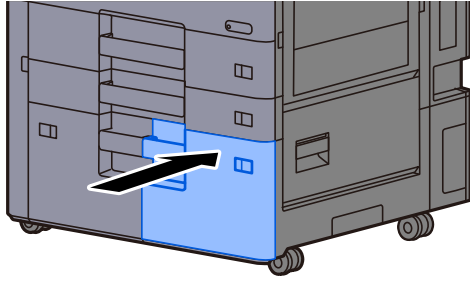

5 Display the screen.

[Home] key > [...] > [System Menu] > [Device Setting] > [Paper Feeding] > [Cassette 3 Settings]

6 Configure the function.

Select the paper type.

➔ [Cassette 1 \(to 5\) Settings \(page 8-14\)](#)

Loading Paper in the Multipurpose Tray

The multipurpose tray will hold up to 150 sheets of plain paper (80 g/m²).

For details of the supported paper sizes, refer to the following:

➔ [Choosing the Appropriate Paper \(page 11-13\)](#)

For the paper type setting, refer to the following:

➔ [Media Type Setting \(page 8-18\)](#)

Be sure to use the multipurpose tray when you print on any special paper.

IMPORTANT

- **If you are using a paper weight of 106 g/m² or more, set the media type to Thick and set the weight of the paper you are using.**
- **Remove each transparency from the inner tray as it is printed. Leaving transparencies in the inner tray may cause a paper jam.**


The capacity of the multipurpose tray is as follows.

- A4/Letter or smaller paper (80 g/m²): 250 sheets
- A4/Letter or larger paper (80 g/m²): 50 sheets
- Thick paper (209 g/m²): 10 sheets
- Thick paper (157 g/m²): 50 sheets
- Thick paper (104.7 g/m²): 50 sheets
- Hagaki (Cardstock): 30 sheets
- Envelope DL, Envelope C5, Envelope #10, Envelope #9, Envelope #6 3/4, Envelope Monarch, Kakugata 2, Youkei 4, Youkei 2, Younaga 3, Nagagata 3, Nagagata 4: 10 sheets
- OHP film: 10 sheet
- Coated: 10 sheets
- Banner paper: 488.1 mm (19.22") to a maximum of 1,220 mm (48.03"): 1 sheet (manual feed), 10 sheets (when optional banner tray is attached)
- Index tab dividers: 15 sheets

NOTE


- When you load custom size paper, enter the paper size by referring to the following:
 - ➔ [Paper Feeding \(page 8-14\)](#)
- When you use special paper such as transparencies or thick paper, select the media type by referring to the following:
 - ➔ [MP Tray Settings \(page 8-15\)](#)
- Paper size can be automatically detected and selected, refer to the following:
 - ➔ [Paper Selection \(page 6-21\)](#)
 - ➔ [MP Tray Settings \(page 8-15\)](#)

1 Open the multipurpose tray.

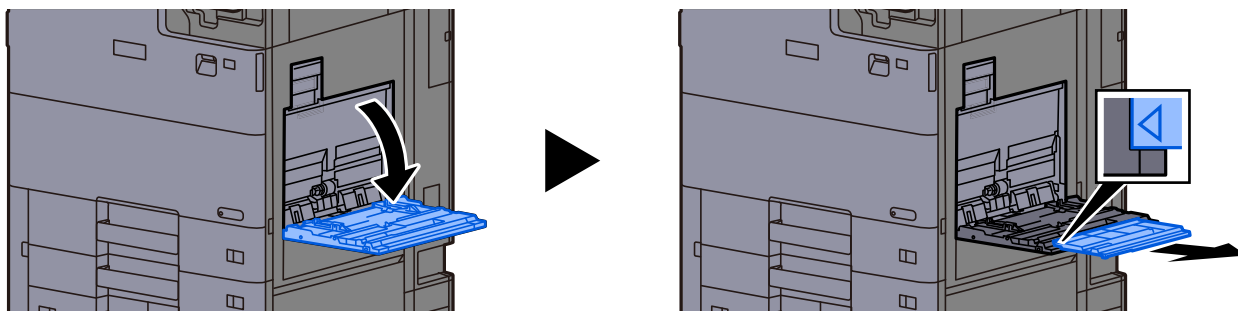


2 Adjust the multipurpose tray size.

Paper sizes are marked on the multipurpose tray.

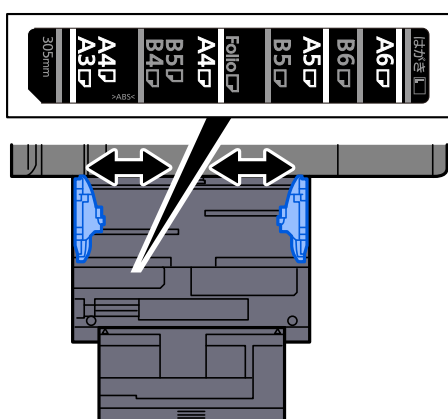

3 Load paper.

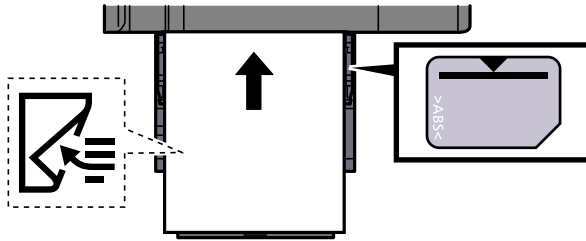

Insert the paper along the paper width guides into the tray until it stops.

After removing new paper from its packaging, fan the paper before loading it in the multipurpose tray.

➔ [Precaution for Loading Paper \(page 3-3\)](#)

✔ IMPORTANT

- When loading the paper, keep the print side facing down.
- Curled paper must be uncurled before use.
- When loading paper into the multipurpose tray, check that there is no paper left over in the tray from a previous job before loading the paper. If there is just a small amount of paper left over in the multipurpose tray and you want to add more, first remove the left-over paper from the tray and include it with the new paper before loading the paper back into the tray.
- If there is a gap between the paper and the paper width guides, readjust the guides to fit the paper in order to prevent skewed feeding and paper jams.
- Ensure that the loaded paper does not exceed the load limits.

4 Specify the type of paper loaded in the multipurpose tray using the operation panel.


➔ [MP Tray Settings \(page 8-15\)](#)

When you load envelopes or cardstock in the multipurpose tray

Load the paper with the print side facing down. For the procedure for printing, refer to the following:

➔ **Printer Driver User Guide**

Example: When printing the address.

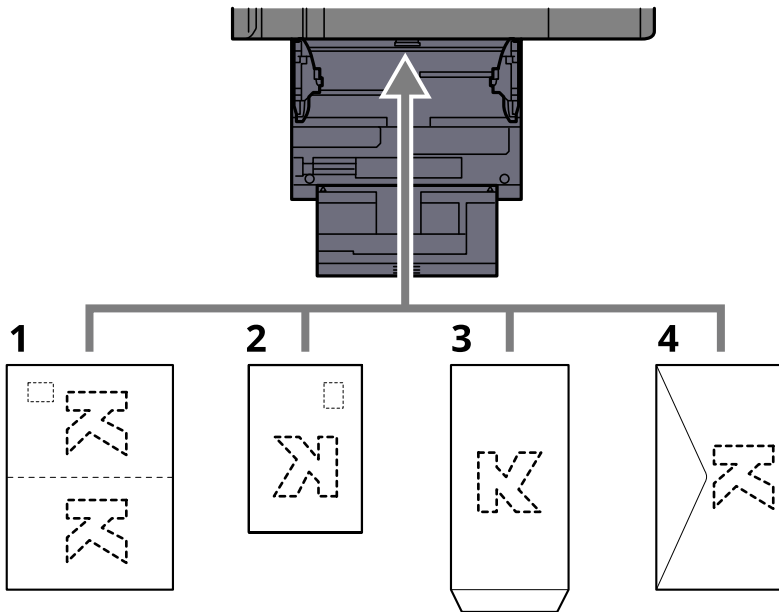

- 1 Oufuku hagaki (Return postcard)
- 2 Hagaki (Cardstocks)
- 2 Portrait form envelopes (Open the flap)
- 3 Landscape form envelopes (Close the flap)

✔ **IMPORTANT**

- Use unfolded Oufuku hagaki (Return postcard).
- How to load envelopes (orientation and facing) will differ depending on the type of envelope. Be sure to load it in correctly, otherwise printing may be done in the wrong direction or on the wrong face.

💡 **NOTE**


When you load envelopes in the multipurpose tray, select the envelope type by referring to the following:

➔ [MP Tray Settings \(page 8-15\)](#)

Loading Index Paper in the Multipurpose Tray


1 Prepare paper.

Sort the pages so that the 1st page is at the back.

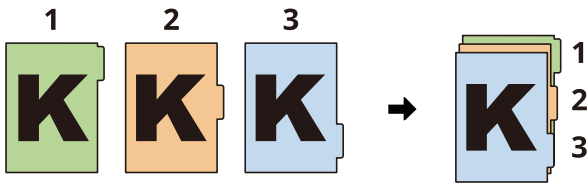


2 Orient the paper in the same orientation.

Place the paper print side down, oriented so that the tabs are on the trailing side of the paper when it feeds in.

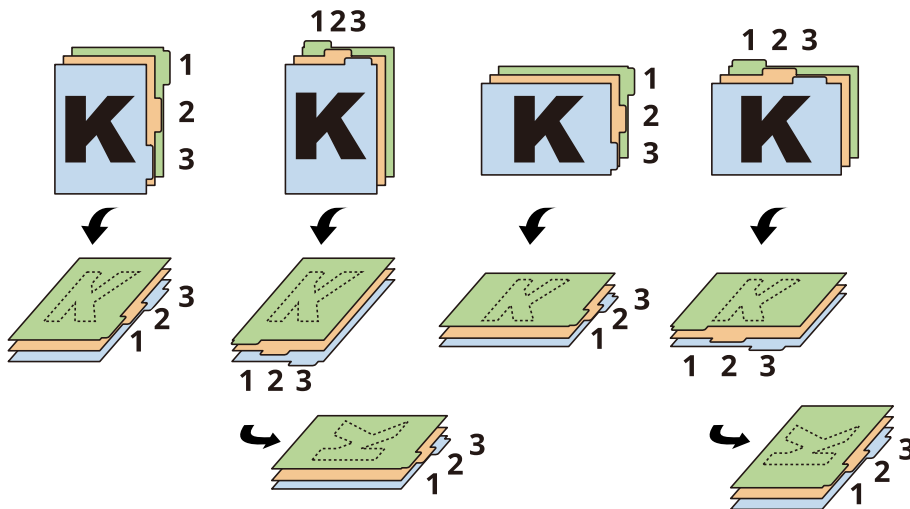

3 Load paper.

Load paper in the tray.

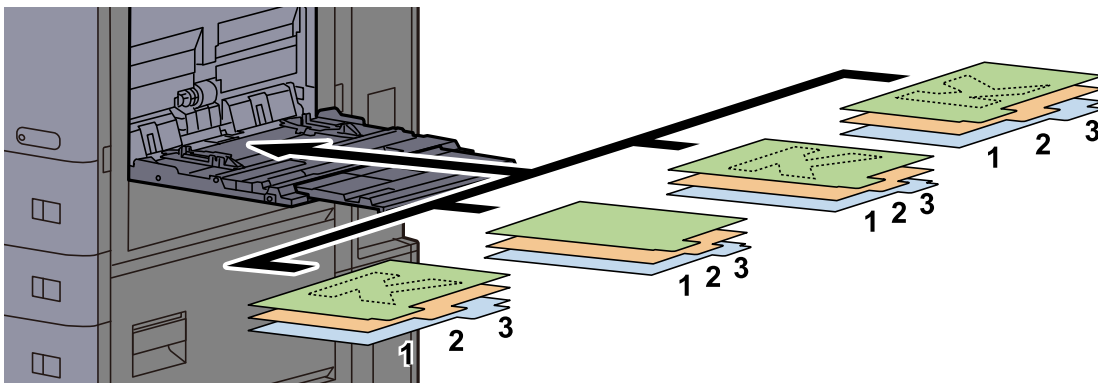

For the procedure for printing, refer to the following:


➔ **Printer Driver User Guide**

Index paper must meet the following conditions.


Item	Description
Paper size	A4/Letter
Paper weight	136 to 256 g/m ²
Number of tabs	1 to 15
Length of tabs	30 mm or less

Loading in the Side Feeder (3,000-sheet)

- 1 Pull the cassette completely out of the machine.

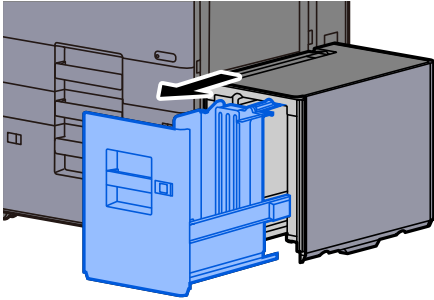


- 2 Load paper.

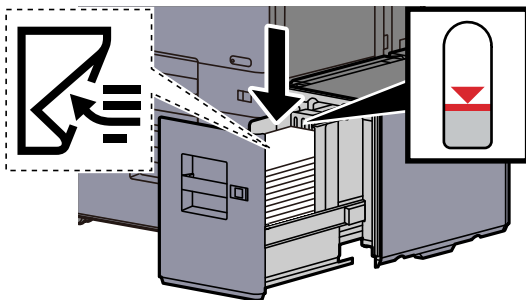


✔ IMPORTANT

- Load the paper with the print side facing down.
- After removing new paper from its packaging, fan the paper before loading it in the cassette.
➔ [Precaution for Loading Paper \(page 3-3\)](#)
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator.

- 3 Gently push the cassette back in.

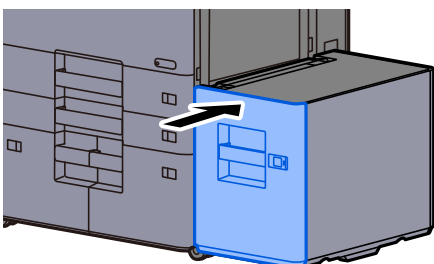

- 4** Insert the indication on the sheet so as to match the size and type of paper to be placed.

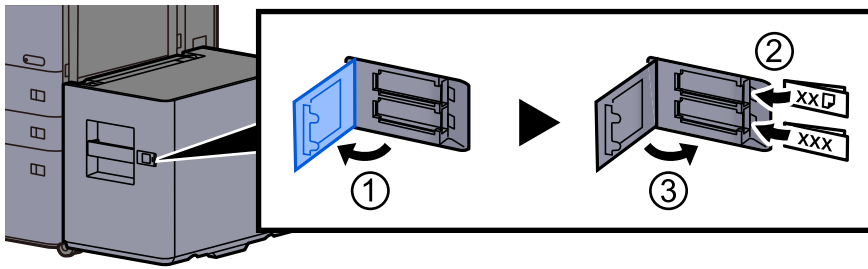

- 5** Display the screen.

[Home] key > [...] > [System Menu] > [Device Setting] > [Paper Feeding] > [Cassette 5 Settings]


- 6** Configure the function.

Select the paper type.


➔ [Cassette 1 \(to 5\) Settings \(page 8-14\)](#)

Loading in the Side Feeder (3,500-sheet)


- 1 Open the top cover.

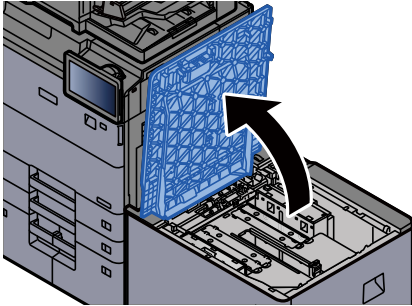

- 2 Adjust the paper length guide to the paper size required.

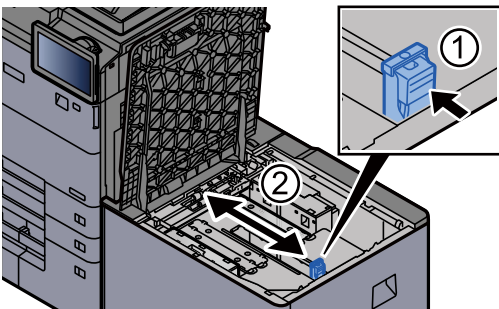


- 3 Adjust the position of the paper width guides located on the left and right sides of the cassette.

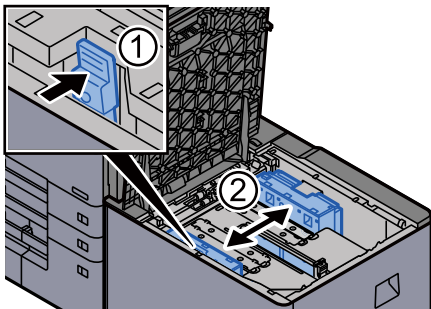


NOTE

Remove the guide plate of the bottom plate to match the size of the paper used. After removing the guide plate, store it in a safe place for retrieval.

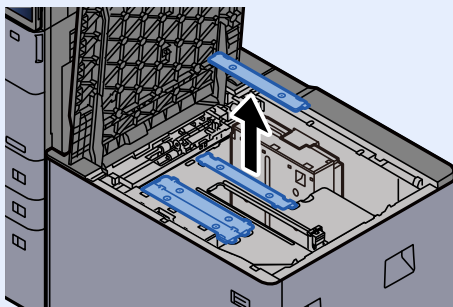

4 Load paper.

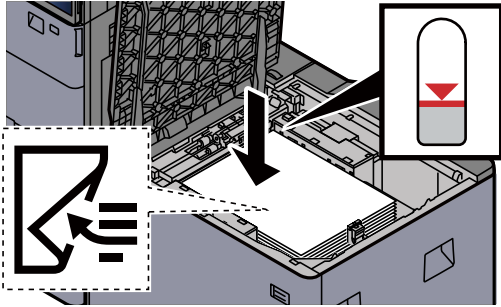


✓ IMPORTANT


- Load the paper with the print side facing down.
- After removing new paper from its packaging, fan the paper before loading it in the cassette.
→ [Precaution for Loading Paper \(page 3-3\)](#)
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator.
- If paper is loaded without adjusting the paper length guide and paper width guide, the paper may skew or become jammed.

5 Be sure that the paper length and width guides rest securely against the paper.


If there is a gap, readjust the guides to fit the paper.

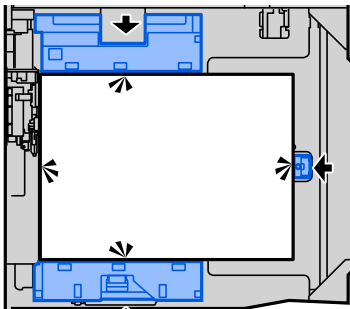

6 Close the top cover.

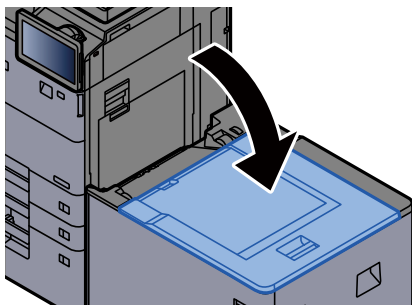

- 7** Insert the indication on the sheet so as to match the size and type of paper to be placed.

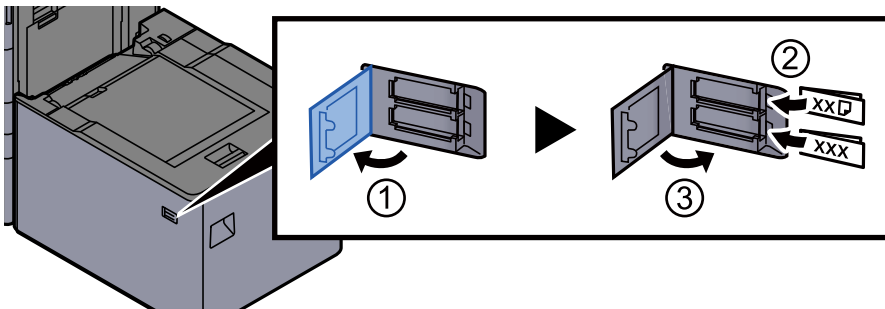

- 8** Display the screen.

[Home] key > [...] > [System Menu] > [Device Setting] > [Paper Feeding] > [Cassette 5 Settings]


- 9** Configure the function.

Select the paper type.


➔ [Cassette 1 \(to 5\) Settings \(page 8-14\)](#)

Loading Envelopes or Cardstock in the Side Feeder (3,500-sheet)


- 1 Open the top cover.

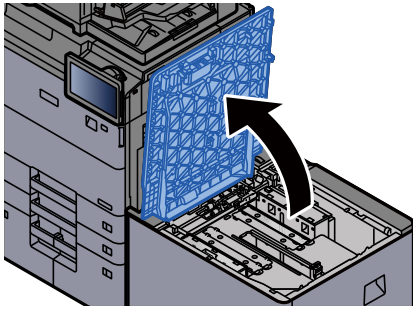


- 2 Adjust the paper length guide to the paper size required.

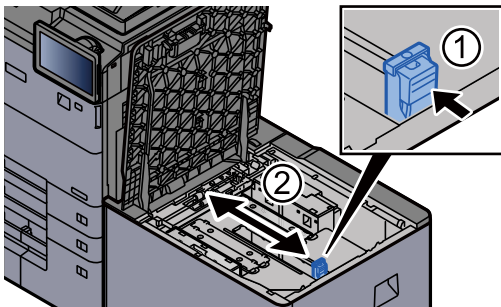

- 3 Remove the guide plate of the bottom plate.

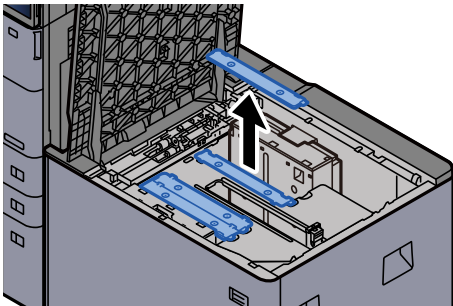


- 4 Adjust the position of the paper width guides located on the left and right sides of the cassette.

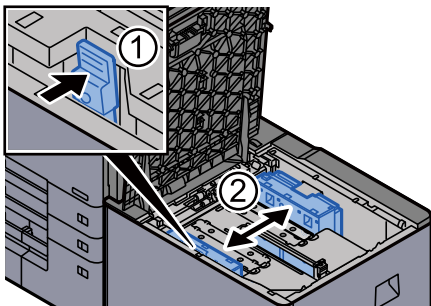

5 Load the envelope with the print side facing down.

Example: When printing the address.

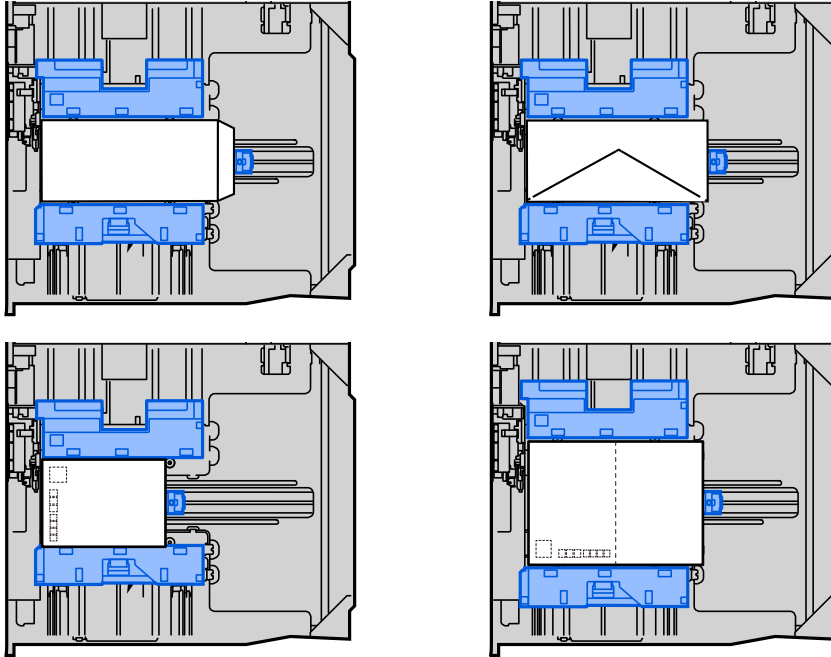


✔ IMPORTANT


- How to load envelopes (orientation and facing) will differ depending on the type of envelope. Be sure to load it in correctly, otherwise printing may be done in the wrong direction or on the wrong face.
- Ensure that loaded envelopes do not exceed the level indicator.

6 Be sure that the paper length and width guides rest securely against the paper.

If there is a gap, readjust the guides to fit the paper.

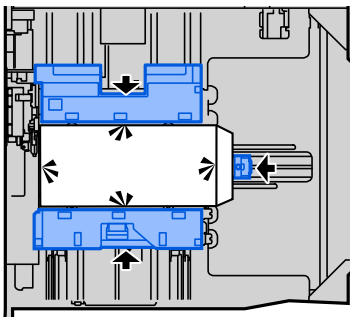

7 Close the top cover.

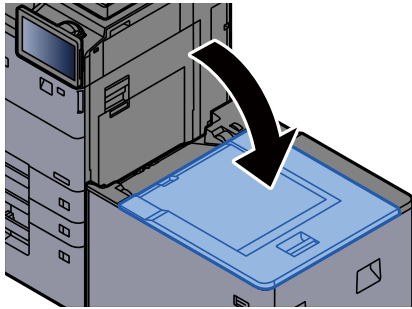

8 Display the screen.

[Home] key > [...] > [System Menu] > [Device Setting] > [Paper Feeding] > [Cassette 5 Settings]

9 Configure the function.

Select the paper size and type of envelope.

➔ [Cassette 1 \(to 5\) Settings \(page 8-14\)](#)

10 Set by using the printer driver on the PC.

Select the paper size and type of envelope using the printer driver on the PC.

➔ [Printing on Standard Sized Paper \(page 4-4\)](#)

➔ [Printing on Non-standard Sized Paper \(page 4-6\)](#)

Loading in the Inserter


Item	Paper Size	Paper Type	No. Sheets
Inserter Tray 1	A3, A4, A5, B4, B5, SRA3, Ledger, Letter, Legal, Statement, Executive, 13"×19.2", 13"×19", 12×18", Oficio II, Folio, 8K, 16K, ISO B5, custom (89 × 127~330.2 × 1220 mm)	Plain, Vellum, Thin, recycled, Preprint, Bond, Color, Prepunched, Letterhead, Thick, High Quality, Index Tab Dividers, Custom 1 to 8	250 sheets (80 g/m ²)
Inserter Tray 2			

NOTE


- The number of sheets that can be held varies depending on your environment and paper type.
- You should not use inkjet printer paper or any paper with a special surface coating. (Such paper may cause paper jams or other faults.)

Load paper in the inserter tray. Here, the inserter tray 1 is used as an example.

1 Adjust the inserter tray size.

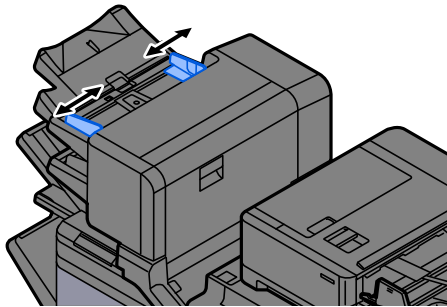

2 Load paper.

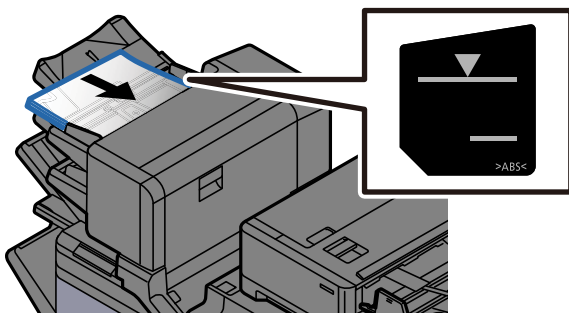

IMPORTANT

- Load the paper with the surface side facing up.
- Paper loading method when Booklet setting is set, refer to the following:
 - ➔ [Booklet \(page 6-43\)](#)
- After removing new paper from its packaging, fan the paper before loading it in the cassette.
 - ➔ [Precaution for Loading Paper \(page 3-3\)](#)
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator.

Upper: Plain paper

Lower: Thick paper

Specifying Paper Size and Media Type

The default paper size setting for cassette 1 to 4, for the multi purpose tray and for the optional side feeder is "A4" or "Letter", and the default media type setting is "Plain". To change the type of paper to be used in cassettes, specify the paper size and media type.

1 Display the screen.

[System Menu / Counter] key > [Device Settings] > [Paper Feeding] > Select cassette

2 Configure the settings.

Select the paper size and paper type.



Paper Size and Media Type for the Cassettes

Set the size of paper and Media type used in cassettes.

NOTE

[Cassette 5] are displayed when the following optional paper feeder is installed.

[Cassette 5]: Side Feeder (3,000-sheet) or Side Feeder (3,500-sheet)

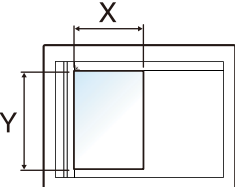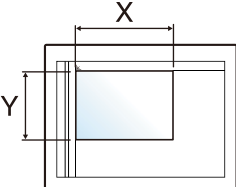Item	Description
Paper Size* ¹	<p>Select paper size. Paper size is automatically detected and selected when [Auto (Metric)] or [Auto (Inch)] is selected.</p> <p>Value: Auto (Metric), Auto (Inch), A3*², A4*², A4-R*², A5*², A5-R*², A6*², B4*², B5*², B5-R*², B6*², Folio*², 216×340mm, SRA3*², Ledger, Letter, Letter-R, Legal, Statement, 13"×19.2"*^{2,3}, 13"×19"*^{2,3}, 12×18", Executive, Oficio II, 8K, 16K, 16K-R, ISO B5, Envelope #10, Envelope #9*⁴, Envelope #6*⁴, Envelope Monarch*⁴, Envelope DL, Envelope C5, Envelope C4, Hagaki*², Oufukuhagaki, Kakugata 2*³, Youkei 4, Youkei 2, Nagagata 3, Younaga 3*⁵, Size Entry</p> <p>If you selected [Size Entry], enter the paper size.</p> <p>Value</p> <p>Cassette1</p> <p>Metric</p> <p>X: 148 to 457 mm (in 1 mm increments)</p> <p>Y: 93 to 330 mm (in 1 mm increments)</p> <p>Inch</p> <p>X: 5.83 to 18.00" (in 0.01" increments)</p> <p>Y: 3.63 to 13.00" (in 0.01" increments)</p> <p>Cassette 2</p> <p>Metric</p> <p>X: 148 to 488 mm (in 1mm increments)</p> <p>Y: 93 to 330 mm (in 1mm increments)</p> <p>Inch</p> <p>X: 5.83 to 19.21" (in 0.01" increments)</p> <p>Y: 3.63 to 13.00" (in 0.01" increments)</p> <p>Cassette 5</p> <p>Metric</p> <p>X: 148 to 487 mm (in 1mm increments)</p> <p>Y: 100 to 330 mm (in 1mm increments)</p> <p>Inch</p> <p>X: 5.83 to 19.20" (in 0.01" increments)</p> <p>Y: 3.93 to 13.00" (in 0.01" increments)</p> <p>X=Length, Y=Width</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>Vertical</p>  </div> <div style="text-align: center;"> <p>Horizontal</p>  </div> </div>

Item	Description
Media Type ^{*6}	Select the media type. Value: Plain (60 - 105 g/m ²), Rough, Vellum, Thin (52 to 105 g/m ²), Recycled, Preprinted ^{*7} , Bond ^{*8} , Hagaki (Cardstock) ^{*8} , Color, Prepunched ^{*7} , Letterhead ^{*7} , Envelope ^{*8} , Thick (60 - 220 g/m ²), High Quality, Coated ^{*4} , Custom 1 to 8, Media Catalog

*1 When Cassette 3 (4) or the optional Side Feeder (3,000-sheet) is used, paper size does not appear.

*2 Paper size automatically detected in the cassette.

*3 Not displayed in Cassette 1.

*4 Not displayed in the optional Side Feeder (3,500-sheet).

*5 Not displayed in Cassette 1 to 4 and the optional Side Feeder (3,000-sheet).

*6 To change to a media type other than "Plain".

➔ [Media Type Setting \(page 8-18\)](#)

When a paper weight that cannot be loaded in the cassette is set for a media type, that media type does not appear.



*7 To print on preprinted or prepunched paper or on letterhead.

➔ [Special Paper Action \(page 8-22\)](#)

*8 Not displayed in Cassette 3 (4), the optional Side Feeder (3,000-sheet) or Side Feeder (3,500-sheet).

MP Tray Settings

Specify the paper size and media type of paper to be used in the multi purpose tray.

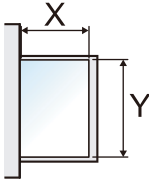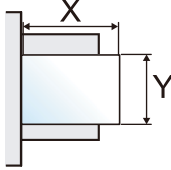Item	Description
Paper Size	<p>Select paper size. Paper size is automatically detected and selected when [Auto (Metric)] or [Auto (Inch)] is selected.</p> <p>Value: Auto (Metric), Auto (Inch), A3^{*1}, A4^{*1}, A4-R^{*1}, A5^{*1}, A5-R, A6^{*1}, B4^{*1}, B5^{*1}, B5-R^{*1}, B6^{*1}, Folio^{*1}, 216×340mm, SRA3^{*1}, Ledger, Letter, Letter-R, Legal, Statement, 13"×19.2", 13"×19"^{*1}, 12×18", Executive, Oficio II, 8K, 16K, 16K-R, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Envelope C4, Hagaki^{*1}, Oufukuhagaki, Kakugata 2, Youkei 4, Youkei 2, Younaga 3, Nagagata 3, Nagagata 4, 3R, Size Entry</p> <p>If you selected [Size Entry], enter the paper size.</p> <p>Value</p> <p>Metric</p> <p>X: 127 to 488 mm (in 1 mm increments) Y: 89 to 330 mm (in 1 mm increments)</p> <p>Inch</p> <p>X: 5.00 to 19.21" (in 0.01" increments) Y: 3.50 to 13.00" (in 0.01" increments)</p> <p>X=Length, Y=Width</p> <div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;"> <p>Vertical</p>  </div> <div style="text-align: center;"> <p>Horizontal</p>  </div> </div>
Media Type^{*2}	<p>Select the media type.</p> <p>Value: Plain, Transparency, Rough, Vellum, Thin, Labels, Recycled, Preprinted^{*3}, Bond, Cardstock, Color, Prepunched^{*3}, Letterhead^{*3}, Envelope, Thick, Coated, High Quality, Index Tab Dividers, Custom 1 to 8, Media Catalog</p>

*1 Paper size automatically detected in the cassette.

*2 To change to a media type other than "Plain".

➔ [Media Type Setting \(page 8-18\)](#)

*3 To print on preprinted or prepunched paper or on letterhead.

➔ [Special Paper Action \(page 8-22\)](#)

NOTE

If the optional FAX Kit is installed, the available media types for printing received faxes are as shown below.



Plain, Rough, Vellum, Thin, Labels, Recycled, Bond, Cardstock, Color, Envelope, Thick, Coated, High Quality and Custom1 to 8

Insertor Tray 1 (2)

Specify the paper size and media type of paper to be used in the multi purpose tray Insertor Tray 1 (2).

**NOTE**

[**Insertor Tray 1 (2)**] is displayed when the optional insertor is installed.

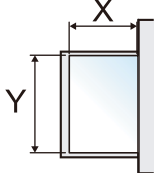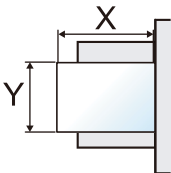Item	Description
Paper Size	<p>Select the paper size. When [Auto (A/B)] or [Auto (Inch)] is selected, the paper size is automatically detected and selected.</p> <p>Value: Auto (Metric), Auto (Inch), A3*¹, A4*¹, A4-R*¹, A5-R*¹, A6, B4*¹, B5*¹, B5-R*¹, Folio*¹, SRA3*¹, Ledger, Letter, Letter-R, Legal, Statement, 13"×19.2", 13"×19"*¹, 12×18", Executive, Oficio II, 8K, 16K, 16K-R, ISO B5, Size Entry</p> <p>If you selected [Size Entry], enter the paper size.</p> <p>Value</p> <p>Metric</p> <p>X: 210 to 487 mm (in 1 mm increments) Y: 140 to 330 mm (in 1 mm increments)</p> <p>Inch</p> <p>X: 8.27 to 19.20" (in 0.01" increments) Y: 5.50 to 13.00" (in 0.01" increments)</p> <p>X=Length, Y=Width</p> <div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;"> <p>Vertical</p>  </div> <div style="text-align: center;"> <p>Horizontal</p>  </div> </div>
Media Type ^{*2}	<p>Select the media type.</p> <p>Value: Plain, Vellum, Thin, Labels, Recycled, Preprinted*³, Bond, Color, Prepunched*³, Letterhead*³, Thick, High Quality, Index Tab Dividers, Custom 1 to 8, Media Catalog</p>

*1 Paper size that can be automatically detected by the insertor tray.

*2 To change to a media type other than "Plain".

➔ [Media Type Setting \(page 8-18\)](#)

*3 To print on preprinted or prepunched paper or on letterhead.

➔ [Special Paper Action \(page 8-22\)](#)

Using Media Catalog

About Media Catalog


Media Catalog is a paper database function that allows registration and management of various paper attributes such as paper type, weight, orientation, and size as a single profile. Media Catalog is a combination of “Media Group” and “Size Profile”; a Media Group contains attributes independent of size such as paper type and weight, whereas a Size Profile allows registration of different sizes and orientations of paper. Media Catalog therefore allows for efficient management of Media Group and Size Profiles in combination.

Additionally, multiple Media Group can be managed in a list as a “Media Group List”; this allows for intuitive calling and setting of the appropriate profile for the paper tray and print job. This simplifies configuration operations for different paper, allowing for optimal printing to match different paper sizes and types. Additionally, this allows for management of device adjustment for different paper as profiles, enabling more precise maintenance of print quality.

When using a paper profile registered in Media Catalog, set the paper, then from the operation panel or Command Center RX, link it to the paper tray.

NOTE

Media Catalog can be configured from the operation panel or Command Center RX irrespective of whether a Fiery Controller is installed. The paper source and Media Profile can also be linked from the Command Workstation in the Fiery Controller. For details, refer to the Fiery Controller operation guide.

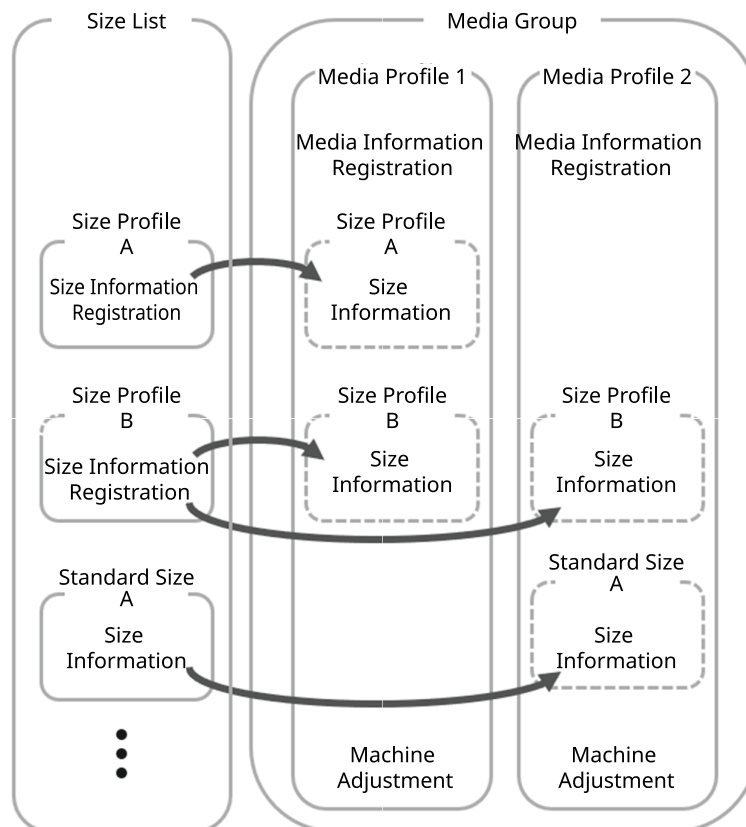

Link Media Catalog and Paper Source

Link from Operation Panel

From the operation panel, select the Media Profile registered in the Media Catalog, and link it to the paper source.

1 Display the screen.

[Home] key > [...] > [System Menu] > [Device Settings] > [Paper Feeding] > [Cassette 1 (to 5) Settings] > [Media Type] > [Media Catalog]

2 Select Media Group.

The Media Group List will be displayed, so select the Media Group to link to the paper source.

3 Select paper size from Size Profile List.

[Paper Size] > Size Profile List


Size Profile List will be displayed. Please select Size Profile to associate with the paper source.

Link from Command Center RX.


From the Command Center RX, select the Media Profile registered in the Media Catalog, and link it to the paper source.

1 Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name. Click in the following order to check the machine's IP address and the host name. [Device Information] in the home screen > [Identification/Wired Network]
- 3 Log in with administrator privileges.

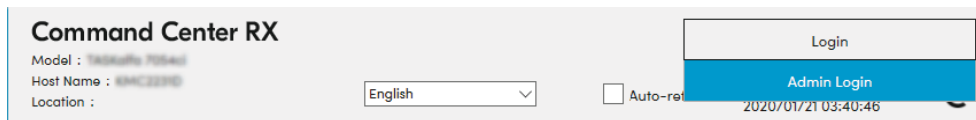

- 4 From the [Device Settings] menu, click [Paper/Feed/Output].

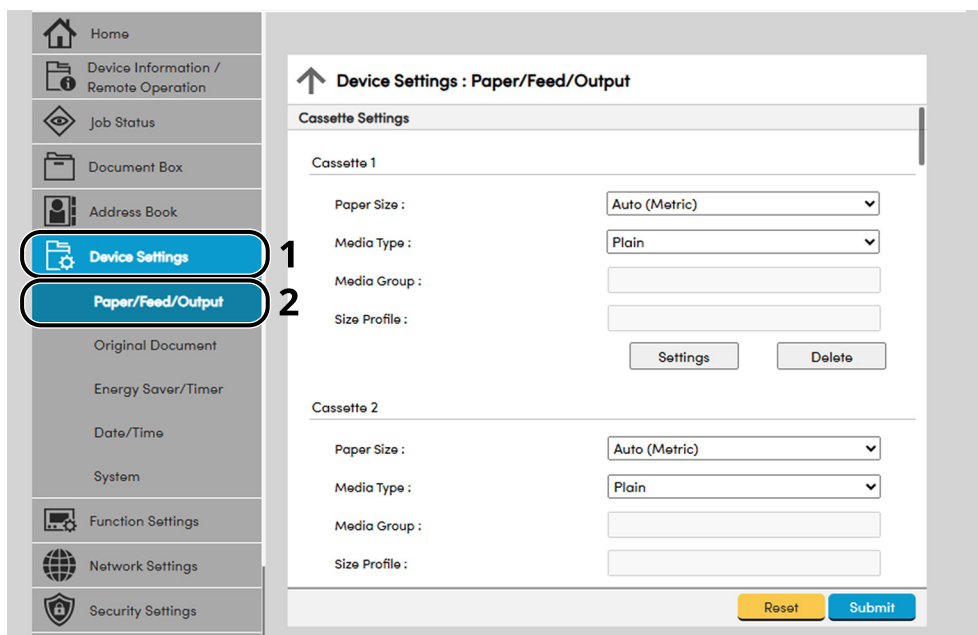

2 Configure the settings.

- 1 Click [**Settings**] in the “Media Group” and “Size Profile” for the desired paper source (cassette).
- 2 The Media Group List will be displayed, so select the Media Profile to link to the paper source.

Add/Edit Media Profile

➔ [Media Catalog \(page 8-18\)](#)

Add/Edit Size Profile

➔ [Size Profile \(page 8-20\)](#)

Correct Paper Skewing

To feed paper correctly, it is necessary to adjust paper deflection (registration deflection) at the registration roller section. Adjust when the top edge of the paper is folded (skewed feed) or wrinkled.

✔ IMPORTANT

- If the registration deflection is too little, the paper will be fed skewed. If the registration deflection is too great, the output paper will have creases.
- If deflection is corrected but the paper is still fed skewed, confirm that the paper is set correctly. If this still does not resolve the problem, this indicates that the optional paper feeder may not be installed correctly. Please contact your sales or service representative.

💡 NOTE

When adjusting paper skewed feed, load paper that is A4 /Letter size or larger into the paper source to adjust.

1 Display the screen.

[Home] key > [...] > [System Menu] > [Device Settings] > [Paper Feeding] > [Cassette 1 (to 4) Settings]


💡 NOTE

[Chart Printing] can be executed when Media Catalog is set as the paper type.

2 Print the chart.


Select [Print Chart].

This prints a test chart.

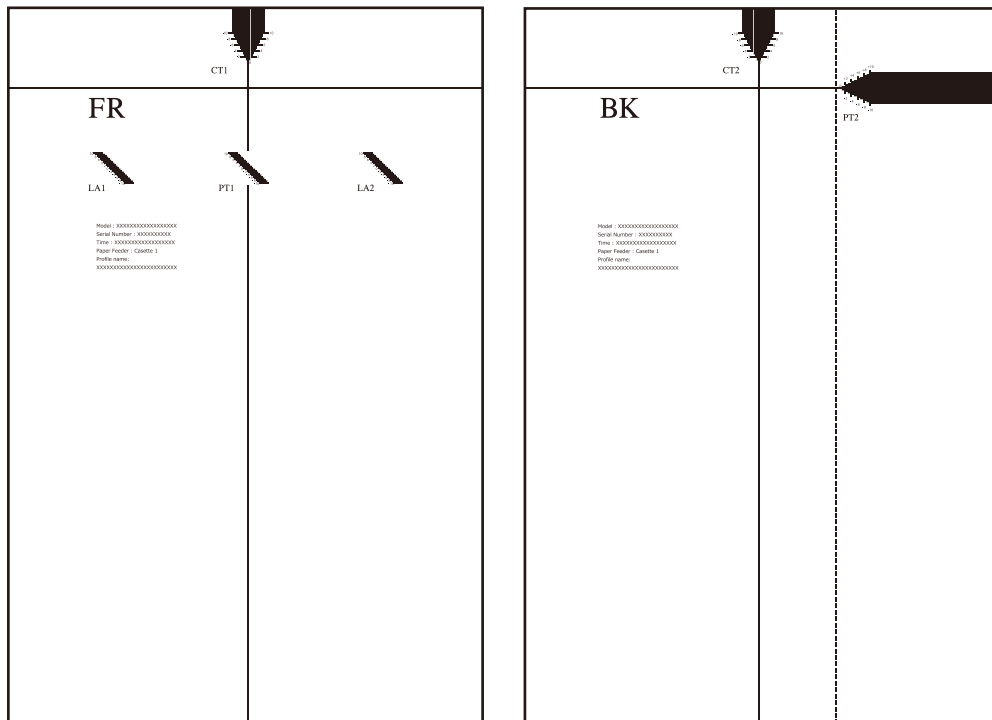


3 Measure correction value for paper skew.

- 1 Place the side "FR" on the chart upward.

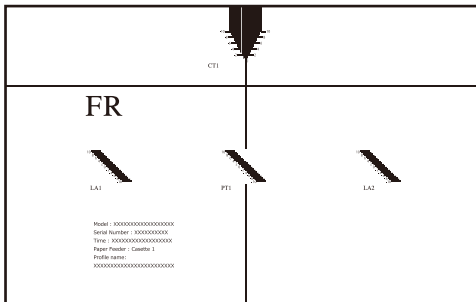


- 2 Fold the chart into a valley fold along the horizontal line at the top of the chart.

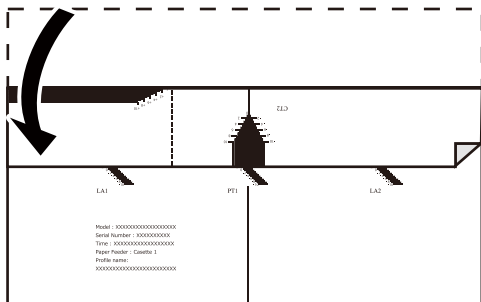

- 3 From the difference between the LA1 and LA2 scales, find the skew correction value.

In the following example, LA1 can be read as "0" and LA2 as "+2" from the chart, giving a correction value of 2 from the difference between LA1 and LA2.

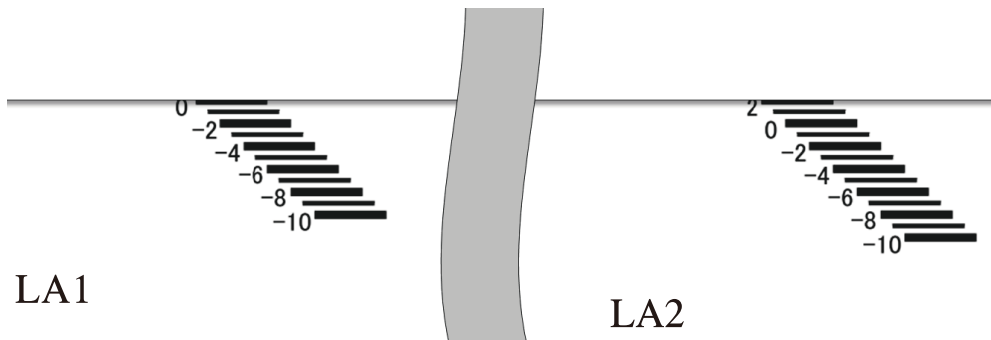

4 Enter the skew correction value.



- 1 [Home] key > [...] > [System Menu] > [Device Settings] > [Paper Feeding] > [Cassette 1 (to 4) Settings] > [Paper Size] > "Size Profile"
- 2 Select paper size > [🗨️] (information icon) > "Size Profile List"
- 3 In [Skew Correct Amount], specify the skew correction value obtained in Step 3-3 using [+] and [-].
- 4 [OK] > [Close]

Adjust the Print Position to Correct Image Misalignment

If the position of the printed image at the top edge of the output paper is misaligned, or if the start positions of printing on the front or back pages are misaligned during duplex printing, the timing of the start position of printing in the direction perpendicular to the paper feed direction can be adjusted. This is referred to as “Start Position Adjustment”.

If the centre position of the printed image is misaligned with the paper, the centre of the image can be aligned with the paper by moving the printed image horizontally in the direction of paper transport. This is referred to as “Centering Adjustment”.

NOTE

When correcting image misalignment, load paper that is A4 /Letter  size or larger into the paper source to adjust.

1 Display the screen.

[Home] key > [...] > [System Menu] > [Device Settings] > [Paper Feeding] > [Cassette 1 (to 4) Settings]

NOTE

[Chart Printing] can be executed when Media Catalog is set as the paper type.


2 Print the chart.

Select [Print Chart].


This prints a test chart.

3 Measure correction value for front side.


- 1 Place the side “FR” on the chart upward.

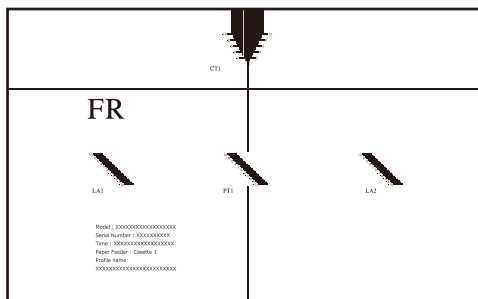


- 2 Fold the chart into a valley fold along the horizontal line at the top of the chart.

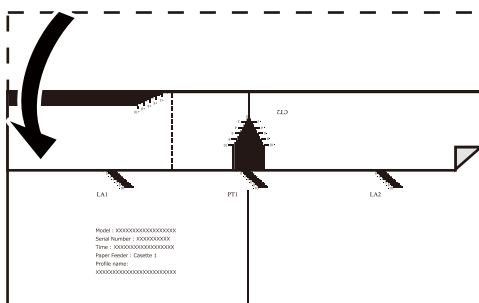


- 3 Read the PT1 scale, and find the value where the top edge of the paper and the top edge timing align. In the following example, the line above -4 overlaps with the top edge of the paper, so "-3" is the correction value.

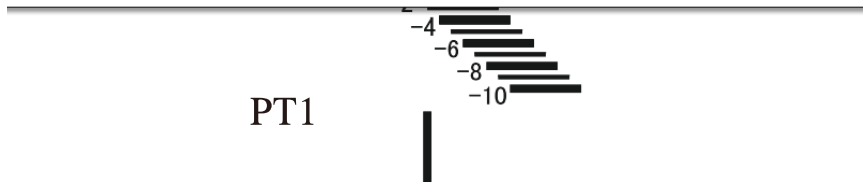

- 4 Align the right and left edges of the test chart and fold into a mountain fold.

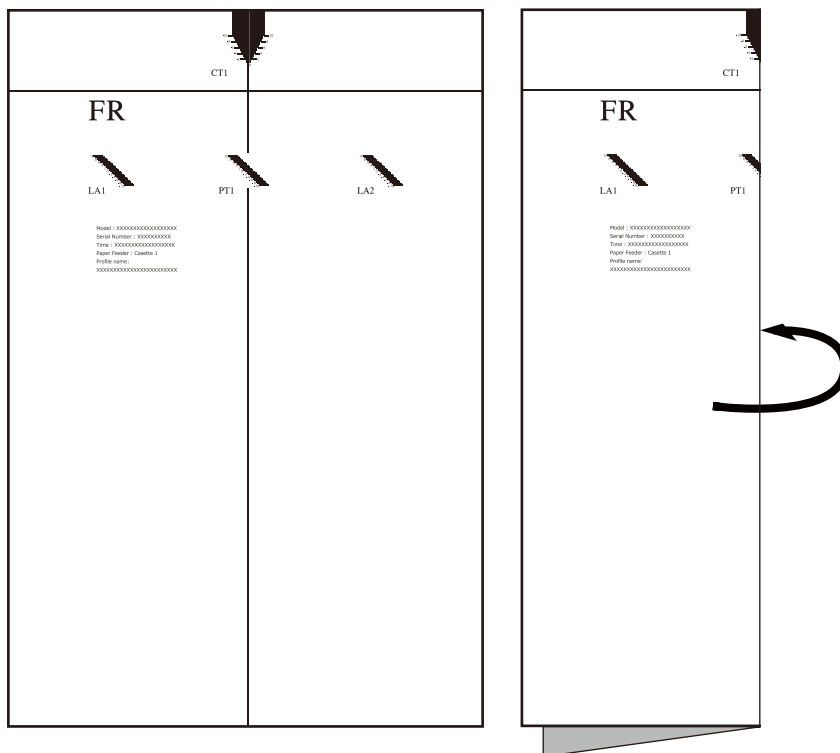

- 5 Lay out the chart and find the value where the fold line meets scale CT1. If the dotted red line is the fold line in the centre of the paper, the correction value is "-3".

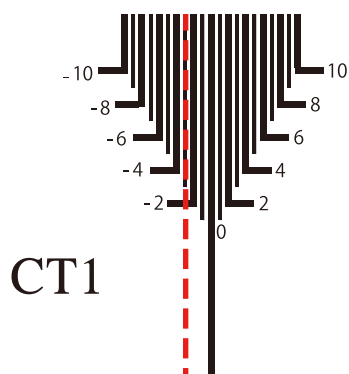


4 Enter the correction value.


- 1 [Home] key > [...] > [System Menu] > [Device Settings] > [Paper Feeding] > [Cassette 1 (to 4) Settings] > [Paper Size] > "Size Profile"
- 2 Select paper size > [ⓘ] (information icon) > "Size Profile List"
- 3 In [Start Position] on the front side, specify the skew correction value obtained in Step 3-3 using [+] and [-].
Select the entry field, and use the number pad to enter the correction value.
- 4 In [Centering] on the front side, specify the skew correction value obtained in Step 3-5 using [+] and [-].
Select the entry field, and use the number pad to enter the correction value.
- 5 [OK] > [Close]

5 Measure correction value for back side.


- 1 Place the side "BK" on the chart upward.

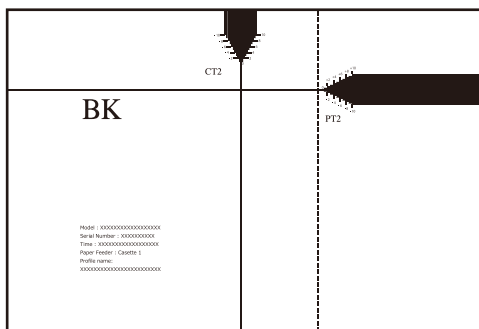


- 2 Fold the chart into a mountain fold along the vertical dotted line and turn the chart over.

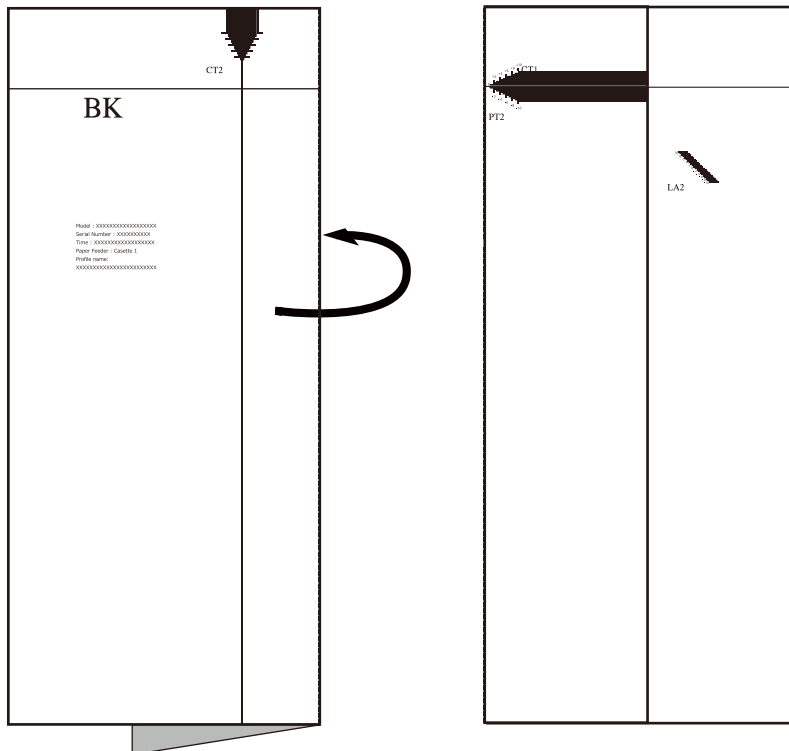


- 3 Check scale PT2, and find the values where the horizontal line on the "FR" side matches. In the following example, "-1" is the correction value.

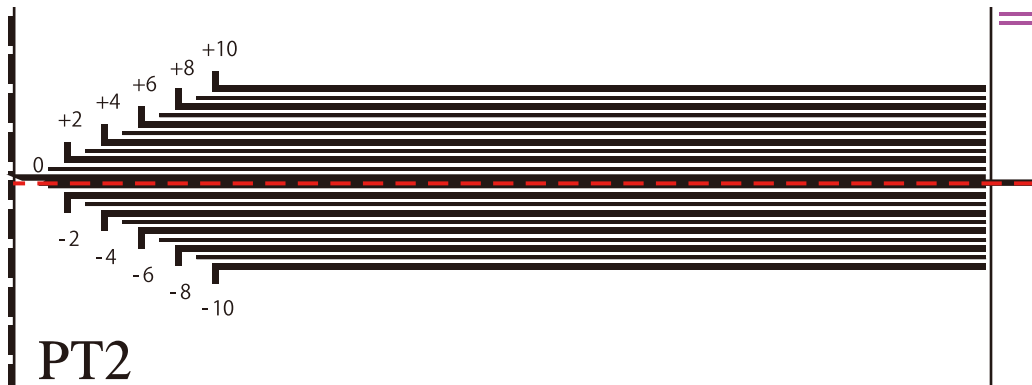

- 4 Align the right and left edges of the test chart and fold into a mountain fold.

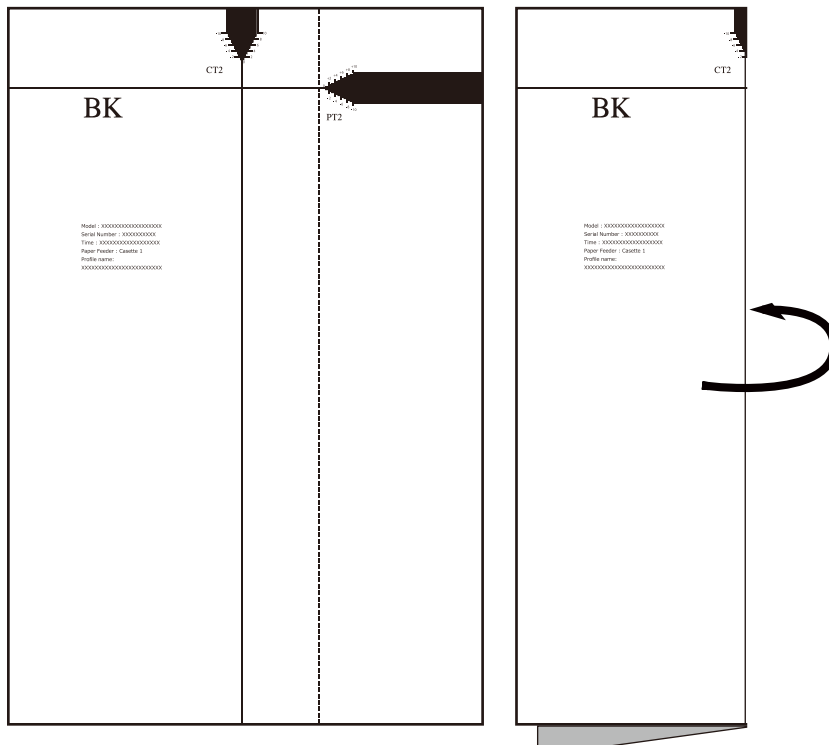

- 5 Lay out the chart and find the value where the fold line meets scale CT2. If the dotted red line is the fold line in the centre of the paper, the correction value is "-1".

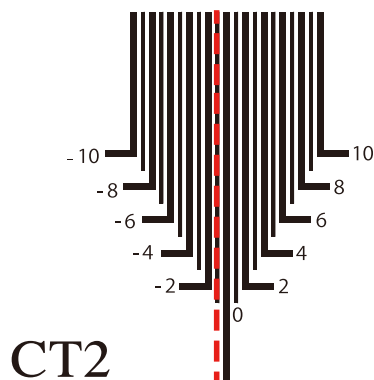


6 Enter the correction value.

- 1 [Home] key > [...] > [System Menu] > [Device Settings] > [Paper Feeding] > [Cassette 1 (to 4) Settings] > [Paper Size] > "Size Profile"
- 2 Select paper size > [ⓘ] (information icon) > "Size Profile List"
- 3 In [Start Position] on the front side, specify the skew correction value obtained in Step 5-3 using [+] and [-].
Select the entry field, and use the number pad to enter the correction value.
- 4 In [Centering] on the front side, specify the skew correction value obtained in Step 5-5 using [+] and [-].
Select the entry field, and use the number pad to enter the correction value.
- 5 [OK] > [Close]

Precautions for Outputting Paper

Right Tray

When using the right tray for output, open the right tray as shown below.

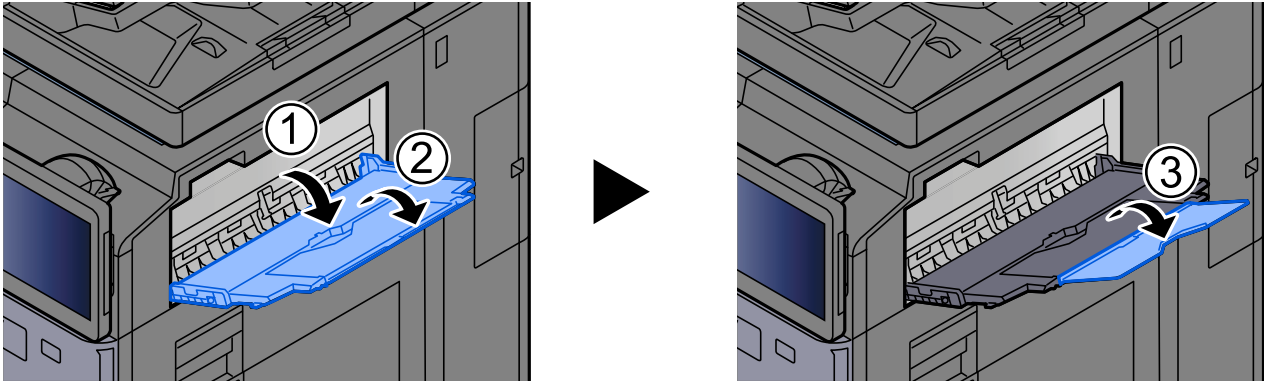

NOTE


- The tray confirmation screen will be displayed if you attempt to output paper with the right tray closed.
- Output tray capacity is as follows.
77 sheets (80 g/m²), 70 sheets (64 g/m²)

Finisher Tray B


When using the paper folding function to output to finisher tray A, load the paper output retainer as shown in the figure.

✔ **IMPORTANT**


If sheets that are not folded are discharged into Tray B and do not stack properly, remove the paper stopper.

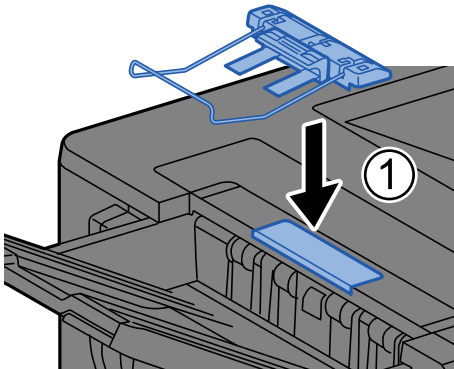

Basic set position

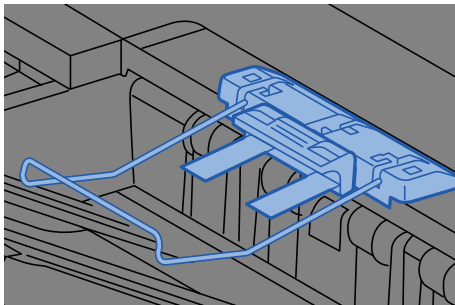


- When the output order becomes irregular
- When the tray is detected as full despite a small amount of output

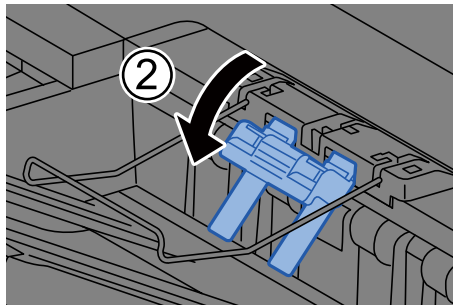

Folding Unit (For Finisher)


In case of ejecting number of sets exceeding the storage limit in the folding unit, store them in the sub tray.

 **NOTE**


Refer to the following for maximum number for storage of folding unit.

➔ [Folding Unit \(For Finisher\) \(page 11-29\)](#)

In case of ejecting to the folding tray

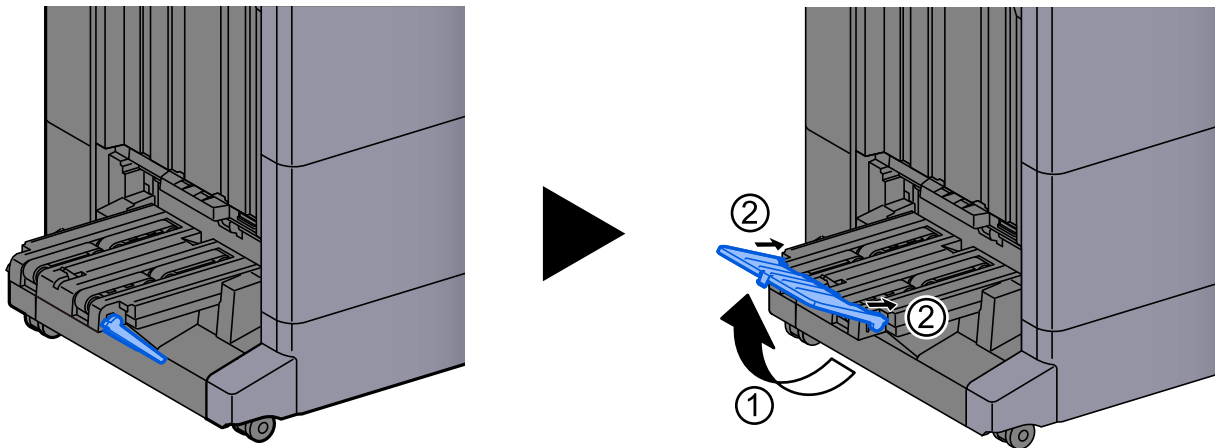

In case of ejecting more than the limit of the folding tray

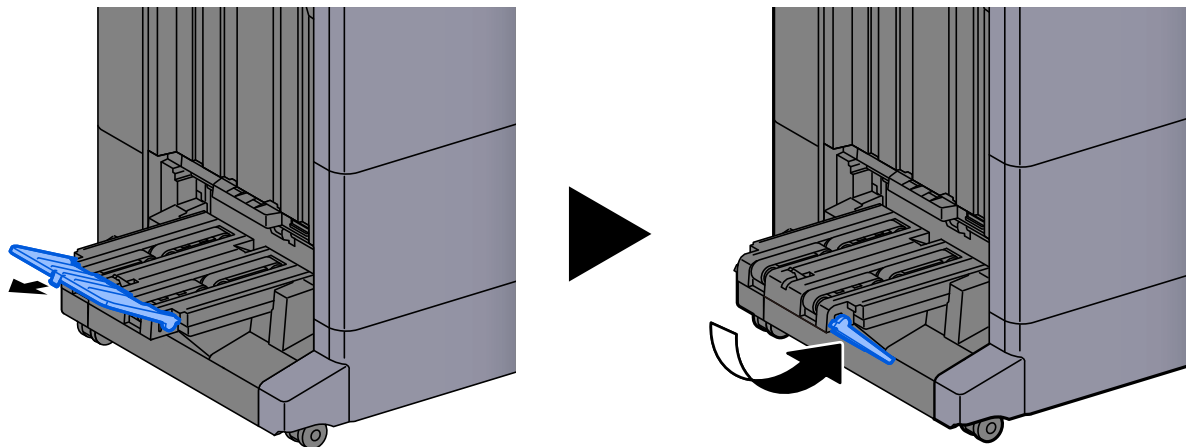

Preparation for Sending a Document to a Shared Folder in a PC

Check the information that needs to be set on the machine and create a folder to receive the document on your computer. Screens of Windows are used in the following explanation. The operation procedure and names of items may differ according to the OS type and version.



NOTE

Log on to Windows with administrator privileges.

Making a Note of the Device Name and Full Device Name

Check the name of the device name and full device name.

1 Display the screen.

Select the Windows [Start] button, [All apps], [Settings], [System], [About], and [Advanced system settings].

2 Check the device name.



Check the device name and full device name.

Screen example: Device name: PC001
Full device name: PC001.abcdnet.com

After checking the device name, click the  [Close] button to close the "System" screen.

Making a Note of the User Name and Domain Name

Check the domain name and user name for logging onto Windows.


1 Display the screen.

Select the [Start] button, [All apps], [Windows Tools], and [Command Prompts].

The Command Prompt window appears.

2 Check the domain name and user name.

At the Command Prompt, enter "net config workstation" and then press [Enter].

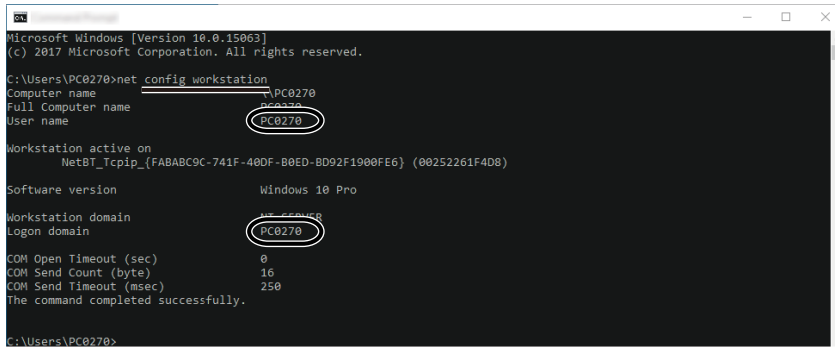

```
Microsoft Windows [Version 10.0.15063]
(c) 2017 Microsoft Corporation. All rights reserved.

C:\Users\PC0270>net config workstation
Computer name                PC0270
Full Computer name          PC0270
User name                    PC0270

Workstation active on
NetBT_Tcpip_{FABABC9C-741F-40DF-B0E0-BD92F1900FE6} (00252261F4D8)

Software version            Windows 10 Pro
Workstation domain          PC0270
Logon domain                 PC0270

COM Open Timeout (sec)      0
COM Send Count (byte)       16
COM Send Timeout (msec)     250
The command completed successfully.

C:\Users\PC0270>
```

Check the user name and domain name.

Screen example: User Name: PC0270
Domain Name: PC0270


Creating a Shared Folder, Making a Note of a Shared Folder

Create a shared folder to receive the document in the destination computer.

NOTE

If there is a workgroup in System Properties, configure the settings below to limit folder access to a specific user or group.

- 1 Open up a window in File Explorer and select [...], and then [**Options**].
- 2

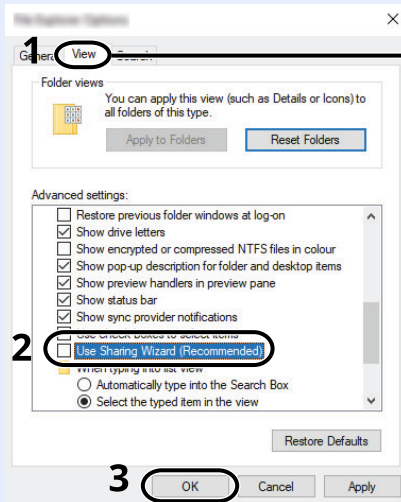


Make sure that the [View] tab is selected.

Remove the checkmark from [**Use Sharing Wizard (Recommended)**] in "Advanced settings".

1 Create a folder.


Create a folder on your computer.

For example, create a folder with the name "scannerdata" on the desktop.

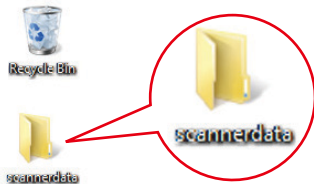


2 Configure permission settings.

- 1 Right-click the "scannerdata" folder, select [**Property**], and click [**Sharing**] and [**Advanced Sharing**].

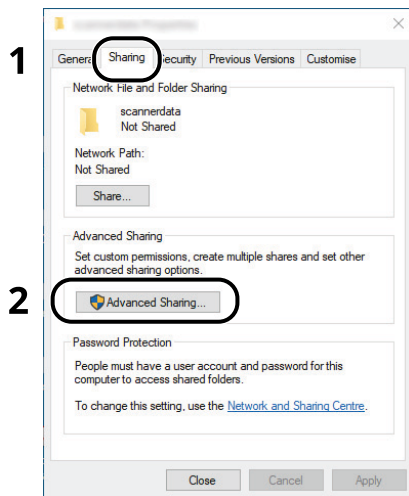


- 2 Select the [**Share this folder**] checkbox and click the [**Permissions**] button.

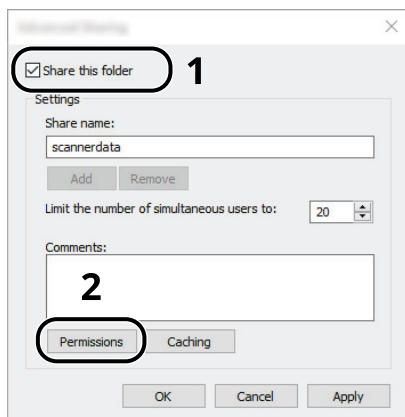


- 3 Make a note of the [**Share name**].

- 4 Click the [**Add**] button.

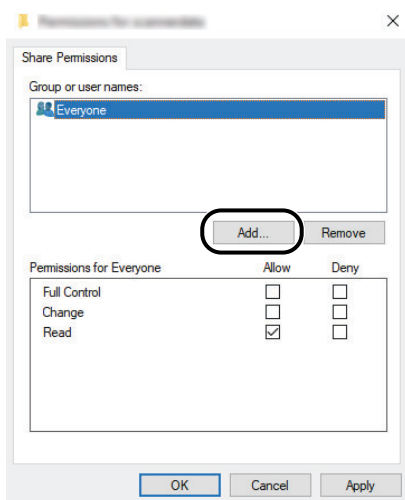

5 Specify the location.

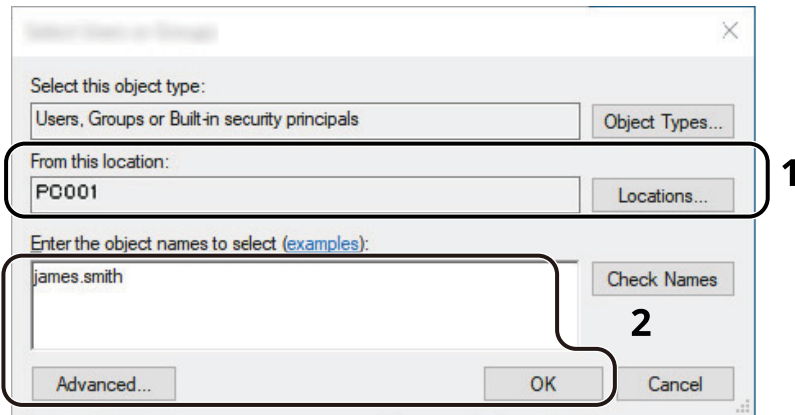


- 1 If the device name that you made a note of on [page 3-44](#) is the same as the domain name:
If the device name is not shown in "From this location", click the [**Locations**] button, select the device name, and click the [**OK**] button.
Example: PC001
If the device name that you made a note of on [page 3-44](#) is not the same as the domain name:
If the text after the first dot (.) in the full device name that you made a note of does not appear in "From this location", click the [**Locations**] button, select the text after the dot (.), and click the [**OK**] button.
Example: abcdnet.com

➔ [Making a Note of the User Name and Domain Name \(page 3-45\)](#)

- 2 Enter the user name that you made a note of on page in the text box, and click the [**OK**] button. Also the user name can be made by clicking the [**Advanced**] button and selecting a user.

6 Set the access permission for the user selected.

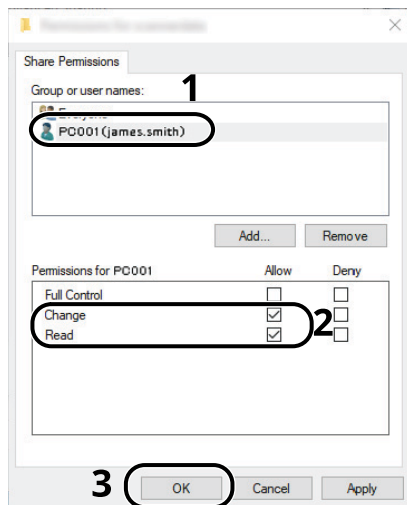


- 1 Select the user you entered.
- 2 Select the [**Allow**] checkbox of the "Change" and "Read" permissions
- 3 Press [**OK**].

**NOTE**

"Everyone" gives sharing permission to everyone on the network. To strengthen security, it is recommended that you select "Everyone" and remove the "Read" [**Allow**] checkmark.

- 7 Click the [**OK**] button in the "Advanced Sharing" screen to close the screen.

8 Check the details set in the **[Security]** tab.

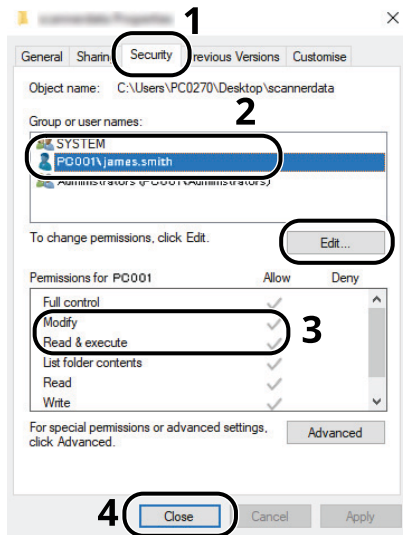

- 1 Select the **[Security]** tab.
- 2 Select the user you entered.
If the user does not appear on "Group or user names", click **[Edit]** button to add user in a similar way of "configuration of permission settings".
- 3 Make sure that checkmarks appear on **[Allow]** checkbox for the "Modify" and "Read & execute" permissions.
- 4 Click the **[Close]** button.

Configuring Windows Firewall

Permit sharing of files and printers and set the port used for SMB transmission.




NOTE

Log on to Windows with administrator privileges.

1 Check file and printer sharing.


- 1 Select the Windows [Start] button, [All apps], [Windows Tools], [Control Panel], [System and Security], and [Allow an app through Windows Firewall].

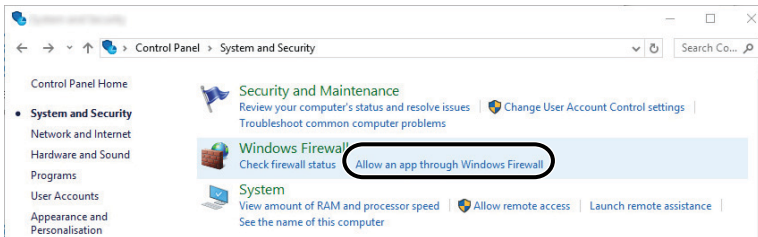

NOTE


If the User Account Control dialog box appears, click the [Continue] button.

- 2 Select the [File and Printer Sharing] checkbox.

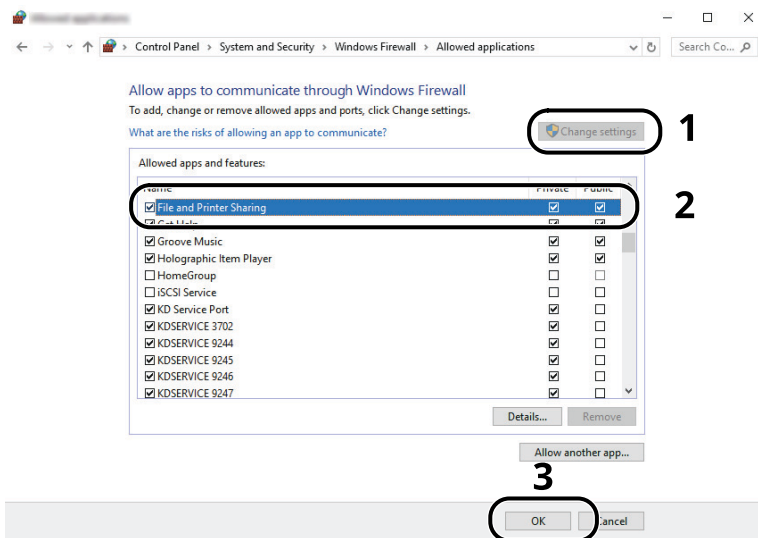


2 Add a port.


- 1 Click [Start] button on the Windows and then select [Windows System], [Control Panel], [System and Security], and [Check firewall status].

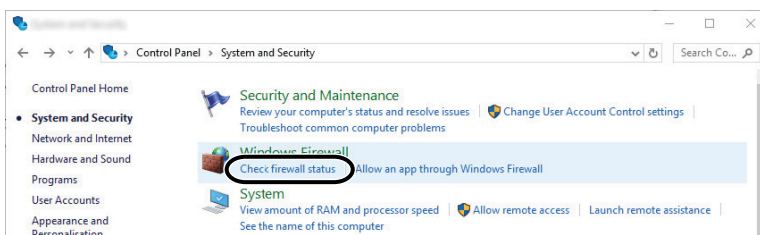


2 Select **[Advanced settings]**.

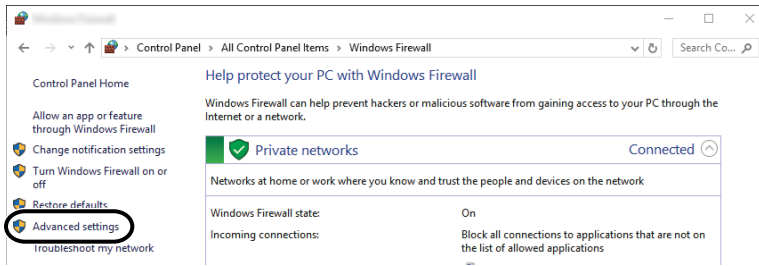


3 Select **[Inbound Rules]**.

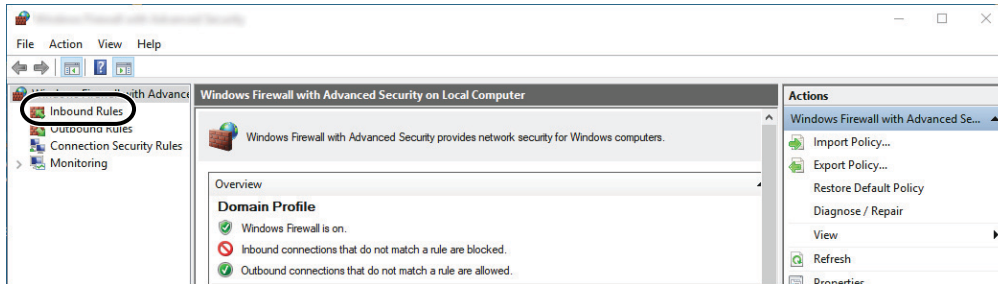


4 Select **[New Rules]**.

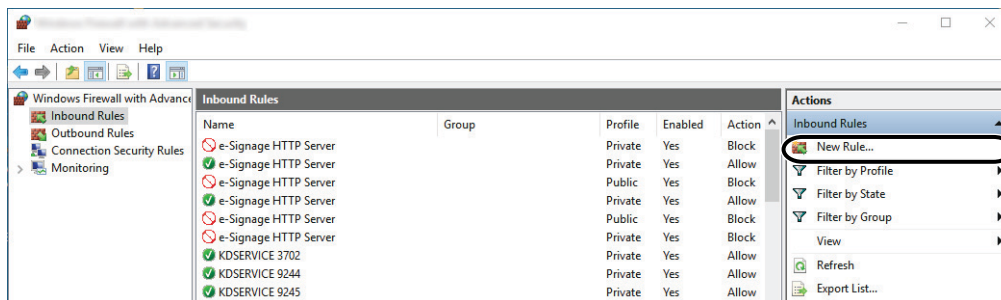


5 Select **[Port]**.

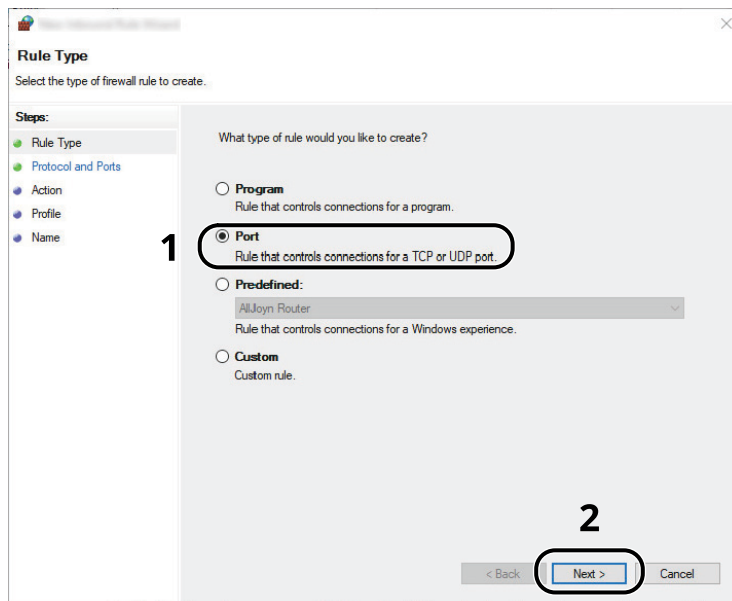


- 6 Select **[TCP]** as the port to apply the rule to. Then select **[Specific local ports]** and enter "445" then click **[Next]**.

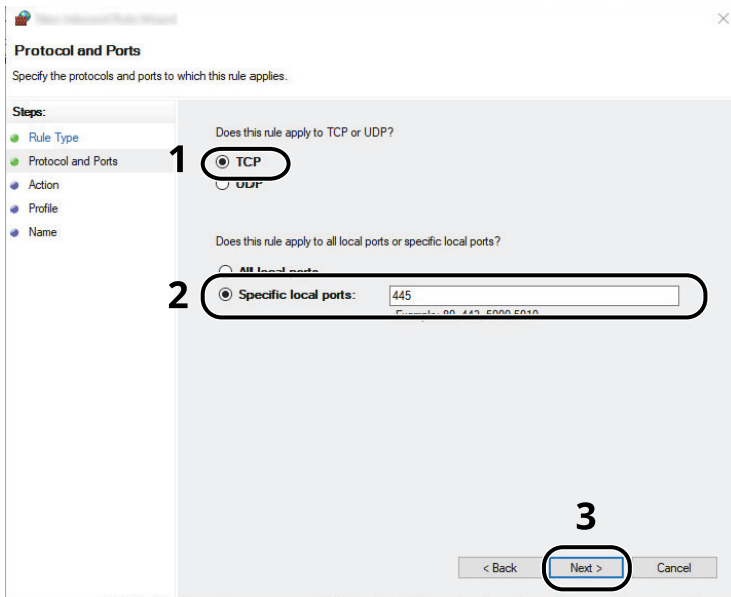


- 7 Select **[Allow the connection]** and click the **[Next]** button.

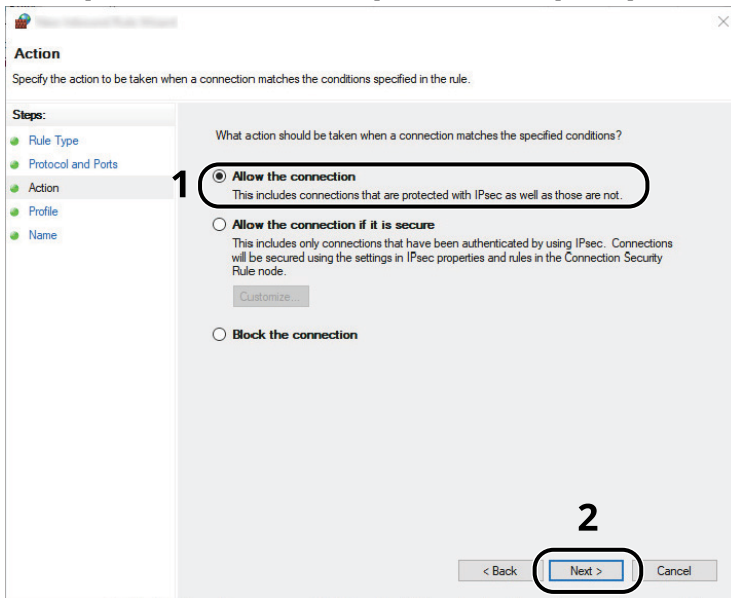

- 8 Make sure all checkboxes are selected and click the **[Next]** button.

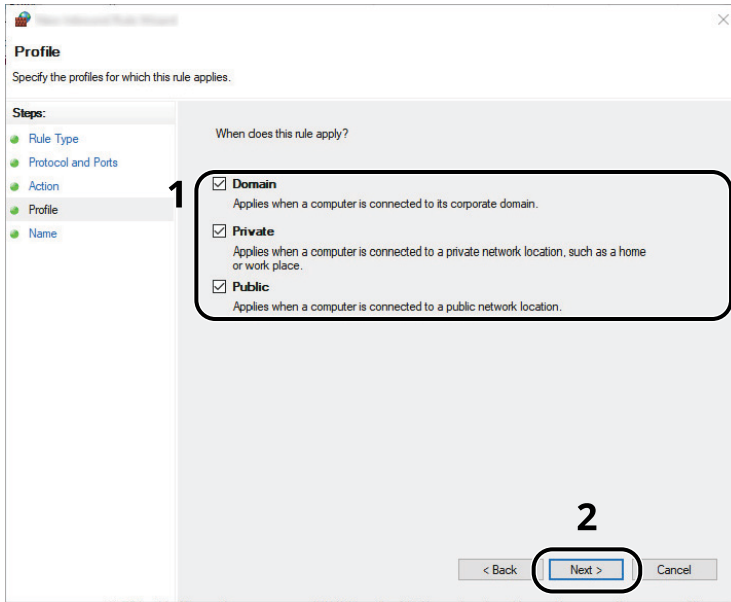

- 9 Enter "Scan to SMB" in "Name" and click **[Finish]**.

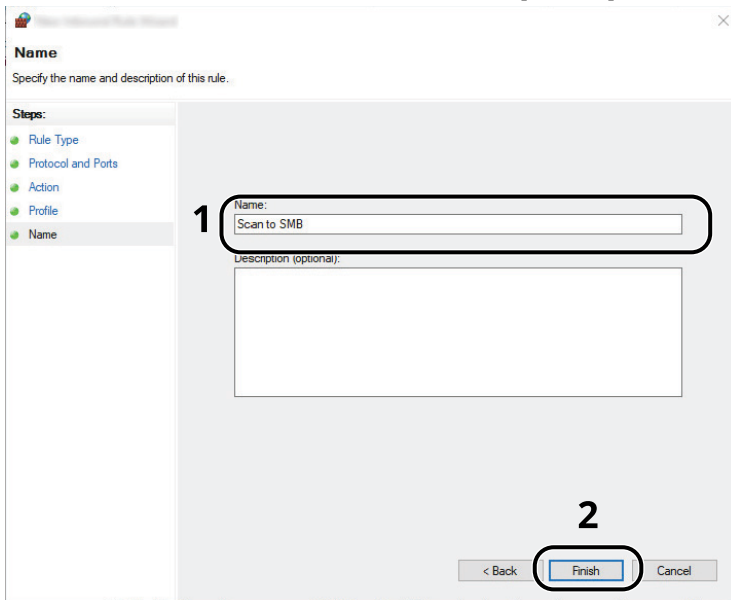

Scan to Folder Setup Tool for SMB

An environment for sending a document to Windows can be set up smoothly by using the Scan to Folder Setup Tool for SMB downloaded from the user support page (<https://kyocera.info/support>).

By operating the Scan to Folder Setup Tool for SMB, you can configure the following settings.

- Create a shared folder in a PC for receiving documents

A new folder can be easily created on the desktop. Also, the newly created folder is automatically set as a shared folder.

- Set the created shared folder as an address on this machine

 
Information about such things as the name of the computer and shared names for the shared folder is easily recorded in the address book of this machine with a sequence of actions. Can also be registered on the One Touch Keys.

NOTE


- Log in to Windows with administrator privileges.
- If user login administration is enabled, log in with administrator privileges or as a user with execution authority.

1 Download a software from the user support page.


- 1 Launch a web browser.
- 2 Enter "<https://kyocera.info/support>" to the browser's address bar or location bar.




- 3 Enter and search the product name, and select this product from the candidate list.

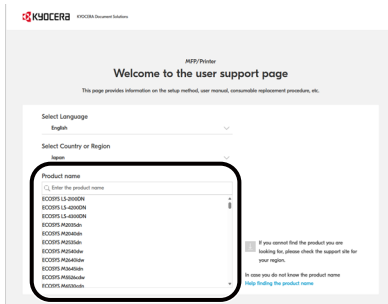

- 4 Change the selected operating system and its language setting as needed.

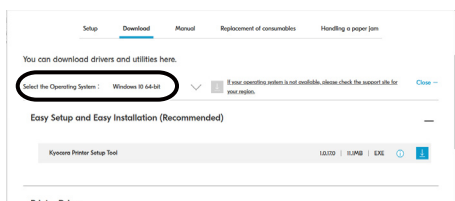


5 [Download] tab > "Utility" [Scan to Folder Setup Tool for SMB] 

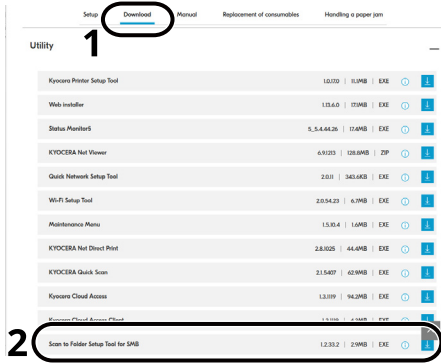

6 Read the license agreement.

7 Click **[Agree to contract and download]** if there is no problem.


Scan to Folder Setup Tool for SMB will be downloaded.

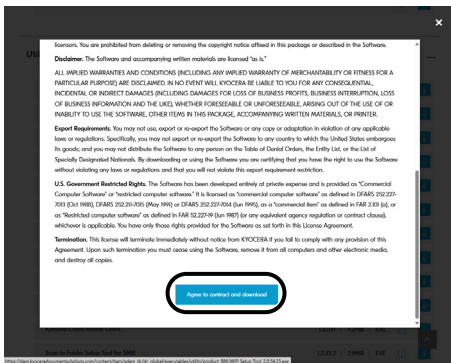

8 Double click to launch the downloaded installer.

2 Configure the settings.

- 1 Select the device to use and click **[Next]**.

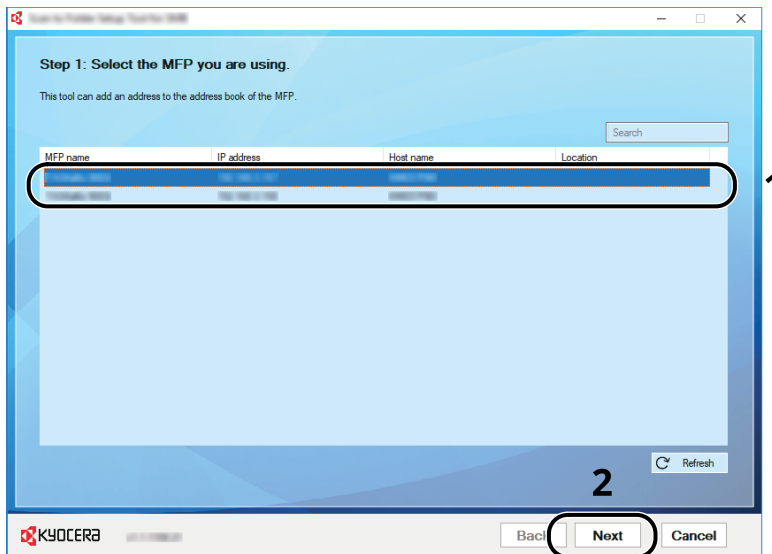


NOTE

- The machine cannot be detected unless it is on. If the computer fails to detect the machine, verify that it is connected to the computer via a network cable and that it is turned on and click **[C]** (Refresh).
- If user administration is valid on this machine, the user authentication screen appears. Log in with administrator privileges or as a user with execution authority.

The address book of the device appears.


- 2 Select **[Add]**.

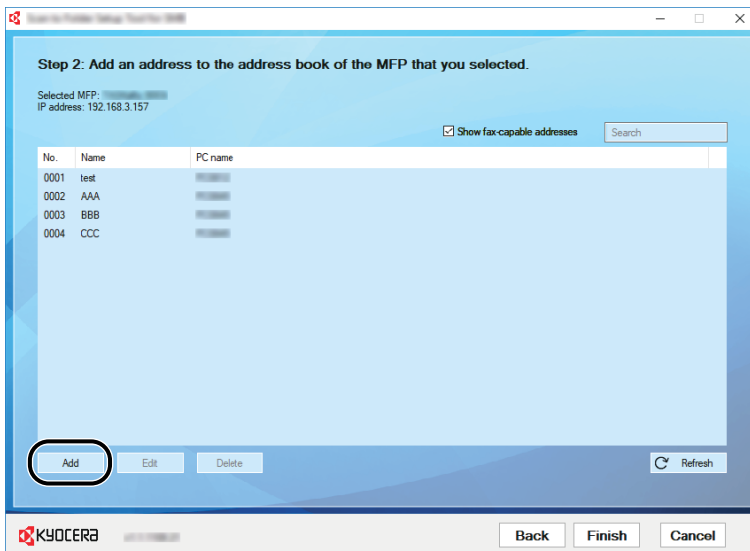

NOTE

- Clicking on **[Edit]** after selecting the registered address allows you to change the content of the registration.
- Unchecking the **[Show fax-capable addresses]** check-box will hide the address containing the fax.

3 Create a new folder.

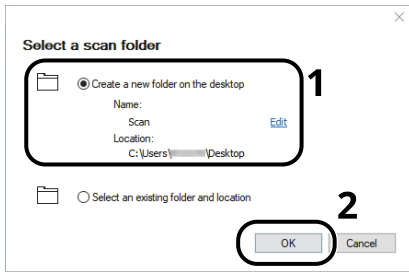


Select "Create a new folder on the desktop" and click [OK] to create a new folder on the desktop. (The default folder name is "Scan".)



NOTE

- Click [Edit] to change the desktop folder name.
- Selecting [Select an existing folder and address] allows you to select an existing folder that is already set as a shared folder on the PC.

4 Enter the information requested to register the address.

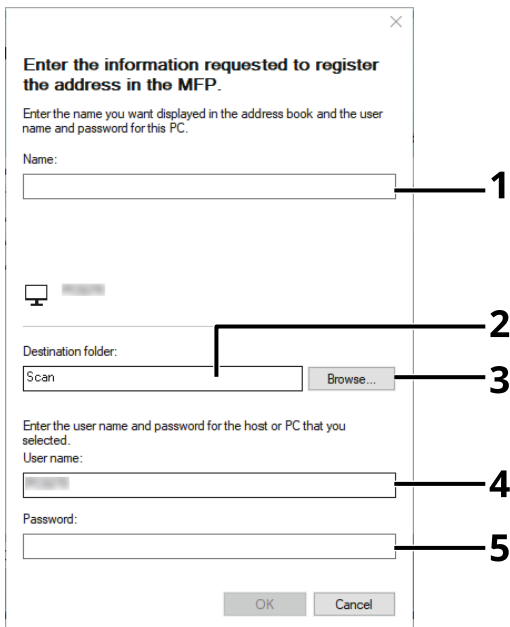


- 1 Enter the name for display in the address book.
- 2 Display the folder name and path to the shared folder.
- 3 Shared folders can be selected from a PC on the network.
- 4 Display the user name of the selected PC.
- 5 Enter the password corresponds to the log in user name of the selected PC.


5 Click [OK] to register the address to the address book.

6 Click [Close].

- 7 To register the registered address in a One Touch key, click [**Yes**].

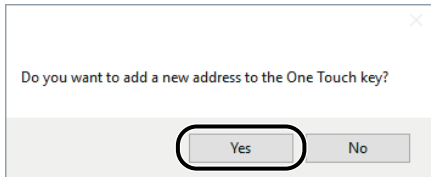

- 8 Select a One Touch Key with no registered destination, and click [**Submit**].

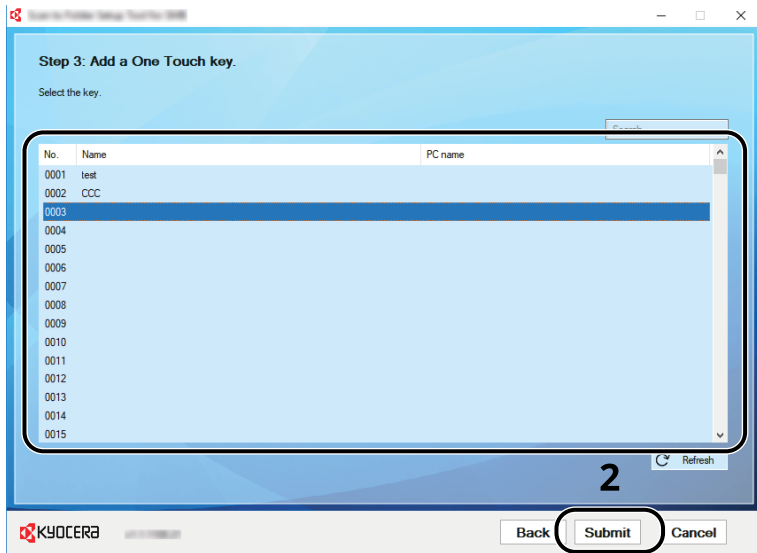

- 9 Click [**Close**].
- 10 Click [**Finish**] to exit the Scan to Folder Setup Tool.

Registering Destinations in the Address Book

Save frequently used destinations to the Address Book or One Touch Keys. The saved destinations can be changed. The destinations are available for Send as E-mail, Send to Folder, and Fax Transmission (Only on products with the fax function installed).

NOTE

- Registering and editing of the Address Book can also be done in Command Center RX.
 - ➔ [Registering Destinations \(page 2-77\)](#)
- Editing of the Address Book and One Touch Keys can be restricted to administrators.
 - ➔ [Edit Restriction \(page 8-44\)](#)

Adding a Destination (Common Address Book)

Add a new destination to the Address Book. There are two registering methods, contacts and groups. When adding a group, enter the group name and select group members from the Address Book.

NOTE

If registering and editing of the Address Book is restricted to administrators, you can edit the Address Book by logging in with administrator privileges.

- ➔ [Edit Restriction \(page 8-44\)](#)
- ➔ [Command Center RX User Guide](#)

Registering an Address (E-mail Address)

The registering method of an E-mail address to Address Book is as follows.

1 Display the screen.

[Home] key > [...] > [System Menu] > [Function Settings] > [Address Book] > [Add/Edit (Common Address Book)] > [Add] > [Contact]

2 Add the name.

- 1 Enter the destination name to be displayed on the Address Book.

NOTE

For details on entering characters, refer to the following:

- ➔ [Character Entry Method \(page 11-9\)](#)


- 2 Enter an address number.

To have the number assigned automatically, select [**Auto**] (0000).

NOTE

- Address Number is an ID for a destination. You can select any available number out of 2,000 numbers for contacts and 500 numbers for groups.
- If you specify an address number that is already in use, an error message appears when you select [**Save**] and the number cannot be registered. If you set [**Auto**] (0000) as the address number, the address is registered under the lowest available number.

3 Add the address.

- 1 Select .
- 2 Select the entry field, and enter the E-mail address.



NOTE

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 11-9\)](#)

4 Check if the destination entry is correct > [Register]

The destination is added to the Address Book.

To add a new address to the One Touch Key, select [**Register**] and follow the on-screen instructions to enter the necessary information.



NOTE

Refer to the following for registering the One Touch Key.

➔ [Adding a Destination on One Touch Key \(page 3-77\)](#)

Registering an Address (Folder (SMB) Address)

The registering method of an E-mail address to Address Book is as follows.

1 Display the screen.

[Home] key > [...] > [System Menu] > [Function Settings] > [Address Book] > [Add/Edit (Common Address Book)] > [Add] > [Contact]

2 Add the name.

- 1 Enter the destination name to be displayed on the Address Book.



NOTE

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 11-9\)](#)

- 2 Enter an address number.

To have the number assigned automatically, select [**Auto**] (0000).



NOTE

- Address Number is an ID for a destination. You can select any available number out of 200 numbers for contacts and 50 numbers for groups.
- If you specify an address number that is already in use, an error message appears when you select [**Save**] and the number cannot be registered. If you set [**Auto**] (0000) as the address number, the address is registered under the lowest available number.

3 Add the address.

- 1 Select .

- 2 To directly specify the SMB folder, enter the "Host name", "Port", "Folder Path", "Login User Name", and "Login Password".

**NOTE**

For the device name, share name, domain name, and user name, enter the information that you noted when you created the shared folder. For details on creating shared folders, refer to the following:

➔ [Preparation for Sending a Document to a Shared Folder in a PC \(page 3-44\)](#)

You can search for a folder on a PC on the network. Select [**Search Folder from Network**] or [**Search Folder by Host Name**]. Select the folder from the Search Results list.

**NOTE**

- If you selected [**Search Folder from Network**], you can search all PCs on the network for a destination.
- If you selected [**Search Folder by Host Name**], you can enter the " Domain/Workgroup" , and " Host Name" to search PCs on the network for the destination.
- A maximum of 500 addresses can be displayed. Select the host name (PC name) that you want to specify in the screen that appears, and select [**OK**]. The login user name and login password entry screen appears.
- After you enter the login user name and login password name of the destination PC, the shared folders appear. Select the folder that you want to specify and select [**OK**]. The address of the selected shared folder is set.

The table below explains the items to be entered.

Item	Description
Host Name *1	Device name
Port	Port number If the port number is not specified, the default port number is 445.
Folder Path	Share name. For example: scannerdata If saving in a folder in the shared folder: share name \ folder name in shared folder
Login User Name *2	<ul style="list-style-type: none"> • If the device name and domain name are the same User Name For example: james.smith. • If the device name and domain name are different Domain name \ User name For example: abcdnet \ james.smith
Login Password	Windows logon password (Case sensitive.)

*1 Specify "Host name" or "IP address". To enter the IPv6 address, enclose the address in brackets [].
(Example: [2001:db8:a0b:12f0::10])

*2 For " Login User Name" , you can use double-byte characters such as Chinese characters, hiragana, or katakana. However, the number of characters that can be entered may become less than 64.
When transmitting using the optional network interface (IB-53/IB-54), only alphanumeric characters are allowed. Also, if the device name and domain name are different because ¥ is not available, use @ to enter the user name in the following format.
User name@Domain name
(Example: james.smith@abcdnet)

 **NOTE**

- For details on entering characters, refer to the following:
 - ➔ [Character Entry Method \(page 11-9\)](#)
- Select [**Connection Test**] to check the connection to the server you chose. If the connection fails, check the entries you made.

4 Check if the destination entry is correct > [Register]

The destination is added to the Address Book.

To add a new address to the One Touch Key, select [**Register**] and follow the on-screen instructions to enter the necessary information.

 **NOTE**

- Refer to the following for registering the One Touch Key.
 - ➔ [Adding a Destination on One Touch Key \(page 3-77\)](#)

Registering an Address (Folder (FTP) Address)

The registering method of an folder (FTP) address to Address Book is as follows.

1 Display the screen.

[Home] key > [...] > [System Menu] > [Function Settings] > [Address Book] > [Add/Edit (Common Address Book)] > [Add] > [Contact]

2 Add the name.

- 1 Enter the destination name to be displayed on the Address Book.

 **NOTE**

- For details on entering characters, refer to the following:
- ➔ [Character Entry Method \(page 11-9\)](#)


- 2 Enter an address number.

To have the number assigned automatically, select [**Auto**] (0000).

 **NOTE**

- Address Number is an ID for a destination. You can select any available number out of 200 numbers for contacts and 50 numbers for groups.
- If you specify an address number that is already in use, an error message appears when you select [**Save**] and the number cannot be registered. If you set [**Auto**] (0000) as the address number, the address is registered under the lowest available number.

3 Add the address.

- 1 Select .
- 2 Enter the "Host name", "Port", "Folder Path", "Login User Name", and " Login Password" .

The table below explains the items to be entered.

Item	Description
Host Name *1	Host name or IP address of FTP server
Port	Port number If the port number is not specified, the default port number is 21.
Folder Path *2	Path for the file to be stored. For example: User \ ScanData If no path is entered, the file is stored in the home directory.
Login User Name	FTP server login user name
Login Password	FTP server login password

*1 To enter the IPv6 address, enclose the address in brackets [].
(Example: [2001:db8:a0b:12f0::10])

*2 When the FTP server is based on Linux/UNIX, the path including the sub-folder is combined by the slash "/" not using the back-slash.

NOTE

- For details on entering characters, refer to the following:
➔ [Character Entry Method \(page 11-9\)](#)
- Select [**Connection Test**] or [**Connection Test (Encrypted TX)**] to check the connection to the server you chose. If the connection fails, check the entries you made.

4 Check if the destination entry is correct > [Register]

The destination is added to the Address Book.

To add a new address to the One Touch Key, select [**Register**] and follow the on-screen instructions to enter the necessary information.

NOTE

- Refer to the following for registering the One Touch Key.
➔ [Adding a Destination on One Touch Key \(page 3-77\)](#)

Add the group

Compile two or more contacts into a group. Designations in the group can be added at the same time. When adding a group, a maximum of 500 groups can be added in the Address Book.

NOTE

To add a group, you need individually added destinations. Register one or more individual destinations as needed before proceeding. Up to 100 destinations for the E-mail, 500 destinations for the FAX, 100 destinations for the i-FAX, and a total of 10 destinations for the FTP and SMB can be registered per group.

1 Display the screen.

[Home] key > [...] > [System Menu] > [Function Settings] > [Address Book] > [Add/Edit (Common Address Book)] > [Add] > [Group]

2 Add the name.

- 1 Enter an address number.

To have the number assigned automatically, select [Auto].

NOTE

- Address Number is an ID for a group. You can select any available number out of 2,000 numbers for contacts and 500 numbers for groups.
- If you specify an address number that is already in use, an error message appears when you select [Save] and the number cannot be registered. If you set [Auto] (0000) as the address number, the address is registered under the lowest available number.

- 2 Enter the group name displayed on the Address Book.

NOTE

Refer to the following for details on entering characters.

➔ [Character Entry Method \(page 11-9\)](#)

3 Select the destinations.

Select destinations (contacts) to add to the group. Put a checkmark in the checkbox to select an item and remove the checkmark to cancel the selection.

NOTE

Destinations can be sorted or searched by destination name or address number.

➔ [Checking and Editing Destinations \(page 5-47\)](#)

4 Check if the group entry is correct > [Save]

The group is added to the Address Book.

To add a new address to the One Touch Key, select [Register] and follow the on-screen instructions to enter the necessary information.

NOTE


Refer to the following for registering the One Touch Key.

➔ [Adding a Destination on One Touch Key \(page 3-77\)](#)

Editing Contact Address in Address Book

Edit the destinations (contacts) you added to the Address Book.

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Function Settings] > [Address Book] > [Add/Edit (Common Address Book)]
- 2 Select [] (information icon) for the destination or group to edit.



NOTE

Destinations can be sorted or searched by destination name or address number.

➔ [Choosing from the Address Book \(page 5-43\)](#)

2 Edit a contact address.


- 1 Change "Name", "Address Number" and destination type and address.
 - ➔ [Registering an Address \(E-mail Address\) \(page 3-59\)](#)
 - ➔ [Registering an Address \(Folder \(FTP\) Address\) \(page 3-62\)](#)
 - ➔ [Add the group \(page 3-64\)](#)
- 2 [Save] > [OK].

Register the changed destination.

Editing Group Address in Address Book

Edit the destinations (group address) you added to the Address Book.

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Function Settings] > [Address Book] > [Add/Edit (Common Address Book)]
- 2 Select [] (information icon) for the destination or group to edit.



NOTE

Destinations can be sorted or searched by destination name or address number.

➔ [Choosing from the Address Book \(page 5-43\)](#)

2 Edit a contact address.

- 1 Change "Name" and "Address Number".
 - ➔ [Registering an Address \(E-mail Address\) \(page 3-59\)](#)
- 2 Change the destination.

Put a checkmark in the checkbox to select an item and remove the checkmark to cancel the selection.
- 3 [Save] > [OK].

Register the changed destination.

Deleting Address Book Entries

Delete the destinations (contacts) you added to the Address Book.

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Function Settings] > [Address Book] > [Add/Edit (Common Address Book)]
- 2 Select a destination or group to delete.



NOTE

Destinations can be sorted or searched by destination name or address number.

➔ [Choosing from the Address Book \(page 5-43\)](#)

2 [Delete] > [Delete]

Delete the contact or group.

Adding a Destination (Departmental Address Book)

Create an address book for department, and then add a new destination to the Department Address Book. There are two registering methods, contacts and groups. When adding a group, enter the group name and select group members from the Address Book.

NOTE

If registering and editing of the Address Book is restricted to administrators, you can edit the Address Book by logging in with administrator privileges.

➔ [Edit Restriction \(page 8-45\)](#)

➔ **Command Center RX User Guide**

Registering a Departmental Address Book

Register a new Departmental Address Book.

1 Display the screen.

[Home] key > [...] > [System Menu] > [Function Settings] > [Address Book] > [Create Departmental Address Book] > [Add]

2 Configure the settings.

- 1 Enter the name for departmental address book.

NOTE

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 11-9\)](#)

- 2 Enter an address book number.

To have the number assigned automatically, select [**Auto**] (00).

NOTE

- Address Book Number is an ID for a department address book. You can select any available number out of 50 numbers for a department address book.
- If you specify an address book number that is already in use, an error message appears when you select [**Save**] and the number cannot be registered. If you set [**Auto**] (00) as the address book number, the address book is registered under the lowest available number.

- 3 Sets whether the departmental address book is shared or not.

Select [**On (by All Users)**], [**Off**] or [**On (by Specified Users)**].

If you selected [**On (by Specified Users)**], click [**Registration User**] and select the department or user with whom you want to share the address book.

- 4 Select [**OK**].

The departmental address book is registered.

Editing a Department Address Book

1 Display the screen.

[Home] key > [...] > [System Menu] > [Function Settings] > [Address Book] > [Create Departmental Address Book]

2 Edit a Department Address Book.

1 Select a department address book > [Edit]



NOTE

Department address book can be sorted or searched by address book name or address book number.

➔ [Choosing from the Address Book \(page 5-43\)](#)

2 Change "Name".

3 Change "Sharing".



NOTE

If you selected [On (by Specified Users)], select [Registration User] and select the department or user with whom you want to share the address book.

➔ [Registering a Departmental Address Book \(page 3-67\)](#)

4 Select [OK].

Register the changed setting.

Deleting a Department Address Book

Deleting the registered Department Address Book

1 Display the screen.

1 [Home] key > [...] > [System Menu] > [Function Settings] > [Address Book] > [Create Departmental Address Book]

2 Select the address book to be deleted.



NOTE

Department address book can be sorted or searched by address book name or address book number.

➔ [Select the destinations. \(page 5-44\)](#)

3 [Delete] > [Delete]

The departmental address book is deleted.

Registering an Address (E-mail Address)

The registering method of an E-mail address to Address Book is as follows.

1 Display the screen.

[Home] key > [...] > [System Menu] > [Function Settings] > [Address Book] > [Add/Edit (Departmental Address Book)] > select the Departmental Address Book > [Add] > [Contact]

2 Add the name.

1 Enter the destination name to be displayed on the Address Book.



NOTE

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 11-9\)](#)

2 Enter an address number.

To have the number assigned automatically, select [**Auto**] (0000).



NOTE

- Address Number is an ID for a destination. You can select any available number out of 2,000 numbers for contacts and 500 numbers for groups.
- If you specify an address number that is already in use, an error message appears when you select [**Save**] and the number cannot be registered. If you set [**Auto**] (0000) as the address number, the address is registered under the lowest available number.

3 Add the address.

1 Select .

2 Select the entry field, and enter the E-mail address.



NOTE

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 11-9\)](#)

4 Check if the destination entry is correct > [Register]

The destination is added to the Address Book.

To add a new address to the One Touch Key, select [**Register**] and follow the on-screen instructions to enter the necessary information.



NOTE

Refer to the following for registering the One Touch Key.

➔ [Adding a Destination on One Touch Key \(page 3-77\)](#)

Registering an Address (Folder (SMB) Address)

The registering method of an E-mail address to Address Book is as follows.

1 Display the screen.

[Home] key > [...] > [System Menu] > [Function Settings] > [Address Book] > [Add/Edit (Departmental Address Book)] > select the Departmental Address Book > [Add] > [Contact]

2 Add the name.

- 1 Enter the destination name to be displayed on the Address Book.

NOTE

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 11-9\)](#)


- 2 Enter an address number.

To have the number assigned automatically, select [Auto] (0000).

NOTE

- Address Number is an ID for a destination. You can select any available number out of 200 numbers for contacts and 50 numbers for groups.
- If you specify an address number that is already in use, an error message appears when you select [Save] and the number cannot be registered. If you set [Auto] (0000) as the address number, the address is registered under the lowest available number.

3 Add the address.

- 1 Select .
- 2 To directly specify the SMB folder, enter the "Host name", "Port", "Folder Path", "Login User Name", and "Login Password".

NOTE

For the device name, share name, domain name, and user name, enter the information that you noted when you created the shared folder. For details on creating shared folders, refer to the following:

➔ [Preparation for Sending a Document to a Shared Folder in a PC \(page 3-44\)](#)

You can search for a folder on a PC on the network. Select [Search Folder from Network] or [Search Folder by Host Name]. Select the folder from the Search Results list.

NOTE

- If you selected [Search Folder from Network], you can search all PCs on the network for a destination.
- If you selected [Search Folder by Host Name], you can enter the " Domain/Workgroup" , and " Host Name" to search PCs on the network for the destination.
- A maximum of 500 addresses can be displayed. Select the host name (PC name) that you want to specify in the screen that appears, and select [OK]. The login user name and login password entry screen appears.
- After you enter the login user name and login password name of the destination PC, the shared folders appear. Select the folder that you want to specify and select [OK]. The address of the selected shared folder is set.

The table below explains the items to be entered.

Item	Description
Host Name *1	Device name
Port	Port number If the port number is not specified, the default port number is 445.
Folder Path	Share name. For example: scannerdata If saving in a folder in the shared folder: share name \ folder name in shared folder
Login User Name *2	<ul style="list-style-type: none"> If the device name and domain name are the same User Name For example: james.smith. If the device name and domain name are different Domain name \ User name For example: abcdnet \ james.smith
Login Password	Windows logon password (Case sensitive.)

*1 Specify "Host name" or "IP address". To enter the IPv6 address, enclose the address in brackets [].
(Example: [2001:db8:a0b:12f0::10])

*2 For "Login User Name", you can use double-byte characters such as Chinese characters, hiragana, or katakana. However, the number of characters that can be entered may become less than 64. When transmitting using the optional network interface (IB-53/IB-54), only alphanumeric characters are allowed. Also, if the device name and domain name are different because ¥ is not available, use @ to enter the user name in the following format.
User name@Domain name
(Example: james.smith@abcdnet)

NOTE

- For details on entering characters, refer to the following:
➔ [Character Entry Method \(page 11-9\)](#)
- Select [**Connection Test**] to check the connection to the server you chose. If the connection fails, check the entries you made.

4 Check if the destination entry is correct > [Register]

The destination is added to the Address Book.

To add a new address to the One Touch Key, select [**Register**] and follow the on-screen instructions to enter the necessary information.

NOTE

- Refer to the following for registering the One Touch Key.
➔ [Adding a Destination on One Touch Key \(page 3-77\)](#)

Registering an Address (Folder (FTP) Address)

The registering method of an folder (FTP) address to Address Book is as follows.

1 Display the screen.

[Home] key > [...] > [System Menu] > [Function Settings] > [Address Book] > [Add/Edit (Departmental Address Book)] > select the Departmental Address Book > [Add] > [Contact]

2 Add the name.

- 1 Enter the destination name to be displayed on the Address Book.



NOTE

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 11-9\)](#)

- 2 Enter an address number.


To have the number assigned automatically, select [**Auto**] (0000).



NOTE

- Address Number is an ID for a destination. You can select any available number out of 200 numbers for contacts and 50 numbers for groups.
- If you specify an address number that is already in use, an error message appears when you select [**Save**] and the number cannot be registered. If you set [**Auto**] (0000) as the address number, the address is registered under the lowest available number.

3 Add the address.

- 1 Select .
- 2 Enter the "Host name", "Port", "Folder Path", "Login User Name", and " Login Password" .

The table below explains the items to be entered.

Item	Description
Host Name *1	Host name or IP address of FTP server
Port	Port number If the port number is not specified, the default port number is 21.
Folder Path *2	Path for the file to be stored. For example: User \ ScanData If no path is entered, the file is stored in the home directory.
Login User Name	FTP server login user name
Login Password	FTP server login password

*1 To enter the IPv6 address, enclose the address in brackets [].
(Example: [2001:db8:a0b:12f0::10])

*2 When the FTP server is based on Linux/UNIX, the path including the sub-folder is combined by the slash "/" not using the back-slash.



NOTE

- For details on entering characters, refer to the following:
 - [Character Entry Method \(page 11-9\)](#)
- Select [**Connection Test**] or [**Connection Test (Encrypted TX)**] to check the connection to the server you chose. If the connection fails, check the entries you made.

4 Check if the destination entry is correct > [Register]

The destination is added to the Address Book.

To add a new address to the One Touch Key, select [**Register**] and follow the on-screen instructions to enter the necessary information.



NOTE

- Refer to the following for registering the One Touch Key.
 - [Adding a Destination on One Touch Key \(page 3-77\)](#)

Add the group

Compile two or more contacts into a group. Designations in the group can be added at the same time. When adding a group, a maximum of 500 groups can be added in the Address Book.

NOTE

To add a group, you need individually added destinations. Register one or more individual destinations as needed before proceeding. Up to 100 destinations for the E-mail, 500 destinations for the FAX, 100 destinations for the i-FAX, and a total of 10 destinations for the FTP and SMB can be registered per group.

1 Display the screen.

[Home] key > [...] > [System Menu] > [Function Settings] > [Address Book] > [Add/Edit (Departmental Address Book)] > select the Departmental Address Book > [Add] > [Group]

2 Add the name.

- 1 Enter an address number.

To have the number assigned automatically, select [Auto].

NOTE

- Address Number is an ID for a group. You can select any available number out of 2,000 numbers for contacts and 500 numbers for groups.
- If you specify an address number that is already in use, an error message appears when you select [Save] and the number cannot be registered. If you set [Auto] (0000) as the address number, the address is registered under the lowest available number.

- 2 Enter the group name displayed on the Address Book.

NOTE

Refer to the following for details on entering characters.

➔ [Character Entry Method \(page 11-9\)](#)

3 Select the destinations.

Select destinations (contacts) to add to the group. Put a checkmark in the checkbox to select an item and remove the checkmark to cancel the selection.

NOTE

Destinations can be sorted or searched by destination name or address number.

➔ [Checking and Editing Destinations \(page 5-47\)](#)

4 Check if the group entry is correct > [Save]

The group is added to the Address Book.

To add a new address to the One Touch Key, select [Register] and follow the on-screen instructions to enter the necessary information.

NOTE


Refer to the following for registering the One Touch Key.

➔ [Adding a Destination on One Touch Key \(page 3-77\)](#)

Editing Contact Address in Address Book

Edit the destinations (contacts) you added to the Address Book.

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Function Settings] > [Address Book] > [Add/Edit (Departmental Address Book)] > select the Departmental Address Book
- 2 Select [] (information icon) for the destination or group to edit.



NOTE

Destinations can be sorted or searched by destination name or address number.

➔ [Choosing from the Address Book \(page 5-43\)](#)

2 Edit a contact address.


- 1 Change "Name", "Address Number" and destination type and address.
 - ➔ [Registering an Address \(E-mail Address\) \(page 3-59\)](#)
 - ➔ [Registering an Address \(Folder \(FTP\) Address\) \(page 3-62\)](#)
 - ➔ [Add the group \(page 3-64\)](#)
- 2 [Save] > [OK].

Register the changed destination.

Editing Group Address in Address Book

Edit the destinations (group address) you added to the Address Book.

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Function Settings] > [Address Book] > [Add/Edit (Departmental Address Book)] > select the Departmental Address Book
- 2 Select [] (information icon) for the destination or group to edit.



NOTE

Destinations can be sorted or searched by destination name or address number.

➔ [Choosing from the Address Book \(page 5-43\)](#)

2 Edit a contact address.

- 1 Change "Name" and "Address Number".
 - ➔ [Registering an Address \(E-mail Address\) \(page 3-59\)](#)
- 2 Change the destination.

Put a checkmark in the checkbox to select an item and remove the checkmark to cancel the selection.
- 3 [Save] > [OK].

Register the changed destination.

Deleting Address Book Entries

Delete the destinations (contacts) you added to the Address Book.

1 Display the screen.

- 1 **[Home]** key > [...] > **[System Menu]** > **[Function Settings]** > **[Address Book]** > **[Add/Edit (Departmental Address Book)]** > select the Departmental Address Book
- 2 Select a destination or group to delete.



NOTE

Destinations can be sorted or searched by destination name or address number.

➔ [Choosing from the Address Book \(page 5-43\)](#)

2 **[Delete]** > **[Delete]**

Delete the contact or group.

Adding a Destination on One Touch Key

Assign a new destination (contact or group) to an one touch key.

NOTE

- Refer to the following for use of One Touch Key.
 - ➔ [Choosing from the One Touch Key \(page 5-46\)](#)
- You can add One Touch keys and change their settings on Command Center RX.
 - ➔ **Command Center RX User Guide**
- If registering and editing of the One Touch Keys is restricted to administrators, you can edit the One Touch Keys by logging in with administrator privileges.
 - ➔ [Edit Restriction \(page 8-45\)](#)
 - ➔ **Command Center RX User Guide**

1 Display the screen.


[Home] key > [...] > [System Menu] > [Function Settings] > [One-Touch Key] > [Add/Edit One Touch Key]

2 Add One Touch Keys.

- Select a One Touch Key number for the destination > [Add/Edit]

The One Touch Key is displayed by selecting [No.], entering the number and selecting [OK].

Select a One Touch Key with no registered destination.

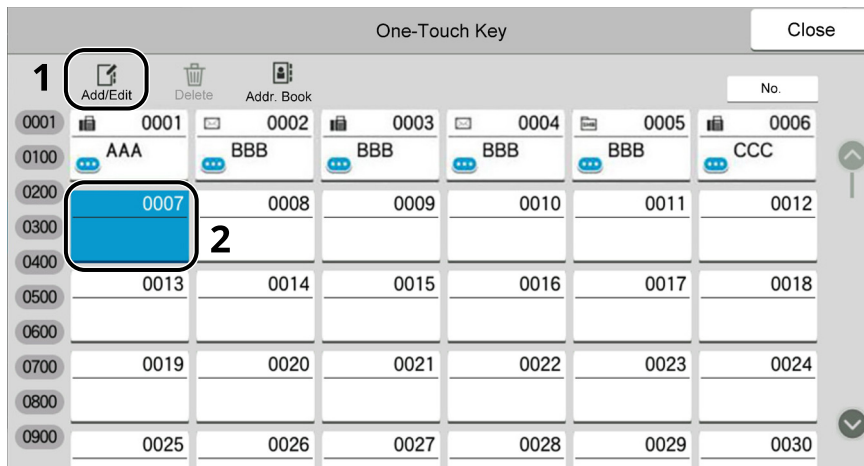

- Enter the One Touch Key name displayed in the send base screen.

NOTE


Refer to the following for details on entering characters.

- ➔ [Character Entry Method \(page 11-9\)](#)

- Select [Destination].

The Address Book appears.

- 4 Select a destination (contact or group) to add to the One Touch Key number > **[OK]**

Selecting [] (information icon) shows the detailed information of the selected destination.



NOTE

- Destinations can be sorted or searched by destination name or address number.
 - ➔ [Choosing from the Address Book \(page 5-43\)](#)
- A destination currently registered to a different Address Book cannot be registered to the same One Touch Key.

- 5 Select **[OK]**.

The destination will be added to the One Touch Key.

Editing One Touch Key

1 Display the screen.


- 1 **[Home]** key > [...] > **[System Menu]** > **[Function Settings]** > **[One-Touch Key]** > **[Add/Edit One Touch Key]**

- 2 Select a One Touch Key number to edit.

The One Touch Key is displayed by selecting **[No.]**, entering the number and selecting **[OK]**.



NOTE

Select [] (information icon) for the One Touch Key to display the information registered in the One Touch Key.

2 Change the Registered Information.


- 1 Change "Display Name".



NOTE

Refer to the following for details on entering characters.

➔ [Character Entry Method \(page 11-9\)](#)

- 2 Select **[Destination]**, and select a new destination (contact or group). Selecting [] (information icon) shows the detailed information of the selected destination.



NOTE

- Destinations can be sorted or searched by destination name or address number.
 - ➔ [Choosing from the Address Book \(page 5-43\)](#)
- A destination currently registered to a different Address Book cannot be registered to the same One Touch Key.

- 3 **[OK]** > **[OK]**

Add the destination to the One Touch Key.

Deleting the Destination to the One Touch Key

1 Display the screen.

1 [Home] key > [...] > [System Menu] > [Function Settings] > [One-Touch Key] > [Add/Edit One Touch Key]

2 Select a One Touch Key number to delete.

The One Touch Key is displayed by selecting [No.], entering the number and selecting [OK].

2 Delete the Registered Information.

[Delete] > [Delete]

The data registered in the One Touch Key is deleted.

4 Printing from PC


This chapter explains the following topics:


Printer Driver Print Settings Screen	4-2
Displaying the Printer Driver Help	4-3
Changing the Default Printer Driver Settings (Windows)	4-3
Printing from PC	4-4
Printing on Standard Sized Paper	4-4
Printing on Non-standard Sized Paper	4-6
Printing with Universal Print	4-9
Banner Printing	4-12
Canceling Printing from a Computer	4-18
Printing from the Handheld Device	4-19
Printing by AirPrint	4-19
Printing by Mopria	4-19
Printing with Wi-Fi Direct	4-19
Printing with NFC	4-19
Printing Data Saved in the Printer	4-20
Specifying the Job Box from a Computer and Storing the Job	4-20
Printing Documents from Private Print Box	4-21
Deleting the Documents Stored in the Private Print Box	4-21
Printing Document from Stored Job Box	4-22
Deleting the Documents Stored in the Stored Job Box	4-23
Printing Document from Quick Copy Box	4-24
Deleting the Documents Stored in the Quick Copy Box	4-24
Printing Document from Proof and Hold Box	4-25
Deleting the Documents Stored in the Proof and Hold Box	4-25
Printing Documents from PIN Print Box	4-26
Deleting the Documents Stored in the PIN Print Box	4-26
Printing Document from the Universal Print box	4-27
Deleting the Documents Stored in the Universal Print Box	4-28
Monitoring the Printer Status (Status Monitor)	4-29
Accessing the Status Monitor	4-29
Exiting the Status Monitor	4-29
Quick View State	4-29
Printing Progress Tab	4-30
Paper Tray Status Tab	4-30
Toner Status Tab	4-30
Alert Tab	4-31
Status Monitor Context Menu	4-31
Status Monitor Notification Settings	4-32

Printer Driver Print Settings Screen

The printer driver print settings screen allows you to configure a variety of print-related settings.

➔ **Printer Driver User Guide**

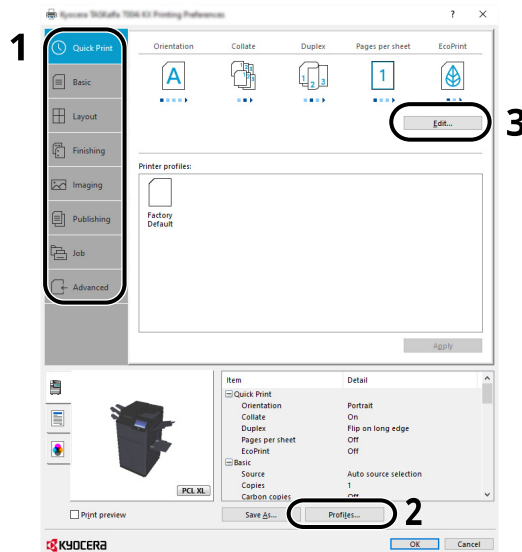


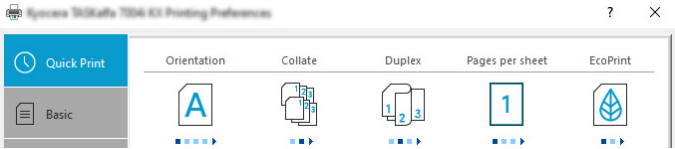No.	Description
1	<p>[Quick Print] tab Provides icons that can be used to easily configure frequently used functions. Each time you click an icon, it changes to an image resembling the print results and applies the settings.</p>  <p>[Basic] tab This tab groups basic functions that are frequently used. You can use it to configure the paper size, destination, and duplex printing.</p> <p>[Layout] tab This tab lets you configure settings for printing various layouts, including booklet printing, combine mode, poster printing, and scaling.</p> <p>[Finishing] tab This tab lets you configure settings related to finishing of printed media, including binding and stapling.</p> <p>[Imaging] tab This tab lets you configure settings related to the quality of the print results.</p> <p>[Publishing] tab This tab lets you create covers and inserts for print jobs and put inserts between sheets of OHP film.</p> <p>[Job] tab This tab lets you configure settings for saving print data from the computer to the machine. Regularly used documents and other data can be saved to the machine for easy printing later. Since saved documents can be printed directly from the machine, this function is also convenient when you wish to print a document that you don't want others to see.</p> <p>[Advanced] tab This tab lets you configure settings for adding text pages or watermarks to print data.</p>

No.	Description
2	[Profiles] Printer driver settings can be saved as a profile. Saved profiles can be recalled at any time, so it's a convenient practice to save frequently used settings.
3	[Reset] Click to revert settings to their initial values.

Displaying the Printer Driver Help

The printer driver includes Help. To learn about print settings, open the printer driver print settings screen and display Help as explained below.

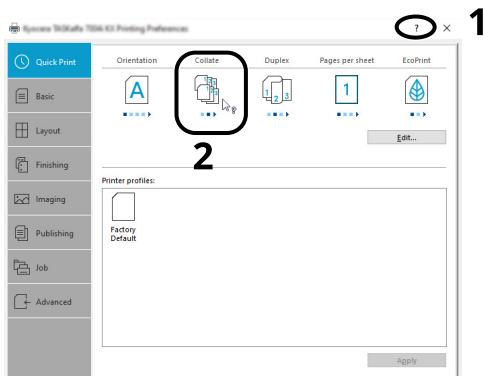

- 1 Click the [?] button in the upper right corner of the screen.
- 2 Click the item you want to know about.



NOTE

The Help appears, even when you click the item you want to know about and press the [F1] key on your keyboard.

Changing the Default Printer Driver Settings (Windows)

The default printer driver settings can be changed. By selecting frequently used settings, you can omit steps when printing. For the settings, refer to the following:

➔ Printer Driver User Guide


- 1 Select the [Start] button, [All apps], [Windows Tools], [Control Panel] and [Devices and Printers].
- 2 Right-click the printer driver icon of the machine, and click the [Printer properties] menu of the printer driver.
- 3 Click the [Basic] button on the [General] tab.
- 4 Select the default settings and click the [OK] button.

Printing from PC

This section provides the printing method using the KX DRIVER.

NOTE

- To print the document from applications, install the printer driver downloaded from user support page (<https://kyocera.info/support>) on your computer.
- In some environments, the current settings are displayed at the bottom of the printer driver.

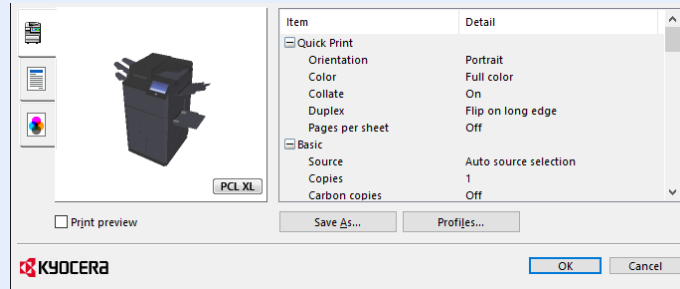

- When printing the cardstock or envelopes, load the cardstock or envelopes in the multipurpose tray before performing the following procedure.

➔ [When you load envelopes or cardstock in the multipurpose tray \(page 3-16\)](#)

Printing on Standard Sized Paper

If you loaded a paper size that is included in the print sizes of the machine, select the paper size in the [**Basic**] tab of the print settings screen of the printer driver.

NOTE

Specify the paper size and media type to print from the operation panel.


➔ [Paper Feeding \(page 8-14\)](#)

1 Display the screen.

Click [**File**] and select [**Print**] in the application.

2 Configure the settings.

- 1 Select the machine from the "Printer" menu and click the **[Properties]** button.

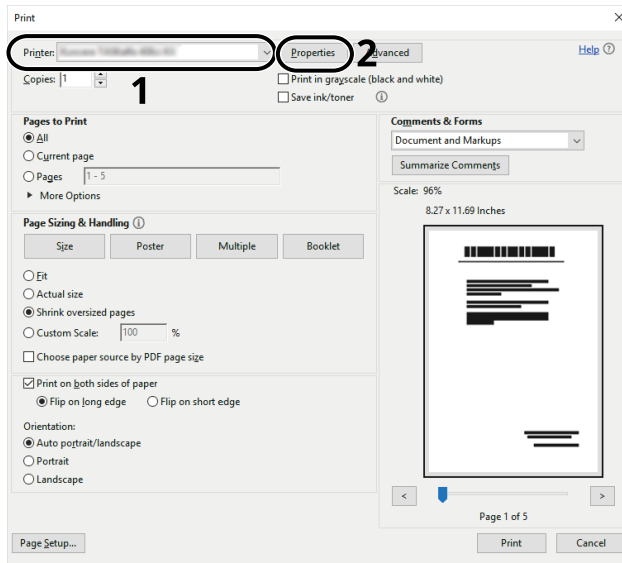


- 2 Select the **[Basic]** tab.
- 3 Click "Print size" menu and select the paper size to use for printing.

To load the paper of size that is not included in print sizes of the machine such as cardstock or envelopes, the paper size needs to be registered.

➔ [Printing on Non-standard Sized Paper \(page 4-6\)](#)

To print on the special paper such as thick paper or transparency, click "Media type" menu and select the media type.

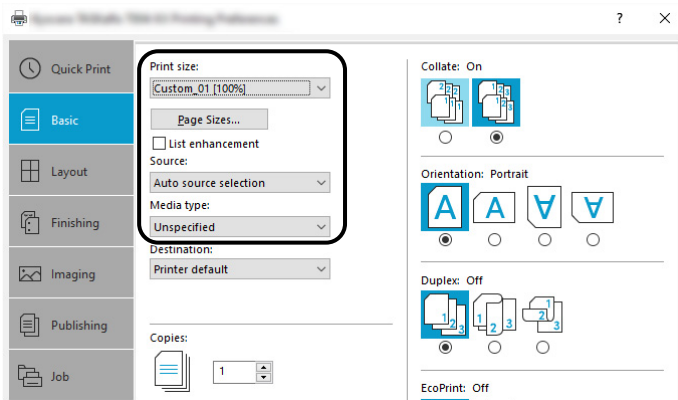

- 4 Click **[OK]** button to return to the Print dialog box.

3 Start printing.

Click the **[OK]** button.

Printing on Non-standard Sized Paper

If you loaded a paper size that is not included in the print sizes of the machine, register the paper size in the **[Basic]** tab of the print settings screen of the printer driver.

The registered size can be selected from the "Print size" menu.

NOTE

To execute printing at the machine, set the paper size and type in the following:


➔ [Paper Feeding \(page 8-14\)](#)

1 Display the screen.

- 1 Select the **[Start]** button, **[All apps]**, **[Windows Tools]**, **[Control Panel]** and **[Devices and Printers]**.
- 2 Right-click the printer driver icon of the machine, and click the **[Printer properties]** menu of the printer driver.
- 3 Click the **[Preferences]** button on the **[General]** tab.


2 Register the paper size.

- 1 Click the **[Basic]** tab.

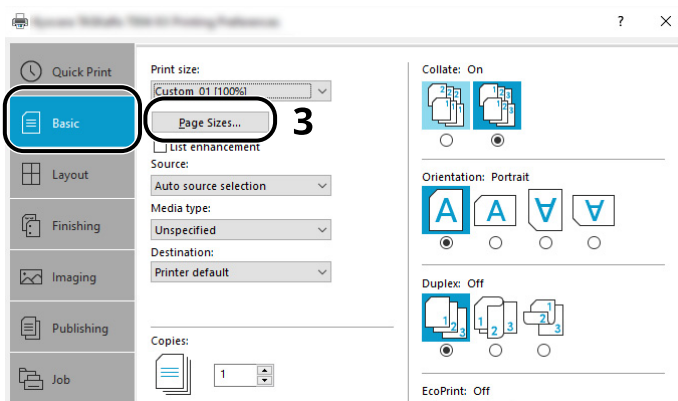


- 2 Click the **[Page Size...]** button.

- 3 Click the **[New]** button.

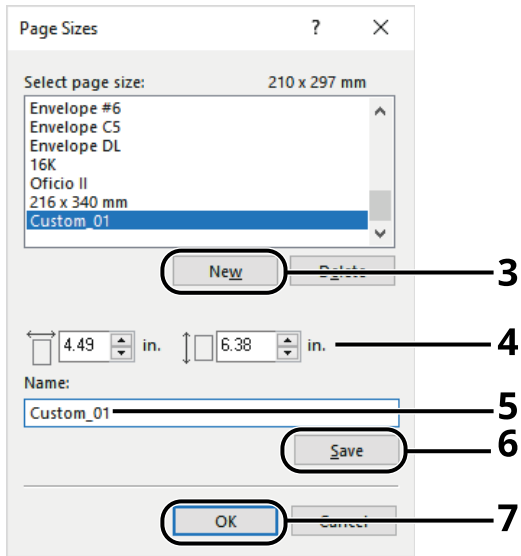


- 4 Enter the paper size.
- 5 Enter the name of the paper.
- 6 Click the **[Save]** button.
- 7 Click the **[OK]** button.
- 8 Click the **[OK]** button.

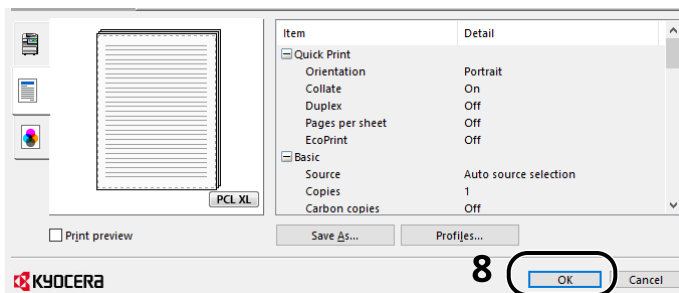

- 3 **Display the print settings screen.**
Click **[File]** and select **[Print]** in the application.


4 Select the paper size and type of non-standard size paper.

- 1 Select the machine from the "Printer" menu and click the [Properties] button.

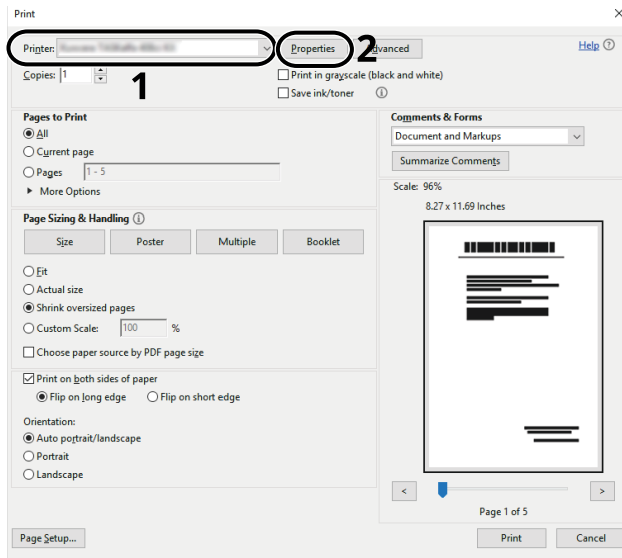

- 2 Select the [Basic] tab.
- 3 Click "Print size" menu and select the paper size registered in step 2.

To print on the special paper such as thick paper or transparency, click "Media type" menu and select the media type.

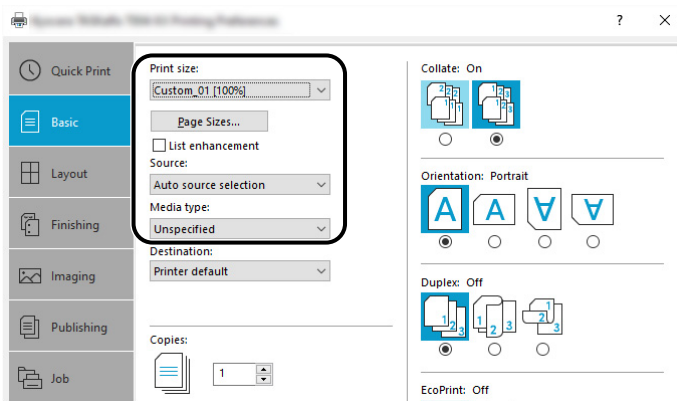

NOTE

If you loaded a postcard or envelope, select [Cardstock] or [Envelope] in the "Media type" menu.

- 4 Select the paper source in the "Source" menu.
- 5 Click [OK] button to return to the Print dialog box.

5 Start printing.

Click the [OK] button.

Printing with Universal Print

You can use the "Universal Print" cloud service provided by Microsoft to print jobs via the cloud. Users who are authorized in Azure Active Directory can print from any location using printers that are compatible with Universal Print.

NOTE

- In order to use Universal Print, it is necessary for Microsoft365 license, and Azure Active Directory account. If not, please acquire those license and the account.
- To use Universal Print, the following conditions are required.
 - The license of Universal Printer has been granted.
 - All administrators have Printer Administrator or Global Administrator privileges.

Register this machine on Universal Print

1 Start up the browser.

Enter "https://" and host name of the machine to access the Command Center RX

➔ [Accessing Command Center RX \(page 2-70\)](#)

2 Display the screen.

[Function Settings] > [Printer] > "Universal Print Settings" [Settings]

3 Configure the settings.

1 Enter "Printer Name" for "General".

NOTE

Configure proxy settings as necessary.

➔ [Command Center RX User Guide](#)

2 Click [**Register**] in "Universal Print".

The URL and access code of the Microsoft web page are displayed.

3 Click the URL, enter the access code displayed in procedure 2 > [**Next**]

4 Log in using your Azure administrator's account name and password.

NOTE

Permission is required only when registering for the first time. Click [**Accept**].

5 Close the Microsoft web page and return to the Command Center RX.

6 Click [**OK**].

Return to the Universal Print setting screen.

NOTE

On completing registration, [**Register**] in "Universal Print" changes to [**Unregister**], and the validity period of the certificate is displayed. If the display does not change, click [**Refresh**].

7 Click [**Edit**] in "Universal Print Preferences" and copy the Unregistration URL.

- 8 Open the new tab on the browser and paste the copied URL.
The Universal Print web page is displayed.
- 9 Click [**Printer**].
The printers registered are displayed.
- 10 Check the checkbox next to the name of the printer you want to share and click [**Share**].
The "Share Printers" setting screen is displayed.
- 11 Select users to share this machine from the "Select members" list, and click [**Share Printer**].



NOTE

Set [**Allow access to everyone in my organization**] to on to all users in your organization to share the printer.

- 12 Close the Universal Print website.

Register shared printers on a PC

To use Universal Print, shared printers registered in Universal Print must be added to the PC.

1 Log in.

- 1 Select in Windows [**Start**] button > [**Settings**] > [**Account**] > [**Access work or school**] in that order.
- 2 Check that the Azure administrator account name is displayed in [**Work or school account**], and click.



NOTE

When the Azure administrator account name is not displayed, click [**+**] (connect), and log in using the Azure administrator account name and password.

2 Display the screen.

Select [**Home**] > [**Device**] > [**Printers & scanners**] in that order.

3 Configure the settings.

- 1 Click [**Add a printer or scanner**].
- 2 Select a shared printer and click [**Add device**].
The shared printer is registered.


Print a job

1 Display the screen.

Click [**File**] and select [**Print**] in the application.

2 Configure the settings.

1 Select a registered shared printer from the "Printer" menu, and click the [**Properties**] button.

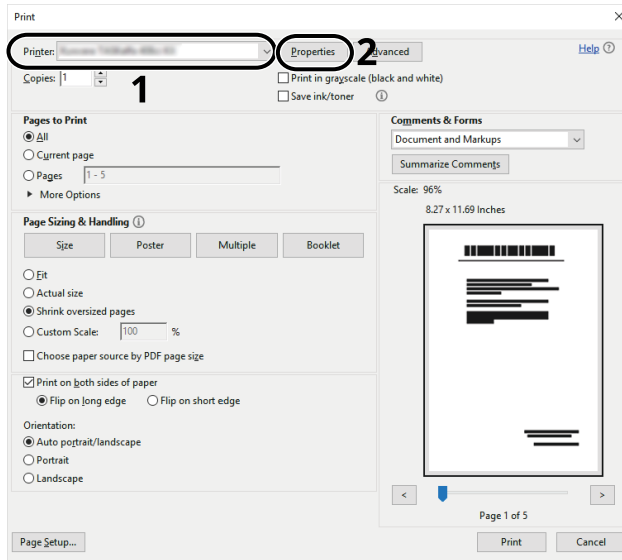

2 Configure the paper size and printer functions as necessary.

3 Click [**OK**] button to return to the Print dialog box.

3 Start printing.

Click the [**OK**] button.

Banner Printing

When a document length from 488.1 mm (19.22") to a maximum of 1,220 mm (48.03") is specified for printing, the print job is treated as banner printing.

Max. number of sheets	1 sheet (manual feed), 10 sheets (when optional banner tray is attached*)
Paper width	210 mm to 330.2 mm (8.26" to 13")
Paper length	488.1 mm to 1,220 mm (19.22" to 48.03")
Paper weight	136 to 163 g/m ²
Media type	Heavy 2

* When the banner tray (option) is used, up to 10 sheets of banner paper can be fed continuously. For details, refer to the follows:

➔ [Using the Banner Tray \(Option\) \(page 4-15\)](#)


Follow the steps below to set banner paper in the printer driver.

1 Display the screen.


Click [**File**] and select [**Print**] in the application.

2 Configure the settings.

1 Select the machine from the "Name" menu and click the [**Properties**] button.

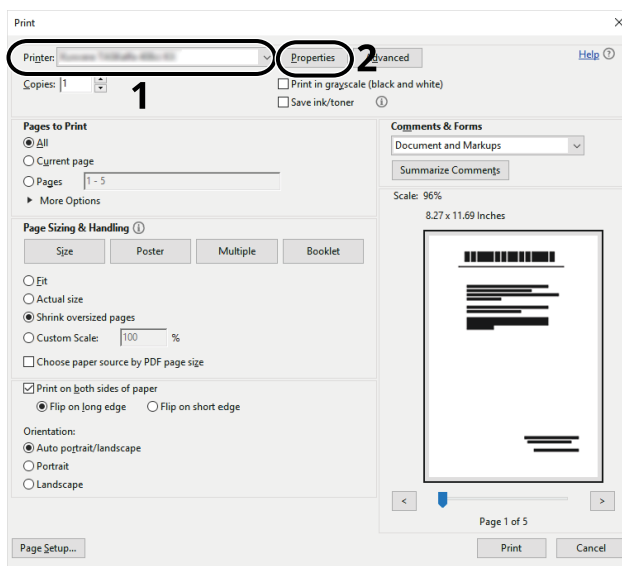


2 Select the [**Basic**] tab.

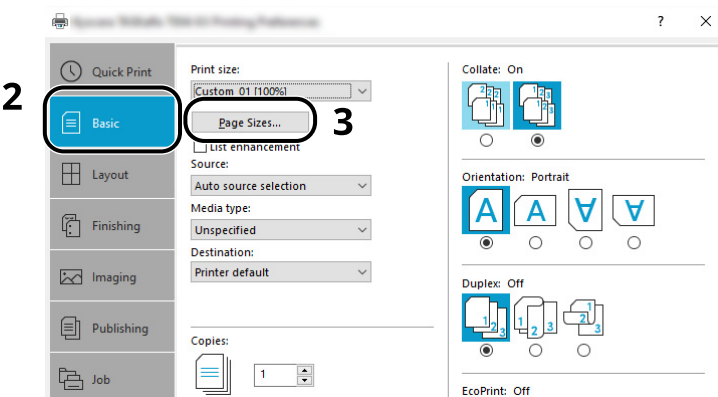

3 Click the [**Page Size...**] button.


3 Register the paper size.

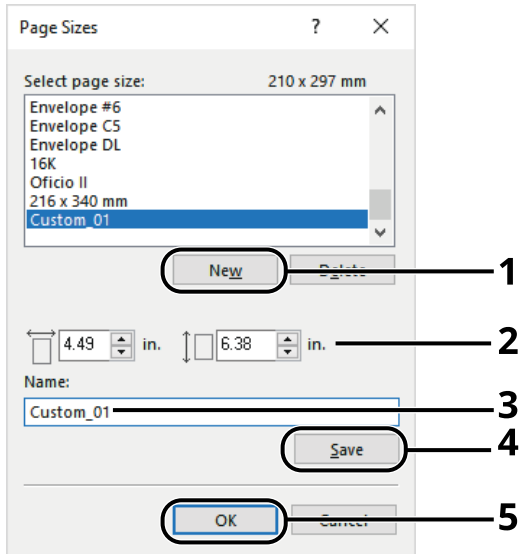

- 1 Click the **[New]** button.
- 2 Enter the length (488.1 mm (19.22") or longer), and width of the custom paper size being registered.
- 3 Enter the name of the paper.
- 4 Click the **[Save]** button.
- 5 Click the **[OK]** button.

4 Configure the print paper size.

- 1 Click "Print size" menu and select the paper size registered in step 3.

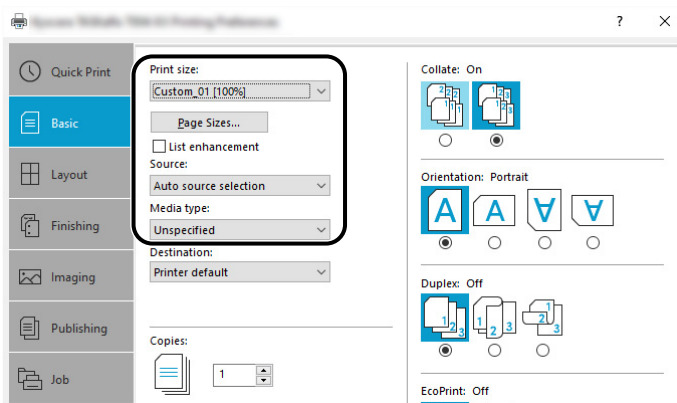

- 2 Click "Source" menu and select **[Multipurpose tray]**.
- 3 Click "Media type" menu and select **[Plain]**.
- 4 Click the **[OK]** button.




NOTE

When banner printing, a resolution of 600 dpi is set.

5 Start printing.


Click the [OK] button.

When you execute printing in this case, a message appears on the machine's operation panel. Place the paper in the multipurpose tray, continue to support it so that it does not fall, and select [Continue]. If paper has been loaded beforehand, no message is displayed and printing starts automatically.

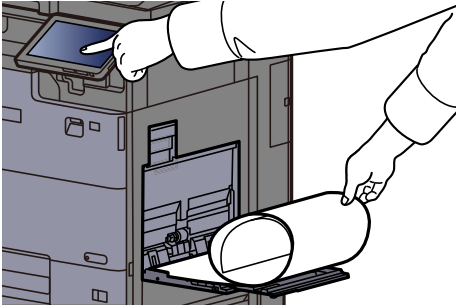


✔ IMPORTANT

- If an output tray that cannot be used for banner printing such as Mailbox (option) is selected in the printer driver, the output tray automatically changes to a tray that can be used.
- After pressing [Continue], support the paper with both hands so that it feeds in correctly.

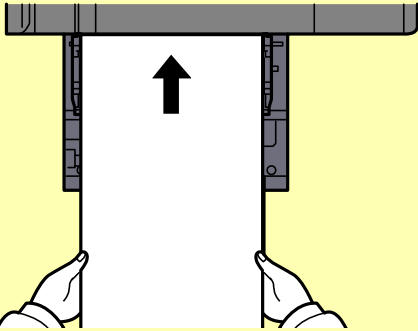

- After printing starts, catch the paper when it is output so that it does not fall.

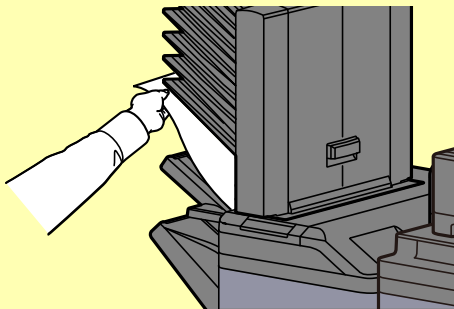

Set whether the confirmation screen appears before each sheet is printed when printing multiple banner sheets.

➔ [Message Banner Print \(page 8-51\)](#)

Using the Banner Tray (Option)

When the banner tray (option) is used, up to 10 sheets of banner paper can be fed continuously.

The operation procedure for setting the banner paper by using the printer driver is the same as that of using the multipurpose tray.

➔ [Banner Printing \(page 4-12\)](#)




NOTE

The paper length supported in banner tray is 488.1 mm to 1,220 mm (18.5" to 48.03").

1 Open the multipurpose tray.


Open the multipurpose tray until it stops.

Do not extend the multipurpose auxiliary tray.

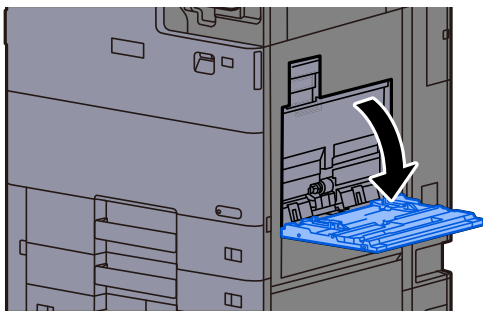


2 Attach the banner tray.

1 Release the paper width guide lock on the banner tray and open to the maximum width.

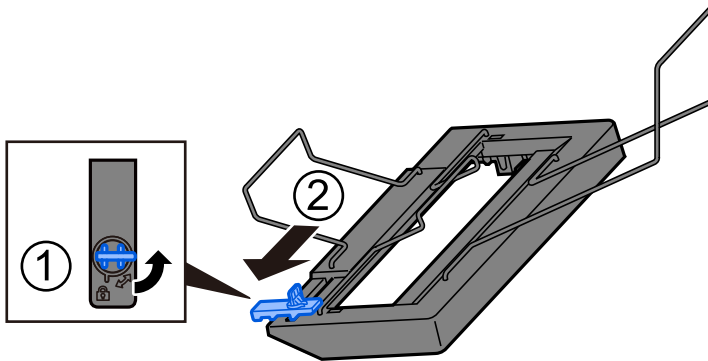


2 Attach the banner tray to the multipurpose tray.

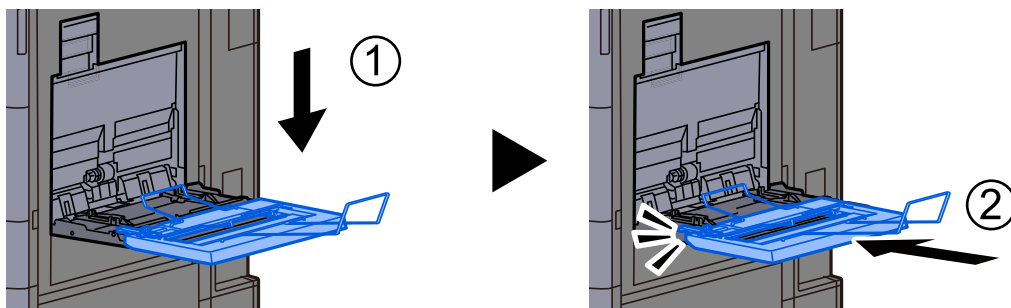

Fit the openings on the sides of the banner tray onto the tabs on the sides of the multipurpose tray, and press into place.


3 Load paper.

- 1 Open the paper width guides on the multipurpose tray to the maximum width.

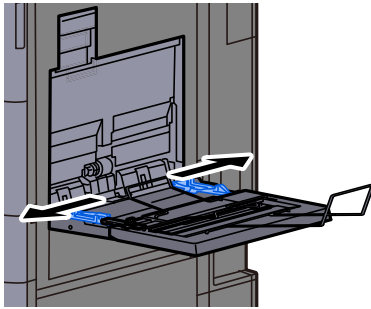


Make sure that the banner tray is attached so that the paper width guides on the banner tray are outside the paper width guides on the multipurpose tray.


- 2 Load banner paper so that it passes under the paper clamp bar.

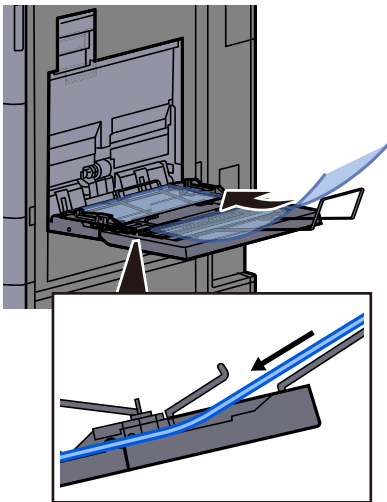

- 3 Loop the banner paper back and place the end on the paper support.

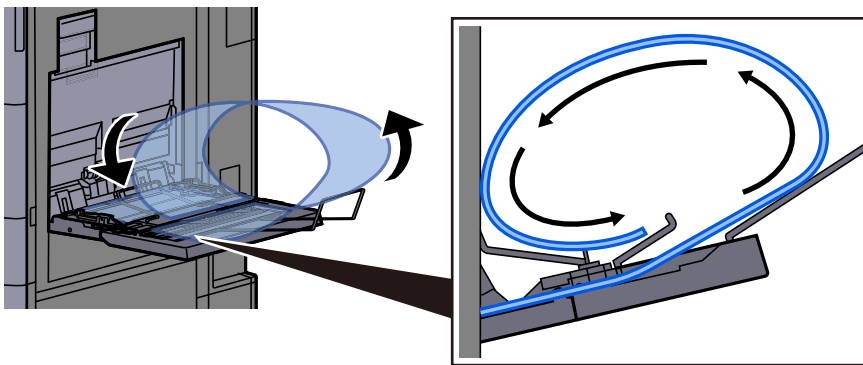


- 4 Adjust the paper width guides to the width of the paper.

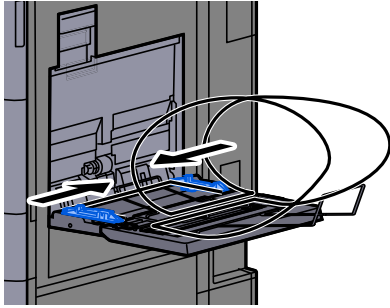

✔ **IMPORTANT**

If there is a gap between the paper and the paper width guides, readjust the guides to fit the paper in order to prevent skewed feeding and paper jams.

- 5 Adjust the paper width guides on the banner tray to the same width as the paper width guides on the multipurpose tray and lock.

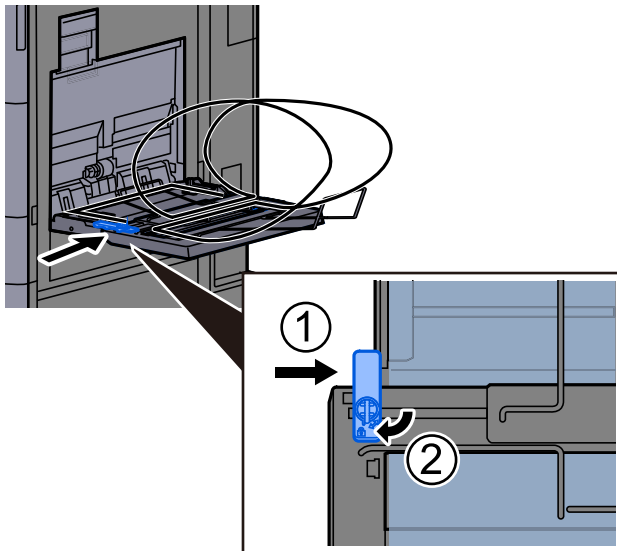

✔ **IMPORTANT**

Remove the paper when banner printing finishes, or when you are not using the banner tray.

 **NOTE**

The print confirmation screen can be set in System Menu to not appear when the banner tray is attached. This will allow continuous printing on multiple sheets. Refer to the follows:

➔ [Message Banner Print \(page 8-51\)](#)

Canceling Printing from a Computer


To cancel a print job executed using the printer driver before the printer begins printing, do the following:



NOTE

When canceling printing from this machine, refer to the following:

➔ [Canceling Jobs \(page 5-18\)](#)

- 1** Double-click the printer icon () displayed on the taskbar at the bottom right of the Windows desktop to display a dialog box for the printer.
- 2** Click the file for which you wish to cancel printing and select [Cancel] from the "Document" menu.

Printing from the Handheld Device

This machine supports the AirPrint and Mopria. According to the supported OS and application, you can print the job from any handheld device or computer without installing a printer driver.

Printing by AirPrint

AirPrint is a printing function that is included standard in iOS 4.2 and later products, and Mac OS X 10.7 and later products.

To use the AirPrint, make sure that the AirPrint setting is enabled in the Command Center RX.

➔ **Command Center RX User Guide**



Printing by Mopria

Mopria is a standard on printing function included in Android 4.4 or later products.

Mopria Print Service needs to be installed and enabled in advance.

For details on how to use, refer to a Web site of Mopria Alliance.



Printing with Wi-Fi Direct

Wi-Fi Direct is a wireless LAN standard that Wi-Fi Alliance has been established. This is one of the functions of the wireless LAN, without a wireless LAN access point or wireless LAN router, between devices can communicate directly on a peer to peer basis.

The printing procedure by the Wi-Fi Direct is the same as that from the normal handheld devices.

When you use a printer name or Bonjour name on the port settings of the printer property, you can print the job by specifying the name at Wi-Fi Direct connection.

When you use an IP address for the port, specify the IP address of this machine.

Printing with NFC

When the Wi-Fi and Wi-Fi Direct has been configured in advance, the network between this machine and handheld device will be configured by simply tapping an NFC tag.

➔ [Configuring the Wireless Network \(page 2-35\)](#)

➔ [Setting Wi-Fi Direct \(page 2-41\)](#)

Printing Data Saved in the Printer

You can save the print job into the Job Box of this device and print it as necessary.

If you configure settings in the **[Job]** tab of the printer driver and then print, the print job will be saved in the Job Box (memory) and printing can be executed at the machine.

To print the job in Job Box, specify the Job Box from a computer and sending the print job, then specify a file within a Box and printing it, using the operation panel.

You can print the documents from the following boxes.

- ➔ [Printing Documents from Private Print Box \(page 4-21\)](#)
- ➔ [Printing Document from Stored Job Box \(page 4-22\)](#)
- ➔ [Printing Document from Quick Copy Box \(page 4-24\)](#)
- ➔ [Printing Document from Proof and Hold Box \(page 4-25\)](#)
- ➔ [Printing Documents from PIN Print Box \(page 4-26\)](#)
- ➔ [Printing Document from the Universal Print box \(page 4-27\)](#)

Specifying the Job Box from a Computer and Storing the Job

1 Click **[File]** and select **[Print]** in the application.

The Print dialog box displays.

2 Click the **[▼]** button of the Name to select the machine from the list.

3 Click the **[Properties]** button.

The Properties dialog box displays.

4 Click the **[Job]** tab and select the **[Job storage (e-MPS)]** check box to set the function.



NOTE

For information on how to use the printer driver software, refer to the following:

- ➔ **Printer Driver User Guide**

Printing Documents from Private Print Box

In Private Printing, you can specify that a job is not to be printed until you operate the machine. When sending the job from the application software, specify a password in the printer driver. The job is released for printing by entering the password on the operation panel, ensuring confidentiality of the print job. If you do not specify a password, you will be able to print without entering a password. The data will be deleted upon completion of the print job or after the power switch is turned off.

1 Display the screen.

- 1 [Home] key > [Job Box]
- 2 Select [Private Print/Stored Job].
- 3 Select the creator of the document.

2 Print the document.

- 1 Select the document to print > [Print]
- 2 Enter the password.
If a password is not set, go to step 3.
- 3 Specify the number of copies to print as desired.
- 4 Select [Start Print].
Printing starts.
Upon completion of printing, the Private Print job is automatically deleted.


Deleting the Documents Stored in the Private Print Box

1 Display the screen.

- 1 [Home] key > [Job Box]
- 2 Select [Private Print/Stored Job].
- 3 Select the creator of the document.

2 Delete the document.

- 1 Select the document to delete > [Delete]

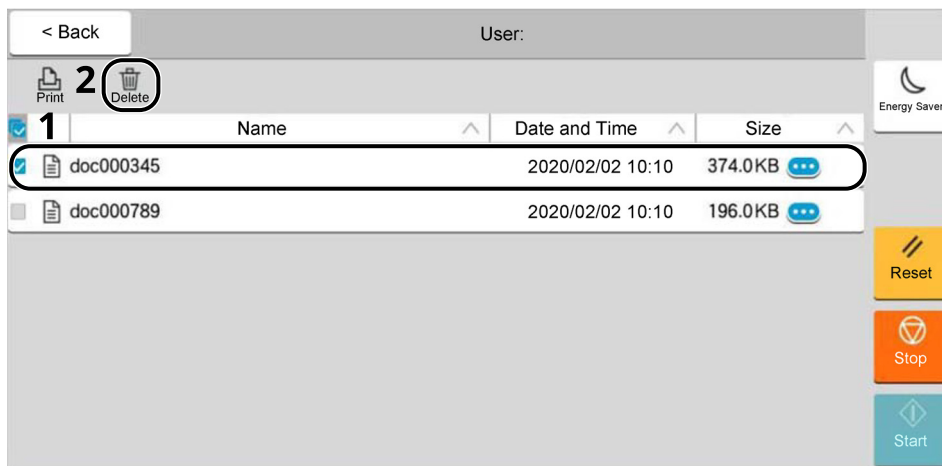

- 2 If the document is protected by a password, enter the password.
The document is deleted.

Printing Document from Stored Job Box

In Stored Job, the print data sent from the application is saved to the machine. You can set up a password as necessary. If you set up a password, enter the password when printing. Print data will be stored in the Stored Job Box after printing. This will allow printing of the same print data repeatedly.

1 Display the screen.

- 1 [Home] key > [Job Box]
- 2 Select [Private Print/Stored Job].
- 3 Select the creator of the document.

2 Print the document.

- 1 Select the document to print > [Print]
- 2 Enter the password.
- 3 Specify the number of copies to print as desired.
- 4 Select [Start Print].

Printing starts.



NOTE

If the document is protected by a password, the password entry screen will be displayed. Enter the password.

Simple Job Printing

When you save a print job performed via user login to the Stored Job Box, logging in with an ID card at the time of printing displays a list of your print jobs in the Stored Job Box. When you run the print job, printing starts immediately.

User login administration that uses the optional ID card Authentication Kit is required. For details on user login administration for printing, refer to the following:

- ➔ [Adding a User \(Local User List\) \(page 9-6\)](#)
- ➔ [User Login Administration for Printing \(page 9-10\)](#)

For ID card settings, refer to the following:

- ➔ [ID Card Settings \(page 9-25\)](#)

For Simple Job Printing settings, refer to the following:

- ➔ [Quick Job Printing \(page 9-26\)](#)

Deleting the Documents Stored in the Stored Job Box

1 Display the screen.

- 1 [Home] key > [Job Box]
- 2 Select [Private Print/Stored Job].
- 3 Select the creator of the document.

2 Delete the document.

- 1 Select the document to delete > [Delete]
- 2 If the document is protected by a password, enter the password.
The document is deleted.

Printing Document from Quick Copy Box

Quick Copy feature facilitates additional prints of a document already printed. Activating Quick Copy and printing a document using the printer driver allow the print data to be stored in the Quick Copy Job Box. When additional copies are required, you can reprint the required number of copies from the touch panel. By default, up to 32 documents can be stored. When power is turned off, all stored jobs will be deleted.

NOTE

- When the number of jobs reaches the limit, the oldest job will be overwritten by the new one.
- To maintain free space on the box, you can set the maximum number of stored jobs.

➔ [Quick Copy Job Retention \(page 8-53\)](#)

1 Display the screen.

- 1 [Home] key > [Job Box]
- 2 Select [Quick Copy/Proof and Hold].
- 3 Select the creator of the document.

2 Print the document.

- 1 Select the document to print > [Print]
- 2 Specify the number of copies to print as desired.
- 3 Select [Start Print].
Printing starts.

Deleting the Documents Stored in the Quick Copy Box

1 Display the screen.

- 1 [Home] key > [Job Box]
- 2 Select [Quick Copy/Proof and Hold].
- 3 Select the creator of the document.

2 Delete the document.

Select the document to delete > [Delete] > [Delete]
The document is deleted.

Printing Document from Proof and Hold Box

The Proof and Hold feature produces only a single proof print of multiple-print job and holds printing of the remaining copies. Printing a multiple-print job in Proof and Hold using the printer driver allows only a single copy to be printed while maintaining the document data in the Job Box. To continue to print the remaining copies, use the touch panel. You can change the number of copies to print.

1 Display the screen.

- 1 [Home] key > [Job Box]
- 2 Select [Quick Copy/Proof and Hold].
- 3 Select the creator of the document.

2 Print the document.

- 1 Select the document to print > [Print]
- 2 Specify the number of copies to print as desired.
- 3 Select [Start Print].
Printing starts.

Deleting the Documents Stored in the Proof and Hold Box

1 Display the screen.

- 1 [Home] key > [Job Box]
- 2 Select [Quick Copy/Proof and Hold].
- 3 Select the creator of the document.

2 Delete the document.

- Select the document to delete > [Delete] > [Delete]
The document is deleted.

Printing Documents from PIN Print Box

This PIN Print Box holds printing when printing is executed from applications that use the IPP protocol, such as AirPrint and Mopria. A pending print job can be output by entering the PIN code that was set at the time of printing. When printing was executed without a PIN code, you do not need to enter the PIN code when outputting.

1 Display the screen.

- 1 [Home] key > [Job Box]
- 2 Select [PIN Print].
- 3 Select the creator of the document.

2 Print the document.

- 1 Select the document to print > [Print]
- 2 Set the PIN code.
If a PIN code is not set, go to step 3.
- 3 Specify the number of copies to print as desired.
- 4 Select [Start Print].
Printing starts.

Deleting the Documents Stored in the PIN Print Box

1 Display the screen.

- 1 [Home] key > [Job Box]
- 2 Select [PIN Print].
- 3 Select the creator of the document.

2 Delete the document.

- 1 Select the document to delete > [Delete] > [Delete]
The document is deleted.

Printing Document from the Universal Print box

For enhanced security, Universal Print allows PIN codes to be set for print jobs. Jobs for which PIN codes have been set will be saved in the cloud without being printed. Enter a PIN code from the operation panel to make jobs printable from this machine.

NOTE

- To use Universal Print, you must register this machine as a shared printer.
- ➔ [Register this machine on Universal Print \(page 4-9\)](#)
- In order to use Universal Print, it is necessary for Windows 11 or Microsoft365 license, and Azure Active Directory account. If not, please acquire those license and the account.


Save jobs to the Universal Print box

1 Display the screen.

Click [**File**] and select [**Print**] in the application.

2 Configure the settings.

- 1 Select a registered shared printer from the "Printer" menu, and click the [**Properties**] button.

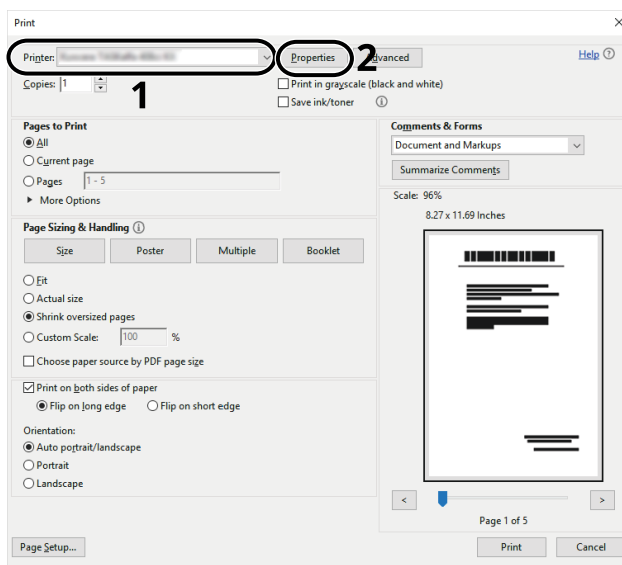

- 2 Click [**Advanced**].

- 3 Set [**PIN protected printing**] to [**On**], and set a 4-digit PIN code in [**PIN protected printing PIN**].

- 4 Select [**OK**] button > [**OK**] button in order, and return to the print dialog box.

3 Start printing.

Click the [**OK**] button.

Print jobs saved in the Universal Print box

1 Display the screen.

- 1 [Home] key > [Universal Print]
- 2 Select the creator of the document.

2 Print the document.

- 1 Select the document to print > [Print].
- 2 Enter the PIN code
- 3 Enter the number of copies, if necessary.
- 4 Select [Start Print].

Printing starts.

Automatically the Universal Print data is automatically deleted once printing is complete.

Deleting the Documents Stored in the Universal Print Box

1 Display the screen.

- 1 [Home] key > [Universal Print]
- 2 Select the creator of the document.

2 Delete the document.

Select the document to delete > [Delete] > [Delete]

The document is deleted.

Monitoring the Printer Status (Status Monitor)

The Status Monitor monitors the printer status and provides an ongoing reporting function.



NOTE

When you activate Status Monitor, check the status below.

- KX DRIVER is installed.
- Either [Enhanced WSD] or [Enhanced WSD(TLS)] is enabled.

➔ [Network Settings \(page 8-57\)](#)

Accessing the Status Monitor

The Status Monitor also starts up when printing is started.


Exiting the Status Monitor

Use either of the methods listed below to exit the Status Monitor.

- Exit manually:
Click the settings icon and select Exit in the menu to exit the Status Monitor.
- Exit automatically:
The Status Monitor automatically shuts down after 7 minutes if it is not being used.

Quick View State

The status of the printer is displayed using icons. Detailed information is displayed when the Expand button is clicked.

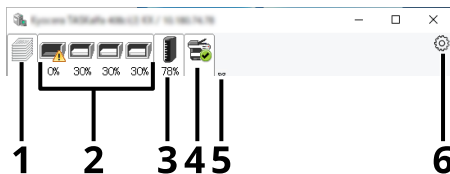


- 1 Printing progress tab
- 2 Paper tray status tab
- 3 Toner status tab
- 4 Alert tab
- 5 Expand button
- 6 Settings icon

Detailed information is displayed by clicking on each icon tab.

Printing Progress Tab

The status of the print jobs is displayed.

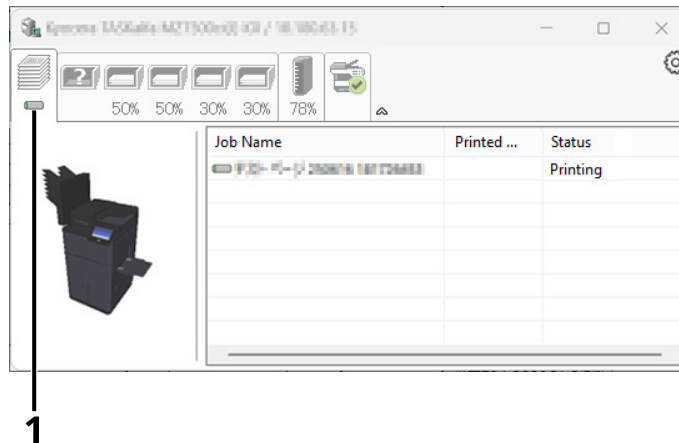


- 1 Status icon
- 2 Job list

Select a job on the job list and it can be canceled using the menu displayed with a right-click.

Paper Tray Status Tab


Information is displayed about the paper in the printer and about the amount of paper remaining.

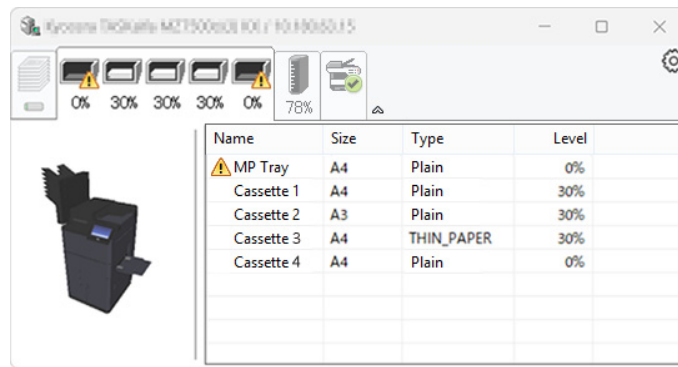

Toner Status Tab


The amount of toner remaining is displayed.

The numerical values shown in the toner level icons represent the average of the remaining toner levels of the two toners of the same color listed in the toner list (for example, Black and Black 2).

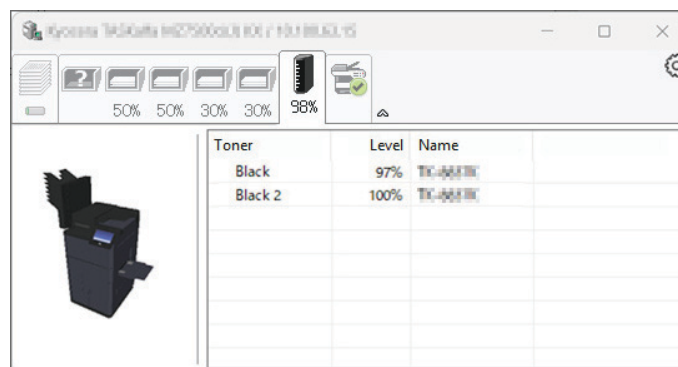


Alert Tab

If an error occurs, a notice is displayed using a 3D image and a message.

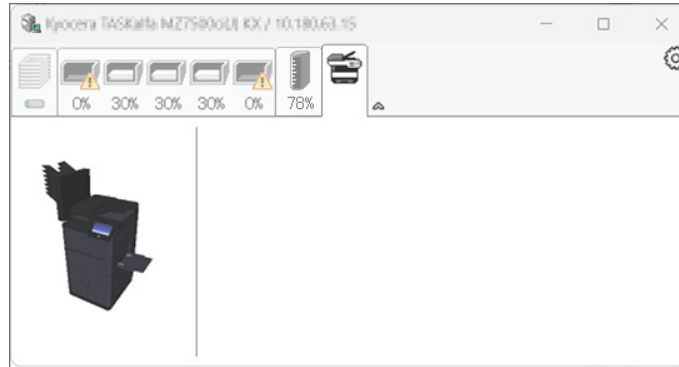

Status Monitor Context Menu


The following menu is displayed when the settings icon is clicked.

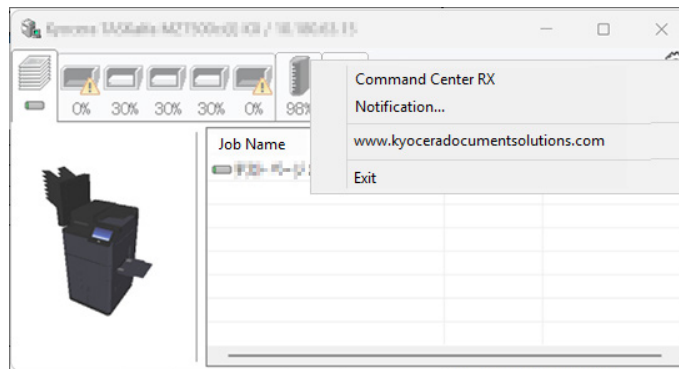

- **Command Center RX**
If the printer is connected to a TCP/IP network and has its own IP address, use a web browser to access the Command Center RX to modify or confirm the network settings. This menu is not displayed when using USB connection.
➔ **Command Center RX User Guide**
- **Notification...**
This sets the display of the Status Monitor.
➔ [Status Monitor Notification Settings \(page 4-32\)](#)
- **www.kyoceradocumentsolutions.com**
Open our website.
- **Exit**
Exits the Status Monitor.

Status Monitor Notification Settings

The Status Monitor settings and event list details are displayed.

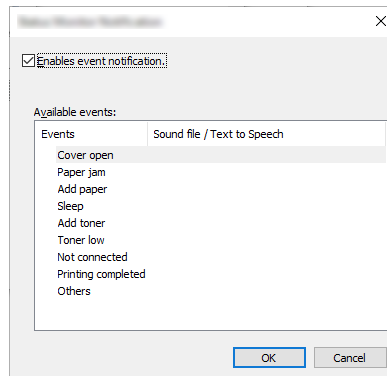

Select whether notification is performed when an error in the event list occurs.


1 Select Enable event notification.

If this setting is set to Off, then the Status Monitor will not start up even when printing is executed.

2 Select an event to use with the text to speech function in Available events.

3 Click Sound file / Text to Speech column.

Click the browse (...) button to notify the event by sound file.

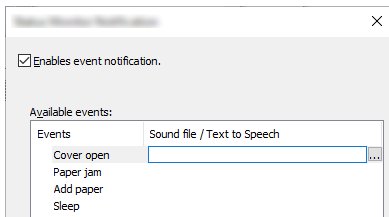

NOTE

The available file format is WAV.

When customizing the message texts to read on the screen aloud, enter the texts in the text box.

5 Operation on the Machine

This chapter explains the following topics:

Loading Originals	5-2	Using Document Boxes	5-51
Placing Originals on the Platen	5-2	What is Custom Box?	5-51
Loading Originals in the Document Processor	5-4	What is Job Box?	5-51
Favorites	5-7	What is USB Drive Box?	5-52
Registering Favorites	5-8	What is a Fax Memory RX Box/F-Code	
Recalling Favorites	5-8	Communication Box/Polling Box?	5-52
Editing Favorites	5-9	Basic Operation for Document Box	5-53
Deleting Favorites	5-9	Creating a New Custom Box	5-58
Application	5-10	Editing Custom Box	5-59
Installing Applications	5-10	Deleting Custom Box	5-60
Activating Applications	5-11	Storing Documents to a Custom Box	5-60
Deactivating Applications	5-11	Printing Documents in Custom Box	5-61
Uninstalling Applications	5-12	Saving Scanned Documents to a Custom Box .	5-62
Registering Shortcuts	5-13	Sending Documents in Custom Box	5-63
Adding Shortcuts	5-13	Sending Documents in Custom Box to	
Editing Shortcuts	5-14	E-mail Address of Logged in User	5-64
Deleting Shortcuts	5-14	Moving Documents in Custom Box	5-64
Copying	5-15	Copying Documents in Custom Box into	
Basic Operation	5-15	Other Boxes	5-65
Proof Copy	5-17	Copying Documents in Custom Box to	
Interrupt Copy	5-18	USB Drive	5-65
Canceling Jobs	5-18	Joining Documents in Custom Box	5-66
Frequently-Used Sending Method	5-19	Deleting Documents in Custom Box	5-67
Sending Document via E-mail	5-20	Job Box	5-68
Sending Document to Desired Shared Folder on a		Outputting Repeat Copy Jobs	5-68
Computer (Scan to PC)	5-22	Form for Form Overlay	5-69
Sending Document to Folder on an FTP Server		Operating using Removable USB Drive	5-70
(Scan to FTP)	5-25	Printing Documents Stored in Removable	
Scanning using TWAIN or WIA	5-27	USB Drive	5-71
Scanning Document stored in a Custom Box	5-28	Saving Documents to USB Drive (Scan to	
Scan to Cloud Function		USB)	5-72
(Kyocera Cloud Capture)	5-29	Check the USB Drive Information	5-73
Uploading Scanned Data to Google Drive ...	5-29	Removing USB Drive	5-73
Useful Sending Method	5-32	Using the Internet Browser	5-74
WSD Scan	5-33	Launching and Exiting the Browser	5-74
Installing the Driver (for Windows)	5-33	Using the Browser Screen	5-75
Executing WSD scan	5-34	Manual Staple	5-76
Scanning with File Management Utility	5-35		
Using MultiCrop Scan	5-36		
Sending to Different Types of Destinations			
(Multi Sending)	5-38		
Send to Me (Email)	5-39		
Using a Fax Server to Send (Fax Server Send)	5-40		
Canceling Sending Jobs	5-42		
Handling Destination	5-43		
Specifying Destination	5-43		
Choosing from the Address Book	5-43		
Choosing from the One Touch Key	5-46		
Choosing from the Search (No.)	5-46		
Checking and Editing Destinations	5-47		
Confirmation Screen of Destinations	5-48		
Re-enter new recipient information.	5-49		
Recall	5-49		
How to use the FAX Function	5-50		

Loading Originals

Load the originals on the platen or document processor, depending on the original size, type, volume, and function.

Platen

Place the sheet, book, postcards, and envelopes.


Document Processor

Place the multiple originals. You can also place the two sided originals.

Placing Originals on the Platen

You may place books or magazines on the platen in addition to ordinary sheet originals.

1 Put the scanning side facedown.

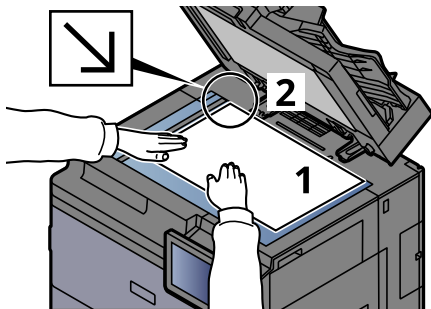


2 Align it flush against the original size indicator plates with the back left corner as the reference point.

NOTE

- A5 is detected as A4-R. Set the paper size to A5 by using the function key on the touch panel.
 - ➔ [Original Size \(page 6-20\)](#)
- For details on Original Orientation, refer to the following:
 - ➔ [Original Orientation \(page 6-26\)](#)

When you place envelopes or cardstock on the platen

1 Put the scanning side facedown.

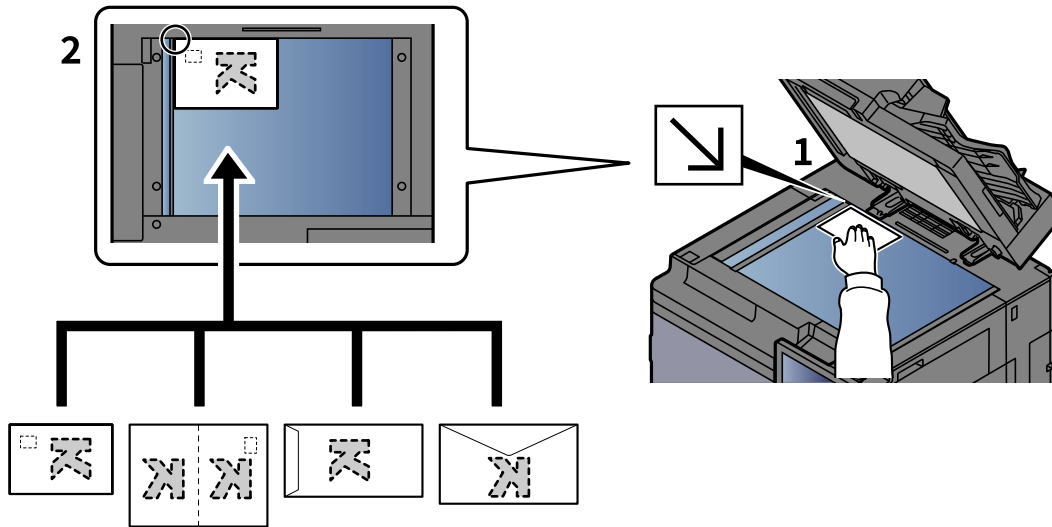

2 Align it flush against the original size indicator plates with the back left corner as the reference point.

NOTE

For the procedure for feeding envelopes or cardstock, refer to the following:

➔ [When you load envelopes or cardstock in the multipurpose tray \(page 3-16\)](#)

CAUTION

Do not leave the document processor open as there is a danger of personal injury.

IMPORTANT

- Do not push the document processor forcefully when you close it. Excessive pressure may crack the platen glass.
- When placing books or magazines on the machine, do so with the document processor in the open position.

Loading Originals in the Document Processor

The document processor automatically scans each sheet of multiple originals. Both sides of two-sided originals are scanned.

The document processor supports the following types of originals.

Detail	Document Processor
Weight	35 to 220 g/m ² (duplex: 50 to 220 g/m ² , Straight Path tray: 35 to 500 g/m ²) Sizes smaller than B6-R are 50 to 105 g/m ² (1-side/duplex)
Sizes	Maximum A3/Ledger (11.69" × 17"/ 297 × 432 mm) (Long-sized 11.69" × 86.62"/ 297 × 1,220 mm) to Minimum A6-R/Statement-R (4.13" × 5.82"/105 × 148 mm), 53.98 × 85.6 mm, thickness 0.76 mm ISO/IEC 7810-compliant card (When using the straight path tray)
No. of sheets	500 sheets (50 to 80 g/m ² , Sizes smaller than A4/Letter) 30 sheets (Mixed size originals) 1 sheet (When using the straight path tray) 50 sheets (When using business card size in straight path)


Do not use the document processor for the following types of originals. Otherwise, the originals may be jammed or the document processor may become dirty.

- Originals bound with clips or staples (Remove the clips or staples and straighten curls, wrinkles or creases before loading. Failure to do so may cause the originals to jam.)
- Originals with adhesive tape or glue
- Originals with cut-out sections
- Curled original
- Originals with folds (Straighten the folds before loading. Failure to do so may cause the originals to jam.)
- Carbon paper
- Crumpled paper
- Embossed card with raised text and numbers (When using business card size in straight path)

✔ IMPORTANT


- Before loading originals, be sure that there are no originals left on the original eject table. Originals left on the original eject table may cause the new originals to jam.
- Do not make an impact on the document processor top cover, such as aligning the originals on the top cover. It may cause an error in the document processor.

1 Adjust the original width guides.

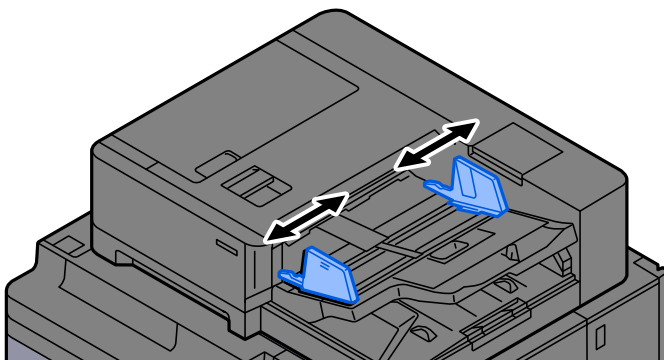

2 Place the originals.

- 1 Put the side to be scanned (or the first side of two-sided originals) face-up. Slide the leading edge into the document processor as far as it will go. The original loaded indicator lights when the original is placed correctly.

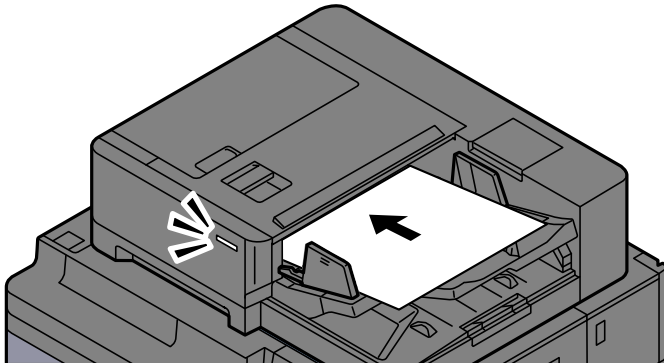

NOTE


For details on Original Orientation, refer to the following:

➔ [Original Orientation \(page 6-26\)](#)




IMPORTANT

- Confirm that the original width guides exactly fit the originals. If there is a gap, readjust the original width guides. The gap may cause the originals to jam.

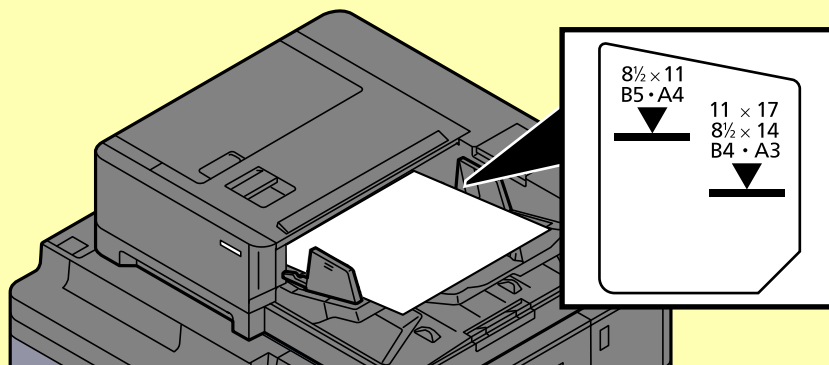


- Ensure that loaded originals do not exceed the level indicator. Exceeding the maximum level may cause the originals to jam.
- Originals with punched holes or perforated lines should be placed in such a way that the holes or perforations will be scanned last (not first).

- 2 Open the original stopper to fit the size of the original set (Original size: B4/Legal or more).
Adjust the stopper position to match the original size.

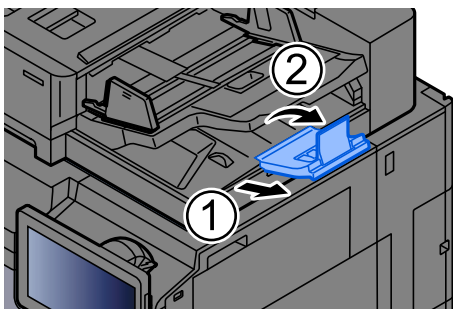

NOTE

When using the Document Processor Straight Path function, open the straight path tray.

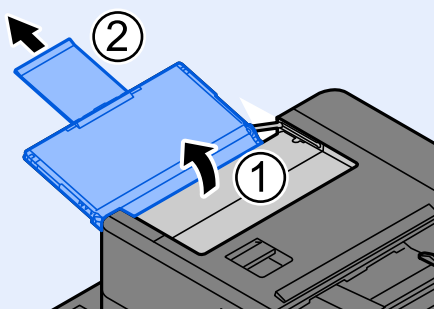

Favorites

After you add frequently used functions to Favorites, you can recall them quickly and easily. You can also name the favorites for easy identification when recalling.

The favorites below have been preregistered. The registered contents can be re-registered for easier use in your environment.

Favorite name	Description	Default Registration
ID Card Copy	Use this when you want to copy a driver's license or an insurance card. When you scan the front and back of the card, both sides will be combined and copied onto a single sheet.	<ul style="list-style-type: none"> • Copying Functions • Original Size: [A5]/[Statement] • Paper Selection: [Cassette 1] • Zoom: [100%] • Erase Shadowed Areas: [On]
Eco Copy	Use this to save toner consumption when printing. This changes color printing to black & white with lighter density, so that the toner consumption can be reduced.	<ul style="list-style-type: none"> • Copying Functions • EcoPrint: [On] (Level [5])
Newspaper Copy	Use this when you want to copy a newspaper article, or other originals printed on a colored substrate. This adjusts the image quality so that the color of the substrate or the text on the reverse side will not show on the copy.	<ul style="list-style-type: none"> • Copying Functions • Prevent Bleed-thru: [On] • Background Density Adj.: [Auto]
Technical Drawing Copy	Use this when you want to copy a drawing that contains shapes drawn with lines, and graphics. Use this also when you want to copy colored lines in black & white.	<ul style="list-style-type: none"> • Copying Functions • Original Image: [Text] • Sharpness (All): [+3] • Background Density Adj.: [Auto]
Confidential Stamp	Use this to show a translucent text "Confidential" on the center of the document.	<ul style="list-style-type: none"> • Copying Functions • Prevent Bleed-thru: [On] • Stamp: [Confidential] • Font Size: [middle] • Font Color: [Black] • Stamp Position: [Center] • Display Pattern: [Transparent]

NOTE

- Up to 50 functions combining copying and sending can be registered in the favorites.
- If user login administration is enabled, you can only register functions by logging in with administrator privileges.

Registering Favorites

The following procedure is an example of registering the copying function.

1 Display the screen.

- 1 [Home] key > [Copy]
- 2 Select [Favorites] while the copy mode is accessed.

2 Register the favorite.

- 1 [Add/Edit] > Select a number (01 to 50) for the favorite number



NOTE

If you register on a favorite number already registered, delete the currently registered favorite before registering.

- 2 Enter the new favorite name > [Register]
The favorite is registered.
To display a registered favorite on the Home screen, select [Add] on the confirmation screen that appears.
- 3 Select [OK].

Recalling Favorites

1 Recall the favorite.

- 1 [Home] key > [...] > [Favorites] or select the icon of a favorite.
If you selected the icon of a favorite, that favorite will be recalled. If you selected [Favorites], proceed to step 1-2.
- 2 Select the favorite number you want to recall.
Select [Search] to enter the favorite number (01 to 50) directly for recalling.



NOTE

If the favorite cannot be recalled, the Document Box or the form overlay specified in the favorite might have been deleted. Check the Document Box.

2 Execute the favorite.

Place the originals > [Start] key



NOTE

[Favorites] can be selected in each function to call up the favorite registered for the function.

Editing Favorites

You can change favorite number and favorite name.

1 Display the screen.

- 1 [Home] key > [...] > [Favorites]
- 2 Select [Add/Edit].

2 Edit the favorite.

- 1 Select corresponding to the favorite number (01 to 50) to change.
- 2 Select [Edit] to change the favorite number and favorite name.
 - ➔ [Registering Favorites \(page 5-8\)](#)
- 3 [OK] > [OK]

Deleting Favorites

1 Display the screen.

- 1 [Home] key > [...] > [Favorites]
- 2 Select [Add/Edit].

2 Delete the favorite.

- 1 Select corresponding to the favorite number (01 to 50) to delete.
- 2 [Delete] > [Delete]

Application

The functionality of the machine can be expanded by installing applications.

Applications that help you perform your daily more efficiently such as a scan feature and an authentication feature are available.

For details, consult your sales representative or dealer.

Installing Applications

To use applications, first install the application in the machine and then activate the application.

NOTE

You can install applications and certificates on the machine. The number of applications you can run may vary according to the type of application.

1 Display the screen.

[Home] key > [...] > [System Menu] > [Add/Delete Application] > "Application" [Add/Delete Application]

NOTE

- If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.
- Select [Print Report] to print an application report.

2 Install the application.


1 [Add] > [OK]

2 Insert the USB drive containing the application to be installed into the USB Memory Slot.

NOTE

When the message "USB Drive is recognized. Displaying files." is displayed, select [Cancel].

3 Select the application to be installed > [Install]

You can view detailed information on the selected application by selecting [] (information icon).

4 Select [Yes].

Installation of the application begins. Depending on the application being installed, the installation may take some time.

Once the installation ends, the original screen reappears.

NOTE

- To install another application, repeat steps 2-3 and 2-4.
- To remove the USB drive, select [Remove USB] and wait until the message "USB Drive can be safely removed." appears. Then remove the USB drive.

Activating Applications

1 Display the screen.


[Home] key > [...] > [System Menu] > [Add/Delete Application] > "Application" [Add/Delete Application]

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 Activate the application.

1 Select the desired application > [Activate]

You can view detailed information on the selected application by selecting [] (information icon).

2 Enter the license key > [Official]

Some applications do not require you to enter a license key. If the license key entry screen does not appear, go to step 2-3. To use the application as a trial, select [Trial] without entering the license key.

3 Select [Yes].

IMPORTANT

- If you change the date/time while using the trial version of an application, you will no longer be able to use the application.
- Icons of activated application are displayed in the Home screen.

4 Select the application icon in the Home screen.

Select the application icon.

The application will start up.

Deactivating Applications

1 Display the screen.

[Home] key > [...] > [System Menu] > [Add/Delete Application] > "Application" [Add/Delete Application]

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 Deactivate the application.

Select the desired application to exit > [Deactivate]

NOTE

- Select [x] on the screen if you want to exit the already activated application.
- The procedure for exiting some applications may differ.

Uninstalling Applications

1 Display the screen.

[Home] key > [...] > [System Menu] > [Add/Delete Application] > "Application" [Add/Delete Application]




NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 Delete the application.

1 Select the application you want to delete > [Delete]

You can view detailed information on the selected application by selecting [] (information icon).

2 Select [Yes].

Registering Shortcuts

You can register shortcuts for easy access to the frequently used functions. A function name linked to a registered shortcut can be changed as necessary.

Adding Shortcuts

Shortcut registration is performed in the basic screen of each function.


1 Display the basic screen you want to register.

2 Register the shortcuts.

1 Select **[Shortcut]**.

Display the shortcut menu.

2 Select **[Add]**.

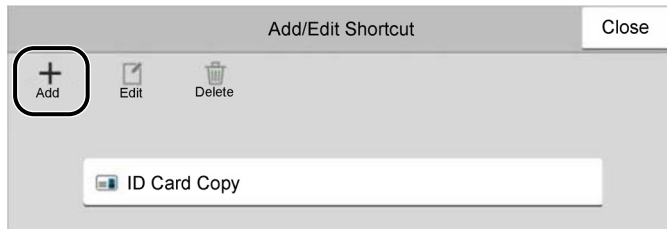

3 Select the settings you want to add > **[Next >]**

4 Enter the shortcut name > **[Next >]**.

NOTE

The function name will be displayed if you do not enter a shortcut key.

5 Confirm the entry.


Select **[Shortcut Name]**, **[Function]**, or **[Permission]** to change the settings.

NOTE

[Permission] is displayed when the user login administration is enabled.

6 Select **[Finish]**.


The shortcut is registered.

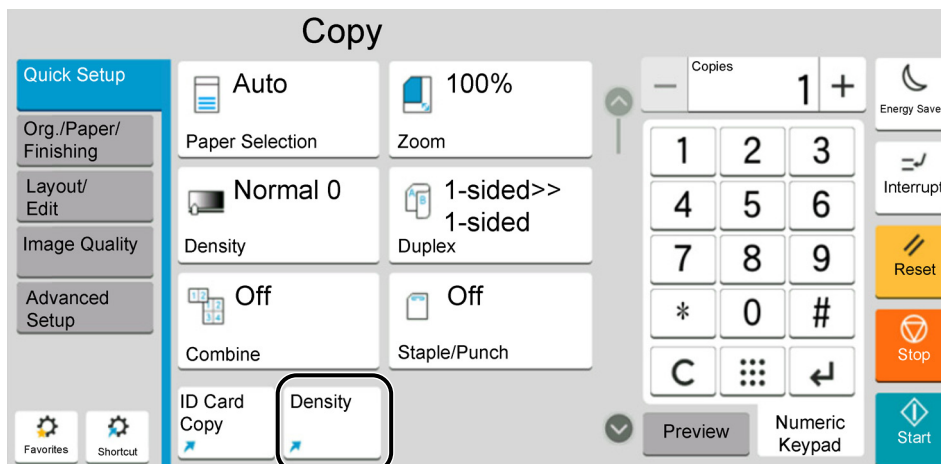

Editing Shortcuts

1 Display the screen.

1 Select [**Shortcut**].
Display the shortcut menu.

2 Select [] (edit icon).

2 Edit the shortcut.

1 Select the shortcut key you want to edit.

2 Select [**Edit**].


3 Select [**Shortcut Name**] or [**Function**] > Change the settings > [**OK**].

4 [**Finish**] > [**Update**]

Deleting Shortcuts

1 Display the screen.

1 Select [**Shortcut**].
Display the shortcut menu.

2 Select [] (edit icon).

2 Delete the shortcut.

Select the shortcut key you want to delete > [**Delete**] > [**Delete**]


Copying

The procedures here represent the basic copy operation and how to cancel the copy.

Basic Operation

1 [Home] key > [Copy]

2 Place the originals.

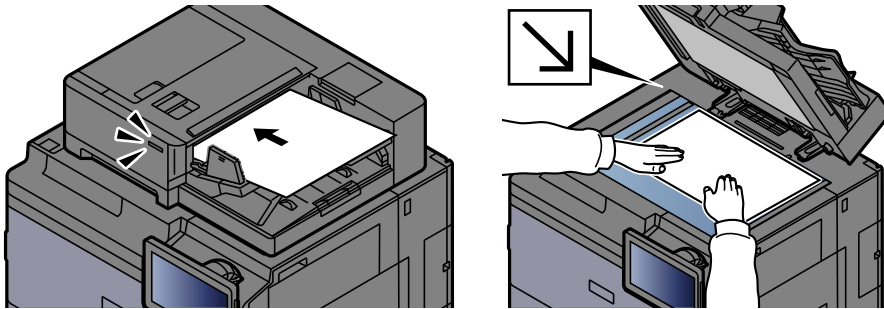

➔ [Loading Originals \(page 5-2\)](#)


3 Select the functions.

To configure the settings for functions, select the Global Navigation.

➔ [About Functions Available on the Machine \(page 6-2\)](#)


4 Use the numeric keys to enter the copy quantity.

Select the area for inputting the number of sheets to display the numeric keypad. Or, use [+] or [-] to enter the number of sheets. Specify the desired number up to 9999.

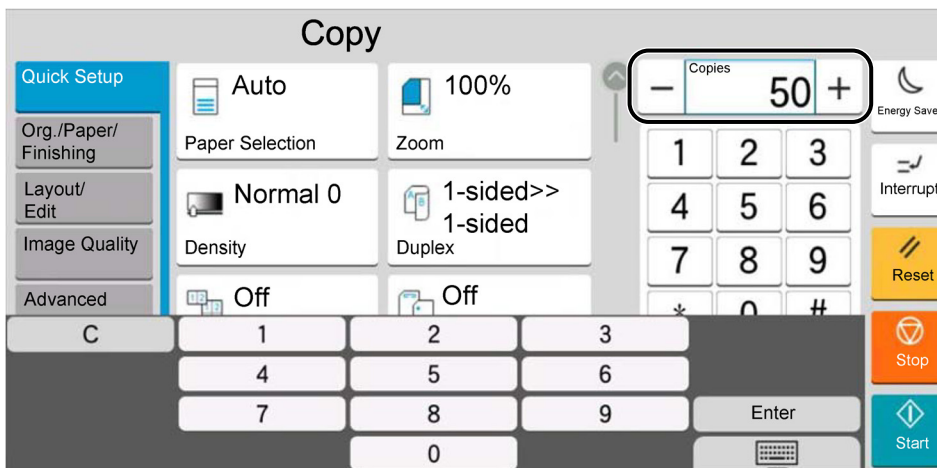

5 Check the preview image.

Select [**Preview**] tab > [**Preview**] to show a preview image.

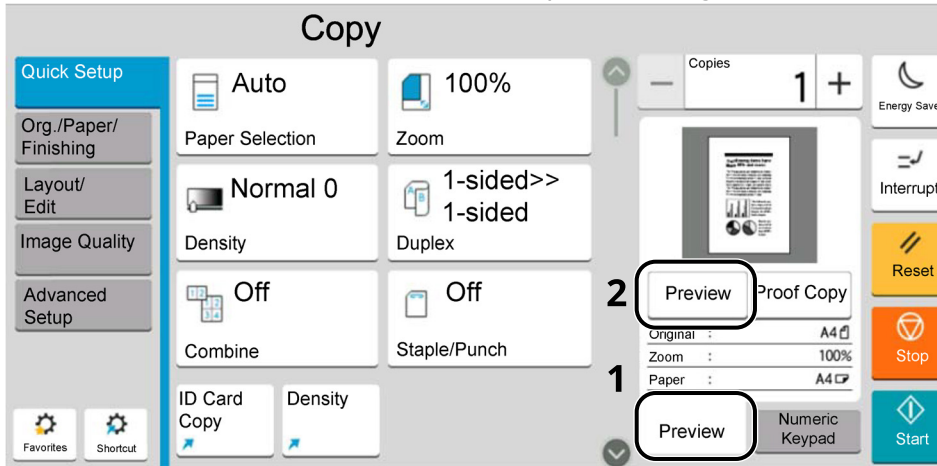

➔ [Original Preview \(page 2-23\)](#)


6 Press the [Start] key.

Copying begins.

NOTE

This function allows you to reserve the next job during printing. Using this function, the original will be scanned while the machine is printing. When the current print job ends, the reserved copy job is printed. If "Reserve Next Priority" is set to [Off], [**Reserve Next**] will appear. Select [**Reserve Next**] and configure the necessary settings for the copy job.

➔ [Reserve Next Priority \(page 8-38\)](#)

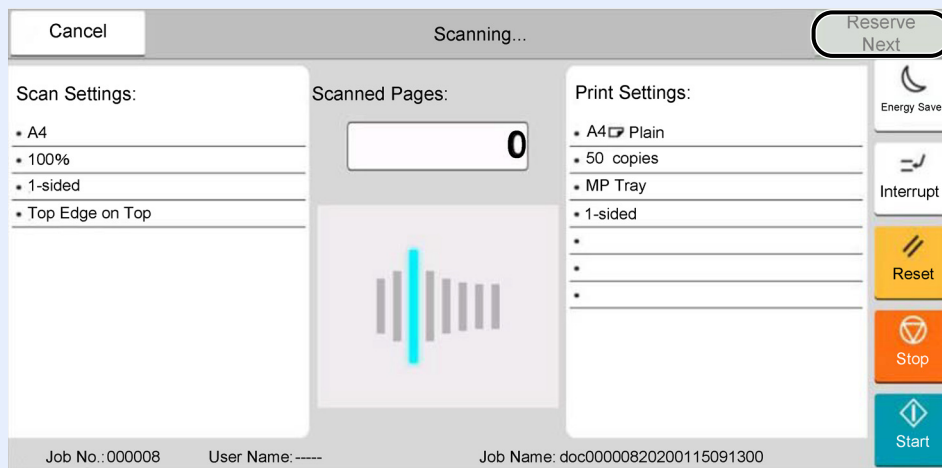


Proof Copy

It is possible to copy one sheet before copying a large number of sheets. This enables you to check the contents and finishing and copy the desired number of sheets without scanning the original if you are satisfied with the result. If you want to make changes, you can change the settings and copy only one sheet again.

1 Configure the settings.

Place the originals onto the machine, and configure the copy settings.

2 Select [Preview] tab > [Proof Copy].

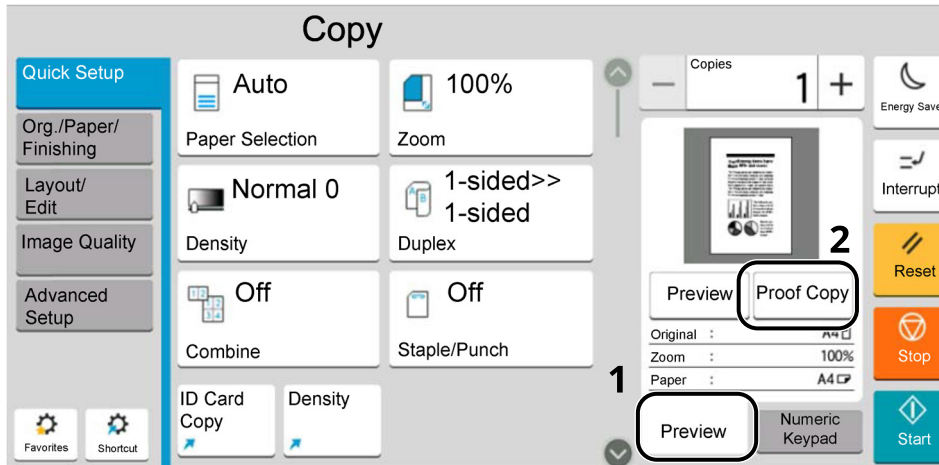

A confirmation copy is printed.

3 Check.

Check contents and finishing.

Modify copy settings according to results. All functions except for functions whose keys are grayed out on the touch panel can be corrected.

To perform a proof copy again, select [**Proof Copy**].

4 Press the [Start] key.

Remaining sheets are copied.

Interrupt Copy

This function allows you to pause the current jobs in progress when you need to make copies immediately. When the interruption copy ends, the machine resumes the paused print jobs.

NOTE

- If the machine is left unused for 60 seconds in interrupt copy mode, interrupt copying is automatically cancelled and printing resumes.
You can change the delay until interrupt copying is canceled. Change the delay as required.
 - ➔ [Interrupt Clear Timer \(page 8-10\)](#)
- The interrupt copy function may be unavailable depending on the status of document finisher usage. In this case, try the priority override.
 - ➔ [Priority Override \(page 6-72\)](#)

1 Configure the settings.

- 1 Select the [**Interrupt**] key.
The current print job is temporarily interrupted.
- 2 Place the originals onto the machine for interrupt copy, and configure the copy settings.

2 Press the [**Start**] key.

Interrupt copying begins.

3 When interrupt copying ends, select the [**Interrupt**] key.

The machine resumes the paused print jobs.

Canceling Jobs

1 Select the [**Stop**] key with the copy screen displayed.

2 Cancel a job.

When there is a job is being scanned

The copy job is canceled.

When there is a job printing or on standby

Canceling job screen appears. The current print job is temporarily interrupted.

Select the job you wish to cancel > [**Cancel**] > [**Yes**]

NOTE

If "Reserve Next Priority" is set to [**Off**], the Copying screen appears in the touch panel. In such case, selecting the [**Stop**] key or [**Cancel**] will cancel the printing job in progress.

- ➔ [Reserve Next Priority \(page 8-38\)](#)

Frequently-Used Sending Method


This machine can send a scanned image as an attachment of an E-mail message or to a PC linked to the network. In order to do this, it is necessary to register the sender and destination (recipient) address on the network.

A network environment which enables the machine to connect to a mail server is required in order to send E-mail. It is recommended that a Local Area Network (LAN) be used to assist with transmission speed and security issues.

Follow the steps below for basic sending. The following four options are available.

- Send as E-mail (E-mail Addr Entry): Sends a scanned original image as an E-mail attachment.

➔ [Sending Document via E-mail \(page 5-20\)](#)

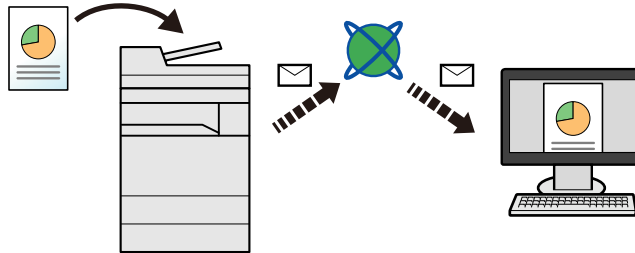


- Send to Folder (SMB): Stores a scanned original image in a shared folder of any PC.

➔ [Sending Document to Desired Shared Folder on a Computer \(Scan to PC\) \(page 5-22\)](#)

- Send to Folder (FTP): Stores a scanned original image in a folder of an FTP server.

➔ [Sending Document to Folder on an FTP Server \(Scan to FTP\) \(page 5-25\)](#)

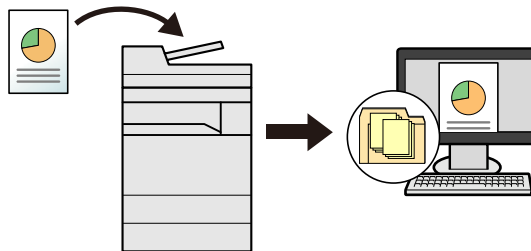

- Image Data Scanning with TWAIN / WIA: Scan the document using a TWAIN or WIA compatible application program.

➔ [Scanning using TWAIN or WIA \(page 5-27\)](#)

NOTE

- Different sending options can be specified in combination.
 - ➔ [Sending to Different Types of Destinations \(Multi Sending\) \(page 5-38\)](#)
- The fax function can be used on products equipped with fax capability.
 - ➔ **FAX Operation Guide**


Sending Document via E-mail

NOTE

- When transmitting using wireless LAN, select the interface dedicated to the send function in advance.
 - ➔ [Primary Network \(Client\) \(page 8-75\)](#)
- Before sending an E-mail, configure the SMTP and E-mail settings using the Command Center RX.
 - ➔ [E-mail Settings \(page 2-73\)](#)

1 [Home] key > [Send]

2 Place the originals.

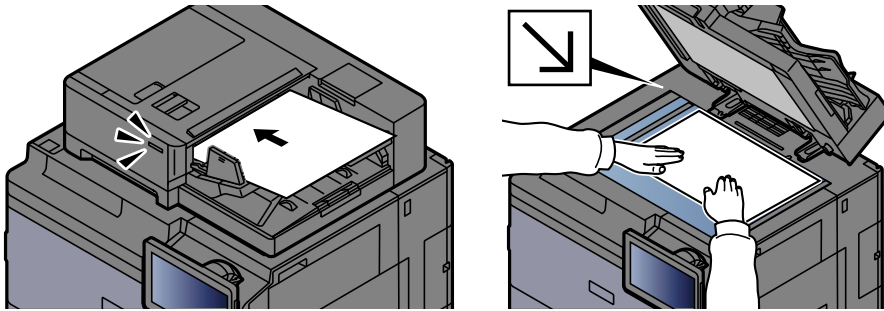

➔ [Loading Originals \(page 5-2\)](#)

3 In the destination screen for sending, select [+] > [Email]

4 Enter destination E-mail address > [OK]

Up to 256 characters can be entered.

➔ [Character Entry Method \(page 11-9\)](#)

To enter multiple destinations, select [**Next Destination**] and enter the next destination. Up to 100 E-mail addresses can be specified.

You can register the entered E-mail address in the Address Book by selecting [**Add to Address Book**]. You can also replace the information for a previously registered destination.

Destinations can be changed later.

➔ [Confirmation Screen of Destinations \(page 5-48\)](#)

NOTE

- When selecting [**On**] for Entry Check for New Destination, the confirmation screen appears. Enter the same destination again, and select [**OK**].
 - ➔ [Entry Check for New Dest. \(page 8-41\)](#)
- If [**Prohibit**] is set to "Broadcast", multiple destinations cannot be entered.
 - ➔ [Broadcast \(page 8-41\)](#)

5 Select the functions.

Select the Global Navigation to display other functions.

➔ [Send \(page 6-6\)](#)

IMPORTANT

- **[Email Encrypted TX] and [Digital Signature to Email] appear when setting S/MIME on the Command Center RX.**
 - ➔ **Command Center RX User Guide**
- **When using [Email Encrypted TX] and [Digital Signature to Email], specify the E-mail addresses which have encryption certificate, from the address book. The directly-entered address can not be configured these functions. When entering E-mail address from the operation panel, you can not use these functions.**

6 Press the [Start] key.

Sending starts.

NOTE

- When selecting [**On**] for Destination Check before Send, the confirmation screen appears after pressing the [**Start**] key.
 - ➔ [Destination Check before Send \(page 8-41\)](#)
 - ➔ [Confirmation Screen of Destinations \(page 5-48\)](#)

Sending Document to Desired Shared Folder on a Computer (Scan to PC)


You can store the scanned document into the desired shared folder on a computer.

NOTE

- When transmitting using wireless LAN, select the interface dedicated to the send function in advance.
 - ➔ [Primary Network \(Client\) \(page 8-75\)](#)
- Before sending the scanned document to the shared folder on your computer, you must configure the following settings:
 - Make a note of the device name and full device name
 - ➔ [Making a Note of the Device Name and Full Device Name \(page 3-44\)](#)
 - Make a note of the user name and domain name
 - ➔ [Making a Note of the User Name and Domain Name \(page 3-45\)](#)
 - Create a shared folder and make a note of a shared folder
 - ➔ [Creating a Shared Folder, Making a Note of a Shared Folder \(page 3-46\)](#)
 - Configure the Windows firewall
 - ➔ [Configuring Windows Firewall \(page 3-50\)](#)

1 [Home] key > [Send]

2 Place the originals.

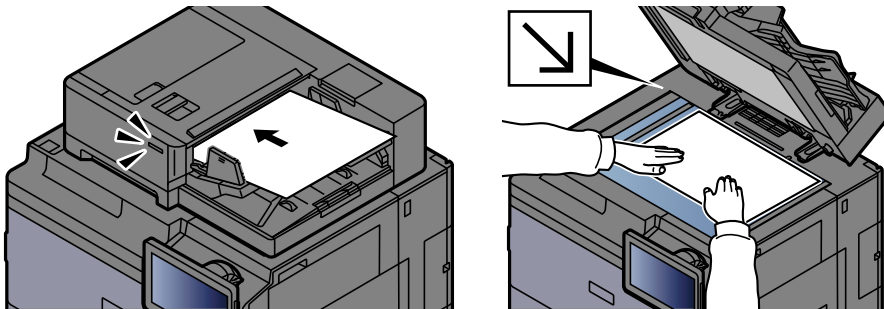

➔ [Loading Originals \(page 5-2\)](#)

3 In the destination screen for sending, select [+] > [SMB]

4 Enter the destination information.

To directly specify the SMB folder, select **[Folder Path Entry]** and enter each item.

NOTE

- When selecting **[On]** for Entry Check for New Destination, the confirmation screen appears. Enter the same destination again, and select **[OK]**.
 ➔ [Entry Check for New Dest. \(page 8-41\)](#)

The table below lists the items to be set.

Item	Description	Max. characters
Host Name *1	Device name	Up to 256 characters
Port	Port number If the port number is not specified, the default port number is 445.	—
Folder Path	Share name For example: scannerdata If saving in a folder in the shared folder: share name\folder name in shared folder	Up to 260 characters
Login User Name *2	<ul style="list-style-type: none"> If the device name and domain name are the same: User Name For example: james.smith If the device name and domain name are different: 	Up to 64 characters
Login Password	Windows logon password (Case sensitive.)	Up to 128 characters

*1 Enter the Host name or IP address.

To enter the IPv6 address, enclose the address in brackets [].
(Example: [2001:db8:a0b:12f0::10])

*2 Domain name\User name

For example: abcdnet\james.smith

When sending a document through an optional network interface (IB-53/IB-54), "\" cannot be used. If the device name is different from the domain name, login user name needs to be input by using "@".

(Example: james.smith@abcdnet)

NOTE

- If you selected **[Search Folder from Network]**, you can search all PCs on the network for a destination.
- If you selected **[Search Folder by Host Name]**, you can enter the "Domain/Workgroup", and "Host Name" to search PCs on the network for the destination.
- A maximum of 500 addresses can be displayed. Select the host name (PC name) that you want to specify in the screen that appears, and select **[OK]**. The login user name and login password entry screen appears.
- After you enter the login user name and login password name of the destination PC, the shared folders appear. Select the folder that you want to specify and select **[OK]**. The address of the selected shared folder is set.

5 Check the status.

1 Check the information.

Change the delay as required.

2 Select [**Connection Test**] to check the connection.

"Connected." appears when connection to the destination is correctly established. If "Cannot connect." appears, review the entry.

To enter multiple destinations, select [**Next Destination**] and enter the next destination.

You can register the entered information in the Address Book by selecting [**Add to Address Book**].



NOTE

If [**Prohibit**] is set to "Broadcast", multiple destinations cannot be entered.

➔ [Broadcast \(page 8-41\)](#)

6 Select [**OK**].

Destinations can be changed later.

➔ [Confirmation Screen of Destinations \(page 5-48\)](#)

7 Select the functions.

Select the Global Navigation to display other functions.

➔ [Send \(page 6-6\)](#)

8 Press the [**Start**] key.

Sending starts.



NOTE

- When selecting [**On**] for Destination Check before Send, the confirmation screen appears after pressing the [**Start**] key.

➔ [Destination Check before Send \(page 8-41\)](#)

➔ [Confirmation Screen of Destinations \(page 5-48\)](#)


Sending Document to Folder on an FTP Server (Scan to FTP)

 **NOTE**

- When transmitting using wireless LAN, select the interface dedicated to the send function in advance.
- ➔ [Primary Network \(Client\) \(page 8-75\)](#)
- Before sending a document, configure the FTP Client (Transmission).
- ➔ [Protocol Settings \(page 8-64\)](#)

1 [Home] key > [Send]

2 Place the originals.

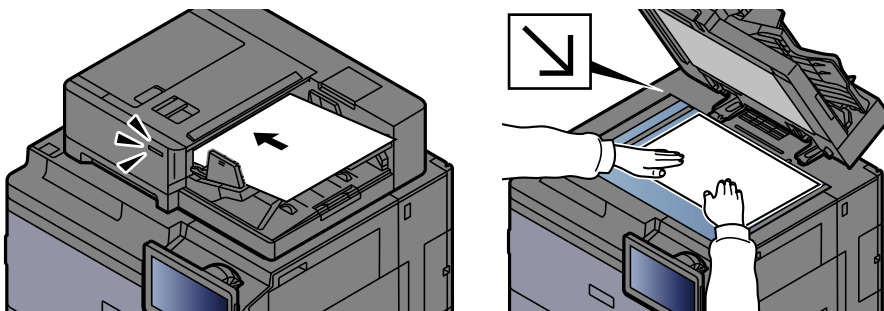

➔ [Loading Originals \(page 5-2\)](#)

3 In the destination screen for sending, select [+] > [FTP]

4 Enter the destination information.

➔ [Character Entry Method \(page 11-9\)](#)

The table below lists the items to be set.

Item	Descriptions	Max. characters
Host Name ^{*1}	Host name or IP address of FTP server	Up to 64 characters
Port	Port number If the port number is not specified, the default port number is 21.	—
Folder Path ^{*2}	Path for the file to be stored For example: User\ScanData If no path is entered, the file is stored in the home directory.	Up to 128 characters
Login User Name	FTP server login user name	Up to 64 characters
Login Password	FTP server login password (Case sensitive.)	Up to 64 characters

*1 To enter the IPv6 address, enclose the address in brackets [].
(Example: [2001:db8:a0b:12f0::10])

*2 When the FTP server is based on Linux/UNIX, the path including the sub-folder is combined by the slash "/" not using the back-slash.

 **NOTE**

- When selecting [**On**] for Entry Check for New Destination, the confirmation screen appears. Enter the same destination again, and select [**OK**].

➔ [Entry Check for New Dest. \(page 8-41\)](#)

5 Check the status.

- 1 Check the information.

Change the delay as required.

- 2 Select [**Connection Test**] to check the connection.

"Connected." appears when connection to the destination is correctly established. If "Cannot connect." appears, review the entry.

To enter multiple destinations, select [**Next Destination**] and enter the next destination.

You can register the entered information in the Address Book by selecting [**Add to Address Book**].

 **NOTE**

If [**Prohibit**] is set to "Broadcast", multiple destinations cannot be entered.

➔ [Broadcast \(page 8-41\)](#)

6 Select [OK].

Destinations can be changed later.

➔ [Confirmation Screen of Destinations \(page 5-48\)](#)

7 Select the functions.

Select the Global Navigation to display other functions.

➔ [Send \(page 6-6\)](#)

8 Press the [Start] key.

Sending starts.

 **NOTE**

- When selecting [**On**] for Destination Check before Send, the confirmation screen appears after pressing the [**Start**] key.

➔ [Destination Check before Send \(page 8-41\)](#)

➔ [Confirmation Screen of Destinations \(page 5-48\)](#)

Scanning using TWAIN or WIA

This subsection explains how to scan an original using TWAIN. The WIA driver is used in the same way.

NOTE

- When transmitting using wireless LAN, select the interface dedicated to the send function in advance.
 - ➔ [Primary Network \(Client\) \(page 8-75\)](#)
- Before sending a document, confirm that TWAIN/WIA driver is installed on a computer and the settings are configured.
 - ➔ [Setting TWAIN Driver \(page 2-62\)](#)
 - ➔ [Setting WIA Driver \(page 2-64\)](#)

1 Display the screen.

- 1 Activate the TWAIN compatible application software.
- 2 Select the machine using the application and display the dialog box.

NOTE

For selecting the machine, see the Operation Guide or Help for each application software.


2 Configure the scan settings.

Select scanning settings in the dialog box that opens.

NOTE

For the settings, refer to Help in the dialog box.

3 Place the originals.

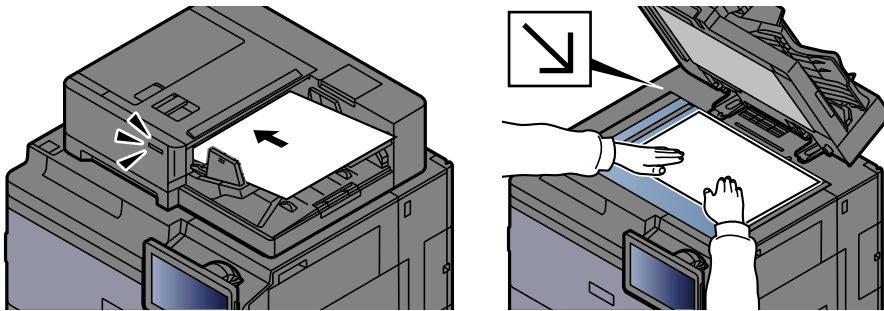

- ➔ [Loading Originals \(page 5-2\)](#)

4 Scan the originals.

Click the [**Scan**] button. The document data is scanned.

Scanning Document stored in a Custom Box

Follow the steps as below for scanning a document stored in a custom box using the TWAIN driver.

NOTE

- When transmitting using wireless LAN, select the interface dedicated to the send function in advance.
 - ➔ [Primary Network \(Client\) \(page 8-75\)](#)
- Before sending a document, confirm that TWAIN/WIA driver is installed on a computer and the settings are configured.
 - ➔ [Setting TWAIN Driver \(page 2-62\)](#)
- To load a document saved in the Custom Box, select the model name with (Box) from "Model" on the TWAIN driver configuration screen.

1 Display the screen.

- 1 Activate the TWAIN compatible application software.
- 2 Select the machine using the application and display the dialog box.

NOTE

For selecting the machine, see the Operation Guide or Help for each application software.

2 Display lists of documents.

- 1 Select a custom box stored a document. If a password has been set for the box, the password entry screen appears. Enter the password and click the **[OK]** button. When you select a box, the document files in the Custom Box appear in "Document List".
- 2 Set how to display the document data. Click the **[Setting]** button to select each item.

NOTE

For the settings, refer to Help in the dialog box.

- 3 Click **[OK]** button.

3 Scan the originals.

- 1 Select the document data to be scanned from **[Document List]**.

Enter the document data name in the Search (Name) to find the data having the same document data name or the document data name with the same beginning.

Click the **[Detail]** button to display the selected document data. When the document data includes multiple pages, select the checkbox beside the pages you want to scan. The selected pages will be scanned.

NOTE

In this case, the scanned page or the selected document data will not be deleted from the Custom Box.

- 2 Click the **[Acquire]** button.
The document data is scanned.

Scan to Cloud Function (Kyocera Cloud Capture)

Kyocera Cloud Capture is installed on the machine as a standard application.

Using cloud link function, you can upload data scanned on the machine directly to cloud services. Availability period differs depending on your plan.

NOTE

- To use this function, you must first configure Kyocera Cloud Capture default settings. For details on default settings, refer to the manual at the following URL.
<https://www.kyoceradocumentsolutions.com/re/bs001.html>
- If the [**Scan to Cloud**] button does not appear, check if the application is running in the system menu.
→ [Activating Applications \(page 5-11\)](#)



Refer to the manual for cloud services that can be linked.


For an example, the procedure for uploading to Google Drive is described below.

Uploading Scanned Data to Google Drive


IMPORTANT

Workflow registration and other settings are required in advance.


- 1 Place the originals.**
- 2 [Home] key > [Scan to Cloud]**
Cloud link will start.

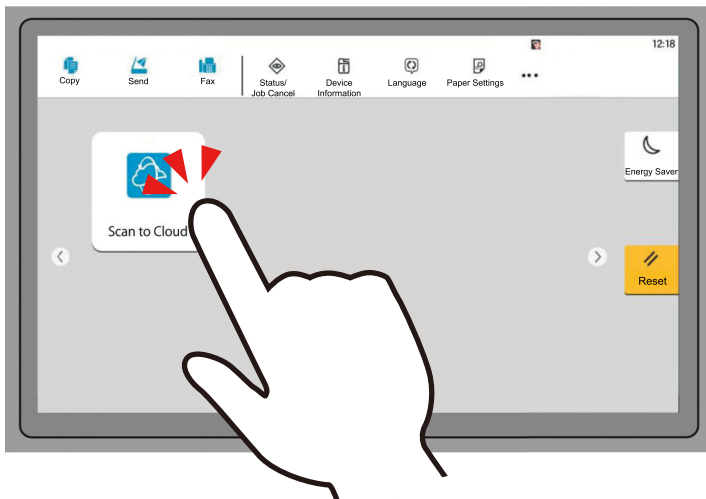


3 Log in to the application.

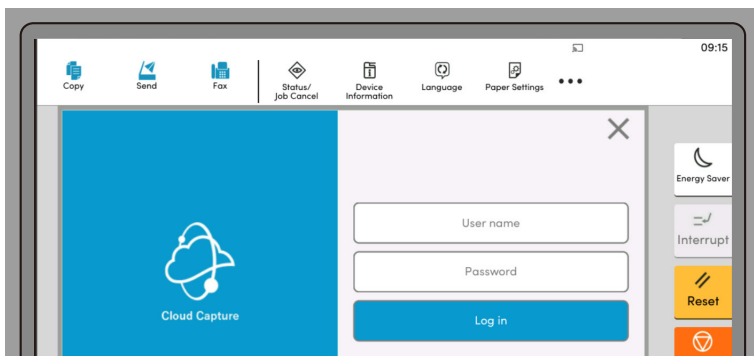


4 Click the [Google Drive] workflow button.

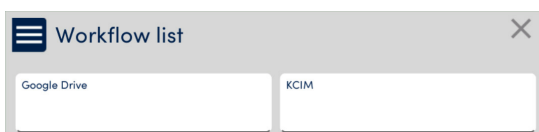

5 Select the document file format to save.

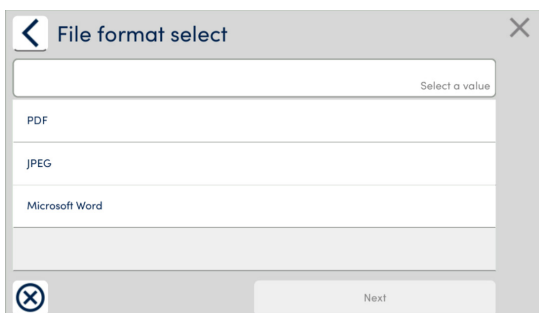


6 Select the folder you want to save the document to.

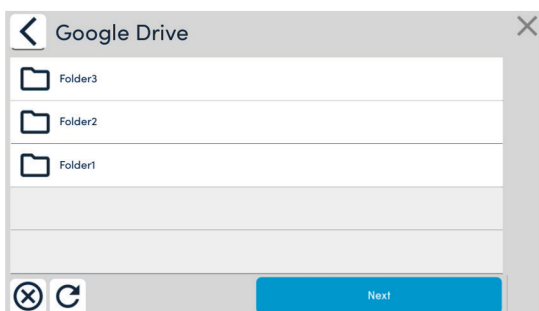

7 Configure the scan settings.


If necessary, change the scanner function settings. Example: File name

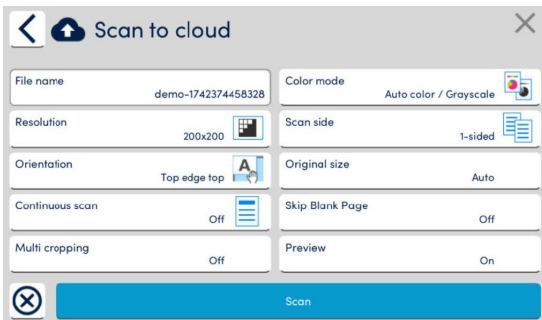

8 Select [Scan].

The document is scanned and uploaded to the cloud service.

If the upload is successful, "Completed" appears in the window.

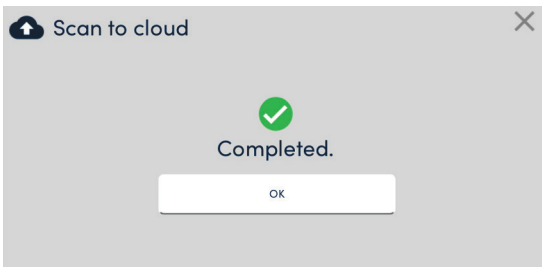

9 Select [OK].

Click [OK] to close the dialog.

Enabling notification settings allows you to receive completion results (success or failure) via email.

Useful Sending Method

You can specify the following useful scanning (sending) methods.

- WSD Scan: Saves images of originals scanned on this machine as files on a WSD-compatible computer.
 - ➔ [WSD Scan \(page 5-33\)](#)
- Scanning with File Management Utility: Scans a document using the settings of File Management Utility and saves it to a specified network folder or PC.
 - ➔ [Scanning with File Management Utility \(page 5-35\)](#)
- Scanning using the fax server: A scanned original is send via a fax server.
 - ➔ [Using a Fax Server to Send \(Fax Server Send\) \(page 5-40\)](#)
- Sending to different types of destinations (Multi sending): Sends to different types of destination (E-mail addresses, folders, etc.) in a single operation.
 - ➔ [Sending to Different Types of Destinations \(Multi Sending\) \(page 5-38\)](#)
- Send to Me (Email): Sends to the E-mail address of the logged in user when user login is enabled.
 - ➔ [Send to Me \(Email\) \(page 5-39\)](#)

WSD Scan

WSD Scan saves images of originals scanned on this machine as files on a WSD-compatible computer.

NOTE

- To use WSD Scan, confirm that the computer used for WSD scanning and the machine is network-connected, and "WSD Scan" is set to **[On]** in the network settings.
 - ➔ [WSD Scan \(page 8-64\)](#)
- For information on operating the computer, refer to the computer's help or the operation guide of your software.
- When transmitting using wireless LAN, select the interface dedicated to the send function in advance.
 - ➔ [Primary Network \(Client\) \(page 8-75\)](#)

Installing the Driver (for Windows)

1 Click the **[Start]** button and select **[All apps]** **[Windows Tools]** **[Control Panel]**, and then **[Devices and Printers]**.

2 **Install the driver.**

Click **[Add Device]**. Select the icon that displays the machine model name, and click **[Next]**.

When the machine model icon is displayed as a "Printer" on the "Devices and Printers" screen, installation is complete.

Executing WSD scan


WSD Scan saves images of originals scanned on this machine as files on a WSD-compatible computer.

NOTE

- When transmitting using wireless LAN, select the interface dedicated to the send function in advance.
 - ➔ [Primary Network \(Client\) \(page 8-75\)](#)
- To use WSD Scan, confirm that the computer used for WSD scanning and the machine is network-connected, and "WSD Scan" is set to [On] in the network settings.
 - ➔ [WSD Scan \(page 8-64\)](#)
- For information on operating the computer, refer to the computer's help or the operation guide of your software.

1 [Home] key > [Send]

2 Place the originals.

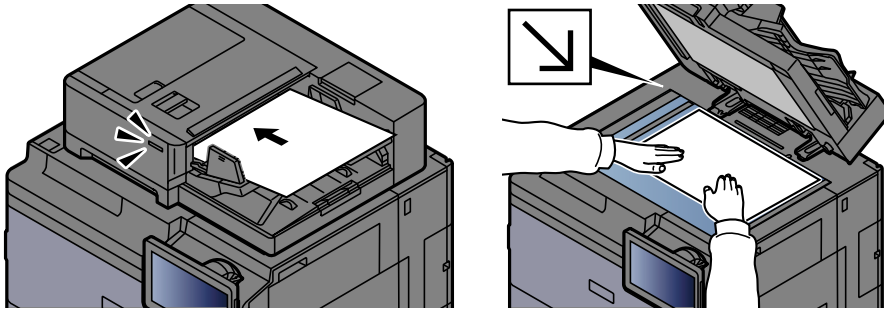


➔ [Loading Originals \(page 5-2\)](#)

3 Display the screen.

In the destination screen for sending, select [+] > [WSD Scan]

4 Scan the originals.

Procedure using this machine

- 1 [From Operation Panel] > [Next]
- 2 Select the destination computer > [OK]
Select [Reload] to reload the computer list.
You can view information on the selected computer by selecting [] (information icon).
- 3 Set the type of original, file format, etc., as desired.
- 4 Press the [Start] key.
Sending begins and the software installed on the computer is activated.

Procedure from Your Computer

- 1 [From Computer] > [Start]
- 2 Use the software installed on the computer to send the images.

Scanning with File Management Utility

"FMU Connection" is installed on the machine as a standard application.

FMU Connection can be used to scan an original according to the settings configured with "File Management Utility" downloaded from the user support page (<https://kyocera.info/support>), and save the image data and scanning information on a specified server or in a specified folder. Unlike regular transmission functions, this application lets you use metadata such as the scan date and time and the data format.

1 Configuring Settings before Sending

The first time you use FMU Connection, you must enable it in System Menu.

➔ [Add/Delete Application \(page 8-91\)](#)

To use this function, you must install File Management Utility on your computer and configure settings for the multifunction machine to be used, scanning conditions, and the file save location. To install File Management Utility, refer to the following.

➔ [Installing Software \(page 2-51\)](#)




NOTE

For information on using File Management Utility, refer to the following:

➔ [File Management Utility User Guide](#)

2 Make sure that File Management Utility is running on the computer (or server) on which File Management Utility is installed.

3 Place the original.

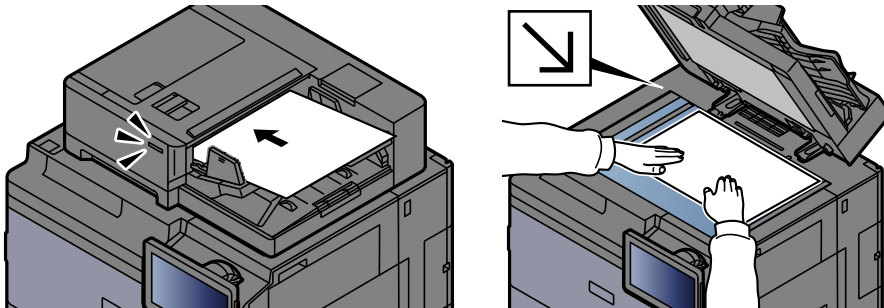

➔ [Loading Originals \(page 5-2\)](#)

4 Select [FMU Connection].

FMU Connection starts.

5 Follow the on-screen instructions to enter the necessary information and select [Next].

6 When the scan settings screen appears, select each item and configure the necessary settings.

The features that can be set depend on File Management Utility.

7 Press the [Start] key.

Sending starts.

Using MultiCrop Scan

MultiCrop Scan is installed as a standard application in this machine.

Using MultiCrop Scan function, you can scan multiple receipts, invoices, business cards, etc., cut them out individually, file them, and send them to a specified destination or save them on a USB drive.

NOTE

To send to the specified destination, configure the network.


➔ [Network Setup \(page 2-33\)](#)

1 Configuring Settings before Scanning

The first time you use MultiCrop Scan function, you must enable it in System Menu.

➔ [Add/Delete Application \(page 8-91\)](#)

2 Place the original.

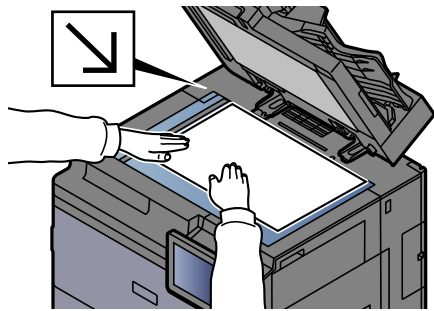

➔ [Loading Originals \(page 5-2\)](#)

IMPORTANT

- Before placing originals, clean the platen glass.
- Place the original and close the cover of Document Processor to use MultiCrop Scan.
- Allow at least 15 mm between originals.
- When placing the originals, please keep the left and top sides at least 10mm away from the original size indicator plates, and the right and bottom sides at least 10mm away from the edges of the scan area (429 mm x 294 mm).
- Use square originals for scanning correctly.
- A maximum of 16 original sizes from 50 × 50 mm to 210 × 210 mm can be detected. Areas longer than 210mm are clipped and scanned.

NOTE

- The maximum number of continuous scanning pages is 982.
- Using MultiCrop Scan, you can correct the skew of the original (range of -45 degrees clockwise). Place the originals so that the correct scan results are obtained.

3 [Home] key > [MultiCrop Scan]

MultiCrop Scan function starts.

4 Select [Send] or [Store to USB].

- 1 When selecting [**Send**], select [**Address book**] or [**Manual entry**] to add the destinations.
When selecting [**Store to USB**], select [**Open**] or [**Back**] to specify the location to store the file in USB drive, and go to step 4.
- 2 When selecting [**Address book**], select the destination to send the file and then select [**Back**].
Sending method are SMB, FTP and E-mail. Up to 10 destinations are selected.
When selecting [**Manual entry**], add details of destination and select [**Add to list**].
- 3 Confirm whether the selected destinations are correct.

5 Select [Scan & send].

6 Configure the functions.

You can use or combine the following functions.

For details of each function, access to the reference page in the table.

Item	Value	Reference Page
File Format	PDF, TIFF, JPEG	page 6-77
Image Quality	Low to High (5 levels)	-
Color Selection	Full Color, Black & White, Grayscale	page 6-66
Original Orientation	Top Edge on Top, Top Edge on Left, Auto	page 6-26
Scan Resolution	200 x 200 dpi, 300 x 300 dpi, 400 x 400 dpi, 600 x 600 dpi	page 6-84
File Separation	ON, OFF	page 6-84
Continuous Scan	ON, OFF	page 6-70
Density	-4.0 (Lighter) to ;4.0 (Darker)	page 6-64
File Name	Enter the file name (within 32 characters). You can also add [Job No.] and [Data and Time].	page 6-72
Border Erase	Standard, Full Scan, Border Erase Sheet, Border Erase Book, Individual Border Erase	page 6-41


Select [<] or [>] to move the function pages.

7 Select [Start Scanning].

The originals are scanned, and sent them to the specified destinations or stored them to the USB drive.

Sending to Different Types of Destinations (Multi Sending)

You can specify destinations that combine E-mail addresses, folders (SMB or FTP), fax numbers and i-FAX. This is referred to as Multi Sending. This is useful for sending to different types of destination (E-mail addresses, folders, etc.) in a single operation.

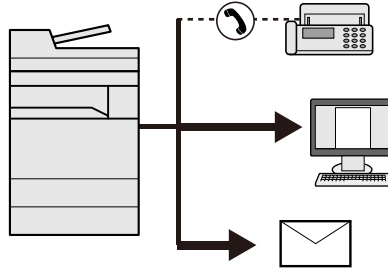

No. of broadcast items: Up to 500

However, number of items are restricted for the following sending options.

- E-mail: Up to 100
- Folders (SMB, FTP): Total of 10 SMB and FTP
- i-FAX: Up to 100

Also, depending on the settings, you can send and print at the same time.

Procedures are the same as used in specifying the destinations of respective types. Continue to enter E-mail address or folder path so that they appear in the destination list. Press the **[Start]** key to start transmission to all destinations at one time.



NOTE

- If the destinations include a fax, the images sent to all destinations will be black and white.
- If **[Prohibit]** is set to "Broadcast", multiple destinations cannot be specified.

➔ [Broadcast \(page 8-41\)](#)

Send to Me (Email)

When user login is enabled, the document is sent to the E-mail address of the logged in user.

1 Configure the settings.

Before using this function, the following are necessary.

- To use this function, the function icon must be displayed in the home screen.
 - ➔ [Editing the Home Screen \(page 2-15\)](#)
- An E-mail address must be set in user login for the user who logs in.
 - ➔ [Adding a User \(Local User List\) \(page 9-6\)](#)

2 Select [Home] key.

3 Select [Send to Me (Email)].



NOTE

When this function is used, functions other than transmission cannot be used.

Using a Fax Server to Send (Fax Server Send)


You can send a scanned document via a fax server.

NOTE

- A fax server is required to use this function. For information about the fax server, contact the applicable administrator.
- FAX server settings must be configured to send a FAX.
 - ➔ **Command Center RX User Guide**
 - ➔ [Fax Server \(page 8-74\)](#)

1 [Home] key > [Send]

2 Place the originals.

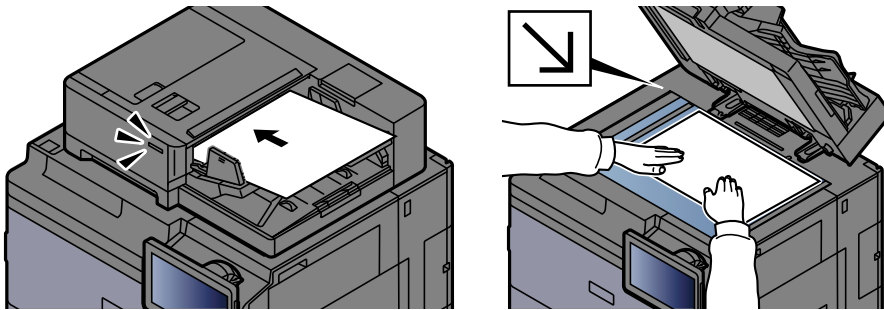

➔ [Loading Originals \(page 5-2\)](#)

3 Display the screen.

In the destination screen for sending, select [+] > [Fax Server]

4 Enter recipient information.

- 1 Select [**Fax No. Entry**].
- 2 Enter the fax number > [**OK**]



NOTE

- Use the numeric keys to enter a number.
 - When selecting [**On**] for Entry Check for New Destination, the confirmation screen appears. Enter the same destination again, and select [**OK**].
- ➔ [Entry Check for New Dest. \(page 8-41\)](#)

Destinations can be changed later.

➔ [Checking and Editing Destinations \(page 5-47\)](#)



NOTE

- When selecting the information from the Address Book, select [**Address Book**], and specify the destination > [**OK**].
- ➔ [Choosing from the Address Book \(page 5-43\)](#)
- When selecting the information from an External Address Book, select [**Ext Address Book**], and specify the destination > [**OK**].
- For details on the External Address Book, refer to the following:
- ➔ **Command Center RX User Guide**

5 Select the functions.

Select the Global Navigation to display other functions.

➔ [Send \(page 6-6\)](#)

6 Press the [**Start**] key.

Sending starts.



NOTE

- When selecting [**On**] for Destination Check before Send, the confirmation screen appears after pressing the [**Start**] key.
- ➔ [Destination Check before Send \(page 8-41\)](#)
- ➔ [Confirmation Screen of Destinations \(page 5-48\)](#)

Canceling Sending Jobs

1 Select the **[Stop]** key with the send screen displayed.

2 Cancel a job.

When there is a job is being scanned, Job Cancel appears.

When there is a job sending or on standby, Canceling job screen appears.

Select the job you wish to cancel > **[Cancel]** > **[Yes]**



NOTE

Selecting the **[Stop]** key will not temporarily stop a job that you have already started sending.

Handling Destination

This section explains how to select and confirm the destination.

Specifying Destination

Select the destination using either of the following methods except entering address directly:

- Choosing from the Address Book
 - ➔ [Choosing from the Address Book \(page 5-43\)](#)
- Choosing from the External Address Book
 - For details on the External Address Book, refer to the following:
 - ➔ **Command Center RX User Guide**
- Choosing from One Touch key
 - ➔ [Choosing from the One Touch Key \(page 5-46\)](#)
- Choosing from the Search (No.)
 - ➔ [Choosing from the Search \(No.\) \(page 5-46\)](#)
- Choosing from the FAX
 - ➔ **FAX Operation Guide**

NOTE

- You can set the machine up so that the address book screen appears when you select the **[Send]** key.
 - ➔ [Default Screen \(page 8-41\)](#)
- If you are using the products equipped with the fax function, you can specify the fax destination. Enter the other party number using the numeric keypad.

Choosing from the Address Book

For more information about how to register destinations in the Address Book, refer to the following:

- ➔ [Registering Destinations in the Address Book \(page 3-59\)](#)

1 In the destination screen for sending, select **[Address Book]** ().

NOTE

For details on the External Address Book, refer to the following:

- ➔ **Command Center RX User Guide**

2 Select the destinations.

Select the checkbox to select the desired destination from the list. The selected destinations are indicated by a checkmark in the check box. When using the Address Book or Departmental Address Book of the LDAP, click [**Addr. Book**] and select the Address Book to use.


You can change the order in which the destinations are listed by selecting [**Name**] or [**No.**].

 **NOTE**

- To deselect, select the checkbox again and remove the checkmark.
- If [**Prohibit**] is set to “Broadcast”, multiple destinations cannot be selected. This also applies to a group in which multiple destinations are registered.

➔ [Broadcast \(page 8-41\)](#)

Destinations registered in the Address Book can be searched. Advanced search by type or by initial letter is also available.

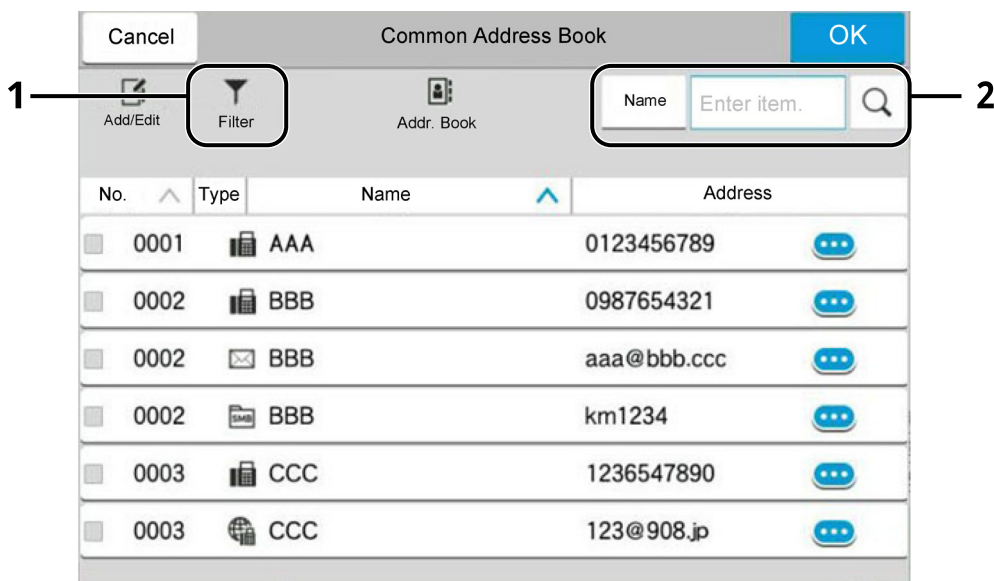

Keys used	Search type	Subjects searched
1	Filter	Advanced search by type of registered destination (Email, Folder, Fax, iFax or Group). (Fax: Only when the optional FAX Kit is installed. iFax: Only when the optional Internet FAX Kit is activated.) You can set this function up so that destination types are selected when the address book is displayed. For details, refer to the following: ➔ Narrow Down (page 8-44)
2	No. Name	Search by registered address number or name. Select either [No.] or [Name] to switch between [No.] and [Name].

 
3 Accept the destination > [OK]

Destinations can be changed later.

➔ [Checking and Editing Destinations \(page 5-47\)](#)



NOTE

- To delete the destination, select [√] > [] (delete icon) for the destination you want to delete > [Delete]
- You can set the default sort setting of the address for the address book.


➔ [Sort \(page 8-44\)](#)

Choosing from the One Touch Key

In the destination screen for sending, select the One Touch Keys where the destination is registered.

NOTE

- If the One Touch Keys for the desired destination is hidden on the touch panel, select [⏏] or [⏏] to display all One Touch Keys. This procedure assumes that One Touch Keys have already been registered. For more information on adding One Touch keys, refer to the following:
 - ➔ [Adding a Destination on One Touch Key \(page 3-77\)](#)
- When selecting a one-touch key registered in another address book, click [Addr. Book] and select the address book to display.

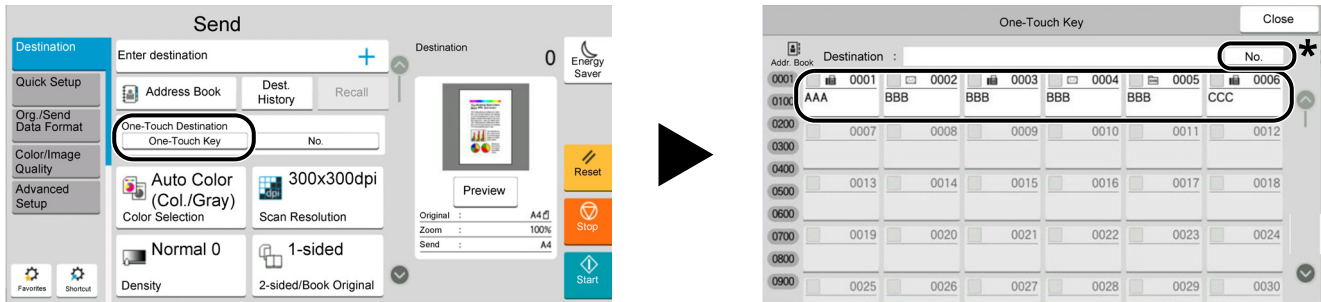

- * The [No.] key has the same function as [No.] displayed on the touch panel. Use to directly enter a number with the numeric keys, such as specifying a transmission address using a one-touch key number, or calling up a stored program using the program number. For information on one-touch key numbers, refer to the following:


Choosing from the Search (No.)

Access the destination by specifying the 4-digit (0001 to 1000) One Touch Key number.

In the destination screen for sending, select [No.] to display the numeric entry screen. Select the entry field, and use the numeric keys to enter the speed dial number.

NOTE

If you entered the One Touch Key in 1 to 3-digit, select [OK].

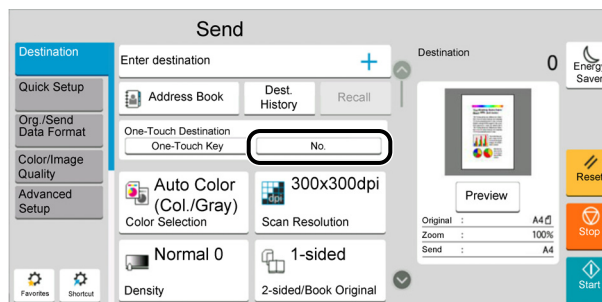


Checking and Editing Destinations

1 Display the screen.


Specify the destination.

➔ [Specifying Destination \(page 5-43\)](#)

2 Check and edit the destination.

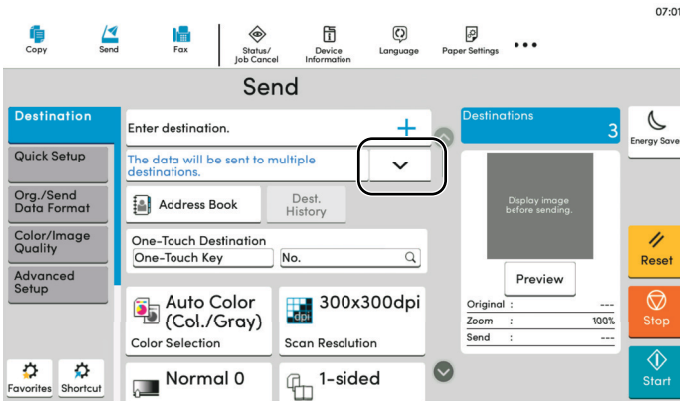

Select [∨] to display a destination list.

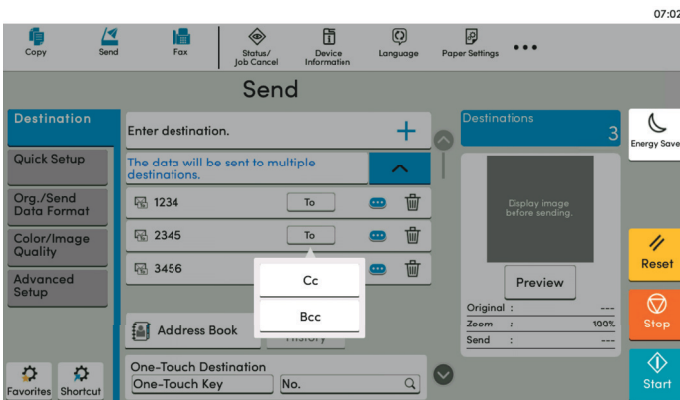

- Select [To] to change the E-mail address to [Cc] or [Bcc].
- Select [⋮] (information icon) to check the destination.
- Select [🗑️] (delete icon) to remove the destination from the list.


NOTE

- When selecting [On] for Entry Check for New Destination, the confirmation screen appears. Enter the same destination again, and select [OK].
 - ➔ [Entry Check for New Dest. \(page 8-41\)](#)
- When selecting [On] for Destination Check before Send, the confirmation screen appears after pressing the [Start] key.
 - ➔ [Destination Check before Send \(page 8-41\)](#)
 - ➔ [Confirmation Screen of Destinations \(page 5-48\)](#)

Confirmation Screen of Destinations

When selecting **[On]** for Destination Check before Send, the confirmation screen of destinations appears after pressing the **[Start]** key.

➔ [Destination Check before Send \(page 8-41\)](#)

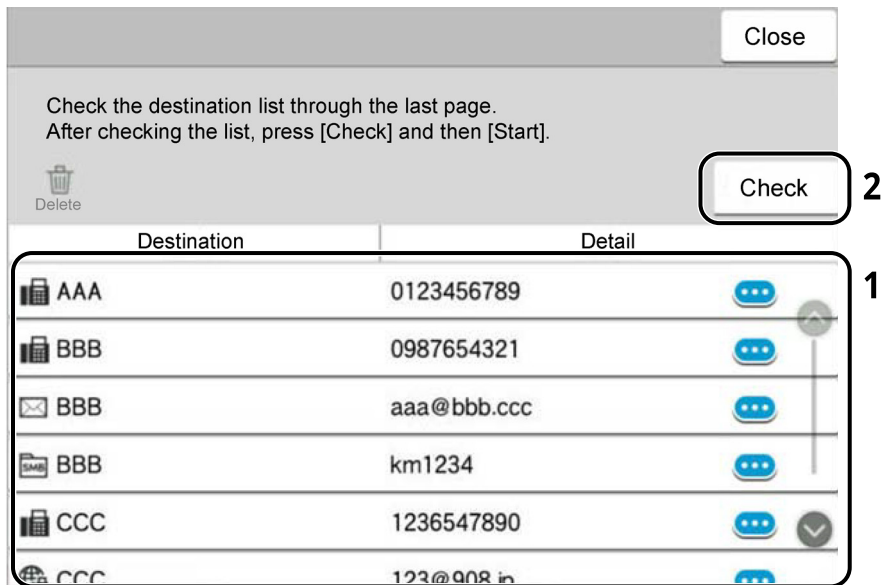

- 1 Move the screen to the bottom and confirm all destinations.

Selecting [⋮] (information icon) shows the detailed information of the destination.

To delete the destination, select the destination you want to delete > **[Delete]** > **[Delete]**

To add the destination, select **[Close]** and then return to the destination screen.

- 2 Select **[Check]**.


NOTE

Be sure to confirm all destination by displaying them on the touch panel. You cannot select **[Check]** unless you have confirmed all destination.

Re-enter new recipient information.

When selecting On for "Entry Check for New Dest.", the re-entering screen for the destination information appears.

➔ [Entry Check for New Dest. \(page 8-41\)](#)

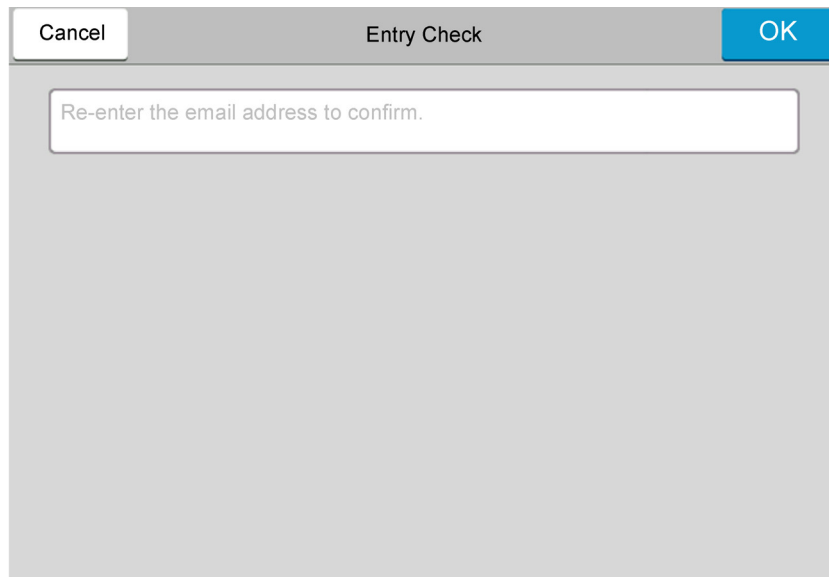

Enter the same destination information again, and select **[OK]**.

Recall

"Recall" is a function allowing you to send the last entered destination once again. To send to the same destination again, select **[Recall]** to call the destination to the destination list.

1 Select **[Recall]**.

The destination you sent is displayed on the destination list.



NOTE

When the last sending included FAX, folders and E-mail destinations, they are also displayed. If necessary, add or delete the destination.

2 Press the **[Start]** key.

Sending starts.



NOTE

- When **[On]** is selected in "Destination Check before Send", a destination confirmation screen is displayed when you press the **[Start]** key.
 - ➔ [Confirmation Screen of Destinations \(page 5-48\)](#)
- Recall information is canceled in the following conditions.
 - When you turn the power off
 - When you send a next image (new recall information is registered)
 - When you log out

How to use the FAX Function

On products with a FAX function, it is possible to use the FAX function. The optional FAX Kit is required in order to make use of FAX functionality.

➔ **FAX Operation Guide**

Using Document Boxes

Document Box is a function for saving print data from a computer and sharing it with multiple users.

The following types of document boxes are available:

- Custom Box
- Job Box
- USB Drive Box
- Fax Memory RX Box
- Fax Box
- Polling Box

What is Custom Box?

Custom Box is a component box which you can create within the Document Box and store data for later retrieval. You can create or delete a Custom Box.

The following operations are possible:

- Creating a new Custom Box
- Printing Document in a Custom Box
- Saving scanned documents to a Custom Box
- Sending Documents in a Custom Box
- Editing Documents in a Custom Box
- Deleting Documents in a Custom Box



NOTE

The operation on Custom Box you perform from operation panel can also be made using Command Center RX.

➔ [Command Center RX User Guide](#)

What is Job Box?

Job Box is a generic name for the "Private Print/Stored Job Box", "Quick Copy/Proof and Hold Box", "Repeat Copy Box", and "Form for Form Overlay Box". These Job Boxes cannot be created or deleted by a user.



NOTE

• You can set up the machine so that temporary documents in job boxes are automatically deleted.

➔ [Deletion of Job Retention \(page 8-53\)](#)

• For details on operating the Job Box, refer to the following:

➔ [Printing Data Saved in the Printer \(page 4-20\)](#)

Repeat Copy Box

Repeat Copy feature stores the copied original document data in the Job Box and allows you to print additional copies later. By default, up to 32 documents can be stored. When power is turned off, all stored jobs will be deleted.

➔ [Outputting Repeat Copy Jobs \(page 5-68\)](#)



NOTE

Repeat Copy function is not available when the Data Security Function is active.

Form for Form Overlay Box

Image Overlay feature copies the original document overlaid with a form or image. This Job Box is used to store the forms or images for overlaying.

➔ [Form for Form Overlay \(page 5-69\)](#)

What is USB Drive Box?

A USB drive can be connected to the USB memory slot on the machine to print a saved file. You can print data directly from the USB drive without a PC. Image files scanned using this machine can also be saved to USB drive in the PDF, TIFF, JPEG, XPS, OpenXPS, high compression PDF, Word, Excel or PowerPoint format (Scan to USB).



NOTE

Word, Excel and PowerPoint will be saved in a Microsoft Office 2007 or later file format.

What is a Fax Memory RX Box/F-Code Communication Box/Polling Box?

Fax Box store the fax data. The optional FAX Kit is required in order to make use of FAX functionality.

➔ **FAX Operation Guide**

Basic Operation for Document Box


This section explains basic operations for document boxes, using examples where tasks are carried out with custom boxes.

 **NOTE**

In the following explanation, it is assumed that user login administration is enabled. For details on User Logon privileges, refer to the following:

➔ [Editing Custom Box \(page 5-59\)](#)

Box List

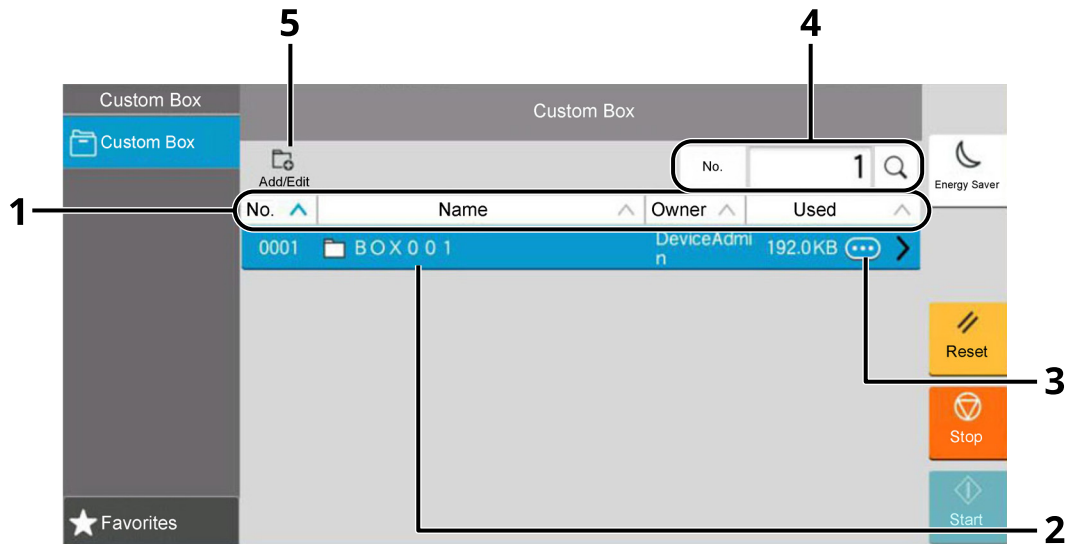


- 1 Sorts the box number, box name, owner name and size of data saved in the box in ascending/descending order.
- 2 This is a custom box. Select it to open it.
- 3 Displays the details for the selected box.
- 4 A box can be searched for by Box No. or Box Name. Select either **[No.]** or **[Name]** to switch between **[No.]** and **[Name]**.
- 5 Registers new boxes and checks, modifies or deletes box information.


Document List

The document list is a list of the documents stored in the custom box. Documents can be listed either by name or as thumbnails. The list can be used as shown below.

List

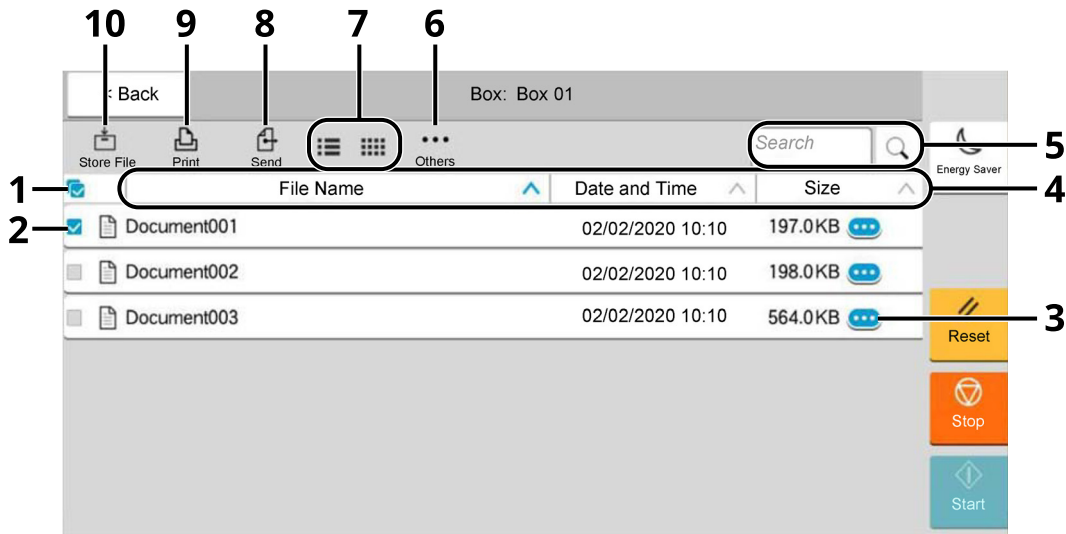

Thumbnail

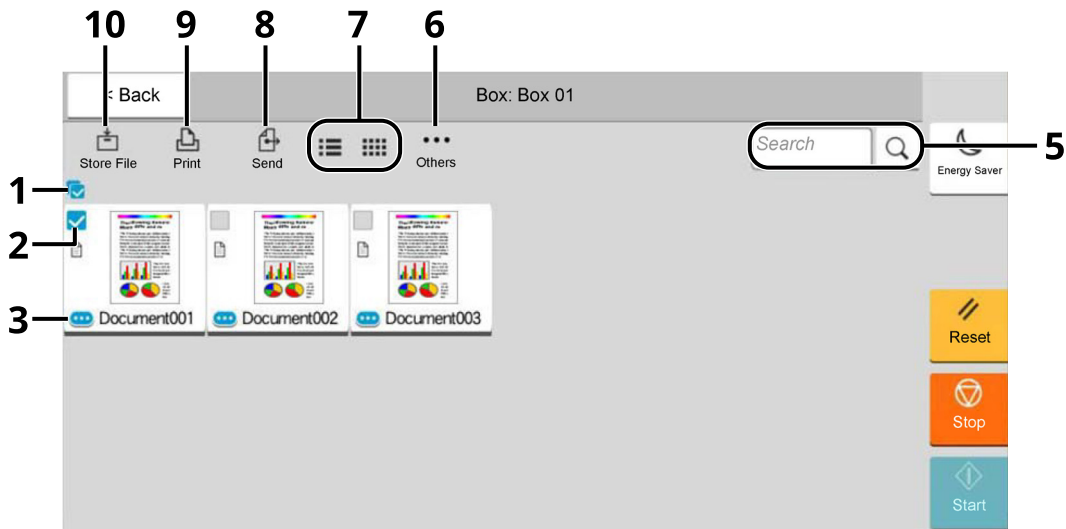

- 1 Selecting more than one document at a time.
- 2 Selecting documents by checking checkboxes.
- 3 Display the details for the selected document.
- 4 Sorts the file name, date and time and size of data in ascending/descending order.
- 5 A document can be searched for by Name.
- 6 The menu for document operations will be displayed.
- 7 Switches between list display and thumbnail display.
- 8 Sends the selected documents.
- 9 Prints the selected documents.
- 10 Saves the document in the open box.

NOTE

You can select multiple documents by pressing the respective document checkboxes. However, note that you cannot select multiple documents when you are sending documents.

Viewing Box Details

- 1 Select [ⓘ] (information icon) for the box whose details you wish to check in the box list screen.**



NOTE

If a custom box is protected by a password, enter the correct password.

- 2 Check the box details.**

- 3 Select [Close].**

The display returns to the default Document Box screen.

Editing Box Details

- 1 Select [Add/Edit] in the box list screen.**

- 2 Select the box whose details you wish to edit and select [Edit].**



NOTE

If a custom box is protected by a password, enter the correct password.

- 3 Edit the box details.**

Enter new details.

- 4 If you have changed the details, select [OK] and then select [OK] in the confirmation screen.**

If you do not change the details, select [Cancel].


- 5 Select [Close].**

The display returns to the default Document Box screen.

Previewing Documents/Checking Document Details

- 1** Select a document to preview and then select [Others] > [Preview].
- 2** Preview the document or check the document details.

The operations available in the preview screen are shown below.

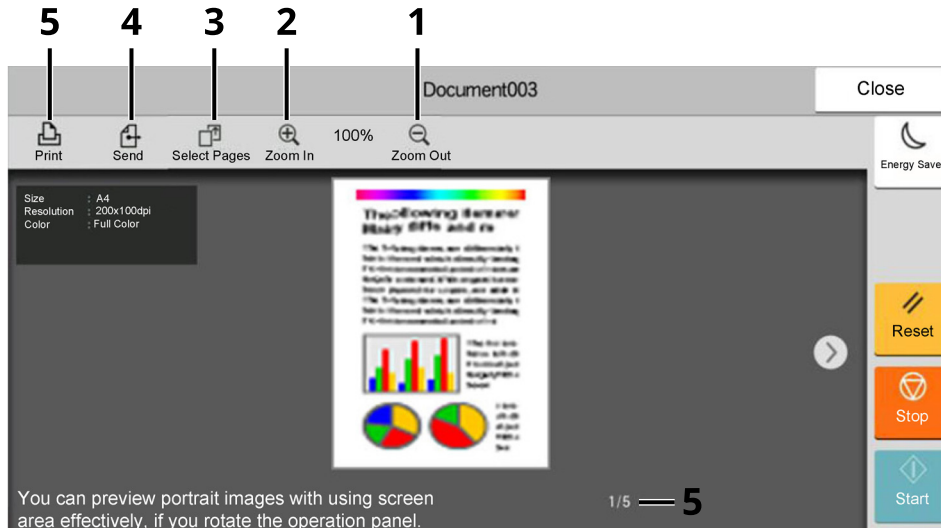

- 1 Zoom out.
- 2 Zoom in.
- 3 Select to select any page of the open document and print, send or copy to USB Drive.
 - ➔ [Selecting a Page \(page 5-57\)](#)
- 4 Sends the selected documents.
- 5 Prints the selected documents.



NOTE

The preview display can be controlled by moving your finger(s) on the touch panel.

➔ [Original Preview \(page 2-23\)](#)

- 3** Confirm the document and select [Close].


Selecting a Page

When printing, sending, or copying a document within a Custom Box, you can specify any pages at will.

- 1 Select [Others] > [Page Selection] in the document list screen of the Custom Box, or [Page Selection] in the Preview screen.**

The page selection screen is displayed.

- 2 Select the pages you want to work with, and select [Print], [Send], or [Copy to USB].**

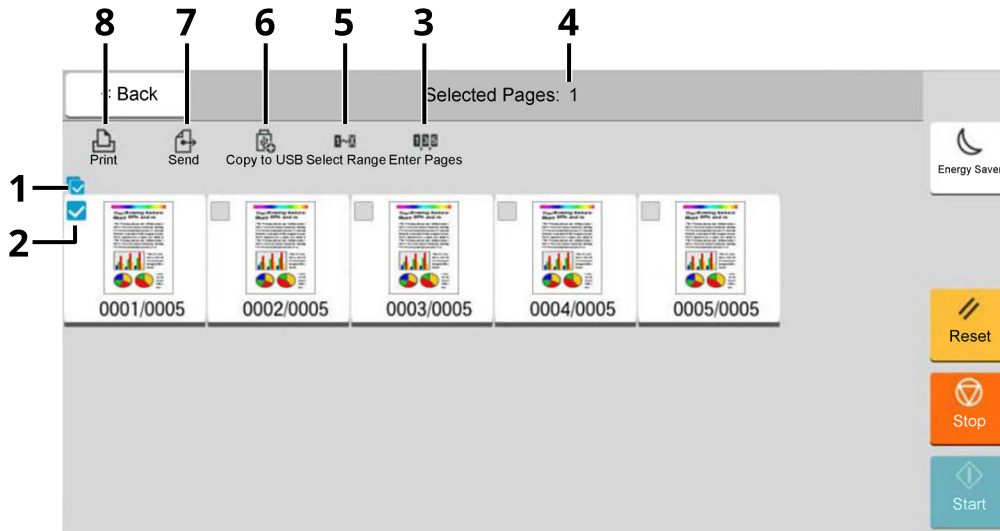

- 1 Selecting more than one document at a time.
 - 2 Selecting documents by checking checkboxes.
 - 3 Use a “,” (comma) to separate numbers when specifying pages that are not consecutive.
 - 4 Specify a continuous page range.
 - 5 Displaying the number of pages selected.
 - 6 Selected pages can be copied to USB drive.
 - 7 Selected pages can be sent.
 - 8 Selected pages can be printed.
- ➔ [Printing Documents in Custom Box \(page 5-61\)](#)
 - ➔ [Sending Documents in Custom Box \(page 5-63\)](#)
 - ➔ [Moving Documents in Custom Box \(page 5-64\)](#)

Creating a New Custom Box

- If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.
- If user login administration is enabled, log in with administrator privileges to perform the following operations. They cannot be performed with user privileges.
 - Creating a box
 - Deleting a box of which owner is another user.

1 Display the screen.

[Home] key > [Custom Box] > [Add/Edit]

2 Register the Custom Box.

1 [Add] > Enter the information for each item

The table below lists the items to be set.

Item	Description
Box Name	Enter a box name consisting of up to 32 characters. ➔ Character Entry Method (page 11-9)
Box No.	Enter the box number by selecting [+], [-] or number keys. The box number can be from 0001 to 1000. A Custom Box should have a unique number. If you select [Auto] (0000), the smallest number available will be automatically assigned.
Owner*1	Set the owner of the box. Select the owner from the user list that appears.
Permission*2	Select whether to share the box.
Box Password	User access to the box can be restricted by specifying a password to protect the box. Entering a password is not mandatory. Enter the same password of up to 16 characters in both "Box Password" and "Confirmation". This can be set if [Shared] is selected in Permission.
Usage Restriction	The usage for a box can be restricted. To enable a capacity restriction enter a value for the storage capacity of the Custom Box in megabytes by selecting [-], [+] or number keys. You can enter a limit between 1 and 30,000 (MB).
Auto File Deletion	Automatically deletes stored documents after a set period of time. Select [On] to enable automatic deletion and then use [+] and [-] or the numeric keys to enter the number of days for which documents are stored. You can enter any number between 1 and 31 (day(s)). To disable automatic file deletion, select [Off].
Free Space	Displays the free space on the box.
Overwrite Setting	Specifies whether or not old stored documents are overwritten when new documents are stored. To overwrite old documents, select [Permit]. To retain old documents, select [Prohibit].
Delete after Printed	Automatically delete a document from the box once printing is complete. To delete the document, select [On]. To retain the document, select [Off].

*1 Displayed when the user login administration is enabled.

*2 Not displayed when "Owner" is set to [No Owner].

2 Select [OK].

The Custom Box is created.

Editing Custom Box

1 Display the screen.

[Home] key > [Custom Box] > [Add/Edit]

2 Edit the custom box.

Select the box > [Edit] > Enter the information for each item > [OK]



NOTE

- When you have logged in as a user, you can only edit a box whose owner is set to that user.
- When you have logged in as administrator, you can edit all boxes.

When user login administration is enabled, the settings that can be changed varies depending on the privileges of the logged in user.

Privileges	Settings that can be changed
Administrator	Box Name
	Box No.
	Owner
	Permission
	Usage Restriction
	Auto File Deletion
	Free Space
	Overwrite Setting
	Delete after Printed
User	Box Name
	Box Password
	Usage Restriction
	Auto File Deletion
	Overwrite Setting
	Delete after Printed

For details on each items, refer to the following:

➔ [Creating a New Custom Box \(page 5-58\)](#)

3 [OK] > [Close]

The display returns to the default Document Box screen.

Deleting Custom Box

1 Display the screen.

[Home] key > [Custom Box] > [Add/Edit]

2 Delete the custom box.

Select the box > [Delete] > [Delete]



NOTE

- When you have logged in as a user, you can only delete a box whose owner is set to that user.
- When you have logged in as administrator, you can edit all boxes.

Storing Documents to a Custom Box

Custom box stores the print data which is sent from a PC. For the operation of the printing from the PC, refer to the following:

➔ [Printer Driver User Guide](#)

Printing Documents in Custom Box

1 Display the screen.

- 1 [Home] key > [Custom Box]
- 2 Select the box containing the document you want to print.



NOTE

If a custom box is protected by a password, enter the correct password.

2 Print the document.

- 1 Select the document in the list that you want to print by selecting the checkbox.
The document is marked with a checkmark.



NOTE

To deselect, select the checkbox again and remove the checkmark.

- 2 Select [Print].
- 3 Set the paper selection, duplex printing, etc., as desired.

For the features that can be selected, refer to the following:

➔ [Custom Box \(Store File, Printing, Send\) \(page 6-10\)](#)



NOTE

Select [**Favorites**] when registering or recalling favorites.

➔ [Registering Favorites \(page 5-8\)](#)

➔ [Recalling Favorites \(page 5-8\)](#)

If a document stored from a computer is selected, the print settings selection screen appears.

To use the settings used at the time of printing (when the document was saved), select [**Print As Is**]. Select [**Start Print**] to start printing.

To change the print settings, select [**Print after Change Settings (Use File Settings)**] or [**Print after Change Settings (Do Not Use File Settings)**] and change the print settings.

After a document saved in the machine is selected, [**Use File Settings**] may appear in the setting screen for the feature to be used.

To use the settings saved with the document, select [**Use File Settings**].

If you need to change the print settings, select the desired feature.

- 4 Press the [**Start**] key.


Printing of the selected document begins.

Saving Scanned Documents to a Custom Box

1 Display the screen.

[Home] key > [Custom Box]

2 Place the originals.

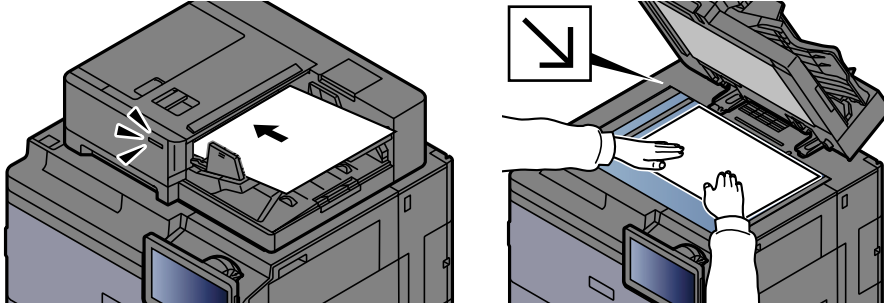

➔ [Loading Originals \(page 5-2\)](#)

3 Store the document.

1 Select the box > [Store File]

2 Set the type of original, file format, etc., as desired.

For the features that can be selected, refer to the following:

➔ [Custom Box \(Store File, Printing, Send\) \(page 6-10\)](#)



NOTE

- Enter up to 32 characters as the file name.
- Select [Favorites] when registering or recalling favorites.

➔ [Registering Favorites \(page 5-8\)](#)

➔ [Recalling Favorites \(page 5-8\)](#)

3 Press the [Start] key.

The original is scanned and the data is stored in the specified Custom Box.

Sending Documents in Custom Box

NOTE

When transmitting using wireless LAN, select the interface dedicated to the send function in advance.

➔ [Primary Network \(Client\) \(page 8-75\)](#)

1 Display the screen.

[Home] key > [Custom Box] > Select the box

NOTE

If a custom box is protected by a password, enter the correct password.

2 Send the document.

1 Select the document you wish to send by checking the checkbox.

The document is marked with a checkmark.

NOTE

- You cannot select and send multiple documents.
- To deselect, select the checkbox again and remove the checkmark.

2 Select [Send].

NOTE

Depending on the settings, the address book screen may appear.

3 Set the destination.

For more information on selecting destinations, refer to the following:

➔ [Specifying Destination \(page 5-43\)](#)

IMPORTANT

Only when specifying the E-mail addresses which have encryption certificate from the address book, [Email Encrypted TX] and [Digital Signature to Email] can be used. When entering E-mail address from the operation panel, you can not use these functions.

4 Set the sending size, original image, etc., as desired.

For the features that can be set, refer to the following:

➔ [Custom Box \(Store File, Printing, Send\) \(page 6-10\)](#)

NOTE

Select [Favorites] when registering or recalling favorites.

➔ [Registering Favorites \(page 5-8\)](#)

➔ [Recalling Favorites \(page 5-8\)](#)

5 Press the [Start] key.

Sending of the selected document begins.

Sending Documents in Custom Box to E-mail Address of Logged in User

When user login is enabled, documents in the custom box are sent to the E-mail address of the logged in user.

1 Configure the settings.

Before using this function, the following are necessary.

- The function icon must be displayed in the home screen.
 - ➔ [Editing the Home Screen \(page 2-15\)](#)
- An E-mail address must be set in user login for the user who logs in.
 - ➔ [Adding a User \(Local User List\) \(page 9-6\)](#)

2 Select [Home] key.

3 Select [Send to Me(Email)].



NOTE

When this function is used, functions other than transmission cannot be used.

Moving Documents in Custom Box

1 Display the screen.

[Home] key > [Custom Box] > Select the box



NOTE

If a custom box is protected by a password, enter the correct password.

2 Move the documents.

- 1 Select the document in the list that you want to move by selecting the checkbox.

The document is marked with a checkmark.



NOTE

To deselect, select the checkbox again and remove the checkmark.

- 2 [Others] > [Move/Copy] > [Move to Custom Box] > select the destination of move > [Move] > [Move]

The selected document is moved.



NOTE

If the box to which the document is to be moved is protected by a password, enter the correct password.

Copying Documents in Custom Box into Other Boxes

1 Display the screen.

[Home] key > [Custom Box] > Select the box

NOTE

If a custom box is protected by a password, enter the correct password.

2 Copy the documents.

- 1 Select the document in the list that you want to copy by selecting the checkbox.

The document is marked with a checkmark.

NOTE

To deselect, select the checkbox again and remove the checkmark.

- 2 [Others] > [Move/Copy] > [Copy to Custom Box] > select the destination of copy > [Copy] > [Copy]

The selected document is copied.

NOTE

If the box to which the document is to copied is protected by a password, enter the correct password.

Copying Documents in Custom Box to USB Drive

1 Display the screen.

[Home] key > [Custom Box] > Select the box

NOTE

If a custom box is protected by a password, enter the correct password.

2 Copy the documents.

- 1 Select the document in the list that you want to copy by selecting the checkbox.

The document is marked with a checkmark.

NOTE

To deselect, select the checkbox again and remove the checkmark.

- 2 [Others] > [Move/Copy] > [Copy to USB Drive] > select the destination of copy > [Next] > [Copy] > [Copy]

The selected document is copied.

Joining Documents in Custom Box

You can join documents within a custom box into one file.

NOTE

You can only join a document to other documents in the same custom box. If necessary, move the documents to be joined beforehand.

1 Display the screen.

[Home] key > [Custom Box] > Select the box

NOTE

If a custom box is protected by a password, enter the correct password.

2 Join the document.

- 1 Select the documents in the list that you wish to join by selecting the checkbox.

The document is marked with a checkmark.

You can join up to 10 documents.

NOTE

To deselect, select the checkbox again and remove the checkmark.

- 2 [Others] > [Join].

- 3 Arrange the documents into the order in which they are to be joined.

Select the document you want to rearrange and select [Up] or [Down] to move it to the correct place in the sequence.

- 4 [Next] > Enter the file name for the joined document

NOTE

Enter up to 64 characters as the file name.

- 5 [Join] > [Join]

The documents are joined.

NOTE

After joining, the original documents are left unchanged. Delete the documents if they are no longer needed.

Deleting Documents in Custom Box

1 Display the screen.

- 1 [Home] key > [Custom Box]
- 2 Select the box containing the document.



NOTE

If a custom box is protected by a password, enter the correct password.

2 Delete the document.

- 1 Select the document in the list that you want to delete by selecting the checkbox.
The document is marked with a checkmark.



NOTE

- [Delete] is disabled until a document is selected.
- To deselect, select the checkbox again and remove the checkmark.

- 2 [Others] > [Delete] > [Delete]

The document is deleted.

Job Box

This section explains the Repeat Copy Box and the Form for Form Overlay Box. For Private Print/Stored Job Box and Quick Copy/Proof and Hold Box, refer to the following:

➔ [Printing Data Saved in the Printer \(page 4-20\)](#)

Outputting Repeat Copy Jobs

Repeat Copy feature stores the copied original document data in the Job Box and allows you to print additional copies later. By default, up to 32 documents can be stored. When power is turned off, all stored jobs will be deleted. This section explains how to print documents saved by the Repeat Copy function.

➔ [Repeat Copy \(page 6-72\)](#)

1 Display the screen.

[Home] key > [Job Box] > [Repeat Copy]

2 Print the document.

1 Select the document to print > [Print]

If the document is protected by a password, enter the password using the numeric keys.

2 Specify the number of copies to print as desired > [Start Print]

Printing begins.

The Repeat Copy box job will be deleted when the power switch is turned off.

Form for Form Overlay

Image Overlay feature copies the original document overlaid with a form or image. This Job Box is used to store the forms or images for overlaying.

Storing a Form

You can store forms to be used for the form overlay in the job box. One page can be registered in one form.

1 Place the original.

2 Display the screen.

[Home] key > [Job Box] > [Form for Form Overlay]

3 Store the forms.

1 Select [Store File].

2 If necessary, select the image quality of original, scanning density, etc. before the original is scanned.

3 Press the [Start] key.

The original is scanned and stored in the [Form for Form Overlay] box.

Deleting a Form Stored

You can delete the form stored in the job box

1 Display the screen.

[Home] key > [Job Box] > [Form for Form Overlay]

2 Delete the forms.

Select the form to delete > [Delete] > [Delete]

The form is deleted.

Operating using Removable USB Drive

Plugging USB drive directly into the machine enables you to quickly and easily print the files stored in the USB drive without having to use a computer.

The following file types can be printed:

- PDF file (Version 1.7 or older)
- TIFF file (TIFF V6/TTN2 format)
- JPEG file
- XPS file
- OpenXPS file
- Encrypted PDF file

In addition, you can store scanned image files in USB drive connected to the machine.

The following file types can be stored:

- PDF file format
- TIFF file format
- JPEG file format
- XPS file format
- OpenXPS file format
- High-compression PDF file format
- Word file format
- Excel file format
- PowerPoint file format



NOTE

Word, Excel and PowerPoint will be saved in a Microsoft Office 2007 or later file format.


Printing Documents Stored in Removable USB Drive

NOTE

- PDF files you wish to print should have an extension (.pdf).
- Use USB drive properly formatted by this machine.
- Plug the USB drive directly into the USB Memory Slot.

1 Plug the USB drive.

- 1 Plug the USB drive into the USB Memory Slot.

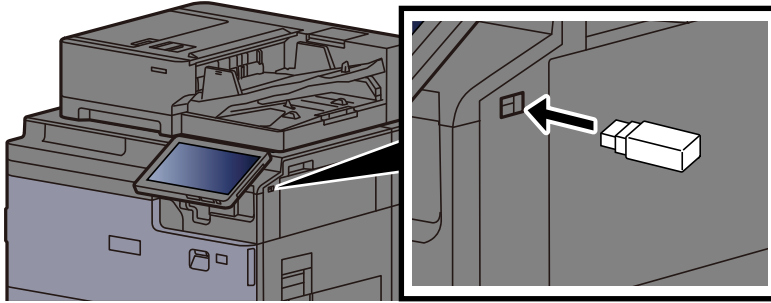

When the machine reads the USB drive, "USB Drive is recognized. Displaying files." may appear.

- 2 Select [**Continue**].

Displays the USB Drive screen.

NOTE

If the message does not appear, select [**USB Drive**] on the Home screen.

2 Print the document.

- 1 Select the folder containing the file to be printed.

NOTE

- 1,000 documents can be displayed.
- To return to a higher level folder, select [**UP**].

- 2 Select the file to be printed > [**Print**]
- 3 Change the number of copies, duplex printing, etc. as desired.

For the features that can be selected, refer to the following:

➔ [USB Drive \(Store File, Printing Documents\) \(page 6-16\)](#)

NOTE

After a document saved in the machine is selected, [**Use File Settings**] may appear in the setting screen for the feature to be used.

- To use the settings saved with the document, select [**Use File Settings**].
- If you need to change the print settings, select the desired feature.

- 4 Press the [**Start**] key.

Printing of the selected file begins.


Saving Documents to USB Drive (Scan to USB)

You can store scanned documents to a removal USB drive.

NOTE

The maximum number of the storable files is 1,000.


1 Place the originals.

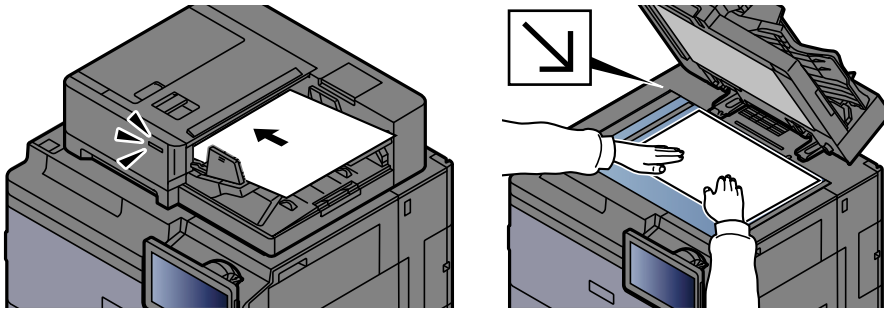

➔ [Loading Originals \(page 5-2\)](#)

2 Plug the USB Drive.

- 1 Plug the USB drive into the USB Memory Slot.

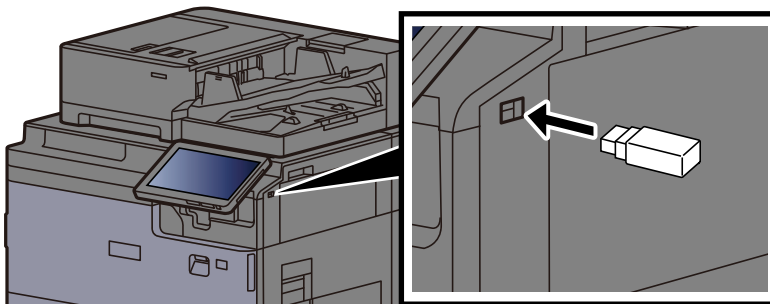

When the machine reads the USB memory, "USB Drive is recognized. Displaying files." may appear.

- 2 Select **[Continue]**.

Displays the USB Drive screen.

NOTE

If the message does not appear, select **[USB Drive]** on the Home screen.

3 Store the document.

- 1 Select the folder where the file will be stored.
- 2 Select **[Store File]**.
- 3 Set the type of original, file format, etc., as desired.

For the features that can be set, refer to the following:

➔ [USB Drive \(Store File, Printing Documents\) \(page 6-16\)](#)

- 4 Check the storing image.

- 5 Press the **[Start]** key.

The original is scanned and the data is stored in the USB drive.

Check the USB Drive Information

- 1 In the USB Drive screen, select [USB Info].
- 2 Once you confirm the information, select [Close].

Removing USB Drive

 **IMPORTANT**

Be sure to follow the proper procedure to avoid damaging the data or USB drive.

- 1 **Display the screen.**
[Home] key > [USB Drive]
- 2 **Select [Remove USB].**
Select [OK], and remove the USB Drive after "USB Drive can be safely removed." is displayed.

 **NOTE**

USB drive can also be removed after checking the Device Information.

➔ [Device Information \(page 7-13\)](#)

Tapping the USB drive icon shown at the top of the touch panel and selecting [**Remove USB**] allows you to safely remove the USB drive.

➔ [Home Screen \(page 2-14\)](#)

Using the Internet Browser

If the machine is connected to the network, you can browse the Internet on the touch panel.



NOTE

To use the internet browser, "Internet Browser" must be set to **[On]** in Function Settings.

➔ [Internet Browser \(page 8-54\)](#)

Launching and Exiting the Browser

1 Display the screen.

- 1 **[Home]** key > **[Internet Browser]**

The Internet browser starts up.

- 2 Use the browser screen to browse web pages.

For information on how to use the browser screen, refer to the following:

➔ [Using the Browser Screen \(page 5-75\)](#)

- 3 To exit the browser, select **[X]** (Close) and then select **[OK]** in the exit confirmation screen.




NOTE

You can specify preferences such as the way the Internet browser screen is displayed.

➔ [Browser Environment \(page 8-54\)](#)

Using the Browser Screen

The operations available in the Internet browser screen are shown below.

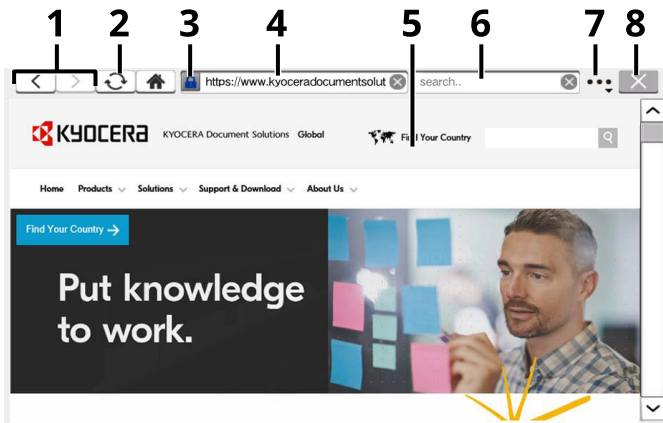

- 1 **Back/Forward:** Displays the previous page or the next page.
- 2 **Reload:** Updates the page.
- 3 **Security lock icon:** Displayed when you are viewing a protected page.
- 4 **Enter URL:** Use this to display a desired web page by entering the URL for that page.
- 5 **Text box:** Pressing the text box displays a keyboard that allows you to type text.
- 6 **Search (Search Internet):** Use the selected search site to search with the entered keyword.
- 7 **Menu:** Displays the browser setup menu. You can use this menu to specify the browser's display magnification, set the text encoding scheme and check the server certificate.
Retrieval in page: Search from the entered keyword in the currently displayed page. You can continue your search by selecting [**SearchUp**] or [**SearchDown**].
- 8 **Close:** Closes the Internet browser and returns you to the application list screen.

Manual Staple

You can staple copied paper manually without any print operation. It is useful when you have forgotten to set the staple sort mode before starting copying, or when you want to staple originals.

 **NOTE**

- This function requires the optional Document Finisher:
 - ➔ [65-sheet Staple Finisher \(page 11-27\)](#)
 - ➔ [100-sheet Staple Finisher \(page 11-28\)](#)
- If there are no staples when manual stapling is performed, the stapling position lamps and stapling position key LEDs all blink. Add staples.
 - ➔ [Replacing Staples \(65-sheet Staple Finisher\) \(page 10-10\)](#)
 - ➔ [Replacing Staples \(100-sheet Staple Finisher\) \(page 10-11\)](#)
- Manual stapling cannot be executed when the machine is in operation.

Maximum number of sheets available for manual stapling


65-sheet Staple Finisher

Paper size	Paper weight	
	52 - 90 g/m ² (14.0 - 24.0 lb. Bond)	91 - 105 g/m ² (24.3 - 28.0 lb. Bond)
A4, A4-R, B5, Letter, Letter-R, 16K	65 sheets	55 sheets
A3, B4, Folio, Ledger	30 sheets	25 sheets

100-sheet Staple Finisher

Paper size	Paper weight	
	52 - 90 g/m ² (14.0 - 24.0 lb. Bond)	91 - 105 g/m ² (24.3 - 28.0 lb. Bond)
A4, A4-R, B5, Letter, Letter-R, 16K	100 sheets	70 sheets
A3, B4, Folio, Ledger	50 sheets	35 sheets

Use the keys on the control section of the Finisher (optional) for manual stapling.

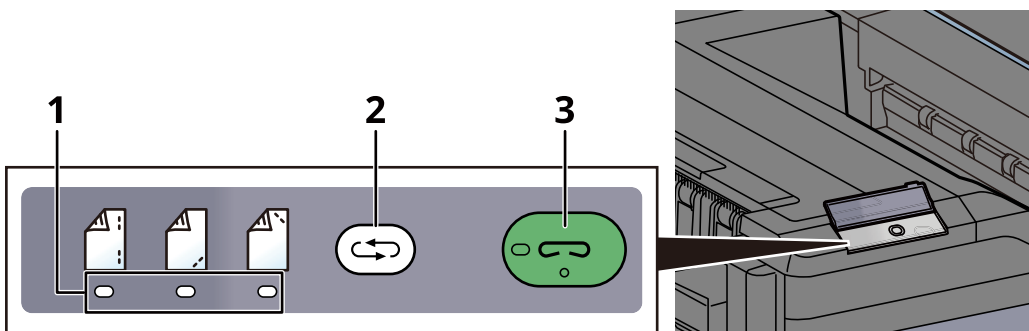



- 1 Stapling position lamps
- 2 Stapling position key
- 3 Stapling key / lamp

1 Press the stapling position key on the stapling control section.


The shutter of the paper exit area is opened and this equipment enters into the manual staple mode.

2 Set the staple position.

Press the stapling position key to select the stapling position (Back  / Front  / 2 Points ).


Operation is not possible while the stapling position lamps are blinking. Operate after the lamps light solidly.


3 Load the paper.

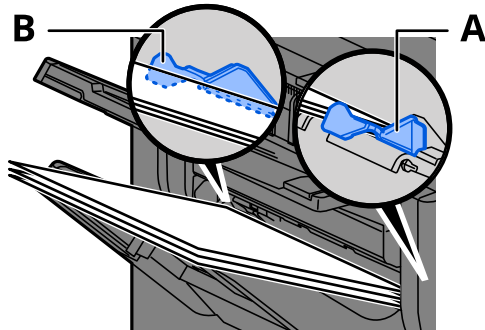

Straighten the edges of the paper well and place the paper front side down in the shutter opening of the output unit.

If the near side of the paper () will be stapled, place the paper against the front guide (A).

If the far side of the paper () will be stapled, place the paper against the back guide (B).

If the edge of the paper () will be stapled at two points, place the paper with the center aligned to the center point between the two side guides (A and B).

CAUTION

Do not insert your hand inside the open shutter.

NOTE

- Press the stapling position key before you place the paper. Once the paper is placed, the stapling position key cannot be used.
- The stapling lamp lights when the paper is properly placed. If it does not light, replace the paper.

4 Staple the paper.

Let go of the paper, and then press the stapling key.

Stapling starts. Stapling finishes and the output is delivered to tray.

CAUTION

Be sure that your hands are away from the paper while stapling is in progress.

Finishing the manual staple mode

Press the stapling position key several times until the stapling position lamps turn off. The shutter of the paper exit area closes. It means that manual stapling is finished.

If no operation is performed for approx. 10 seconds, the manual staple mode will be automatically finished.

NOTE

The time after which manual staple mode is automatically exited can be changed.

➔ [Manual Staple \(page 8-55\)](#)

6 Using Various Functions

This chapter explains the following topics:

Functions Available on the Machine	6-2	Erase Colors	6-69
About Functions Available on the		Continuous Scan	6-70
Machine	6-2	Auto Image Rotation	6-70
Copy	6-2	Negative Image	6-71
Send	6-6	Mirror Image	6-71
Custom Box (Store File, Printing,		Job Finish Notice	6-71
Send)	6-10	File Name Entry	6-72
USB Drive (Store File, Printing		Priority Override	6-72
Documents)	6-16	Repeat Copy	6-72
Functions	6-19	DP Read Action	6-73
Original Size	6-20	Detect Multi-fed Originals	6-73
Paper Selection	6-21	Detect Stapled Originals	6-73
Mixed Size Originals	6-23	Detect Scan Failure	6-74
Original Orientation	6-26	Skip Blank Page	6-74
Fold	6-27	Document Processor Straight Path	6-74
Collate/Offset	6-29	2-sided/Book Original	6-75
Staple/Punch	6-30	Sending Size	6-76
Paper Output	6-34	Long Original	6-76
ID Card Copy/Scan	6-35	File Format	6-77
Org. Manual Feed (DP)	6-35	File Separation	6-84
Zoom	6-36	Scan Resolution	6-84
Combine	6-38	Clarify Text (Noise Removal)	6-84
Margin/Centering, Margin, Centering	6-40	Email Subject/Body	6-85
Border Erase, Border Erase/Full		Send and Print	6-85
Scan	6-41	Send and Store	6-85
Erase Shadowed Areas	6-43	FTP Encrypted TX	6-86
Booklet	6-43	Email Encrypted TX	6-86
Duplex	6-48	Digital Signature Email	6-87
Cover	6-51	Handwriting Enhancement	6-88
Form Overlay	6-52	File Size Confirmation	6-88
Page #	6-53	Delete after Printed	6-88
Memo Page	6-55	Delete after Transmitted	6-88
Insert Sheets/Chapters	6-56	Storing Size	6-89
Image Repeat	6-57	Encrypted PDF Password	6-89
Text Stamp	6-58	JPEG/TIFF Print	6-90
Bates Stamp	6-61	XPS Fit to Page	6-90
Density	6-64		
Original Image	6-64		
EcoPrint	6-66		
Color Selection	6-66		
Sharpness	6-67		
Background Density Adj. (Background			
Density Adjustment)	6-67		
Prevent Bleed-thru	6-68		
Contrast	6-69		


Functions Available on the Machine

About Functions Available on the Machine

This machine provides the various functions available.

Copy

Each function is displayed in the Body when Global Navigation is selected.

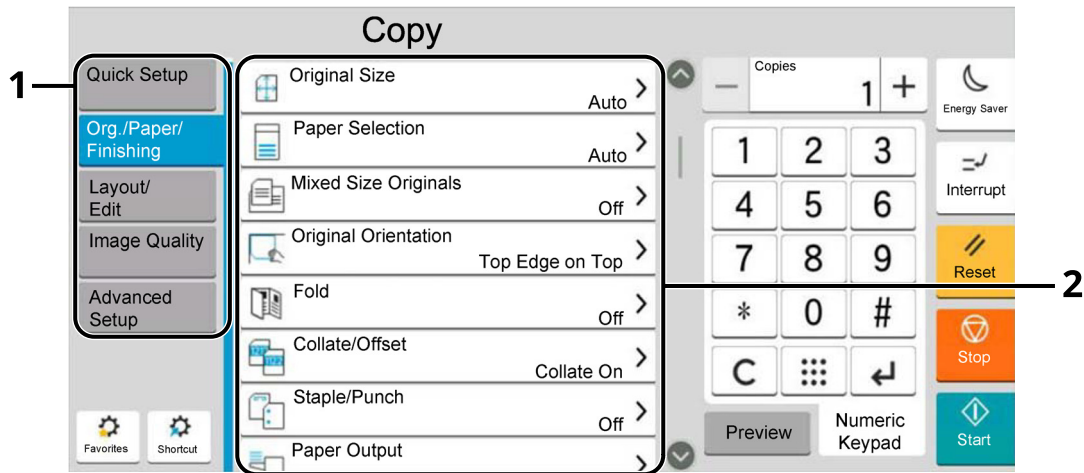

1 Global Navigation

2 Body

For details on each function, see the table below.

Global Navigation	Function	Description	Reference page
Org./Paper/Finishing Configure the settings for originals, paper, and finishing such as collate and staple.	Original Size	Specify the original size to be scanned.	page 6-20
	Paper Selection	Select the cassette or multipurpose tray that contains the required paper size.	page 6-21
	Mixed Size Originals	Scan the documents of different sizes that are set in the document processor all at once.	page 6-23
	Original Orientation	Select the orientation of the original document top edge to scan correct direction.	page 6-26
	Fold	Fold the finished documents.	page 6-27
	Collate/Offset	Offsets the output by page or set.	page 6-29
	Staple/Punch	Staples or punches printed documents.	page 6-30
	Paper Output	Specify the output tray.	page 6-34
	ID Card Copy	Use this when you want to copy a driver's license or an insurance card. When you scan the front and back of the card, both sides will be combined and copied onto a single sheet.	page 6-35
	Org. Manual Feed (DP)	Multi-sheet documents such as slips can be read on the document processor whilst still bound together. When placing a document on the document processor, place one copy at a time.	page 6-35


Global Navigation	Function	Description	Reference page
Layout/Edit Configure the settings for duplex printing and stamp.	Zoom	Adjust the zoom to reduce or enlarge the image.	page 6-36
	Combine	Combines multiple (2-8) original sheets into 1 printed page.	page 6-38
	Margin/Centering	Margin: Add margins (white space). In addition, you can set the margin width and the back page margin. Centering:Centers the original image on the paper when copying onto paper different from the original size.	page 6-40
	Border Erase	Erases the black border that forms around the image.	page 6-41
	Erase Shadowed Areas	When scanning with the document processor open, erase the extra shaded area.	page 6-43
	Booklet	Scan multiple original pages, then print copies so that they can be folded into a single booklet, with a cover.	page 6-43
	Duplex	Produces two-sided copies. You can also create single-sided copies from two-sided originals.	page 6-48
	Cover	Adds a cover to the finished documents.	page 6-51
	Form Overlay	Prints the original document overlaid with a form or image.	page 6-52
	Page #	Adds page numbers to the finished documents.	page 6-53
	Memo Page	Delivers copies with a space for adding notes.	page 6-55
	Insert Sheets/ Chapters	Insert a separator sheet, or make the first page of the chapter the front page when performing duplex printing.	page 6-56
	Image Repeat	Tiles the original image on one sheet of paper.	page 6-57
	Text Stamp	You can add a text stamp on the documents.	page 6-58
Bates Stamp	You can add a bates stamp on the documents.	page 6-61	

Global Navigation	Function	Description	Reference page
Image Quality Configure the settings for density, quality of copies, and color balance.	Density	Adjust density.	page 6-64
	Original Image	Select original image type for best results.	page 6-64
	EcoPrint	EcoPrint saves toner when printing.	page 6-66
	Sharpness	Adjusts the sharpness of image outlines.	page 6-67
	Background Density Adj.	Removes dark background from originals, such as newspapers.	page 6-67
	Prevent Bleed-thru	Hides background colors and image bleed-through when scanning thin original.	page 6-68
	Contrast	You can adjust the contrast between light and dark areas of the image.	page 6-69
	Erase Colors	Erases colors in the source document.	page 6-69

Global Navigation	Function	Description	Reference page
Advanced Setup Configure the settings for continuous scanning, mirror image copies, and Skip Blank Page	Continuous Scan	Scans a large number of originals in separate batches and then produce as one job.	page 6-70
	Auto Image Rotation	Automatically rotates the image 90 degrees when the sizes of the original and the loaded paper matches but the orientations are different.	page 6-70
	Negative Image	Inverts black and white portions of the image for printing.	page 6-71
	Mirror Image	Copies the mirrored image of the original.	page 6-71
	Job Finish Notice	Sends E-mail notice when a job is complete.	page 6-71
	File Name Entry	Adds a file name.	page 6-72
	Priority Override	Suspends the current job and gives a new job top priority.	page 6-72
	Repeat Copy	Enables additional copies in the desired quantity as necessary after a copy job is completed.	page 6-72
	DP Read Action	When the document processor is used, select the scanning operation for the document processor.	page 6-73
	Detect Multi-fed Originals	When reading a document from the document processor, if the multiple feeding of documents is detected, then the reading stops automatically.	page 6-73
	Detect Stapled Originals	When reading a document from the document processor, if a stapled document is detected, then the reading stops automatically.	page 6-73
	Detect Scan Failure	If image defects due to paper creases or sticky notes are detected on the scanned document, scanning is stopped automatically.	page 6-74
	Skip Blank Page	When there are blank pages in a scanned document, this function skips the blank pages automatically and scan only pages that are not blank.	page 6-74
	Document Processor Straight Path	Select the scanning path for Document Processor.	page 6-74

Send

Each function is displayed in the Body when Global Navigation is selected.

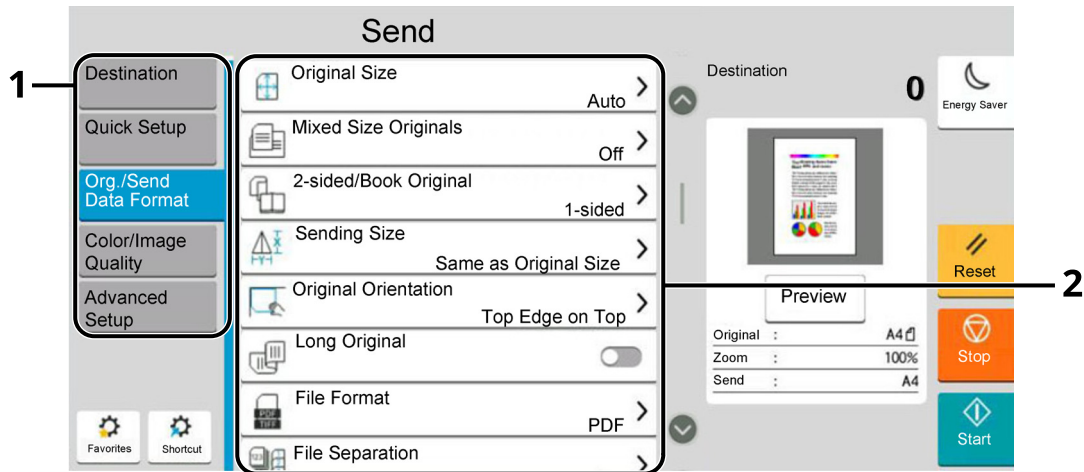


1 Global Navigation

2 Body

For details on each function, see the table below.

Global Navigation	Function	Description	Reference page
Org./Sending Data Format Configure the settings for original type and file format.	Original Size	Specify the original size to be scanned.	page 6-20
	Mixed Size Originals	Scan the documents of different sizes that are set in the document processor all at once.	page 6-23
	2-sided/Book Original	Select the type and orientation of the binding based on the original.	page 6-75
	Sending Size	Select size of image to be sent.	page 6-76
	Original Orientation	Select the orientation of the original document top edge to scan correct direction.	page 6-26
	Long Original	Reads long-sized original documents using a document processor.	page 6-76
	File Format	Specify the image file format. Image quality level can also be adjusted.	page 6-77
	File Separation	Creates several files by dividing scanned original data page by specified number of pages, and sends the files.	page 6-84
	ID Card Scan	Use this when you want to send a driver's license or an insurance card. When you scan the front and back of the card, both sides will be combined and copied onto a single sheet.	page 6-35
	Org. Manual Feed (DP)	Multi-sheet documents such as slips can be read on the document processor whilst still bound together. When placing a document on the document processor, place one copy at a time.	page 6-35


Global Navigation	Function	Description	Reference page
Color/Image Quality Configure the settings for density, quality of copies, and color balance.	Density	Adjust density.	page 6-64
	Original Image	Select original image type for best results.	page 6-64
	Scan Resolution	Select fineness of scanning resolution.	page 6-84
	Fax TX Resolution	Select fineness of images when sending FAX.	Refer to FAX Operation Guide .
	Color Selection	Select the color setting.	page 6-66
	Sharpness	Adjusts the sharpness of image outlines.	page 6-67
	Clarify Text (Noise Removal)	When scanning and sending a document in black and white, it eliminates background noise and improves the legibility of the text.	page 6-84
	Background Density Adj.	Removes dark background from originals, such as newspapers.	page 6-67
	Saturation	Adjust the color saturation of the image.	page 6-68
	Prevent Bleed-thru	Hides background colors and image bleed-through when scanning thin original.	page 6-68
	Contrast	You can adjust the contrast between light and dark areas of the image.	page 6-69
	Erase Colors	Erases colors in the source document.	page 6-69

Global Navigation	Function	Description	Reference page
<p>Advanced Setup Configure the settings for transmission copy, encrypted transmission, and file size confirmation.</p> 	Border Erase/Full Scan	Erases the black border that forms around the image.	page 6-41
	Erase Shadowed Areas	When scanning with the document processor open, erase the extra shaded area.	page 6-43
	Zoom	Adjust the zoom to reduce or enlarge the image.	page 6-36
	Job Finish Notice	Sends E-mail notice when a job is complete.	page 6-71
	Fax Delayed Transmission	Set a send time.	Refer to FAX Operation Guide .
	File Name Entry	Adds a file name.	page 6-72
	Continuous Scan	Scans a large number of originals in separate batches and then produce as one job.	page 6-70
	Email Subject/Body	Adds subject and body when sending a document.	page 6-85
	iFax Subject/Body	Adds subject and body when sending a document by i-FAX.	Refer to FAX Operation Guide .
	Fax Direct Transmission	Sends FAX directly without reading original data into memory.	Refer to FAX Operation Guide .
	Centering	Centers the original image on the paper when sending onto paper different from the original size.	page 6-40
	Fax Polling RX	Dial the destination and receive documents for Polling Transmission stored in the polling box.	Refer to FAX Operation Guide .
	Send and Print	Prints a copy of the document being sent.	page 6-85
	Send and Store	Stores a copy of the document being sent in a Custom Box.	page 6-85
	FTP Encrypted TX	Encrypts images when sending via FTP.	page 6-86
	Email Encrypted TX	Sends encrypted E-mail using the electronic certificate.	page 6-86
	Digital Signature Email	Add a digital signature to the email, using the electronic certificate.	page 6-87
	Text Stamp	You can add a text stamp on the documents.	page 6-58
	Bates Stamp	You can add a bates stamp on the documents.	page 6-61
	Handwriting Enhancement	Emphasize the handwriting texts and lines by changing their color to specified one.	page 6-88
File Size Confirmation	Checks the file size before sending/storing the original.	page 6-88	
Fax TX Report	Print a report of fax transmission results.	Refer to FAX Operation Guide .	

Global Navigation	Function	Description	Reference page
<p>Advanced Setup Configure the settings for transmission copy, encrypted transmission, and file size confirmation.</p>	Detect Multi-fed Originals	When reading a document from the document processor, if the multiple feeding of documents is detected, then the reading stops automatically.	page 6-73
	Detect Stapled Originals	When reading a document from the document processor, if a stapled document is detected, then the reading stops automatically.	page 6-73
	Detect Scan Failure	If image defects due to paper creases or sticky notes are detected on the scanned document, scanning is stopped automatically.	page 6-74
	Skip Blank Page	When there are blank pages in a scanned document, this function skips the blank pages automatically and scan only pages that are not blank.	page 6-74
	Document Processor Straight Path	Select the scanning path for Document Processor.	page 6-74

Custom Box (Store File, Printing, Send)

Each function is displayed in the Body when Global Navigation is selected.

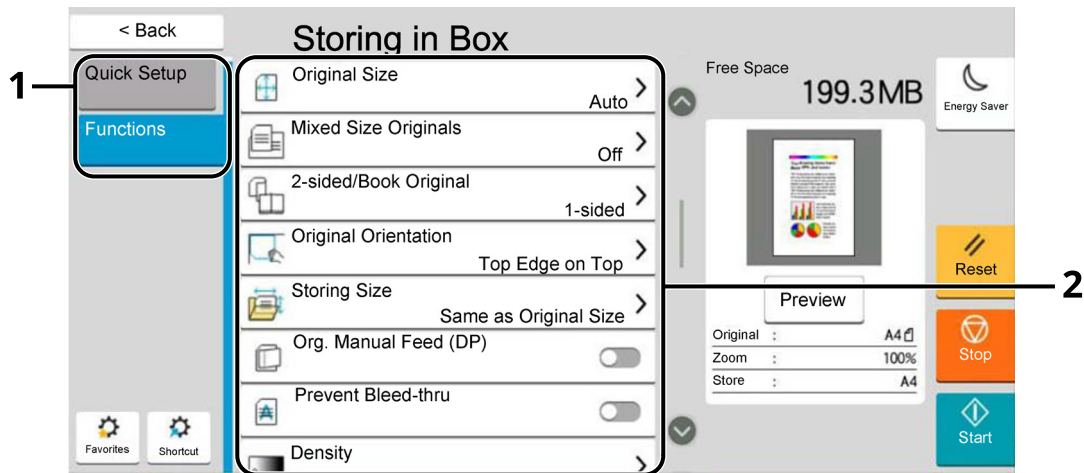

1 Global Navigation

2 Body

For details on each function, see the table below.

Store File

Global Navigation	Function	Description	Reference page
Functions Configure the settings when storing the document in the Custom Box.	Original Size	Specify the original size to be scanned.	page 6-20
	Mixed Size Originals	Scan the documents of different sizes that are set in the document processor all at once.	page 6-23
	2-sided/Book Original	Select the type and orientation of the binding based on the original.	page 6-75
	Original Orientation	Select the orientation of the original document top edge to scan correct direction.	page 6-26
	Storing Size	Select size of image to be stored.	page 6-89
	Org. Manual Feed (DP)	Multi-sheet documents such as slips can be read on the document processor whilst still bound together. When placing a document on the document processor, place one copy at a time.	page 6-35
	Prevent Bleed-thru	Hides background colors and image bleed-through when scanning thin original.	page 6-68
	Density	Adjust density.	page 6-64
	Original Image	Select original image type for best results.	page 6-64
	Scan Resolution	Select fineness of scanning resolution.	page 6-84
	Color Selection	Select the color setting.	page 6-66
	Erase Colors	Erases colors in the source document.	page 6-69

Global Navigation	Function	Description	Reference page
Functions Configure the settings when storing the document in the Custom Box.	Sharpness	Adjusts the sharpness of image outlines.	page 6-67
	Background Density Adj.	Removes dark background from originals, such as newspapers.	page 6-67
	Saturation	Adjust the color saturation of the image.	page 6-68
	Zoom	Adjust the zoom to reduce or enlarge the image.	page 6-36
	Centering	Centers the original image on the paper when storing onto paper different from the original size.	page 6-40
	Border Erase/Full Scan	Erases the black border that forms around the image.	page 6-41
	Erase Shadowed Areas	When scanning with the document processor open, erase the extra shaded area.	page 6-43
	Continuous Scan	Scans a large number of originals in separate batches and then produce as one job.	page 6-70
	Job Finish Notice	Sends E-mail notice when a job is complete.	page 6-71
	File Name Entry	Adds a file name.	page 6-72
	Detect Multi-fed Originals	When reading a document from the document processor, if the multiple feeding of documents is detected, then the reading stops automatically.	page 6-73
	Detect Stapled Originals	When reading a document from the document processor, if a stapled document is detected, then the reading stops automatically.	page 6-73
	Detect Scan Failure	If image defects due to paper creases or sticky notes are detected on the scanned document, scanning is stopped automatically.	page 6-74
	Skip Blank Page	When there are blank pages in a scanned document, this function skips the blank pages automatically and scan only pages that are not blank.	page 6-74
	Contrast	You can adjust the contrast between light and dark areas of the image.	page 6-69
	Long Original	Reads long-sized original documents using a document processor.	page 6-76
Document Processor Straight Path	Select the scanning path for Document Processor.	page 6-74	

Print

Global Navigation	Function	Description	Reference page
Functions Configure the settings for paper selection and duplex printing when printing from the Custom Box.	Paper Selection	Select the cassette or multipurpose tray that contains the required paper size.	page 6-21
	Collate/Offset	Offsets the output by page or set.	page 6-29
	Paper Output	Specify the output tray.	page 6-34
	Staple/Punch	Staples or punches printed documents.	page 6-30
	Combine	Combines multiple (2-8) original sheets into 1 printed page.	page 6-38
	Duplex	Prints 1-sided or open book originals to 2-sided, or 2-sided or open book originals to 1-sided.	page 6-48
	Margin/Centering	Margin: Add margins (white space). In addition, you can set the margin width and the back page margin. Centering:Centers the original image on the paper when copying onto paper different from the original size.	page 6-40
	Page #	Adds page numbers to the finished documents.	page 6-53
	Booklet	Print document so that it can be folded into a single booklet, with a cover.	page 6-43
	Form Overlay	Prints the original document overlaid with a form or image.	page 6-52
	Cover	Adds a cover to the finished documents.	page 6-51
	File Name Entry	Adds a file name.	page 6-72
	Job Finish Notice	Sends E-mail notice when a job is complete.	page 6-71
	EcoPrint	EcoPrint saves toner when printing.	page 6-66
	Priority Override	Suspends the current job and gives a new job top priority.	page 6-72
	Delete after Printed	Automatically deletes a document from the box once printing is complete.	page 6-88
	Zoom	Adjust the zoom to reduce or enlarge the image.	page 6-36
Fold	Fold the finished documents.	page 6-27	
Text Stamp	You can add a text stamp on the documents.	page 6-58	
Bates Stamp	You can add a bates stamp on the documents.	page 6-61	

Global Navigation	Function	Description	Reference page
Image Quality Configure the settings for density, quality of copies, and color balance.	Density	Adjust density.	page 6-64
	Original Image	Select original image type for best results.	page 6-64
	Sharpness	Adjusts the sharpness of image outlines.	page 6-67
	Background Density Adj.	Removes dark background from originals, such as newspapers.	page 6-67
	Prevent Bleed-thru	Hides background colors and image bleed-through when scanning thin original.	page 6-68
	Contrast	You can adjust the contrast between light and dark areas of the image.	page 6-69


Send

Global Navigation	Function	Description	Reference page
<p>Functions Configure the settings for file format and FAX transmission when sending from the Custom Box.</p>	File Format	Specify the image file format. Image quality level can also be adjusted.	page 6-77
	Sending Size	Select size of image to be sent.	page 6-76
	Centering	Centers the original image on the paper when sending onto paper different from the original size.	page 6-40
	Fax TX Resolution	Select fineness of images when sending FAX.	Refer to FAX Operation Guide .
	Job Finish Notice	Sends E-mail notice when a job is complete.	page 6-71
	Fax Delayed Transmission	Set a send time.	Refer to FAX Operation Guide .
	File Name Entry	Adds a file name.	page 6-72
	Email Subject/Body	Adds subject and body when sending a document.	page 6-85
	iFax Subject/Body	Adds subject and body when sending a document by i-FAX.	Refer to FAX Operation Guide .
	Delete after Transmitted	Automatically deletes a document from the box once transmission is complete.	page 6-88
	FTP Encrypted TX	Encrypts images when sending via FTP.	page 6-86
	Email Encrypted TX	Sends encrypted E-mail using the electronic certificate.	page 6-86
	Digital Signature Email	Add a digital signature to the email, using the electronic certificate.	page 6-87
	Zoom	Adjust the zoom to reduce or enlarge the image.	page 6-36
	File Separation	Creates several files by dividing scanned original data page by specified number of pages, and sends the files.	page 6-84
	Text Stamp	You can add a text stamp on the documents.	page 6-58
	Bates Stamp	You can add a bates stamp on the documents.	page 6-61
File Size Confirmation	Checks the file size before sending/storing the original.	page 6-88	
Fax TX Report	Print a report of fax transmission results.	Refer to FAX Operation Guide .	

Global Navigation	Function	Description	Reference page
Image Quality Configure the settings for density, quality of copies, and color balance.	Density	Adjust density.	page 6-64
	Original Image	Select original image type for best results.	page 6-64
	Resolution	Select fineness of scanning resolution.	page 6-84
	Color Selection	Select the color setting.	page 6-66
	Sharpness	Adjusts the sharpness of image outlines.	page 6-67
	Background Density Adj.	Removes dark background from originals, such as newspapers.	page 6-67
	Saturation	Adjust the color saturation of the image.	page 6-68
	Prevent Bleed-thru	Hides background colors and image bleed-through when scanning thin original.	page 6-68
	Contrast	You can adjust the contrast between light and dark areas of the image.	page 6-69

USB Drive (Store File, Printing Documents)

Each function is displayed in the Body when Global Navigation is selected.

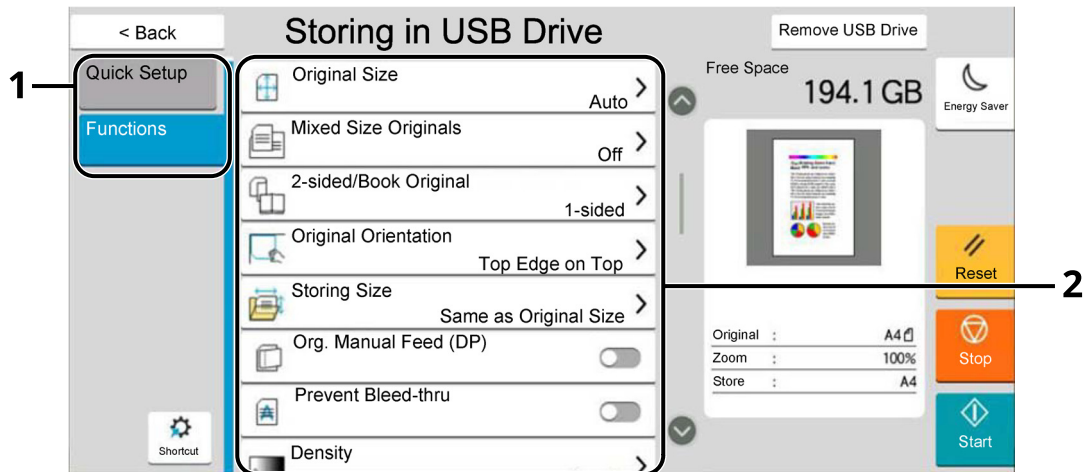

1 Global Navigation

2 Body

For details on each function, see the table below.

Store File

Global Navigation	Function	Description	Reference page
<p>Functions Configure the settings for color selection and document name when storing the document in the USB drive.</p>	Original Size	Specify the original size to be scanned.	page 6-20
	Mixed Size Originals	Scan the documents of different sizes that are set in the document processor all at once.	page 6-23
	2-sided/Book Original	Select the type and orientation of the binding based on the original.	page 6-75
	Original Orientation	Select the orientation of the original document top edge to scan correct direction.	page 6-26
	Storing Size	Select size of image to be stored.	page 6-89
	Org. Manual Feed (DP)	Multi-sheet documents such as slips can be read on the document processor whilst still bound together. When placing a document on the document processor, place one copy at a time.	page 6-35
	Prevent Bleed-thru	Hides background colors and image bleed-through when scanning thin original.	page 6-68
	Density	Adjust density.	page 6-64
	Original Image	Select original image type for best results.	page 6-64
	Scan Resolution	Select fineness of scanning resolution.	page 6-84
	Color Selection	Select the color setting.	page 6-66
	Erase Colors	Erases colors in the source document.	page 6-69
	Sharpness	Adjusts the sharpness of image outlines.	page 6-67
Clarify Text (Noise Removal)	When scanning and sending a document in black and white, it eliminates background noise and improves the legibility of the text.	page 6-84	





Global Navigation	Function	Description	Reference page
<p>Functions Configure the settings for color selection and document name when storing the document in the USB drive.</p>	Background Density Adj.	Removes dark background from originals, such as newspapers.	page 6-67
	Saturation	Adjust the color saturation of the image.	page 6-68
	Zoom	Adjust the zoom to reduce or enlarge the image.	page 6-36
	Centering	Centers the original image on the paper when storing onto paper different from the original size.	page 6-40
	Border Erase/Full Scan	Erases the black border that forms around the image.	page 6-41
	Erase Shadowed Areas	When scanning with the document processor open, erase the extra shaded area.	page 6-43
	Continuous Scan	Scans a large number of originals in separate batches and then produce as one job.	page 6-70
	File Name Entry	Adds a file name.	page 6-72
	File Format	Specify the image file format. Image quality level can also be adjusted.	page 6-77
	Job Finish Notice	Sends E-mail notice when a job is complete.	page 6-71
	File Separation	Creates several files by dividing scanned original data page by specified number of pages, and sends the files.	page 6-84
	Text Stamp	You can add a text stamp on the documents.	page 6-58
	Bates Stamp	You can add a bates stamp on the documents.	page 6-61
	Detect Multi-fed Originals	When reading a document from the document processor, if the multiple feeding of documents is detected, then the reading stops automatically.	page 6-73
	Detect Stapled Originals	When reading a document from the document processor, if a stapled document is detected, then the reading stops automatically.	page 6-73
	Detect Scan Failure	If image defects due to paper creases or sticky notes are detected on the scanned document, scanning is stopped automatically.	page 6-74
	Handwriting Enhancement	Emphasize the handwriting texts and lines by changing their color to specified one.	page 6-88
	Skip Blank Page	When there are blank pages in a scanned document, this function skips the blank pages automatically and scan only pages that are not blank.	page 6-74
	Contrast	You can adjust the contrast between light and dark areas of the image.	page 6-69
	Long Original	Reads long-sized original documents using a document processor.	page 6-76
Document Processor Straight Path	Select the scanning path for Document Processor.	page 6-74	

Print

Global Navigation	Function key	Description	Reference page
Functions Configure the settings for paper selection and duplex printing when printing from the USB drive.	Paper Selection	Select the cassette or multipurpose tray that contains the required paper size.	page 6-21
	Collate/Offset	Offsets the output by page or set.	page 6-29
	Paper Output	Specify the output tray.	page 6-34
	Staple/Punch	Staples or punches printed documents.	page 6-30
	Duplex	Print a document to 1-sided or 2-sided sheets.	page 6-48
	Margin	Add margins (white space). In addition, you can set the margin width and the back page margin.	page 6-40
	Job Finish Notice	Sends E-mail notice when a job is complete.	page 6-71
	EcoPrint	EcoPrint saves toner when printing.	page 6-66
	Priority Override	Suspends the current job and gives a new job top priority.	page 6-72
	Fold	Fold the finished documents.	page 6-27
	Text Stamp	You can add a text stamp on the documents.	page 6-58
	Bates Stamp	You can add a bates stamp on the documents.	page 6-61
	Encrypted PDF Password	Enter the preassigned password to print the PDF data.	page 6-89
	JPEG/TIFF Print	Select the image size when printing JPEG or TIFF files.	page 6-90
XPS Fit to Page	Reduces or enlarges the image size to fit to the selected paper size when printing XPS file.	page 6-90	

Functions

On pages that explain a convenient function, the modes in which that function can be used are indicated by icons.

Icon	Description
 Copy Org./Paper /Finishing	Access to the function is indicated by icons. Example:Select [Org./Paper/Finishing] in the Copy screen to use the function.
 Send Org./Sending Data Format	Access to the function is indicated by icons. Example:Select [Org./Sending Data Format] in the Send screen to use the function.
 Custom Box Functions	Access to the function is indicated by icons. Example:Select [Functions] in the Custom Box screen to use the function.
 USB Drive Functions	Access to the function is indicated by icons. Example:Select [Functions] in the USB Drive screen to use the function.

Original Size



Org./Paper /Finishing



Org./Sending Data Format



Functions



Functions

Specify the original size to be scanned.

Select [**Auto (Standard Size)**], [**Auto (Nonstandard Size)**], [**Metric**], [**Inch**], [**Others**] or [**Size Entry**] to select the original size.

Item	Value	Description
Auto (Standard Size)	—	Have the size of original detected automatically.
Auto (Nonstandard Size)^{*1}	—	Scans non—standard size documents, then measures size and sets value, automatically. Place originals in Document Processor. NOTE Platen cannot be used when [Auto (Nonstandard Size)] is set.
Metric	A3, A4-R, A4, A5-R, A5, A6, B4, B5-R, B5, B6-R, B6, Folio, 216 x 340 mm	Select from the Metric series standard sizes.
Inch	Ledger, Letter-R, Letter, Legal, Statement-R, Statement, 11" x 15", Oficio II	Select from the Inch series standard sizes.
Others	8K, 16K-R, 16K, Hagaki (Cardstock), Oufukuhagaki (Return postcard), Business Card, ID Card, Custom 1 to 4 ^{*2}	Select from special standard sizes and custom sizes.
Size Entry	Metric X: 50 to 432 mm (in 1 mm increments) Y: 50 to 297 mm (in 1 mm increments) Inch X: 2.00 to 17.00" (in 0.01" increments) Y: 2.00 to 11.69" (in 0.01" increments)	Enter the size not included in the standard sizes. ^{*3} When you have selected [Size Entry], select [+] or [-] to set the sizes of "X" (horizontal) and "Y" (vertical). Select the entry field to use the numeric keys for entry.

*1 Displayed if "Detect Non-standard Size" is set to [**On**] in the System menu.

*2 For instructions on how to specify the custom original size, refer to the following:

➔ [Custom Original Size \(page 8-13\)](#)

*3 The input units can be changed in System Menu. For details, refer to the following:

➔ [Measurement \(page 8-7\)](#)



NOTE

Be sure to always specify the original size when using custom size original.

Paper Selection



Org./Paper
/Finishing



Functions



Functions

Select the cassette or multipurpose tray that contains the required paper size.

If [**Auto**] is selected, the paper matching the size of the original is selected automatically.



NOTE

- Specify in advance the size and type of the paper loaded in the cassette.
 - ➔ [Paper Feeding \(page 8-14\)](#)
- Cassette 5 is displayed when the optional side feeder is installed.

In case of changing the paper size and the media type of the multi purpose tray, select [**Change Multipurpose Tray Settings**] and change Paper Size and Media Type. The available paper sizes and media types are shown in the table below.

Item		Value	Description
Paper Size	Metric	A3 ^{*1*2} , A4-R ^{*1*2} , A4 ^{*1*2} , A5-R ^{*1*2} , A5 ^{*1} , A6 ^{*1*2} , B4 ^{*1*2} , B5-R ^{*1*2} , B5 ^{*1*2} , B6 ^{*1*2} , Folio ^{*1*2} , 216 × 340 mm, SRA3 ^{*1*2}	Select from the Metric standard size.
	Inch	Ledger ^{*1*2} , Letter-R ^{*1*2} , Letter ^{*1*2} , Legal ^{*1*2} , Statement ^{*1*2} , 12" × 18" ^{*1*2} , Executive, Oficio II	Select from the Inch standard size.
	Others	8K, 16K-R, 16K, ISO5, Envelope#10, Envelope#9, Envelope#6, Envelope Monarch, Envelope DL, Envelope C5, Envelope C4, Hagaki (Cardstock) ^{*1*2} , Oufukuhagaki (Return postcard), Kakugata 2, Youkei 4, Youkei 2, Younaga 3, Nagagata 3, Nagagata 4, Custom 1 to 4 ^{*3}	Select from special standard sizes and custom sizes.
	Size Entry	Metric X: 148 to 457 mm (in 1 mm increments) Y: 98 to 320 mm (in 1 mm increments) Inch X: 5.83 to 18" (in 0.01" increments) Y: 3.86 to 12.60" (in 0.01" increments)	Enter the size not included in the standard size. ^{*4} When you have selected [Size Entry], use [+]/[-] or the numeric keys to set the sizes of "X" (horizontal) and "Y" (vertical). Select the entry field to use the numeric keys for entry.

Item	Value	Description
Media type		Plain, Transparency, Rough, Vellum, Labels, Recycled, Preprinted ^{*5} , Bond, Cardstock, Color, Prepunched ^{*5} , Letterhead ^{*5} , Thick, Envelope, Coated, High Quality, Index Tab Dividers, Custom 1 to 8 ^{*6}

*1 Paper size automatically detected in the cassette.

*2 Paper size automatically detected in the Multipurpose Tray.

*3 For instructions on how to specify the custom paper size, refer to the following:

➔ [Custom Paper Settings \(page 8-17\)](#)

*4 The input units can be changed in System Menu. For details, refer to the following:

➔ [Measurement \(page 8-7\)](#)

*5 To print on preprinted or prepunched paper or on letterhead, refer to the following:

➔ [Special Paper Action \(page 8-22\)](#)

*6 For instructions on how to specify the custom paper types 1 to 8, refer to the following:

➔ [Media Type Setting \(page 8-18\)](#)



NOTE

- You can conveniently select in advance the size and type of paper that will be used often and set them as default.
 - ➔ [MP Tray Settings \(page 8-15\)](#)
- If the specified size of paper is not loaded in the paper source cassette or multipurpose tray, a confirmation screen appears. Load the required paper in the multipurpose tray and select [**Continue**] to start copying.

Mixed Size Originals

Org./Paper
/FinishingOrg./
Sending
Data Format

Functions



Functions

Scan the documents of different sizes that are set in the document processor all at once.

This function cannot be used if platen is used. Different Width is not displayed in inch models.

Copying

Metric Models

Item		Value	Description
Off			
Mixed Size Copies	Original Width	Same Width, Different Width	Select options for the width of set original.
Same Size Copies	Original Width	Same Width, Different Width	Select options for the width of set original.
	Top Page Direction	Long Edge Left, Short Edge Left	Select the original orientation of the first page.

Inch Models

Item		Value	Description
Off			
Mixed Size Copies	Original Width	Same Width	Originals are detected individually for size and copied to the same size paper as originals.
Same Size Copies	Original Width	Same Width	Select the original orientation of the first page.
	Top Page Direction	Long Edge Left, Short Edge Left	

Sending/Storing

Item	Value	Description
Mixed Size Originals	Off	
	Same Width	Scans and sends/stores multiple sheets of the same width using the document processor.
	Different Width	Scans and sends/stores multiple sheets of different width using the document processor.

Supported Combinations of Originals

Same Width

When the original widths are the same, the combinations of originals that can be placed are as follows.

- B4 and B5
- Ledger and Letter (A3 and A4)
- Legal and Letter-R (Folio and A4-R)

Example: B4 and B5



NOTE

When mixing the original sizes as using the following combination, make sure to set "Auto Detect Original Size" to **[On]** for "Folio".

Folio and A4


➔ [Auto Detect Original Size \(page 8-12\)](#)

Different Width (Available for metric models only)

The supported combinations of originals are as follows.

- A3, B4, A4, B5
- B4, A4-R, B5
- A4-R, B5-R, Folio, Legal, Letter-R

Example: A3, B4, A4, B5

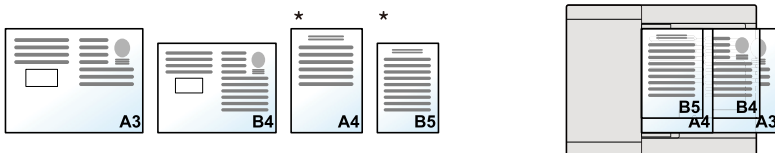

* Set the originals of A4 and B5 with vertical orientation.

NOTE

- Number of sheet that can be placed in the document processor: up to 30 sheets
- When mixing the original sizes as using the following combination, make sure to set "Auto Detect Original Size" to **[On]** for "Folio".

A4-R, B5-R, and Folio

➔ [Auto Detect Original Size \(page 8-12\)](#)

IMPORTANT

When placing originals of different width, arrange the originals so that their left sides and top sides are aligned, and place the originals in alignment with the far width guide. If the originals are not aligned in this way, they may not be scanned correctly, and skewing or original jams may result.

Selecting How to Copy Originals

Set the paper size (copy size) when printing scanned document. Select whether you wish to create individual copies on different size paper matching the original sizes or to produce all copies on the same size paper.



NOTE

This function is available regardless of whether originals have the same width or not.

Mixed Size Copies

Originals are detected individually for size and copied to the same size paper as originals.



Same Size Copies

Originals are all copied to the same size paper.



Original Orientation



Org./Paper
/Finishing



Org./
Sending
Data Format



Functions



Functions

Select the orientation of the original document top edge to scan correct direction.

To use any of the following functions, the document's original orientation must be set.

- Zoom
- Duplex
- Margin/Centering
- Border Erase, Border Erase/Full Scan
- Combine
- Memo page
- Page #
- Booklet
- Stapling/Punch (optional feature)
- 2-sided/Book Original
- Text Stamp
- Bates Stamp





NOTE

If **[On]** is selected in the setting for Original Orientation in System Menu, the selection screen for original orientation appears when you select any of the above functions.

➔ [Orientation Confirmation \(page 8-24\)](#)

Select original orientation from **[Top Edge on Top]**, **[Top Edge on Left]** or **[Auto]**.

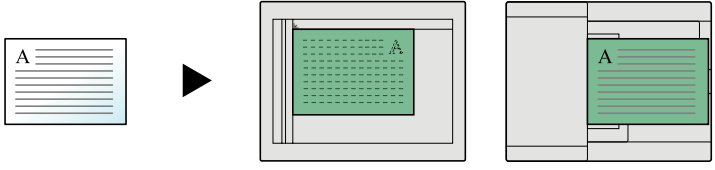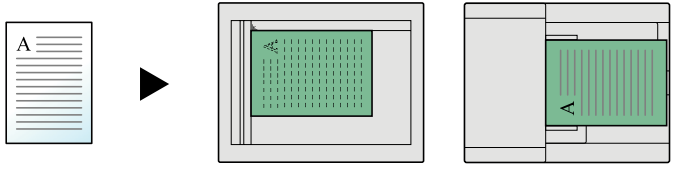Item	Image
Top Edge on Top	 <p style="text-align: center;">Original Original orientation</p>
Top Edge on Left	 <p style="text-align: center;">Original Original orientation</p>
Auto	

 


NOTE

The default setting for Original Orientation can be changed.

➔ [Original Orientation \(Copy\) \(page 8-36\)](#)









Fold

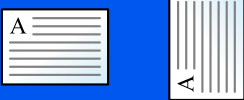

Folds the finished documents. Select the fold method.

The following folding options and orientations are available.

Original orientation		Orientation: Landscape		Orientation: Portrait		
Item						
Bi-Fold	Saddle Stitch* ¹					
	Inside					
	Outside					
Tri-Fold	Inside	R to L/B to T				
		L to R/T to B				
	Outside	R to L/B to T				
		L to R/T to B				

Original orientation		Orientation: Landscape	Orientation: Portrait
Item			
Z-Fold ^{*2}	R to L/B to T		
	L to R/T to B		
Engineering Fold ^{*2} (Half Z-Fold)			

*1 Appears when the optional folding unit is installed.

*2 Appears when the optional Z-Fold Unit is installed.

 **NOTE**

- Folding requires the optional Finisher, and the folding unit or Z-Fold Unit.
- For details on paper sizes and numbers of sheets that can be folded, refer to the following.
 - ➔ [Folding Unit \(For Finisher\) \(page 11-29\)](#)
 - ➔ [Z-Fold \(For Finisher\) \(page 11-30\)](#)
- Multi-sheet Fold during copying is performed by the Folding Unit when the Folding Unit and Z-Fold Unit are installed.

Collate/Offset



Org./Paper
/Finishing



Functions



Functions

Offsets the output by page or set.

Item	Image	Description
Off		
Collate On		Scans multiple originals and delivers complete sets of copies as required according to page number.
Offset Each Page		Printed copies are collated and output as individual pages separately. NOTE This function requires the optional Document Finisher: ➔ 65-sheet Staple Finisher (page 11-27) ➔ 100-sheet Staple Finisher (page 11-28)
Offset Each Set		Printed copies are collated and output as individual set separately. NOTE This function requires the optional Document Finisher: ➔ 65-sheet Staple Finisher (page 11-27) ➔ 100-sheet Staple Finisher (page 11-28)



NOTE

The paper sizes supported in Offset are Legal, Ledger, Oficio II, Letter, A3, A4, B4, B5, 216 × 340 mm and 8K, 16K.

Staple/Punch

Org./Paper
/Finishing

Functions



Functions

Staple

Staples the finished documents. The staple position can be selected.


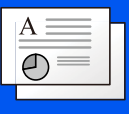
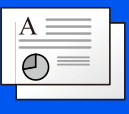
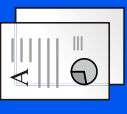

 

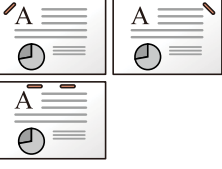
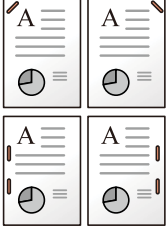
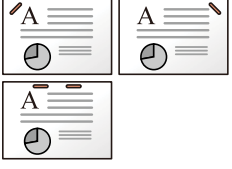

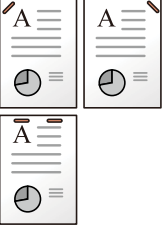
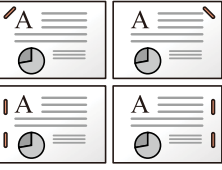


NOTE


This function requires the optional Document Finisher:

- ➔ [65-sheet Staple Finisher \(page 11-27\)](#)
- ➔ [100-sheet Staple Finisher \(page 11-28\)](#)

Item	Value	Description
Staple	Off	
	Top Left	Select the staple position, and then select [Next >]. For details on original orientation and staple position, refer to the following: ➔ Original Orientation and Punch Hole Position (page 6-33)
	Top Right	
	2 staples Left	
	2 staples Top	
	2 staples Right	
	Saddle Stitch	
Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left].

Original Orientation and Staple Position

Original orientation	Paper orientation		Top Edge on Left	
<p>Paper orientation</p> 				
<p>Cassette paper load direction</p> 				
<p>Cassette paper load direction</p> 				

 **NOTE**

 


One position staple is not slanted for the following paper sizes.

B5-R, 16K-R


Mixed Size Stapling

Even with mixed paper sizes, if the sizes have the same width as shown in the combinations below, the output can be stapled.

- A3 and A4
- B4 and B5
- Ledger and Letter
- Ledger and Letter-R
- 8K and 16K

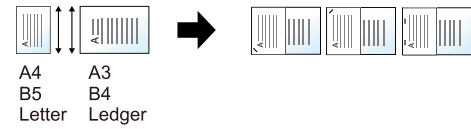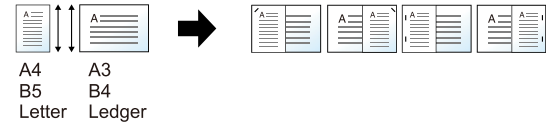

- A3 and A4 (A3 Z fold and A4)
- B4 and B5 (B4 Z fold and B5)
- Ledger and Letter (Ledger Z fold and Letter)
- 8K and 16K (8K Z fold and 16K)

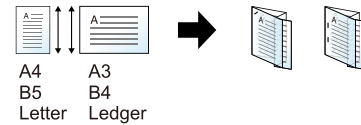

NOTE

- Number of sheets that can be stapled: up to 30 sheets.
- When performing Mixed Size Stapling, refer to the following:
 - ➔ [Mixed Size Originals \(page 6-23\)](#)

Punch

Punches holes in sets of finished documents.

NOTE

- This function requires the optional Document Finisher and Punch Unit.
- For details on paper sizes that can be punched, refer to the following:
 - ➔ [Punch Unit \(For Finisher\) \(page 11-28\)](#)
- The inch model provides two-hole and three-hole punching. The metric model provides two-hole and four-hole punching.

Item	Value	Description
Punch	Off	Select the position of punch holes. For details on original orientation and position of punch holes, refer to the following: ➔ Original Orientation and Punch Hole Position (page 6-33)
	2 holes Left	
	2 holes Top	
	2 holes Right	
	3 holes Left	
	3 holes Top	
	3 holes Right	
	4 holes Left	
	4 holes Top	
	4 holes Right	
Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then select [OK].

Original Orientation and Punch Hole Position

Image		Original orientation	
Original	Print results	Glass platen	Document processor

NOTE

The inch model provides two-hole and three-hole punching. The metric model provides two-hole and four-hole punching.

Paper Output



Org./Paper
/Finishing



Functions



Functions

Specify the output tray.

Item	Description
Lower Left Tray	Outputs to the Lower Left Tray of the machine.
Upper Left Tray	Outputs to the Upper Left Tray of the machine.
Right Tray	Outputs to the Right Tray of the machine.

with optional Finisher

Item	Description
Right Tray	Outputs to the Right Tray of the machine.
Tray A	Delivery to the Tray A of the optional Document Finisher.
Tray B	Delivery to the Tray B of the optional Document Finisher.
Tray C	Delivery to the Tray C of the optional Document Finisher.

with optional Mailbox

Item	Description
Right Tray	Outputs to the Right Tray of the machine.
Tray A	Delivery to the Tray A of the optional Document Finisher.
Tray B	Delivery to the Tray B of the optional Document Finisher.
Tray C	Delivery to the Tray C of the optional Document Finisher.
Tray 1 to 7	Delivery to tray 1 to 7 (tray 1 is the uppermost tray) of the optional Mailbox. When [Heavy 3] (164 g/m ² -) or higher is set in Paper Weight and Mailbox (Option) is set for the output destination, the output destination is automatically changed to a tray that can be used.





NOTE

The default setting for Paper Output can be changed.


➔ [Paper Output \(page 8-23\)](#)

ID Card Copy/Scan

 Org./Paper /Finishing

 Org./ Sending Data Format

Use this when you want to copy/send a driver's license or an insurance card. When you scan the front and back of the card, both sides will be combined and copied onto a single sheet.

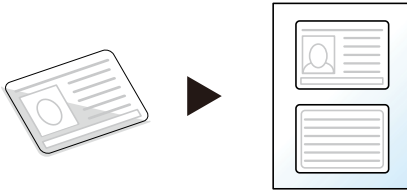


IMPORTANT

- Set the ID card on the platen glass and close the Document Processor cover. Once the cover is closed, ID card copying and scanning is available.
- Place the ID card within the platen glass A4R/Statement size area.

Item		Value	Description
Off			
On	Card Position on Platen	Free, Upper Left	Select the position of the card placed on the platen glass.
	Finishing Layout	Align Center, Align Upper Right	Select the finished page ID card layout.

Org. Manual Feed (DP)

 Org./Paper /Finishing

 Org./ Sending Data Format

 Functions

 Functions

 
Multi-sheet documents such as slips can be read on the document processor whilst still bound together. When placing a document on the document processor, place one copy at a time.

(Value: [Off] / [On])

NOTE

Documents can be placed if the total thickness of the multi-sheet document is 220 g/m² or less.

Zoom




Adjust the zoom to reduce or enlarge the image.

Copying

The following zoom options are available.

Auto

Adjusts the image to match the paper size.

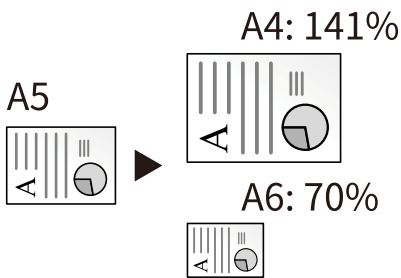


Standard Zoom

Reduces or enlarges at preset magnifications.

Model	Zoom Level (Original Copy)	Model	Zoom Level (Original Copy)
Metric Models	400% Max.	Inch Models	400% Max.
	200% A5 >> A3		200% Statement >> Ledger
	141% A4 >> A3 A5 >> A4		154% Statement >> Legal
	127% Folio >> A3		129% Letter >> Ledger
	106% 11"x15" >> A3		121% Legal >> Ledger
	100%		100%
	90% Folio >> A4		78% Legal >> Letter
	75% 11"x15" >> A4		77% Ledger >> Letter
	70% A3 >> A4 A4 >> A5		64% Ledger >> Letter
	50%		50% Ledger >> Statement
25% Min.	25% Min.		


Zoom Entry

Manually reduces or enlarges the original image in 1% increments between 25% and 400%. Use the numeric keys or select [+] or [-] to enter the any magnification.

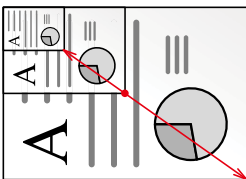

XY Zoom

Select vertical and horizontal magnifications individually. Magnifications can be set in 1% increments between 25% and 400%.

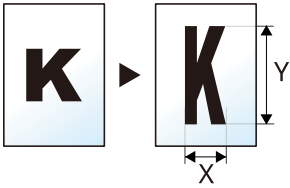

Item	Value	Description
XY Zoom	X: 25 to 400% (in 1% increments) Y: 25 to 400% (in 1% increments)	Select vertical and horizontal magnifications individually. Select [+] or [-] to change the displayed magnifications of "X" (horizontal) and "Y" (vertical). Select [# Keys] to use the numeric keys for entry.
Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then press [OK].

Printing/Sending/Storing

Item	Description
100%	Reproduces the original size.
Auto	Reduces or enlarges original to sending/storing size.

 **NOTE**

- To reduce or enlarge the image, select the paper size, sending size, or storing size.
 - ➔ [Paper Selection \(page 6-21\)](#)
 - ➔ [Sending Size \(page 6-76\)](#)
 - ➔ [Storing Size \(page 6-89\)](#)
- Some combinations of original size and paper size or sending size may cause the image to be positioned at the edge of the paper. To center the original vertically and horizontally on the page, use the Centering function.
 - ➔ [Margin/Centering, Margin, Centering \(page 6-40\)](#)

Combine



Layout/Edit



Functions

Combines multiple (2-8) original sheets into 1 printed page.

You can select the page layout and the type of boundary lines around the pages.

The following types of the boundary lines are available.



None

Solid Line

Dotted Line

Positioning
Mark

Item	Value	Description
Off		
2 in 1	Layout	Left to Right/Top to Bottom, Right to Left/Bottom to Top
	Border Line	None, Solid Line, Dotted Line, Positioning Mark
	Original Orientation	Top Edge on Top, Top Edge on Left, Auto
4 in 1, 8 in 1	Layout	Right then Down, Left then Down, Down then Right, Down then Left
	Border Line	None, Solid Line, Dotted Line, Positioning Mark
	Original Orientation	Top Edge on Top, Top Edge on Left, Auto

Layout image

Item	Image	Image
2 in 1	L to R/T to B	
2 in 1	R to L/B to T	
4 in 1, 8 in 1	Right then Down	
4 in 1, 8 in 1	Left then Down	
4 in 1, 8 in 1	Down then Right	
4 in 1, 8 in 1	Down then Left	

NOTE

- The paper sizes supported in Combine mode are A4, A5, B5, Folio, 216 × 340 mm, Letter, Legal, Statement, Oficio II, and 16K.
- When placing the original on the platen, be sure to copy the originals in page order.

Margin/Centering, Margin, Centering



Layout/Edit



Advanced Setup



Functions



Functions

Copying/Printing


Add margins (white space). In addition, you can set the margin width and the back page margin.

Centering: Centers the original image on the paper when copying onto paper different from the original size.

NOTE

The default setting for margin width can be changed.

➔ [Margin Default \(page 8-37\)](#)

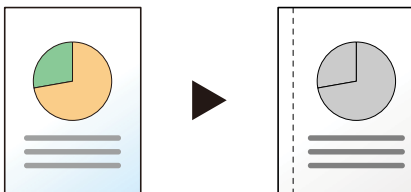

Item	Value	Description	
Off			
Margin	Margin	Metric: -18 mm to +18 mm (in 1 mm increments) Inch: -0.75 to +0.75" (in 0.01" increments)	Set the margin width.* ¹ Use [+], [-] or the numeric keys to enter the margins for "Left/Right" and "Top/Bottom".
	Back Page	Auto, Manual	For duplex copying, select [Back Page] and select [Auto] or [Manual]. When [Auto] is selected, an appropriate margin is applied automatically on the rear page depending on a margin specified for the front page and a binding orientation. When [Manual] is set, you can set a different margin than the front on the back. Set the margin in the screen that is displayed. The setting selections are the same as for the front.
	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left].
Centering * ²	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left].

*1 The input units can be changed in System Menu.

➔ [Measurement \(page 8-7\)](#)

 
*2 Not displayed when printing from USB drive.

Sending/Storing

When you have sent/stored the original after specifying the original size and sending size, depending on these sizes, a margin is created at the bottom, left, or right side of paper. By using the Centering function, the image is placed with a margin equally created for all edges.

(Value: [Off] / [On])

Border Erase, Border Erase/Full Scan



Erases the black border that forms around the image.

Standard


Erase the black frame created in the original. Erasing width is fixed.



Original Finishing

Full Scan


Scan originals without white margins. No border erase.

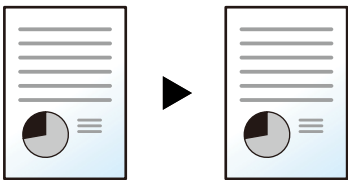

Original Finishing

Border Erase Sheet


Erase the black frame created in the original. Erasing width can be adjusted.

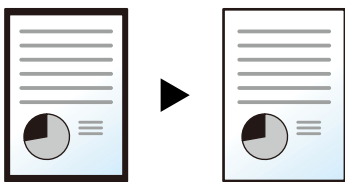

Original Finishing

Border Erase Book

Erases black borders around the edges and in the middle of the original such as a thick book. You can specify the widths individually to erase the borders around the edges and in the center of the book.

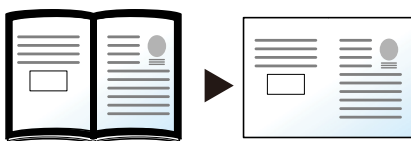

Original Finishing

Individual Border Erase

You can specify border erase widths individually for all edges.



Original

Finishing

NOTE

- [Full Scan] is not displayed when copying.
- The default setting for border erase width can be changed.
 - ➔ [Border Erase Default \(page 8-35\)](#)
- The default width for back page can be changed.
 - ➔ [Border Erase to Back Page \(page 8-35\)](#)

Item		Value	Description
Standard		Scan originals with Standard Mode.	
Full Scan ^{*1}		Scan originals without white margins.	
Border Erase Sheet	Border	Metric: 0 mm to 50 mm (in 1 mm increments) Inch: 0.00 to 2.00" (in 0.01" increments)	Set the border erase width. ^{*2} Use [+], [-] or the numeric keys to set the value.
	Back Page	Same as Front Page, Do Not Erase	For 2-sided originals, select [Back Page] and then select [Same as Front Page] or [Do Not Erase].
Border Erase Book	Border	Metric: 0 mm to 50 mm (in 1 mm increments) Inch: 0.00 to 2.00" (in 0.01" increments)	Set the border erase width around the edges and in the center of the book. ^{*2} Use [+], [-] or the numeric keys to set the value.
	Back Page	Same as Front Page, Do Not Erase	For 2-sided originals, select [Back Page] and then select [Same as Front Page] or [Do Not Erase].
Individual Border Erase	Border	Metric: 0 mm to 50 mm (in 1 mm increments) Inch: 0.00 to 2.00" (in 0.01" increments)	Set the border erase width individually for all edges. ^{*2} Use [+], [-] or the numeric keys to set the value.
	Back Page	Same as Front Page, Do Not Erase	For 2-sided originals, select [Back Page] and then select [Same as Front Page] or [Do Not Erase].
	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left].

*1 Not displayed when copying.

*2 The input units can be changed in System Menu.


➔ [Measurement \(page 8-7\)](#)

Erase Shadowed Areas



When scanning with the document processor open, erase the extra shaded area.

(Value: [Off] / [On])

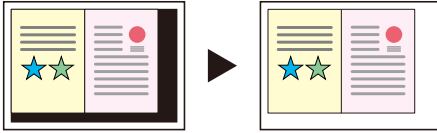

NOTE

In case the Document processor or the original cover is not opened sufficiently, it might not be able to erase the shaded area.

➔ [Prevent Light Reflection \(page 8-13\)](#)

Booklet



The Booklet option allows you to copy sheet originals and produce booklets such as small brochures or pamphlets. A booklet, such as a magazine, is made by folding at the center.

You can print the cover page onto colored paper or thick paper. Paper for the cover is supplied from the multipurpose tray. To feed the cover paper from the cassette or inserter, refer to the following:

➔ [Paper Source for Cover \(page 8-22\)](#)

NOTE


Using the optional Finisher and the folding unit enables you to saddle stitch your copies (fold them in two with staples in the center). Supported paper sizes are A3, A4-R, B4, Ledger, Letter-R, Legal, Oficio II and 8K.

Type of original	Original size	Paper size
One-sided original, Two-sided original	All*1	A3, A4-R, A4, A5-R, B4, B5-R, B5, Ledger, Letter-R, Letter, Legal, Oficio II and 8K
Book Original	A3, A4-R, A5-R, B4, B5-R, Ledger, Letter-R and 8K	

*1 Except for custom sized originals.


Binding on the left side

The folded copies can be read from left to right.

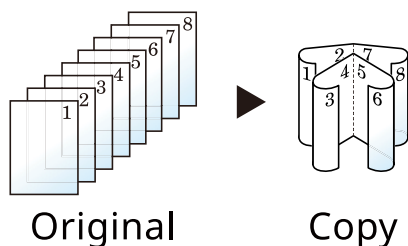


Binding on the right side

The folded copies can be read from right to left.

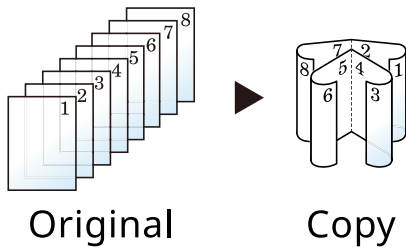

Top binding

The folded copies can be read from top to bottom.

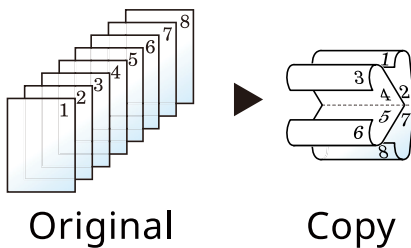

Copying

Item		Value	Description	
Off				
1-sided >> Booklet	Binding in Finishing	Left, Right, Top	Select the binding orientation of copies.	
	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then press [OK].	
	Cover*1	Off		
		Cover: Front Cover Print Setting	Do Not Print, Front Only, Back Only, Duplex	Select whether to add the cover. Select the printing method for the cover to be inserted.
		Cover: Back Cover Print Setting	Do Not Print, Front Only, Back Only, Duplex	Select [Cover], and then [Cover], and specify the print setting for the cover to be inserted. Select from [Do Not Print], [Back Only], [Front Only], and [Duplex], and press [OK].
	Staple/Fold	Off, Fold Only, Saddle Stitch	To fold finished copies in half, select [Staple/Fold] and then select [Fold Only]. To use saddle stitching, select [Staple/Fold] and then select [Saddle Stitch].	

	Item	Value	Description
2-sided >> Booklet	Binding in Original	Left/Right, Top	Select the binding direction of originals.
	Binding in Finishing	Left, Right, Top	Select the binding orientation of copies.
	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then press [OK].
	Cover^{*1}	Off	
		Cover: Front Cover Print Setting	Do Not Print, Front Only, Back Only, Duplex
	Cover: Back Cover Print Setting	Do Not Print, Front Only, Back Only, Duplex	
	Staple/Fold	Off, Fold Only, Saddle Stitch	To fold finished copies in half, select [Staple/Fold] and then select [Fold Only]. To use saddle stitching, select [Staple/Fold] and then select [Saddle Stitch].
Book >> Booklet^{*2}	Binding in Original	Left, Right	Select the binding direction of originals.
	Binding in Finishing	Left, Right	Select the binding orientation of copies.
	Cover	Off, On	Select whether to add the cover. Select [Cover] to select [Cover], and select [OK].
	Staple/Fold	Off, Fold Only, Saddle Stitch	To fold finished copies in half, select [Staple/Fold] and then select [Fold Only]. To use saddle stitching, select [Staple/Fold] and then select [Saddle Stitch].

*1 Printing is not possible when feeding from the inserter.

*2 [**Top Edge on Top**] is set for "Original Orientation".

Printing

Item		Value	Description
Off			
Booklet	Binding	Left, Right, Top	Select the binding orientation of copies.
	Cover*1	Off	
		Cover: Front Cover Print Setting	Do Not Print, Front Only, Back Only, Duplex
	Cover: Back Cover Print Setting	Do Not Print, Front Only, Back Only, Duplex	Select [Cover], and then [Cover], and specify the print setting for the cover to be inserted. Select from [Not Print], [Back Only], [Front Only], and [Duplex], and press [OK].
Staple/Fold		Off, Fold Only, Saddle Stitch	To fold finished copies in half, select [Staple/Fold] and then select [Fold Only]. To use saddle stitching, select [Staple/Fold] and then select [Saddle Stitch].

*1 Printing is not possible when feeding from the inserter.












NOTE

- The number of sheets that can be folded or Saddle Stitch stapled varies depending on paper weight. For details, refer to the following:
 - ➔ [Folding Unit \(For Finisher\) \(page 11-29\)](#)
 - ➔ [Z-Fold \(For Finisher\) \(page 11-30\)](#)
- When placing the original on the platen, be sure to place the originals in page order.

Binding direction, and Orientation of cover and original


When feeding the cover from the inserter, the setting orientation of the cover and the original differs depending on the [**Binding in Finishing**] or [**Binding**] setting.

1: Front cover 2: Back cover

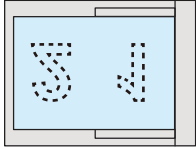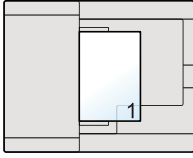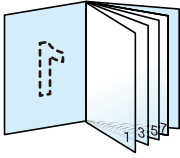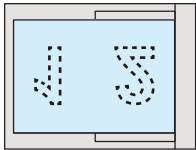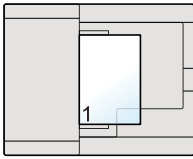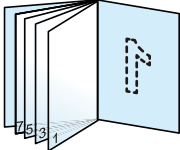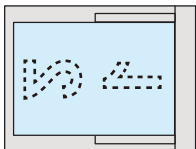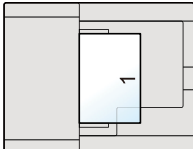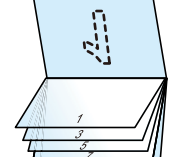Item	Orientation		Image
	Inserter	Document Processor	
Left			
Right			
Top*1			

*1 Set [**Top Edge on Left**] for Original Orientation.

 Duplex



Layout/Edit



Functions




Functions

Produces two-sided copies. You can also create single-sided copies from two-sided originals.

The following modes are available.

One-sided to Two-sided

Produces two-sided copies from one-sided originals. In case of an odd number of originals, the back side of the last copy will be blank.

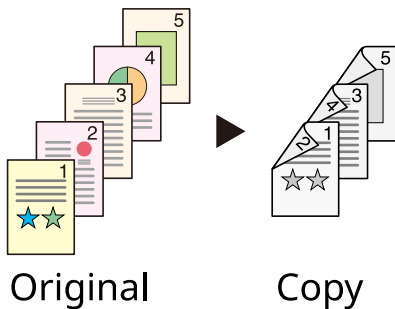


Original

Copy

The following binding options are available.

- A Binding Left/Right: Images on the second sides are not rotated.
- B Binding Top: Images on the second sides are rotated 180 degrees. Copies can be bound on the top edge, facing the same orientation when turning the pages.

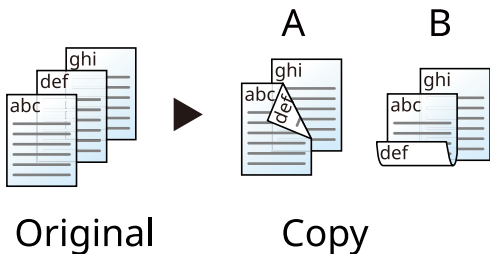

Original


Copy

Two-sided to One-sided

Copies each side of a two-sided original onto two individual sheets. Place originals in the document processor.

The following binding options are available.

- Binding Left/Right: Images on the second sides are not rotated.
- Binding Top: Images on the second sides are rotated 180 degrees.

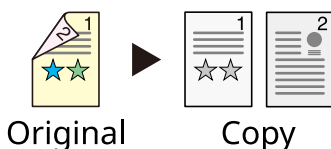


Original

Copy

Two-sided to Two-sided

Produces two-sided copies from two-sided originals. Place originals in the document processor.

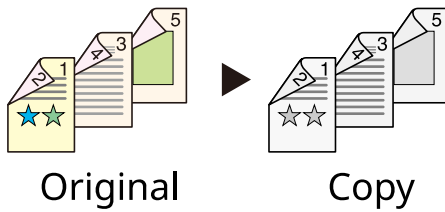

NOTE

The paper sizes supported in Duplex mode: A3, A4-R, A4, A5-R, A5, A6-R, B4, B5-R, B5, B6-R, 216×340 mm, SRA3, Ledger, Letter-R, Letter, Legal, Statement-R, Executive, 12×18", 13×19", 13×19.2", Oficio II, Folio, 8K, 16K-R, 16K, ISO B5, Hagaki (Cardstock), Oufuku hagaki (Return postcard) and Custom 1 to 4.


Book to One-sided

Produces a 1-sided copy of a 2-sided or open book original.

The following binding options are available.

Binding Left: Originals with facing pages are copied from left to right.

Binding Right: Originals with facing pages are copied from right to left.

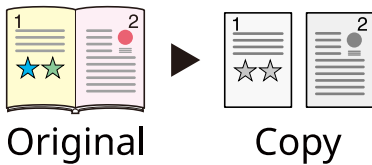


NOTE

- The original sizes supported in Book to One-sided mode: A3, A4-R, A5-R, B4, B5-R, Ledger, Letter-R and 8K
- The paper sizes supported in Book to One-sided mode: A4-R, A4, A5, B5-R, B5, Letter-R, Letter, 16K-R and 16K

Book to Two-sided

Produces two-sided copies from an open book original with facing pages.

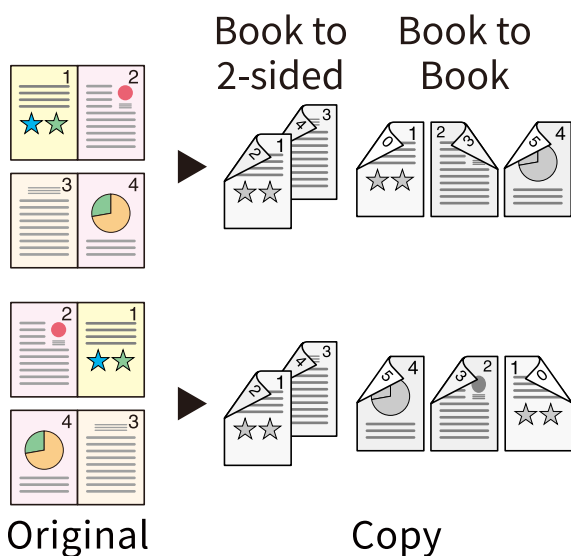

NOTE

- The original sizes supported in Book to Two-sided mode: A3, A4-R, A5-R, B4, B5-R, Ledger, Letter-R and 8K
- The paper sizes supported in Book to Two-sided mode: A4-R, A4, A5, B5-R, B5, Letter-R, Letter, 16K-R and 16K

Copying

Prints 1-sided or open book originals to 2-sided, or 2-sided or open book originals to 1-sided. Select the binding orientation for original and finished documents.

Item		Value	Description
1-sided>>1-sided		—	Disables the function.
1-sided>>2-sided	Finishing	Left/Right, Top	Select the binding orientation of copies.
	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left].
2-sided>>1-sided	Original	Left/Right, Top	Select the binding orientation of originals.
	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left].
2-sided>>2-sided	Original	Left/Right, Top	Select the binding direction of originals.
	Finishing	Left/Right, Top	Select the binding orientation of copies.
	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left].
Book >> 1-sided*1	Original	Left, Right	Select the binding direction of originals.
Book >> 2-sided*1	Original	Left, Right	Select the binding direction of originals.
	Finishing	Book>>2-sided, Book>>Book	Select the desired Duplex option.

*1 [**Top Edge on Top**] is set for "Original Orientation".

When placing the original on the platen, consecutively replace each original and press the [**Start**] key.

After scanning all originals, select [**Finish Scan**] to start copying.

Printing

Print a document to 1-sided or 2-sided sheets.

Item		Value	Description
1-sided		—	Disables the function.
2-sided	Finishing	Left/Right	Prints a 2-sided document so that the sheets are aligned properly for binding on the left or right.
		Top	Prints a 2-sided document so that the sheets are aligned properly for binding on the top.

Cover



Layout/Edit



Functions

Adds a cover to the finished documents.

You can print the first page and/or the last page onto colored paper or thick paper fed from the different paper source than the regular one. The following two options are available. Paper for the cover is supplied from the multipurpose tray. To feed the cover paper from the cassette or inserter, refer to the following:

➔ [Paper Source for Cover \(page 8-22\)](#)

The printing method can be set for the covers. Specify a print setting for each cover.

Item	Value	Description
Off		
Front Cover	Front Cover Print Setting ^{*1}	Do Not Print, Front Only, Back Only ^{*2} , Duplex ^{*2} Different paper has to be inserted for the first page of the document. Select [Stop Printing], [Front Only], [Back Only], or [Duplex] for the print setting of the inserted paper.
Front and Back Covers	Front Cover Print Setting ^{*1}	Do Not Print, Front Only, Back Only ^{*2} , Duplex ^{*2} Different paper has to be inserted for the first page and last page of the document. Select [Stop Printing], [Front Only], [Back Only], or [Duplex] for the print setting of the inserted paper.
	Back Cover Print Setting ^{*1}	Do Not Print, Front Only, Back Only ^{*2} , Duplex ^{*2}

*1 Printing is not possible when feeding from the inserter.

*2 [**Back Only**] and [**Duplex**] appears when finishing is set to 2-sided in "Duplex".

➔ [Duplex \(page 6-48\)](#)

Form Overlay



Layout/Edit




Functions

Prints the original document overlaid with a form or image.

Once you scan and register the form, the form is overlaid onto the original. You can also use a form that is already registered in the Document Box.


Place the original for the form on top of the other originals. When using the optional document processor, the first page of the originals should be placed on the top.

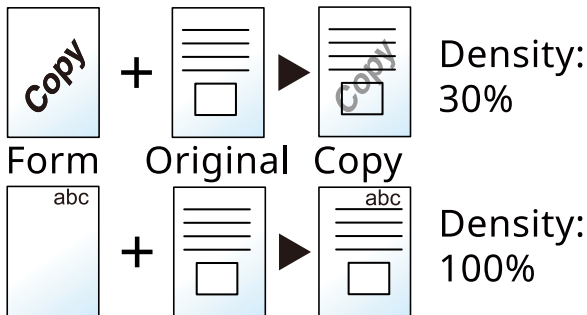

Item	Value	Description	
Off			
Select Stored Form	Select Stored Form	— Form must be previously registered in Document Box. ➔ Form for Form Overlay (page 5-69) Select the form to be overlaid from Document Box. Select [Select Stored Form] to display the Document Box that store documents which can be used as a form. Select the desired form from the list and select [Select]. After you have selected the form, select [Next >].	
	Density	10% to 100% Specify the density of the form to be overlaid. Use [+], [-] or the numeric keys to set the value.	
	Finishing Image	Transparent	The form is overlaid on the document.
		Form on Original Image	The form is placed on top of the document.
Scan New Form^{*1}	Density	10% to 100% Specify the density of the form to be overlaid. Use [+], [-] or the numeric keys to set the value.	
	Finishing Image	Transparent	The form is overlaid on the document.
		Form on Original Image	The form is placed on top of the document.
		Original Image on Form	The form is placed under the document.

*1 Not displayed when printing from the custom box.

 Page




Layout/Edit



Functions

Adds page numbers to the finished documents.

The available formats for numbering are [-1-], [P.1] and [1/n]. The format [1/n] prints the total number of pages in the place of "n".

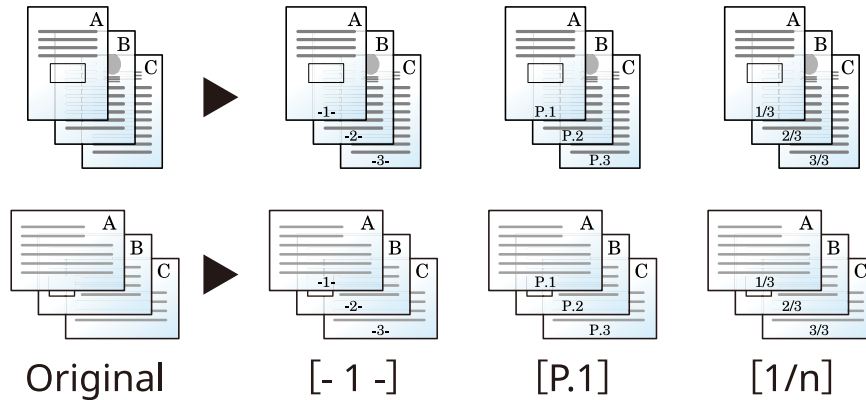

Select the numbering format from [-1-], [P.1] or [1/n].

Item	Value	Description
Off		
-1-, P.1, 1/n	Position	Top Left, Top Middle, Top Right, Bottom Left, Bottom Middle, Bottom Right Select the print position of page number. Specify the detailed page number position using numeric values, and to set the page number position ([Same as Front Page], [Mirror Front Page]) when a page number is placed on the back side of the paper in duplex printing.
	1st Page	1 to 10 To start page numbering from a page other than the first page, use [+], [-] or the numeric keys to specify the starting page.
	Start #	1 to 9999 To start the numbering with a number other than 1, use [+], [-] or the numeric keys to specify the starting number.
	Denominator#^{*1}	Auto, Manual (1 to 9999) The total number of pages "n" in the format [1/n] can be changed manually. Select [Manual] and use [+], [-] or the numeric keys to enter the total number of pages.
	Last Page	Auto, Manual (-10 to 0) If you do not want page numbering through to the last page, select [Manual]. Use [+], [-] or the numeric keys to specify the final page to be numbered (a negative number of pages counting backwards from the last page). Specify the desired number up to -10.

Item		Value	Description	
-1-, P.1, 1/n	Font	Font	Courier, Letter Gothic	Set the font of page number.
		Size	Font sizes registered in "Font (Page #)" are displayed. → Font Size (Page #) (page 8-35)	Set the font size of page number.
		Color	Black, White	Set the color of page number.
		Style	None, Bold, Italic, Bold/Italic	Set the font style of page number. Select a font style by checking the checkbox.
		Display Pattern	Transparent, Clipping, Overwrite	Set the display method of page number.
		Density	10 to 100% (in 10% increments)	Set the density of the color of page number. Use [+], [-] or the numeric keys to set the value.
	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left].	
	Count Blank Page^{*2}	Off, On	When a scanned document contains blank pages, select [On] if you require blank pages to be numbered. Select [Off] to skip blank pages.	

*1 This item appears when [1/n] is selected.

*2 Not displayed when printing from the custom box.

Memo Page

Copy

Layout/Edit

Delivers copies with a space for adding notes.


You can also print two originals onto the same sheet with a space or add lines to indicate page boundaries. Select [**Layout A**] or [**Layout B**] and select the page layout from "Layout".

NOTE

The paper sizes supported in Memo mode: A4, A5, B5, Legal, Oficio II, 216 × 340 mm, Letter, Statement, Folio and 16K.


Layout A

Reduces images of each original page for printing onto half of a page, leaving the other half blank for notes.

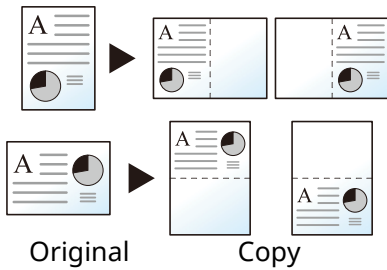

Layout B

Reduces images of two original pages for printing onto half of a page, leaving the other half blank for notes.

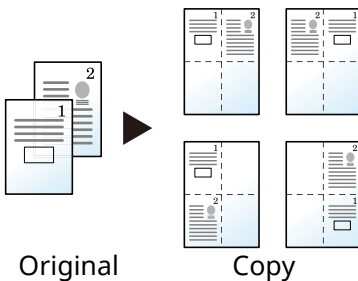

Item		Value	Description
Off			
Layout A	Layout	Left/Top, Right/Bottom	Select how to lay out the pages of scanned original.
	Border Line	None, Solid Line, Dotted Line, Positioning Mark	Select the boundary line type. Select [Border Line] to select the page boundary line.
	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left].

Item		Value	Description
Layout B	Layout	Top Left to Right, Top Right to Left, Top Left to Bottom, Top Right to Bottom	Select how to lay out the pages of scanned original.
	Border Line	None, Solid Line, Dotted Line, Positioning Mark	Select the boundary line type. Select [Border Line] to select the page boundary line.
	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left].

Insert Sheets/Chapters

Copy

Layout/Edit

Insert a separator sheet, or make the first page of the chapter the front page when performing duplex printing. The configured pages are displayed on the list.

Item			Value	Description	
Off					
On	Add	Separator	Separator Sheet	1 to 998* ¹	Enter document page numbers where separators get inserted. Use [+], [-] or the numeric keys to enter the page number.
			Paper Source	Cassette 1 to 5, MP Tray, Inserter Tray 1* ^{2*3} , Inserter Tray 2* ^{2*3}	Select the source of the paper for the separator.
		Chapter	Chapter Page	1 to 4999	Enter the page numbers of the original document where you want to insert the chapters. Use [+], [-] or the numeric keys to enter the page number.
	Edit		—	Change the configuration of the chapter page and separator. The method of operation is the same as that of a new addition.	
	Delete		—	Delete the page selected in the list.	
Next >	Sheets Setting		Do Not Print, Front Only, Back Only* ⁴ , Duplex* ⁴	Select [Do Not Print,], [Front Only], [Back Only], or [Duplex] for the print setting of the inserted paper.	

*1 If your model is equipped with a hard drive, the number of sheets is 4999.

*2 Displayed when the optional inserter is installed.

*3 Printing is not possible when feeding from the inserter.

*4 [**Back Only**] and [**Duplex**] appear when finishing is set to 2-sided in "Duplex".

➔ [Duplex \(page 6-48\)](#)

Image Repeat


Copy

Layout/Edit

Tiles the 1 copied sheet with an original image. You can also specify the area of the original to repeat.


Zoom Priority




Repeat an image of specified zoom ratio.

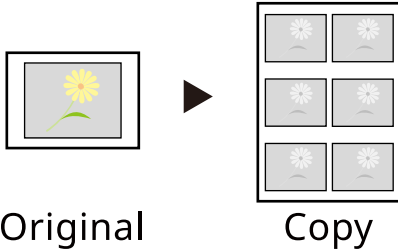

Double Copy

Copy two image.

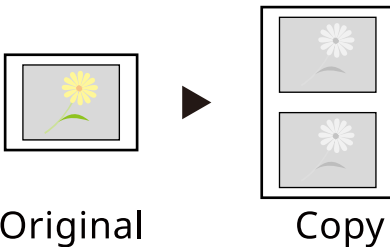


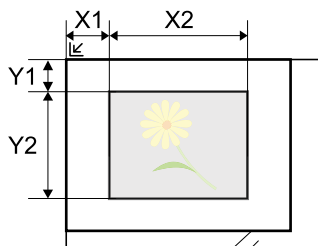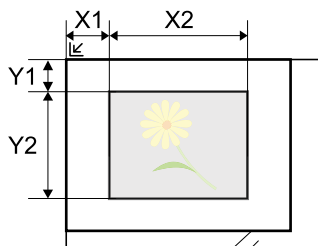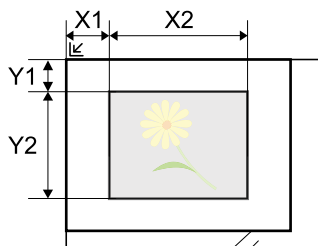Item	Value	Description			
Off					
Zoom Priority	25 to 400% (in 1% increments)	Set the default screen. Use [+], [-] or the numeric keys to change the displayed magnification as desired. To set the area of the original to be repeated, select [Next >].			
	Specify Repeat Area	Off			
		On	To set the area of the original to be repeated, select [On] for "Specify Repeat Area".		
		<table border="1"> <tr> <td>Start</td> <td>Metric^{*1} X1: 0 to 431 mm Y1: 0 to 296 mm Inch X1: 0.00 to 16.99" Y1: 0.00 to 11.68"</td> <td rowspan="2"> Use [+], [-] or the numeric keys to input the area of the original to be repeated.  Y1: Length from top left of platen to top edge of repeat area X1: Length from top left of platen to left edge of repeat area Y2: Height of repeat area X2: Width of repeat area </td> </tr> <tr> <td>Area</td> <td>Metric^{*1} X2: 1 to 432 mm Y2: 1 to 297 mm Inch X2: 0.01 to 17.00" Y2: 0.01 to 11.69"</td> </tr> </table>	Start	Metric ^{*1} X1: 0 to 431 mm Y1: 0 to 296 mm Inch X1: 0.00 to 16.99" Y1: 0.00 to 11.68"	Use [+], [-] or the numeric keys to input the area of the original to be repeated.  Y1: Length from top left of platen to top edge of repeat area X1: Length from top left of platen to left edge of repeat area Y2: Height of repeat area X2: Width of repeat area
Start	Metric ^{*1} X1: 0 to 431 mm Y1: 0 to 296 mm Inch X1: 0.00 to 16.99" Y1: 0.00 to 11.68"	Use [+], [-] or the numeric keys to input the area of the original to be repeated.  Y1: Length from top left of platen to top edge of repeat area X1: Length from top left of platen to left edge of repeat area Y2: Height of repeat area X2: Width of repeat area			
Area	Metric ^{*1} X2: 1 to 432 mm Y2: 1 to 297 mm Inch X2: 0.01 to 17.00" Y2: 0.01 to 11.69"				
Double Copy	—	Makes 2 copies of the same original on a single sheet. For example, you can double-copy an A5 original onto an A4 sheet which you then cut in half to make 2 copies that are identical to the original.			

*1 The input units can be changed in System Menu.

➔ [Measurement \(page 8-7\)](#)

 Text Stamp



You can add a text stamp on the documents.

Copying/Printing

NOTE

This cannot be set when Text Stamp is set in the system settings.

➔ [Printing Jobs \(page 8-85\)](#)


Item	Value	Description
Off		
On	Text Stamp	Any text string (up to 32 characters), Template 1 to 8 Select the entry field and enter the text string to be printed, or select a text stamp from the displayed templates. After you have set the stamp, select [Next >]. NOTE Templates that have been set will appear. ➔ Text (Text Stamp) (page 8-35)
	Stamp Method	Each Print Page, Each Original Page Select the stamp method. Select [Stamp Method] and set the stamp method for text stamp.
	Position	Top Left, Top Middle, Top Right, Middle Left, Center, Middle Right, Bottom Left, Bottom Middle, Bottom Right Set the stamp position to be printed. Select [Position] and select the text stamp position. Specify the detailed stamp position using numeric values, and to set the stamp position and angle when a stamp is placed on the back side of the paper in duplex printing.

Item		Value	Description	
On	Font	Font	Courier, Letter Gothic	Set the font of text stamp.
		Size	Registered font sizes are displayed.	Set the font size of text stamp. For details on registering font sizes, refer to the following: ➔ Font Size (Text Stamp) (page 8-35)
		Character Border	Off, Circle, Rectangle, Underline	Set the character border and underline.
		Color	Black, White	Set the color of text stamp.
		Style	None, Bold, Italic, Bold/Italic	Set the font style of text stamp. Select a font style by checking the checkbox.
		Display Pattern	Transparent, Clipping, Overwrite	Set the display method of text stamp.
		Density	10 to 100% (in 10% increments)	Set the density of text stamp color. Set the value by using [+], [-] or the numeric keys.
	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left].	

Sending/Storing

NOTE

- This cannot be set when Long Original is set.
 - ➔ [Long Original \(page 6-76\)](#)
- This cannot be set when Text Stamp is set in the system settings.
 - ➔ [Sending Jobs \(page 8-87\)](#)
 - ➔ [Storing Jobs \(page 8-89\)](#)

Item		Value	Description	
Off				
On	Text Stamp	Any text string (up to 32 characters), Template 1 to 8	Select the entry field and enter the text string to be printed, or select a text stamp from the displayed templates. After you have set the stamp, select [Next >].  NOTE Templates that have been set will appear. ➔ Text (Text Stamp) (page 8-35)	
	Stamp Method	Each Print Page, Each Original Page	Select the stamp method. Select [Stamp Method] and set the stamp method for text stamp.	
	Position	Top Left, Top Middle, Top Right, Middle Left, Center, Middle Right, Bottom Left, Bottom Middle, Bottom Right	Set the stamp position to be printed. Select [Position] and select the text stamp position. Set the stamp position using numeric values, and to set the stamp angle.	
	Font	Font	Courier, Letter Gothic	Set the font of text stamp.
		Size	Registered font sizes are displayed.	Set the font size of text stamp. For details on registering font sizes, refer to the following: ➔ Font Size (Text Stamp) (page 8-35)
		Character Border	Off, Circle, Rectangle, Underline	Set the character border and underline.
		Color	Black, Cyan, Magenta, Yellow, Red, Green, Blue, White	Set the color of text stamp.
		Style	None, Bold, Italic, Bold/Italic	Set the font style of text stamp. Select a font style by checking the checkbox.
		Display Pattern	Transparent, Clipping, Overwrite	Set the display method of text stamp.
		Density	10 to 100% (in 10% increments)	Set the density of text stamp color. Set the value by using [+], [-] or the numeric keys.
Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left].		

Bates Stamp



Layout/Edit



Advanced Setup



Functions



Functions

You can add a bates stamp on the documents.

Copying/Printing



NOTE

This cannot be set when Text Stamp is set in the system settings.

➔ [Printing Jobs \(page 8-85\)](#)

Item		Value	Description
Off			
On	Bates Stamp	Date, User Name, Serial Number, Numbering, Text 1, Text 2	Set the stamp to be printed. When [Text 1] or [Text 2] is selected, select the entry field and enter the text string. After you have set the stamp, select [Next >].
	Date Format	MM/DD/YYYY, DD/MM/YYYY, YYYY/MM/DD	Set the date format. This setting is available when [Date] is set in "Bates Stamp".
	Numbering Default	1 to 9999999	Set the starting sequence number. If you select [Fixed Digit Number] > [On], you can set the number of digits of the serial number (1 to 7 digits). This setting is available when "Numbering" is set in "Bates Stamp".
	Position	Top Left, Top Middle, Top Right, Middle Left, Center, Middle Right, Bottom Left, Bottom Middle, Bottom Right	Set the stamp position to be printed. Select [Position] and select the bates stamp position. Specify the detailed stamp position using numeric values, and to set the stamp position when a stamp is placed on the back side of the paper in duplex printing.

Item		Value	Description	
On	Font	Font	Courier, Letter Gothic	Set the font of bates stamp.
		Size	Registered font sizes are displayed.	Set the font size of bates stamp. For details on registering font sizes, refer to the following: ➔ Font Size (Bates Stamp) (page 8-35)
		Color	Black, White	Set the color of the bates stamp.
		Style	None, Bold, Italic, Bold/Italic	Set the font style of bates stamp. Select a font style by checking the checkbox.
		Display Pattern	Transparent, Clipping, Overwrite	Set the display method of the bates stamp.
		Density	10 to 100% (in 10% increments)	Set the density of bates stamp color. Set the value by using [+], [-] or the numeric keys.
	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left].	

Sending/Storing

NOTE

- This cannot be set when Long Original is set.
 - ➔ [Long Original \(page 6-76\)](#)
- This cannot be set when Bates Stamp is set in the system settings.
 - ➔ [Sending Jobs \(page 8-87\)](#)
 - ➔ [Storing Jobs \(page 8-89\)](#)

Item		Value	Description	
Off				
On	Bates Stamp	Date, User Name, Serial Number, Numbering, Text 1, Text 2	Set the stamp to be printed. When [Text 1] or [Text 2] is selected, select the entry field and enter the text string. After you have set the stamp, select [Next >].	
	Date Format	MM/DD/YYYY, DD/MM/YYYY, YYYY/MM/DD	Set the date format. This setting is available when [Date] is set in "Bates Stamp".	
	Numbering Default	1 to 9999999	Set the starting sequence number. If you select [Fixed Digit Number] > [On], you can set the number of digits of the serial number (1 to 7 digits). This setting is available when [Numbering] is set in "Bates Stamp".	
	Position	Top Left, Top Middle, Top Right, Middle Left, Center, Middle Right, Bottom Left, Bottom Middle, Bottom Right	Set the stamp position to be printed. Select [Position] and select the bates stamp position. Specify the stamp position using numeric values.	
	Font	Font	Courier, Letter Gothic	Set the font of bates stamp.
		Size	Registered font sizes are displayed.	Set the font size of bates stamp. For details on registering font sizes, refer to the following: ➔ Font Size (Bates Stamp) (page 8-35)
		Color	Black, Cyan, Magenta, Yellow, Red, Green, Blue, White	Set the color of bates stamp.
		Style	None, Bold, Italic, Bold/Italic	Set the font style of bates stamp. Select a font style by checking the checkbox.
		Display Pattern	Transparent, Clipping, Overwrite	Set the display method of bates stamp.
		Density	10 to 100% (in 10% increments)	Set the density of bates stamp color. Set the value by using [+], [-] or the numeric keys.
Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left].		

Density



Image Quality



Color/Image Quality



• Functions
• Image Quality



Functions

Adjust density.

Adjust density selecting [-4] (Lighter) to [+4] (Darker).



Original Image



Image Quality



Color/Image Quality



• Functions
• Image Quality



Functions

Select original image type for best results.

Copying

Item		Value	Description
Text+Photo ^{*1}	Original Type	Printer Output	Best for mixed text and photo documents printed on this machine originally.
		Book/Magazine	Best for mixed text and photos printed in a magazine, etc.
	Highlighter Enhancement	Off, On (Normal), On (Bright)	Select [On (Normal)] to reproduce the color of the text and markings made with highlighter pen. If the colors are not bright enough, select [On (Bright)].
	Photo Priority Level	3 (Text Priority) to 3 (Photo Priority)	Set whether to adjust to match the image quality of either of text or photos.
Photo	Original Type	Printer Output	Best for photos printed on this machine originally.
		Book/Magazine	Best for photos printed in a magazine, etc.
		Photo Paper	Best for photos taken with a camera.
Text	Light Text/ Fine Line	Off	Best for documents that are mostly text and were originally printed on this machine.
		On	Sharply renders pencil text and fine lines.
	Highlighter Enhancement	Off, On (Normal), On (Bright)	Select [On (Normal)] to reproduce the color of the text and markings made with highlighter pen. If the colors are not bright enough, select [On (Bright)].
Graphic/Map	Original Type	Printer Output	Best for maps and diagrams printed on this machine originally.
		Book/Magazine	Best for maps and diagrams printed in a magazine.
	Highlighter Enhancement	Off, On (Normal), On (Bright)	Select [On (Normal)] to reproduce the color of the text and markings made with highlighter pen. If the colors are not bright enough, select [On (Bright)].

*1 If gray text is not printed completely using [**Text + Photo**], selecting [**Text**] may improve the result.

Sending/Printing/Storing

Item	Value	Description	
Text+Photo		Best for mixed text and photo documents.	
Highlighter Enhancement	Off, On (Normal), On (Bright)	Select [On (Normal)] to reproduce the color of the text and markings made with highlighter pen. If the colors are not bright enough, select [On (Bright)].	
	Photo Priority Level	3 (Text Priority) to 3 (Photo Priority)	Set whether to adjust to match the image quality of either of text or photos.
Photo		Best for photos taken with a camera.	
Text	Light Text/ Fine Line	Off	Best for documents that are mostly text and were originally printed on this machine.
		On	Sharply renders pencil text and fine lines.
	Highlighter Enhancement	Off, On (Normal), On (Bright)	Select [On (Normal)] to reproduce the color of the text and markings made with highlighter pen. If the colors are not bright enough, select [On (Bright)].
Text (for OCR)		Scanning produces an image that is suitable for OCR. This function is only available when Color Selection is set to Black and White. ➔ Color Selection (page 6-66)	

Color Selection

Select the color setting.



Color/Image
Quality



• Functions
• Image Quality



Functions

Item	Description
Auto (Color/Grayscale)	Automatically recognizes whether the document is color or black and white, and scan color documents in Full Color and black and white documents in Grayscale.
Auto (Color/B & W)	Automatically recognizes whether the document is color or black and white, and scan color documents in Full Color and black and white documents in Black and White.
Full Color	Scans the document in full color.
Grayscale	Scans the document in grayscale. Produces a smooth, detailed image.
Black & White	Scans the document in black and white.

EcoPrint



Image
Quality



Functions



Functions

EcoPrint saves toner when printing.

Use this function for test prints or any other occasion when high quality print is not required.



Item	Value	Description
Off		
On	Toner Save Level	[1] (Lower) to [5] (Higher) Adjust the Toner Save Level.

Sharpness

Copy Image Quality

Send Color/Image Quality

Custom Box • Functions
• Image Quality

USB Drive Functions

Adjusts the sharpness of image outlines.

When copying penciled originals with rough or broken lines, clear copies can be taken by adjusting sharpness toward "Sharpen". When copying images made up of patterned dots such as magazine photos, in which moire^{*1} patterns appear, edge softening and weakening of the moire effect can be obtained by setting the sharpness toward "Blur".


Less Sharp



Original



More Sharp

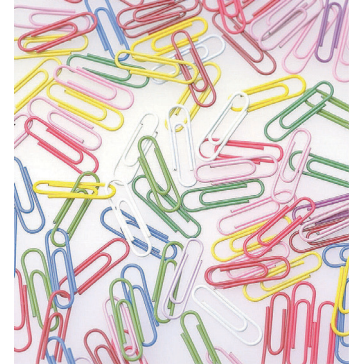

Item	Value	Description
All	[+1] to [+3] (Sharpen)	Emphasizes the image outline.
	[-1] to [-3] (Blur)	Blurs the image outline. Can weaken a Moire ^{*1} effect.
Text/Fine Line	[0] to [3] (Normal - Sharpen)	Makes letters and lines appear sharper. Only text and fine lines are emphasized.

*1 Patterns that are created by irregular distribution of halftone dots.

Background Density Adj. (Background Density Adjustment)

Copy Image Quality

Send Color/Image Quality

Custom Box • Functions
• Image Quality

USB Drive Functions

Removes dark background from originals, such as newspapers.

If the ground color is obtrusive, select **[Auto]**. If **[Auto]** does not remove the ground color, select **[Manual]** and adjust the density of the ground color.

Item	Description
Off	Does not adjust the ground color.
Auto	Automatically adjusts the background density based on the original.
Manual	Select [1] to [7] (Lighter - Darker) to adjust the background density manually.

Saturation



Color/Image Quality



• Functions
• Image Quality



Functions

Adjust the color saturation of the image.

Grayish



Results in paler color.

Original



Vivid



Results in more vivid color.



NOTE

This feature is used with full color and auto color. Saturation is disabled if Auto Color detects black and white originals.

Item	Description
[-1] to [-3] (Grayish)	Results in paler color.
[+1] to [+3] (Vivid)	Results in more vivid color.

Prevent Bleed-thru



Image Quality



Color/Image Quality




• Functions
• Image Quality



Functions

Hides background colors and image bleed-through when scanning thin original.

(Value: [Off] / [On])

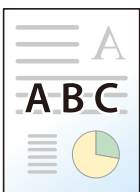

Contrast



Image
Quality



Color/Image
Quality



• Functions
• Image Quality



Functions

You can adjust the contrast between light and dark areas of the image.

Lower



Original



Higher



Item	Description
[+1] to [+4] (Higher)	Increases the sharpness of colors.
[-1] to [-4] (Lower)	Creates smoother colors.

Erase Colors



Image
Quality



Color/Image
Quality



• Functions
• Image Quality



Functions

Erases colors in the source document.

Item	Value	Description
Off		
On	Yellow, Red, Cyan, Magenta, Green, Blue, Black	Select the colors to erase. You can select up to 6 colors.
Color Range	1 (Narrower) to 5 (Wider)	Choose a range of colors to erase. For example, if you specify yellow and select [5 (Wider)] from the color range, greens and reds close to yellow will be erased.



NOTE

If you select only [**Black**], you cannot set the Color Range.

Continuous Scan



Advanced
Setup



Advanced
Setup



Functions




Functions

Scans a large number of originals in separate batches and then produce as one job.

Originals will be scanned continuously until you select [**Finish Scan**].

Select [**On**] to use continuous scanning. To use Job Build, select [**Job Build**]. You can set the functions that appear on the screen during scanning.

(Value: [Off] / [On] / [Job Build])

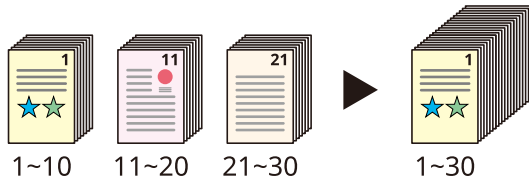

Job Build

When [**Job Build**] is selected when copying or printing, the binding orientation for finished documents can be selected from [**Binding Left**], [**Binding Right**] or [**Binding Top**].

The following functions can be selected during scanning.

Item	Description
Next Copy: On Back	In duplex copying, prints on the back side if the next page is to be printed on the front side. Select [On Back] to use this function.
Next Copy: On Front	In duplex copying, prints on the front side if the next page is to be printed on the back side. Select [On Front] to use this function.
Sheet Insertion	Inserts a blank paper in the next page. Select [Sheet Insertion] to use this function.

Auto Image Rotation



Advanced
Setup

Automatically rotates the image 90 degrees when the sizes of the original and the loaded paper matches but the orientations are different.

(Value: [Off] / [On])

NOTE

- You can select whether to rotate the image automatically in the default settings.
 - ➔ [Auto Image Rotation \(Copy\) \(page 8-37\)](#)
- When you have enabled this function, you can select how the images are rotated.
 - ➔ [Auto Image Rotation Action \(page 8-38\)](#)

Negative Image



Inverts black and white portions of the image for printing.

(Value: [Off] / [On])

Mirror Image



Copies the mirrored image of the original.

(Value: [Off] / [On])

Job Finish Notice



Sends E-mail notice when a job is complete.

It is also available that send a notice when a job is interrupted.

Users can be notified of the completion of a job while working at a remote desk, saving the time spent waiting beside the machine to finish.

NOTE

- PC should be configured in advance so that E-mail can be used.
➔ [Command Center RX \(page 2-69\)](#)
- E-mail can be sent to a single destination.
- It will be possible to download the scan data in PC from the stored URL described in the text of the notice E-mail of Job Finish Notice for "Send to Folder (SMB/FTP)" or "Storing Documents to a Custom Box". This is a useful function in case if it is not possible to send/receive a large amount of scan data due to the restriction of the mail attachment file size.

Item	Description
Off	
Address Book	Select the notification destination from the address book.
Address Book	Select the notification destination on the address book screen, then select [OK].
(information icon)	Information on the selected destination can be viewed.
Notify when interrupted	Select [On] if you require an e-mail notification when a job is interrupted.
Address Entry	Enter E-mail address directly. Select the entry field, enter the address (up to 256 characters) and select [OK].
Notify when interrupted	Select [On] if you require an e-mail notification when a job is interrupted.

File Name Entry



Advanced Setup



Advanced Setup



Functions



Functions

Adds a file name.

Additional information such as job number and date and time can also be set. You can check a job history or job status using the file name, date and time, or job number specified here.

Enter the file name (up to 32 characters).

To add date and time, select **[Date and Time]**. To add job number, select **[Job No.]**. To add both, select **[Job No.] & [Date and Time]** or **[Date and Time] & [Job No.]**.

Priority Override



Advanced Setup



Functions



Functions

Suspends the current job and gives a new job top priority.

The suspended job resumes after the other job is finished.

(Value: [Off] / [On])



NOTE

- This function is not available if current job was an override.
- Priority override may not be available depending on the status of the current print job and memory usage. In this case, try the interrupt copy.

➔ [Interrupt Copy \(page 5-18\)](#)

Repeat Copy



Advanced Setup

Enables additional copies in the desired quantity as necessary after a copy job is completed.

For confidential documents, you can set up a password for the use of Repeat Copy. In such a case, the correct password must be entered to perform Repeat Copy.

To register a password, enter a 4-digit password.



IMPORTANT

- **A Repeat Copy job is cleared when the power switch is turned off.**
- **If you forget the password, Repeat Copy cannot be performed for that document. Make a note of the password beforehand if necessary.**

(Value: [Off] / [On])

Repeat Copy is not available when the Data Security Function is active.

When the maximum number of Repeat Copy jobs to retain in the document box is set to 0 (zero), this function cannot be used.

➔ [Repeat Copy Job Retention \(page 8-53\)](#)

You can select Repeat Copy as the default setting.

➔ [Repeat Copy \(page 8-37\)](#)

Giving a file name to a copy job will facilitate identification of the data when copying.

➔ [File Name Entry \(page 6-72\)](#)

Repeat Copy

The Repeat Copy jobs are stored in the Job Box. Refer to Outputting Repeat Copy Jobs to print out the Repeat Copy jobs.

➔ [Outputting Repeat Copy Jobs \(page 5-68\)](#)

DP Read Action



When the document processor is used, select the scanning operation for the document processor.

Item	Description
Speed Priority	Gives priority to scanning speed.
Quality Priority	Gives priority to image quality at a slightly slower scan speed.

Detect Multi-fed Originals



When reading a document from the document processor, if the multiple feeding of documents is detected, then the reading stops automatically.

Item	Description
Off	It does not detect.
ON (Notify Immediately)	In case of detecting that multiple sheets of original are fed at the same time, the message is displayed and stop scanning the original.
ON (Notify when Scan Done)	In case of detecting that multiple sheets of original are fed at the same time, a message is displayed after all documents are scanned.

NOTE

To enable the [ON (Notify when Scan Done)] setting, set [Image Preview at DP Jam] to [On].

➔ [Image Preview at DP Jam \(page 8-26\)](#)

Detect Stapled Originals



When reading a document from the document processor, if a stapled document is detected, then the reading stops automatically.

Item	Description
On	In case of detecting that the original is stapled or the original is fed skewed, the message is displayed and stop scanning the original.
Off	It does not detect.

Detect Scan Failure



Advanced Setup



Advanced Setup



Functions



Functions

If image defects due to paper creases or sticky notes are detected on the scanned document, scanning is stopped automatically.

Item	Description
Off	It does not detect.
ON(Notify Immediately)	If image defects are detected, a message is displayed immediately and document scanning stops.
ON(Notify when Scan Done)	If image defects are detected, a message is displayed after all documents are scanned.



NOTE

- The document sometimes cannot be detected as a missing part of the image depending on the state or conditions of the document to be scanned.
- To enable the **[ON (Notify when Scan Done)]** setting, set **[Image Preview at DP Jam]** to **[On]**.
 ➔ [Image Preview at DP Jam \(page 8-26\)](#)

Skip Blank Page



Advanced Setup



Advanced Setup



Functions



Functions

When there are blank pages in a scanned document, this function skips the blank pages automatically and scan only pages that are not blank.

In addition to detecting of **[Blank Pages Only]**, other settings are available, such as **[Blank Pages + Some Text]** in which pages with a small number of characters at the edges (such as headers and footers) are treated as blank pages, or **[Blank Pages + Ruled Lines]** in which pages with evenly spaced ruled lines drawn in one direction are treated as blank pages.



NOTE

The originals with punched holes or originals printed on a colored substrate may not be recognized as blank pages. In addition, documents containing only very faint characters may be mistaken for blank pages. Furthermore, in **[Blank Pages + Ruled Lines]** mode, note that characters aligned in one direction such as headers and footers may also be recognized as blank pages.

Document Processor Straight Path



Advanced Setup



Advanced Setup



Functions



Functions

Select the scanning path for Document Processor.

(Value: **[Off]** / **[On]**)



NOTE

- If **[On]** is selected place originals face down in Document Processor.
- This function cannot be used when optional Inserter is installed.

2-sided/Book Original



Org./
Sending
Data Format



Functions



Functions

Select the type and orientation of the binding based on the original.

Item		Value	Description
1-sided		—	"2-sided/Book Original" is not set.
2-sided	Binding	Left/Right, Top	Select the binding orientation of originals.
	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left].
Book*1	Binding	Left, Right	Select the binding orientation of originals.
	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left].

*1 [**Top Edge on Top**] is set for "Original Orientation".

Sample image

Value		Image
2-sided	Binding Left/Right	
	Binding Top	
Book	Binding Left	
	Binding Right	

Sending Size



Org./
Sending
Data Format



Functions

Select size of image to be sent.

Select [**Same as Original Size**], [**Metric**], [**Inch**], or [**Others**] to select the sending size.

Item	Value	Description
Same as Original Size	—	Automatically sends the same size as the original.
Metric	A3, A4, A5, A6, B4, B5, B6, Folio, 216 × 340 mm	Select from the Metric series standard sizes.
Inch	Ledger, Letter, Legal, Statement, 11" × 15", Oficio II	Select from the Inch series standard sizes.
Others	8K, 16K, Hagaki (Cardstock), Oufukuhagaki (Return postcard), Business card, ID Card	Select from special standard sizes.

Relationship between Original Size, Sending Size, and Zoom

Original Size, Sending Size, and Zoom are related to each other. For details, see the table below.

Original size and sending size are	the same	different
Original Size (page 6-20)	Specify as necessary.	Specify as necessary.
Sending Size	Select [Same as Original Size].	Select the desired size.
Zoom (page 6-36)	Select [100%] (or [Auto]).	Select [Auto].



NOTE

When you specify the sending size that is different from the original size, and select the zoom of [**100%**], you can send the image as the actual size (No Zoom).

Long Original



Org./
Sending
Data Format



Functions

Reads long-sized original documents using a document processor.

(Value: [**Off**] / [**On**])



NOTE

- Long originals are sent in black and white.
- Only a single side of a long original can be scanned. Originals of up to 2,200 mm / 74.8" long can be scanned.
- A resolution of 300 × 300 dpi or smaller can be selected.
- This cannot be set when Bates Stamp is set.

File Format



Org./
Sending
Data Format



Functions




Functions

Specify the image file format. Image quality level can also be adjusted.

Select the file format from **[PDF]**, **[TIFF]**, **[XPS]**, **[JPEG]**, **[OpenXPS]**, **[High Comp. PDF]**, **[Word]**, **[Excel]**, and **[PowerPoint]**.

When the color mode in scanning has been selected for Grayscale or Full Color, set the image quality.

If you selected **[PDF]** or **[High Comp. PDF]**, you can specify encryption or PDF/A settings.

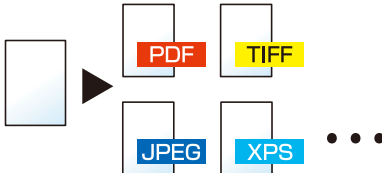

Item	Value	Color mode
PDF ^{*1*2*3*4}	1 Low Quality (High Comp.) to 5 High Quality (Low Comp.)	Auto Color (Color/Grayscale), Auto Color (Color/Black and White), Full Color, Grayscale, Black and White
TIFF		
XPS		Auto Color (Color/Grayscale), Full Color, Grayscale
JPEG		Auto Color (Color/Grayscale), Auto Color (Color/Black and White), Full Color, Grayscale, Black and White
OpenXPS		
High Comp. PDF ^{*1*2*3*4}	Compression Ratio Priority, Standard, Quality Priority	Auto Color (Color/Grayscale), Auto Color (Color/Black and White), Full Color, Grayscale
Word ^{*5}	1 Low Quality (High Comp.) to 5 High Quality (Low Comp.)	Auto Color (Color/Grayscale), Full Color, Grayscale
Excel ^{*5}		
PowerPoint ^{*5}		

*1 You can create Searchable PDF file by running OCR on the scanned document.

➔ [OCR Text Recognition \(page 6-78\)](#)

*2 Set the PDF/A. (Value: **[Off]** / **[PDF/A-1a]** / **[PDF/A-1b]** / **[PDF/A-2a]** / **[PDF/A-2b]** / **[PDF/A-2u]**).

*3 Set PDF encryption.

➔ [PDF Encryption Functions \(page 6-79\)](#)

*4 Set Digital Signature to File.

➔ [PDF Electronic Signature \(page 6-82\)](#)

*5 Word, Excel and PowerPoint will be saved in a Microsoft Office 2007 or later file format.

➔ [Scan to Office Function \(page 6-81\)](#)

OCR Text Recognition

When [PDF], [High Comp. PDF], [Word], [Excel], or [PowerPoint] is selected for the file format, you can create Searchable file by running OCR on the scanned document. Select [OCR Text Recognition], and then [On], select the language of the document, and select [OK].

Item	Description
Off	Do not create Searchable file.
On	Create Searchable file. Select the language to extract from the languages that appear on the touch panel.



NOTE

- When sending from the Custom Box, OCR Text Recognition can only be set for documents saved by scanning.
- If the proper language is not selected, file creation may take a long time or the creation may fail. The default language can be changed in System Menu.
 - ➔ [Primary OCR Language \(page 8-40\)](#)
- If you do not set an original in the correct orientation, the text of the document may not be recognized as characters. In addition, it may take some time to create the file. Check the following:
 - The original orientation is correct.
- The accuracy of the text recognition depends on the original condition. The following condition may result in decreasing the recognition accuracy.
 - Repeatedly copied documents (as copied copy)
 - Received faxes (with low resolution)
 - Originals with the character space too narrow or wide
 - Originals with the lines on the text
 - Originals with the special fonts
 - Binding part of the book
 - A handwritten texts

PDF Encryption Functions

If you have selected PDF or High Comp. PDF for file format, you can restrict the access level for displaying, printing, and editing PDF's by assigning a secure password.

Select **[PDF]** or **[High Comp. PDF]** in **[File Format]**, and select **[Encryption]**.

Items that can be set vary depending on the setting selected in **[Compatibility]**.

When **[Acrobat 3.0 and later]** is selected

Item	Value	Description
Password to Open Document	Off, On	Enter the password to open the PDF file. Select [On] , enter a password (up to 256 characters). Enter the password again for confirmation.
Password to Edit/Print Document	Off, On	Enter the password to edit the PDF file. Select [On] , enter a password (up to 256 characters). Enter the password again for confirmation. When you have entered the password to edit/print document, you can specifically limit the operation.
Printing Allowed	Not Allowed, Allowed	Restricts printing of the PDF file.
Changes Allowed	Not Allowed	Disables the change to the PDF file.
	Commenting	Can only add commenting.
	Page Layout except extracting Pages	Can change the page layout except extracting the pages of the PDF file.
	Any except extracting Pages	Can conduct all operations except extracting the pages of the PDF file.
Copying of Text/Images/Others	Disable, Enable	Restricts the copying of text and objects on the PDF file.

When [Acrobat 5.0 and later] is selected

Item	Value	Description
Password to Open Document	Off, On	Enter the password to open the PDF file. Select [On], enter a password (up to 256 characters). Enter the password again for confirmation.
Password to Edit/Print Document	Off, On	Enter the password to edit the PDF file. Select [On], enter a password (up to 256 characters). Enter the password again for confirmation. When you have entered the password to edit/print document, you can specifically limit the operation.
Printing Allowed	Not Allowed	Disables the printing of PDF file.
	Allowed (Low Resolution only)	Can print the PDF file only in low resolution.
	Allowed	Can print the PDF file in original resolution.
Changes Allowed	Not Allowed	Disables the change to the PDF file.
	Inserting/Deleting/Rotating Pages	Can only insert, delete, and rotate the pages of the PDF file.
	Commenting	Can only add commenting.
	Any except extracting Pages	Can conduct all operations except extracting the pages of the PDF file.
Copying of Text/Images/Others	Disable, Enable	Restricts the copying of text and objects on the PDF file.

Scan to Office Function

This machine provides the function which converts scanned documents including text, figures and pictures into searchable and editable Microsoft Office (Word, Excel and PowerPoint) 2007 or later data format, via OCR processing.



NOTE

The scanned result may not be realized perfectly according to condition of the documents.

1 Display the screen.

- 1 [Home] key > [Send] > [Org./Sending Data Format] > [File Format]

2 Configure the settings.

- 1 Select [Word], [Excel] or [PowerPoint] as a file format.
- 2 Select [OCR Text Recognition] > [On].



NOTE

When you select [Off], the documents are converted into the Microsoft Office data (scanned image).

- 3 Select the language of the document which you wish to scan > [OK].
- 4 Select [OCR Output Format] and select an OCR output mode from the table below > [OK].

Item	Description
Text + Graphics	Converts the scanned documents into the editable and searchable Microsoft Office data format.
Text + Graphics with Scanned Image	Converts the scanned documents into two types of data: one is the editable and searchable Microsoft Office data format and the other one is the Microsoft Office data format with scanned image. You can edit text and layout of the editable data by referring the scanned image.
Scanned Image with Searchable Text	Converts the scanned documents into the searchable Microsoft Office data format (scanned image).

3 Press the [Start] key.

PDF Electronic Signature

If **[PDF]** or **[High Comp. PDF]** is selected as a file format, electronic signature can be added to the PDF to be sent. Electronic signature can certify a sender of document and prevent falsification. To use this function, it is required to register a signing certificate from Command Center RX or KYOCERA Net Viewer and enable digital signature to files from the system menu. In this manual, a procedure to register a signing certificate from Command Center RX is described as an example.

NOTE

- This function appears when **[Specify Each Job]** is selected for "Digital Signature to File" in the system menu.
 - ➔ [Digital Signature \(page 8-42\)](#)
- This function can be configured when **[OFF]**, **[PDF/A-2a]**, **[PDF/A-2b]**, or **[PDF/A-2u]** is selected in PDF/A.
- To register a signing certificate from KYOCERA Net Viewer, refer to the following.
 - ➔ **KYOCERA Net Viewer User Guide**

1 Access Command Center RX.

- ➔ [Accessing Command Center RX \(page 2-70\)](#)

2 Register a signing certificate to be used in the electronic signature addition setting.

- 1 Click **[Common/Job Default]** in the **[Function Settings]** menu.
- 2 Click **[Settings]** from **[File Default Settings]** > **[Signing Certificate]** to create, import, or acquire a device certificate.
 - ➔ **Command Center RX User Guide**
- 3 Click **[Restart/Reset]** > **[Restart Device]** to restart the device.

3 Configure the digital signature settings.




- 1 **[Home]** key > **[...]** > **[System Menu]** > **[Function Settings]** > **[Send/Store]** > **[Digital Signature to File]**

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 Configure the digital signature addition settings.

Configurable items are as follows.

Item	Description
Digital Signature	Select whether to add a digital signature. Value: Off: Does not add a digital signature. Specify Each Job: Whether to add a digital signature is selected each time of sending. On: Always adds a digital signature when sending.
Digital Signature Format	Select an algorithm used for encryption of digital signature. Value: SHA1, SHA-256, SHA-384, SHA-512  NOTE This function is displayed when "Digital Signature" is set to [Specify Each Job] or [On].
Password Confirmation on Signature Permission	Select whether to confirm password when setting digital signature. Value: On, Off  NOTE This function is displayed when "Digital Signature" is set to [Specify Each Job].
Password	Set a password required for setting digital signature. Enter a new security password 6 to 16 alphanumeric characters and symbols.  NOTE This function is displayed when "Password Confirmation on Signature Permission" is set to [On].

4 Navigate to display the screen.

[Home] key > [Send] > [Org./Sending Data Format] > [File Format]

5 Enable the function.

- 1 Select [**PDF**] or [**High Comp. PDF**] as a file format.
- 2 From "Digital Signature", select [**On**] > [**OK**] in order.



NOTE

If "Password Confirmation on Signature Permission" is set to [**On**], a password input screen appears. Enter a password set in the system menu.

➔ [Password \(page 8-42\)](#)

6 Press the [Start] key.

File Separation



Org./
Sending
Data Format



Functions



Functions

Creates several files by dividing scanned original data page by specified number of pages, and sends the files.



NOTE

A three-digit serial number such as "abc_001.pdf, abc_002.pdf..." is attached to the end of the file name.

Item	Value	Description
Off		
On		Set file separation. Use [+], [-] or the numeric keys to specify the number of pages, and then select [Next >].
Attach File to E-mail	All Files in 1 E-mail, 1 file per E-mail	Select how to attach the files to the E-mail. Select [All files in 1 E-mail] to attach and send all files in a single E-mail. Select [1 file per E-mail] to attach and send 1 file per E-mail.

Scan Resolution



Color/Image
Quality



 
 
• Functions
• Color/Image
Quality



Functions

Select fineness of scanning resolution.

(Value: [600 × 600dpi] / [400 × 400dpi Ultra fine] / [300 × 300dpi] / [200 × 400dpi Super fine] / [200 × 200dpi Fine] / [200 × 100dpi Normal])



NOTE

The larger the number, the better the image resolution. However, better resolution also means larger file sizes and longer send times.

Clarify Text (Noise Removal)



Color/Image
Quality



Functions

When scanning and sending a document in black and white, it eliminates background noise and improves the legibility of the text.

(Value: [Off] / [On])

Email Subject/Body




Advanced Setup



Functions

Adds subject and body when sending a document.

Select **[Subject]** / **[Body]** to enter the Email subject/body.

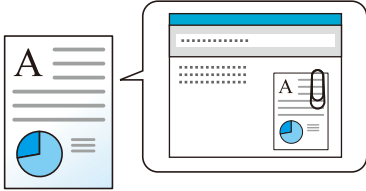

NOTE

- The subject can include up to 256 characters, and the body can include up to 500 characters.
- Select **[Body 1]**, **[Body 2]**, or **[Body 3]** to enter stored text for the body text. For details on registering templates, refer to the following:

➔ [Email Subject/Body \(page 8-40\)](#)

Send and Print



Advanced Setup

Prints a copy of the document being sent.

(Value: **[Off]** / **[On]**)

Send and Store




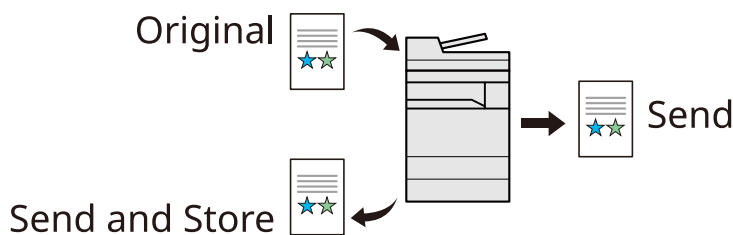
Advanced Setup

Stores a copy of the document being sent in a Custom Box.

(Value: **[Off]** / **[On]**)

NOTE

- When **[On]** is selected, select the Custom Box in which the copy is to be stored. If a password entry screen for the Custom Box appears, enter the password.
- You can view information on the selected Custom Box by selecting [] (information icon).



FTP Encrypted TX



Advanced
Setup



Functions

Encrypts images when sending via FTP.

Encryption secures the document transmission.

(Value: [Off] / [On])



NOTE

Click [**Security Settings**], and then [**Network Security**] in the Command Center RX. Be sure that "TLS" of Secure Protocol Settings is [**On**] and one or more effective encryption are selected in Client side settings.

➔ [Command Center RX User Guide](#)

Email Encrypted TX



Advanced
Setup



Functions

Sends encrypted E-mail using the electronic certificate.

Encryption secures the document transmission.

(Value: [Off] / [On])



NOTE

To use this function, configure the certificate, protocol and email function in the Command Center RX.

➔ [Configuring S/MIME settings in the Command Center RX \(page 6-87\)](#)

Digital Signature Email



Advanced
Setup



Functions

Add a digital signature to the email, using the electronic certificate.

By adding a digital signature to an email, you can confirm the identity of the destination and detect tampering during transmission.

(Value: [Off] / [On])



NOTE

To use this function, configure the certificate, protocol and email function in the Command Center RX.

➔ [Configuring S/MIME settings in the Command Center RX \(page 6-87\)](#)

Configuring S/MIME settings in the Command Center RX

1 Access to the Command Center RX

➔ [Accessing Command Center RX \(page 2-70\)](#)

2 Register the device certificate which is used for S/MIME.

- 1 From the [Security Settings] menu, click [Certificates].
- 2 Click [Settings] of [Device Certificate] (1 to 5) to create or import the device certificate.
 - ➔ **Command Center RX User Guide**
- 3 Click [Restart/Reset] and then [Restart Device] to restart the machine.

3 Configure the protocol settings

- 1 From the [Network Settings] menu, click [Protocol].
- 2 Set [SMTP (E-mail TX)] and [S/MIME] to [On] in Send Protocols.
- 3 Click [Submit].

4 Configure the E-mail function.

- 1 From the [Function Settings] menu, click [E-mail].
- 2 Configure the settings in "S/MIME" as necessary.
 - ➔ **Command Center RX User Guide**
- 3 Click [Submit].

5 Link the E-mail address with S/MIME certificates

- 1 From the [Address Book] menu, click [Common Address Book].
- 2 Click the contact's [Number] or [Name] you want to edit.
- 3 Click [Settings] on "S/MIME Certificate".
- 4 Click [Import] on the required certificate to register it, and then click [Submit].
- 5 Click [OK].

Handwriting Enhancement



Advanced
Setup



Functions

Emphasize the handwriting texts and lines by changing their color to specified one.

Item	Value	Description
Off		
On	Yellow, Red, Cyan, Magenta, Green, Blue, Black, Mask with White	Set the color to change.



NOTE

Depending on the original used, hand writing letter might be wrongly detected.

Example for the hand writing that is difficult to detect:

- Handwritten numbers / figures / lines that are over 1 cm square in size
- Letters that is written by tick pen

Example of recognizing some writing that is not handwritten as handwriting:

- Rounded font

In case of using this function, it might take some time to send.

File Size Confirmation



Advanced
Setup



Functions

Checks the file size before sending the original.

To change the file size, change the settings of each function. When you select [**Recalculate**], the file size is recalculated.

(Value: [Off] / [On])

Delete after Printed



Functions

Automatically deletes a document from the box once printing is complete.

(Value: [Off] / [On])

Delete after Transmitted



Functions

Automatically deletes a document from the box once transmission is complete.

(Value: [Off] / [On])

Storing Size



Functions



Functions

Select size of image to be stored.

Select [**Same as Original Size**], [**Metric**], [**Inch**], or [**Others**] to select the storing size.

Item	Value	Description
Same as Original Size	—	Automatically sends the same size as the original.
Metric	A3, A4, A5, A6, B4, B5, B6, Folio, 216 × 340 mm	Select from the Metric series standard sizes.
Inch	Ledger, Letter, Legal, Statement, 11" × 15", Oficio II	Select from the Inch series standard sizes.
Others	8K, 16K, Hagaki (Cardstock), Oufukuhagaki (Return postcard), Business card, ID Card	Select from special standard sizes.

Relationship between Original Size, Storing Size, and Zoom

Original Size, Storing Size, and Zoom are related to each other. For details, see the table below.

Original Size and the size you wish to store as are	the same	different
Original Size (page 6-20)	Specify as necessary.	Specify as necessary.
Storing Size	Select [Same as Original].	Select the desired size.
Zoom (page 6-36)	Select [100%] (or [Auto]).	Select [Auto].



NOTE

When you select Storing Size that is different from Original Size, and select the Zoom [**100%**], you can store the image as the actual size (No Zoom).

Encrypted PDF Password



Functions

Enter the preassigned password to print the PDF data.

Enter the Password, and select [**OK**].



NOTE


For details on entering the password, refer to the following:

➔ [Character Entry Method \(page 11-9\)](#)

JPEG/TIFF Print



Select the image size when printing JPEG or TIFF files.

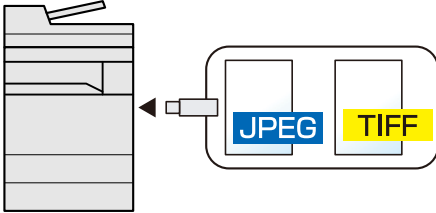


Item	Description
Paper Size	Fits the image size to the selected paper size.
Image Resolution	Prints at resolution of the actual image.
Print Resolution	Fits the image size to the print resolution.

XPS Fit to Page



Reduces or enlarges the image size to fit to the selected paper size when printing XPS file.

(Value: [Off] / [On])

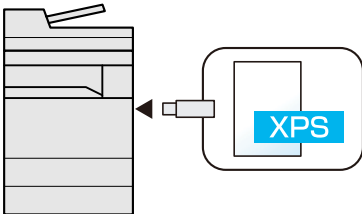

7 Status/Job Cancel

This chapter explains the following topics:

Checking Job Status	7-2
Details of the Status Screens	7-3
Checking Detailed Information of Jobs	7-8
Checking Job History	7-9
Checking the Detailed Information of Histories	7-10
Sending the Log History	7-10
Job Operation	7-11
Pause and Resumption of Jobs	7-11
Canceling of Jobs	7-11
Priority Override for Waiting Jobs	7-11
Reordering Print Jobs	7-12
Device Information	7-13
Updating the Software	7-15
Checking the Remaining Amount of Toner and Paper (Supplies/Paper)	7-16
Checking the CO2 Emission Chart	7-17

Checking Job Status

Check the status of jobs being processed or waiting to be printed.

Available Status Screens

The processing and waiting statuses of jobs are displayed as a list on the touch panel in four different screens - Printing Jobs, Sending Jobs, Storing Jobs, and Scheduled Jobs.

The following job statuses are available.

Status Display	Job status to be displayed
Print Job Status	<ul style="list-style-type: none"> • Copy • Printer • Printing from Document Box • Fax reception • iFax reception • Email reception • Printing data from USB Drive • Application • Job Report/List
Send Job Status	<ul style="list-style-type: none"> • Email • Folder transmission • Fax transmission • iFax transmission • Sending Job - Fax Server • Application • Multiple destination
Store Job Status	<ul style="list-style-type: none"> • Scan • Fax • iFax • Printer • Join Box Document • Copy Box Document
Scheduled Job	<ul style="list-style-type: none"> • Sending Job FAX using Delayed transmission

Displaying Status Screens

1 Display the screen.

Select the [**Status/Job Cancel**] key.

2 Select the job you want to check.

Select either of [**Print Jobs**], [**Send Jobs**], or [**Store Jobs**] to check the status.

Select [**Send Jobs**] > [**Scheduled Job**] to check delayed transmission.

➔ [Print Jobs Screen \(page 7-3\)](#)

➔ [Send Jobs screen \(page 7-5\)](#)

➔ [Store Jobs screen \(page 7-6\)](#)


➔ [Scheduled Job Screen \(page 7-7\)](#)







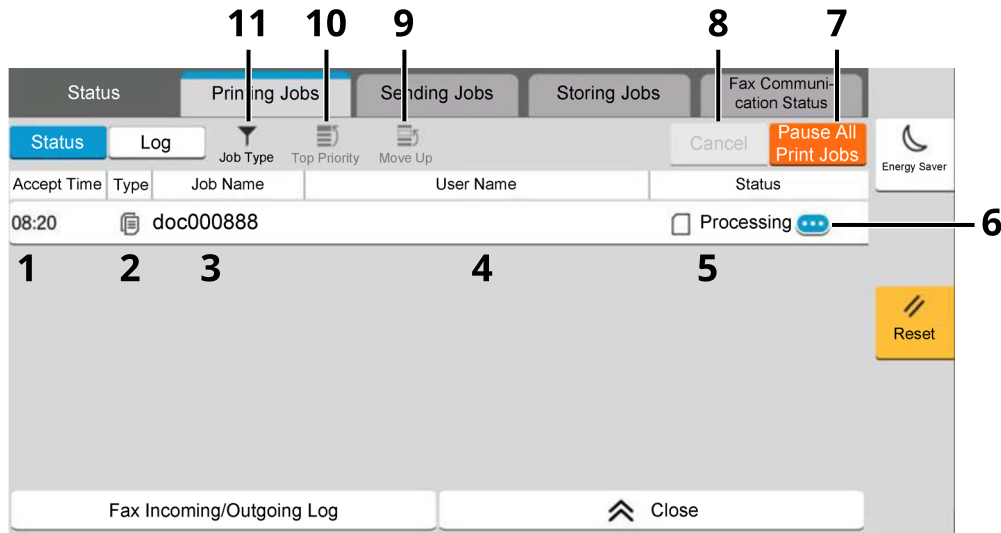


Details of the Status Screens



 **NOTE**

 - You can show the job statuses of all users, or only the statuses of your own jobs.
 - ➔ [Job Status/Job Logs Settings \(page 8-54\)](#)
- This setting can also be changed from Command Center RX.
 - ➔ **Command Center RX User Guide**

Print Jobs Screen



No.	Item	Description
1	Accepted Time	Accepted Time of job
2	Type	Icons that indicate the job type  Copy job  Printer job  Job from Document Box  Fax reception  iFax reception  Email reception  Data from USB Drive  Application  Report/List
3	Job Name	Job Name or file name
4	User Name	User Name for the executed job

No.	Item	Description
5	Status	Status of job InProcess: The status before starting to print. Printing: Printing Waiting: Print Waiting Pause: Pausing print job or error Canceling: Canceling the job
6	[] (information icon)	Select the icon of the job whose detailed information you want to display. ➔ Checking Detailed Information of Jobs (page 7-8) You can select [] (information icon) in “Copies” in the detailed information screen to change the number of copies that are printed.
7	[Pause All Print Jobs]	Pauses all the printing jobs. By pressing this key again, the printing jobs will be resumed.
8	[Cancel]	Select the job you want to cancel from the list, and select this key.
9	[Move Up]	In the list, select the job that you want to move up the job queue and select this key. ➔ Reordering Print Jobs (page 7-12)
10	[Top Priority]	Select the job to be overridden, and select this key. ➔ Priority Override for Waiting Jobs (page 7-11)
11	[Job Type]	Only selected type of jobs is displayed.




NOTE

The job name and user name can be changed to other information if needed.

➔ [Status \(page 8-54\)](#)

Send Jobs screen

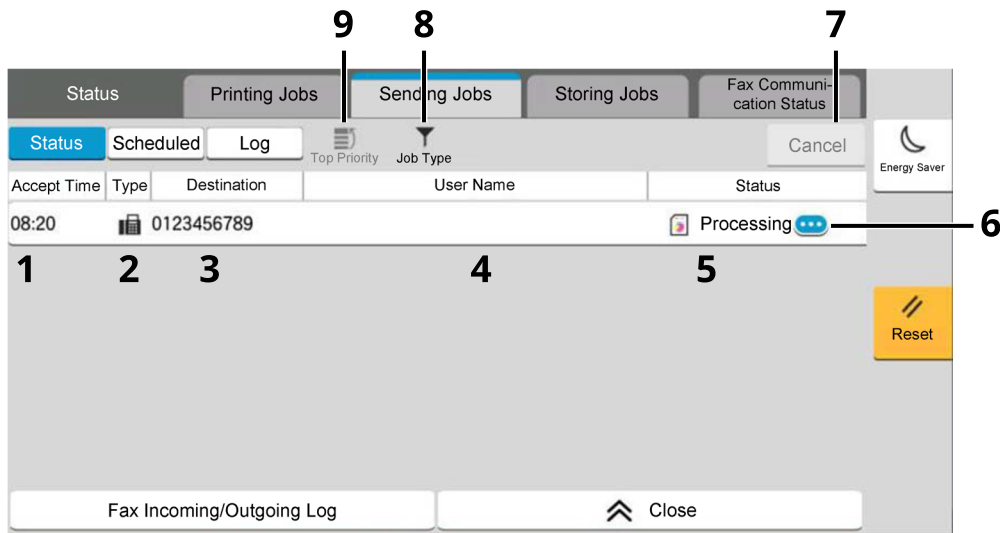


No.	Item	Description
1	Accepted Time	Accepted Time of job
2	Type	Icons that indicate the job type Sending Job Email Sending Job Folder Sending Job Fax Sending Job iFax Sending Job - Fax Server Sending Job Application Multi Sending
3	Destination	Destination (Either destination name, Fax number, Email address, or server name)
4	User Name	User Name for the executed job
5	Status	Status of job InProcess: The status before starting sending such as during scanning originals Sending: Sending Waiting: Waiting Sending Canceling: Canceling the job Pause: Pausing the job
6	[] (information icon)	Select the icon of the job whose detailed information you want to display. ▶ Checking Detailed Information of Jobs (page 7-8)
7	[Cancel]	Select the job you want to cancel from the list, and select this key.
8	[Job Type]	Only selected type of jobs is displayed.
9	[TOP Priority]	Select the job to be overridden, and select this key. Only displayed when the optional fax kit is installed.








NOTE

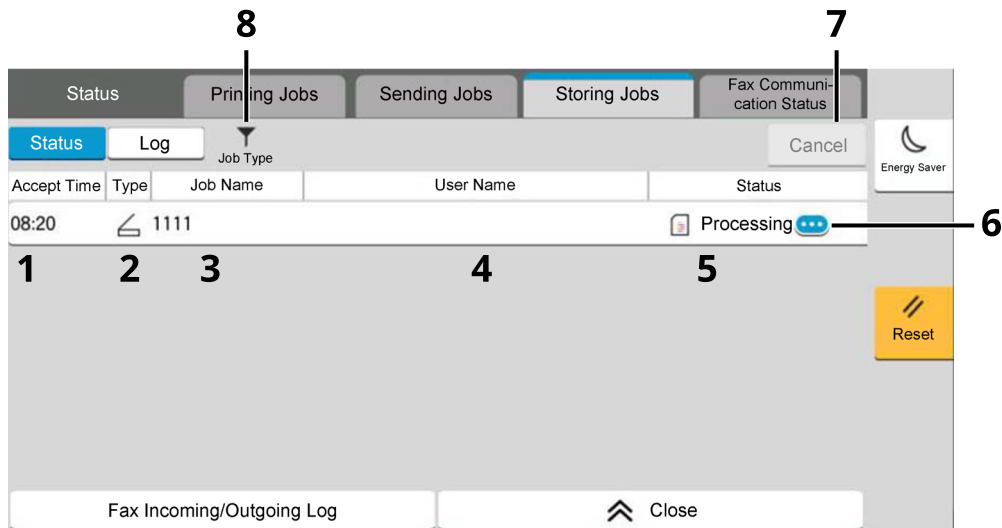The address and user name can be changed to other information if needed.

▶ [Status \(page 8-54\)](#)

Store Jobs screen




No.	Item	Description
1	Accepted Time	Accepted Time of job
2	Type	Icons that indicate the job type  Storing Job Scan  Storing Job Fax  Storing Job iFax  Storing Job Printer  Join Box Document  Copy Box Document
3	Job Name	Job name or file name is displayed.
4	User Name	User Name for the executed job
5	Status	Status of job InProcess: The status before starting to save such as during scanning originals Storing: Storing Data Canceling: Canceling the job Pause: Pausing the job
6	[] (information icon)	Select the icon of the job whose detailed information you want to display. ➔ Checking Detailed Information of Jobs (page 7-8)
7	[Cancel]	Select the job you want to cancel from the list, and select this key.
8	[Job Type]	Only selected type of jobs is displayed.



 **NOTE**

The job name and user name can be changed to other information if needed.

➔ [Status \(page 8-54\)](#)

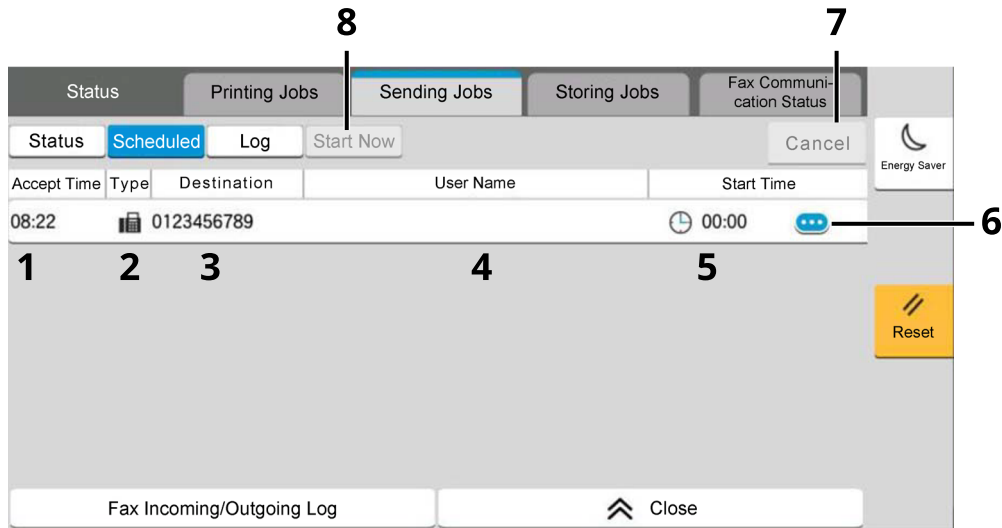Scheduled Job Screen




No.	Item	Description
1	Accepted Time	Accepted Time of job
2	Type	Icons that indicate the job type  Scheduling Job Fax
3	Destination	Destination (Either destination name, FAX number, or No. of broadcast items)
4	User Name	User Name for the executed job
5	Start Time	Time to start the scheduled job
6	[] (information icon)	Select the icon of the job whose detailed information you want to display. ▶ Checking Detailed Information of Jobs (page 7-8)
7	[Cancel]	Select the job you want to cancel from the list, and select this key.
8	[Start Now]	Select the job you want to send immediately from the list, and select this key.


Checking Detailed Information of Jobs

1 Display the screen.



→ [Details of the Status Screens \(page 7-3\)](#)

2 Check the information.

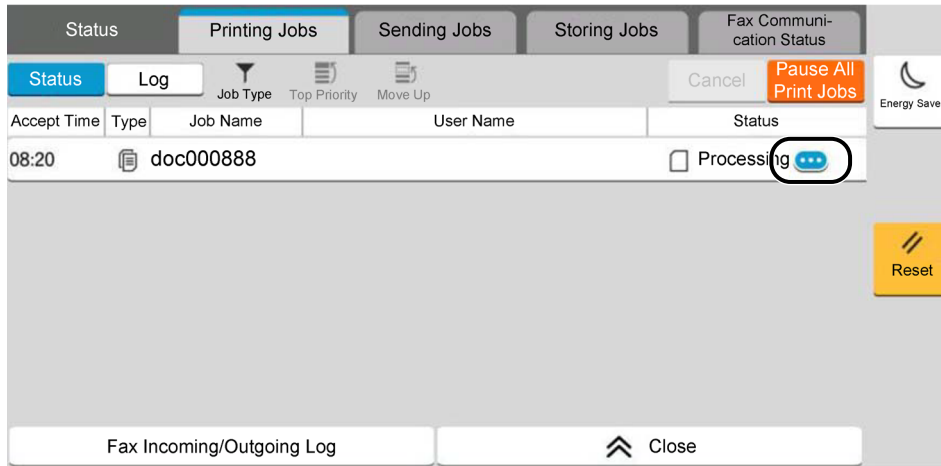- 1 Select [] (information icon) for the job for which you wish to display detailed information.




Detailed information of the selected job is displayed.

In Sending Jobs, you can check the destination by selecting [] (information icon) in "Result/Destination". Select [] (information icon) for the destination to display detailed information.

- 2 To exit from the detailed information, select [**Close**].

Checking Job History

 **NOTE**

- Job history is also available by Command Center RX or KYOCERA Net Viewer from the computer.
 - ➔ **Command Center RX User Guide**
 - ➔ **KYOCERA Net Viewer User Guide**
- You can show the job log of all users, or only your own job log.
 - ➔ [Job Status/Job Logs Settings \(page 8-54\)](#)
- This setting can also be changed from Command Center RX.
 - ➔ **Command Center RX User Guide**

Available Job History Screens

The job histories are displayed separately in three screens - Printing Jobs, Sending Jobs, and Storing Jobs. The following job histories are available.

Screen	Job histories to be displayed
Print Job Log	<ul style="list-style-type: none"> • Copy • Printer • Printing from Document Box • Fax reception • iFax reception • Email reception • Printing data from USB Drive • Application • Job Report/List
Send Job Log	<ul style="list-style-type: none"> • Email • Folder • Fax • iFax • Fax Server • Application • Multiple destination
Store Job Log	<ul style="list-style-type: none"> • Scan • Fax • iFax • Printer • Join Box Document • Copy Box Document

Displaying Job History Screen

1 Display the screen.

Select the [Status/Job Cancel] key.

2 Select the job to check details.

Select the [Log] tab, and select the job to check details from the list.

Checking the Detailed Information of Histories

1 Display the screen.

➔ [Displaying Job History Screen \(page 7-10\)](#)

2 Check the information.

1 Select [⋮] (information icon) for the job you want to check.

End Date	Type	Job Name	User Name	Result
02/27 08:27	☰	doc000888		OK Completed ⋮
02/27 08:26	☰	doc000777		OK Completed ⋮
02/27 05:14	☰	doc000666		OK Completed ⋮

The screenshot shows a software interface with tabs for 'Status', 'Printing Jobs', 'Sending Jobs', 'Storing Jobs', and 'Fax Communication Status'. The 'Log' tab is selected. Below the tabs is a table with columns for 'End Date', 'Type', 'Job Name', 'User Name', and 'Result'. Three rows of job history are visible, each with a circled information icon (three dots) in the 'Result' column. A 'Reset' button is located on the right side of the table, and a 'Close' button is at the bottom right.

Detailed information of the selected job is displayed.

2 To exit from the detailed information, select [Close].

Sending the Log History

You can send the log history by E-mail. You can either send it manually as needed or have it sent automatically whenever a set number of jobs is reached.

➔ [Send Log History \(page 8-31\)](#)

Job Operation

Pause and Resumption of Jobs

Pause/resume all printing jobs in printing/waiting.

1 Display the screen.

Select the [Status/Job Cancel] key.

2 Select [Pause All Print Jobs] on the printing jobs status screen.

Printing is paused.

When resuming the printing of jobs that have been paused, select [Resume All Print Jobs].

Canceling of Jobs

A job in printing/waiting status can be canceled.

1 Display the screen.

Select the [Status/Job Cancel] key.

2 Select the job to be canceled from the list, and select [Cancel].

3 Select [Yes] in the confirmation screen.

Priority Override for Waiting Jobs

Priority Override function suspends the current job and prints the job in waiting first.

1 Display the screen.

Select the [Status/Job Cancel] key.

2 Select the job to be given priority, and select [Top Priority].

3 Select [Print] in the confirmation screen.

The current job in printing is suspended, and the job for override.

Reordering Print Jobs

This function allows you to select a queued print job and raise its output priority.

1 Display the screen.

Select the [**Status/Job Cancel**] key.

2 Select the job to be assigned a higher priority and select [**Move Up**].

3 Select [**Yes**] in the confirmation screen.

The priority of the selected job is increased by 1.

To further raise the job's priority, select [**Move Up**] again. Each time you select [**Move Up**], the priority increases by 1.

Device Information

Configure the devices/lines installed or connected to this machine or check their status.

1 Display the screen.

1 Select the [**Home**] key.

2 Select [**Device Information**].

The screen to check the status or configure the devices is displayed.

2 Check the Information.

The items you can check are described below.

Identification/Wired Network

You can check ID information such as the model name, serial number, host name and location, and the IP address of the wired network.

Wi-Fi Direct/Wi-Fi

You can check the status of Wi-Fi connection, such as the device name, network name and IP address.



NOTE

Displayed when the optional Wireless Network Interface Kit is installed.

Supplies/Paper

You can check the remaining amount of toner, and paper.

➔ [Checking the Remaining Amount of Toner and Paper \(Supplies/Paper\) \(page 7-16\)](#)

Fax

You can check the local fax number, local fax name, local fax ID and other fax information.

➔ **FAX Operation Guide**



NOTE

Displayed only when the optional FAX Kit is installed.

USB/NFC/Bluetooth

You can check the connection status of USB drive, NFC (Near Field Communication) and Bluetooth keyboard.

- Select [**Format**] for "USB Drive" to format external media.



IMPORTANT

When [Format] is selected, all data in the USB drive is erased.

- Select [**Remove**] for "USB Drive" to safely remove the external media.
- Select "Bluetooth" [**Connect**] to set the Bluetooth keyboard connection.

Option/Application

You can check information on the options and applications that are used.

Capability/Software Version

You can check the software version and performance.

The software can be updated over the internet by selecting [**Online Software Update**].

➔ [Updating the Software \(page 7-15\)](#)

Security

You can check the security information on the machine.

Report

You can print various reports and lists.

Remote Operation Status

You can check the situation of remote operation.

Updating the Software

When this machine is connected to a network, the software can be updated over the internet from the operation panel of this product.

✔ IMPORTANT

Depending on the region in which this product is used, this function may not be available. In these cases, the [Online Software Update] option button may not be available.

1 Display the screen.

When updating firmware

Select [Home] key > [Device Information] > [Capability/Software Version] > "Software Version" > [Online Software Update].

Or


Select [Home] key > [...] > [System Menu] > [Adjustment/Maintenance] > "Others" [Online Software Update].

When updating the HyPAS application

Select [Home] key > [Device Information] > [Capability/Software Version] > "Software Version" > [Online Software Update].

Or

Select [Home] key > [...] > [System Menu] > [Add/Delete Application] > "Application" [Add/Delete Application] > "Application" [+Add] > [Online].

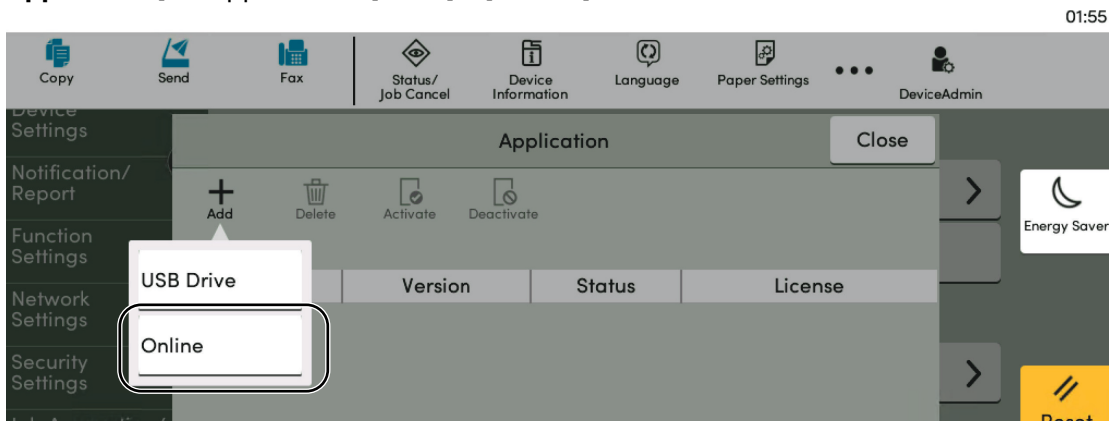

📌 NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 Check to see if updating software exists

Select [Yes], and check on the internet to see if updating software exists.

3 Start installation of updating software

When updating software is available, the software can be updated by following instructions on the operation screen.

✔ IMPORTANT

- Software cannot be updated while a job is executing. Try again later.
- Do not turn off the power during the installation of the update software.

Checking the Remaining Amount of Toner and Paper (Supplies/Paper)

Check the remaining amount of toner, and paper on the touch panel.

1 Display the screen.

- 1 Select the [**Home**] key.
- 2 Select [**Device Information**].
- 3 Select [**Supplies/Paper**].

2 Check the Information.

The items you can check are described below.

Toner Information

The amount of toner remaining is shown in levels. And you can check the status of waste toner box.

Paper Status

You can check the size, orientation, type, and remaining amount of paper in each paper source. The amount of paper remaining is shown in levels.

Others


You can check the status of staples and punch waste box.

Checking the CO2 Emission Chart


Check the CO2 emission chart and power usage.

1 Display the screen.


[Home] key > [...] > [CO2 Emission Chart]

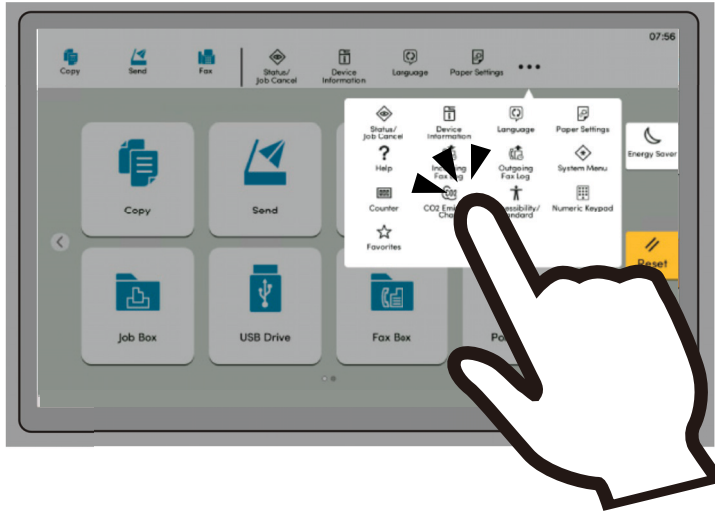

2 Check the CO2 emissions.

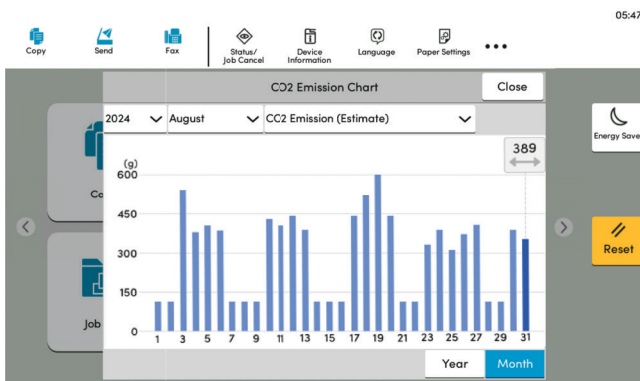

3 Check the power consumption.

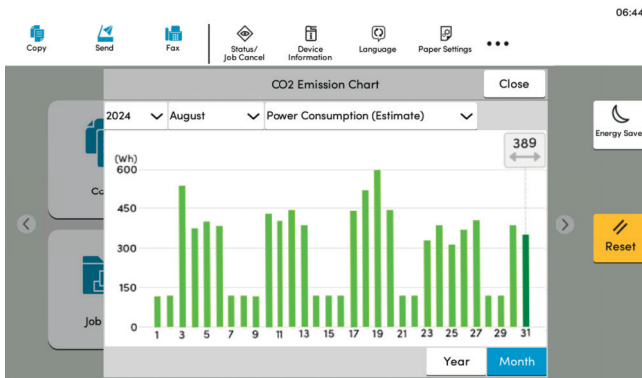

NOTE

- Displays estimated power consumption and estimated CO2 emissions. These values are guidelines and based upon typical usage conditions, and may vary depending on actual usage conditions and on how the product is used. Furthermore, there may be differences between estimated values and actual values depending on whether optional equipment is connected.
- You can configure the CO2 emission chart settings.
➔ [CO2 Emission Chart \(page 8-56\)](#)
- You can also check the CO2 emissions and power consumption from Command Center RX.
➔ **Command Center RX User Guide**

8 Setup and Registration (System Menu)

This chapter explains the following topics:

System Menu	8-2
Operation Method	8-2
System Menu Settings	8-4
Device Settings	8-7
Notification/Report	8-27
Function Settings	8-35
Network Settings	8-57
Security Settings	8-75
Job Accounting/Authentication	8-91
Add/Delete Application	8-91
Adjustment/Maintenance	8-92

System Menu

Configure settings related to overall machine operation.



Operation Method

System Menu is operated as follows:

1 Display the screen.


Select the [Home] key > [...] > [System Menu].

2 Select a function.

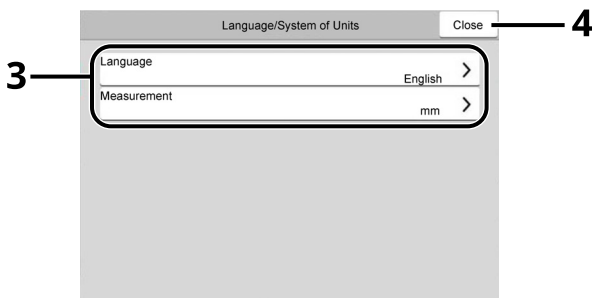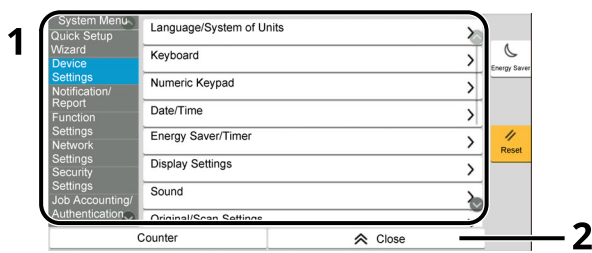

- 1 Displays the System Menu items. Items that are not displayed can be displayed by swiping the screen up and down.
- 2 Returns to the previous screen.
- 3 Displays setting items.
Select the key of a function to display the setting screen.
- 4 Returns to the previous screen.

3 Configure the function.

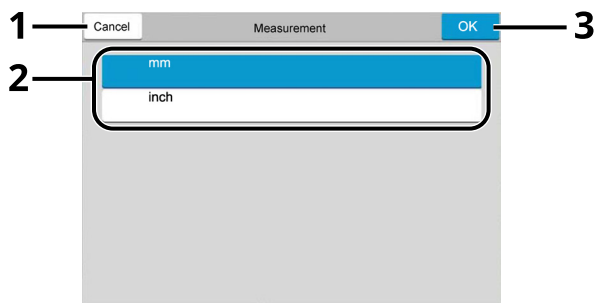

- 1 Returns to the previous screen without making any changes.
- 2 Enter a setting by selecting it and return to the previous screen.
- 3 Accepts the settings and exits.

NOTE

- If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.
- If function default settings have been changed, the [**Reset**] key can be selected in each function screen to immediately change the settings.

System Menu Settings

This section explains the functions that can be configured in System Menu. To configure the settings, select the item in System Menu and select the setting item. For details on each function, see the table below.

Item	Description	Reference Page
Quick Setup Wizard	The Quick Setup Wizard configures Fax, Energy Saver, Network, E-mail and Security Setup.	page 2-48
Device Settings	Configure overall machine operation.	page 8-7
Language/System of Units	Set the language to use for the touch panel display, and select inch or metric for the unit for paper dimensions.	page 8-7
Keyboard	Change the layout of the touch panel keyboard used to enter characters.	page 8-7
Numeric Keypad	Select whether or not to display the numeric keypad.	page 8-7
Date/Time	Configures settings related to the date and time.	page 8-7
Energy Saver/Timer	Configure the Energy Saver settings.	page 8-8
Display Settings	Configure the touch panel display settings.	page 8-10
Sound	Set options for buzzer sound during the machine operations.	page 8-11
Original/Scan Settings	Configure settings for originals.	page 8-12
Paper Feeding	Configure the paper and paper source settings.	page 8-14
Paper Output	Configure settings for paper output.	page 8-23
Function Key Assignment	Assign a function to each function key.	page 8-24
Operation Assist	It is possible to configure the settings for the Orientation Selection screen display and the Preset Limit on the number of copies that can be made at one time.	page 8-24
Error Handling	Select whether to cancel or continue the job when error has occurred.	page 8-25
Toner Settings	Configure the toner settings.	page 8-27
Notification/Report	Print reports to check the machine settings, status, and history. Settings for printing reports can also be configured.	page 8-27
Printing Report/List	Print various reports and lists.	page 8-27
Result Report Setting	Configure settings for notices for sending and receiving.	page 8-29
Device Status Notification	Configure settings for toner notices.	page 8-29
Message Board Settings	Configure settings for message board.	page 8-30
Fax Communication Report	Configure settings for FAX notices.	page 8-30
History Settings	Configure settings for printing the history of the machine use.	page 8-31

Item	Description	Reference Page
Function Settings	Configures settings for copying, sending and Document Box functions.	page 8-35
Function Defaults	Defaults are the values automatically set after the warm-up is completed or the [Reset] key is selected. Set the defaults for available settings such as copying and sending. Setting the frequently-used values as defaults makes subsequent jobs easier.	page 8-35
Copy/Print	Configures settings for copying and printing functions.	page 8-41
Send/Store	Configures settings for sending and storing functions.	page 8-41
Email	Configure settings for email transmission and receipt.	page 8-43
Sending Job - Folder	Configures settings for Sending Job Folder functions.	page 8-43
Fax/iFax	Configures settings for fax functions. ➔ FAX Operation Guide	—
WSD	Configure settings for WSD Scan and WSD Print.	page 8-44
Address Book	Configures Address Book settings.	page 8-44
One-Touch Key	Configures One Touch Key settings.	page 8-45
Send and Forward	Select whether to forward the original to another destination when sending images.	page 8-45
RX/Forward Rules/Fax Box	Configures settings for RX/Forward rules and Fax Box.	page 8-49
Printer	Printing from computers, settings are generally made on the application software screen. However, the following settings are available for configuring the defaults to customize the machine.	page 8-50
Document Box	Configure settings for Custom Box.	page 8-52
Job Box	Configure settings for Job Box.	page 8-53
Fax Memory RX Box	Set whether to perform Print Immediately for the fax documents received or to save them in the Fax Memory RX Box. ➔ FAX Operation Guide	—
Home	Configure settings for Home screen.	page 8-53
Status	Configure settings for Status.	page 8-54
Internet Browser	Configure settings related to the Internet.	page 8-54
Manual Staple	Select whether to use Manual Staple.	page 8-55
Remote Services	Configures remote services settings.	page 8-55
TWAIN/WIA	Configure settings for TWAIN/WIA.	page 8-55
CO2 Emission Chart	Configures CO2 Emission Chart settings.	page 8-56

Item	Description	Reference Page
Network Settings	Configures network settings.	page 8-57
Network Settings	Configure the wired network and Wi-Fi settings.	page 8-57
Optional Network	Configure settings for the optional Network Interface Kit or Wireless Network Interface Kit.	page 8-69
Connectivity	Configure the Connectivity settings of this machine to other devices.	page 8-74
Others	Configure other network related settings.	page 8-75
Security Settings	Configures security settings.	page 8-75
Security Quick Setup	The Security Level setting is primarily a menu option used by service personnel for maintenance work. There is no need for customers to use this menu.	page 8-75
Interface Block Setting	This allows you to protect this machine by blocking the interface with external devices such as USB hosts or optional interfaces.	page 8-76
Device Security Settings	Configures the device security settings.	page 8-77
System Stamp	Configure settings for header, footer, and stamp.	page 8-85
Authentication Security	Configure security settings for User Authentication.	page 8-90
Unknown User Settings	This specifies the behavior for handling the jobs sent with unknown or unsend login user names or User ID.	page 8-91
Network	Configure security settings on the network.	page 8-91
Job Accounting/ Authentication	Configures settings related to machine management. User Login: ➔ Overview of User Login Administration (page 9-2) Job Accounting: ➔ Overview of Job Accounting (page 9-29)	page 8-91
Add/Delete Application	Configure settings for Application.	page 8-91
Application	Configure settings for applications that help you perform your daily more efficiently such as a scan feature and an authentication feature.	page 5-10
Optional Function	You can use the optional applications installed on this machine.	page 11-7
Adjustment/Maintenance	Adjust printing quality and conduct machine maintenance.	page 8-92
Image Adjustment	Perform Image Adjustment.	page 8-92
Behavior Adjustment	Perform Behavior Adjustment for the machine.	page 8-94
Others	Adjust Others.	page 8-95

Device Settings

Configures overall machine operation.

Language/System of Units

[Home] key > [...] > [System Menu] > [Device Settings] > [Language/System of Units]

Item	Description
Language	Set the language to use for the touch panel display.
Measurement	Select inch or metric for the unit for paper dimensions. Value: mm, inch

Keyboard

[Home] key > [...] > [System Menu] > [Device Settings] > [Keyboard]

Item	Description
Keyboard Layout	Change the layout of the touch panel keyboard used to enter characters. Value: QWERTY, QWERTZ, AZERTY
Optional Keyboard Type	Select the type of optional keyboard that you want to use. Value: US-English, US-English with Euro, French, German, UK-English


Numeric Keypad

[Home] key > [...] > [System Menu] > [Device Settings] > [Numeric Keypad]

Item	Description				
<table border="1"> <tr> <td rowspan="2">Default Display</td> <td>Copy/Print from Box</td> <td rowspan="2">Select whether or not to display the numeric keypad. Value: Off, On</td> </tr> <tr> <td>HyPAS Application</td> </tr> </table>	Default Display	Copy/Print from Box	Select whether or not to display the numeric keypad. Value: Off, On	HyPAS Application	
Default Display		Copy/Print from Box		Select whether or not to display the numeric keypad. Value: Off, On	
	HyPAS Application				
Layout (HyPAS Application)	Select the HyPAS numeric keypad layout to display upon startup. Value: Floating, Horizontal, On the Right				

Date/Time





[Home] key > [...] > [System Menu] > [Device Settings] > [Date/Time]



Item	Description
Date and Time	<p>Set the date and time for the location where you use the machine. If you perform Send as E-mail, the date and time set here will be displayed on the header.</p> <p>Value: Year (2000 to 2035), Month (1 to 12), Day (1 to 31), Hour (0 to 23), Minute (0 to 59), Second (0 to 59)</p> <p>➔ Setting Date and Time (page 2-32)</p> <p> NOTE If you change the date/time while using the trial version of an application, you will no longer be able to use the application.</p>

Item	Description
Date Format	Select the display format of year, month, and date. The year is displayed in Western notation. Value: MM/DD/YYYY, DD/MM/YYYY, YYYY/MM/DD
Time Zone	Set the time difference from GMT. Choose the nearest listed location from the list. If you select a region that utilizes summer time, configure settings for summer time. ➔ Setting Date and Time (page 2-32)

Energy Saver/Timer

[Home] key > [...] > [System Menu] > [Device Settings] > [Energy Saver/Timer]

Item	Description
Auto Panel Reset	If no jobs are run for a certain period of time, automatically reset settings and return to the default setting. Select to use Auto Panel Reset or not. Value: Off, On  NOTE For setting the time until the panel is automatically reset, refer to the following: ➔ Panel Reset Timer (page 8-8)
Panel Reset Timer	If you select [On] for Auto Panel Reset, set the amount of time to wait before Auto Panel Reset. Value: 5 to 495 seconds (in 5 second increments)  NOTE This function is displayed when [Auto Panel Reset] is set to [On].
Low Power Timer	Set amount of time before entering the Low Power mode. Value: 1 to 120 minutes (1 minute increments) ➔ Low Power Mode (page 2-45)
Sleep Timer	Set amount of time before entering Sleep. Value: 1 to 120 minutes (10 minutes increments) ➔ Sleep (page 2-46)
Sleep Rules (models for Europe)*¹	Select whether to use the Sleep mode for the following functions individually: <ul style="list-style-type: none"> • ID Card Reader*² • Application Value: Off, On  NOTE If the sleep condition is not turned off, the ID card cannot be recognized.
Sleep Level (models except for Europe)*¹	Select the sleep level. Set the Energy Saver mode to reduce power consumption even more than normal Sleep mode. Value: Quick Recovery, Energy Saver
Sleep Rules	Select whether to use the Energy Saver mode for the following functions individually: <ul style="list-style-type: none"> • ID Card Reader*² • Application Value: Off, On  NOTE When the machine has entered sleep mode with Energy Saver setting, the ID card cannot be recognized.

Item	Description
Weekly Timer Settings	Configure settings for switching the machine into Sleep mode and waking it automatically at a specified time for each day of the week.
Weekly Timer	Select whether to use Weekly Timer. Value: Off, On
Schedule	Specify the time for each day of the week at which the machine enters Sleep mode and recovers.
Retry	Set the number of retry to switch the machine into Sleep mode. Value: Limited Retries, Unlimited Retries  NOTE <ul style="list-style-type: none"> • If [Limited Retries] is selected, set the number of retry. The setting range is 0 to 10. • If [Unlimited Retries] is selected, retry is performed until the machine enters Sleep mode.
Retry Interval	Set the retry interval. Use [-] / [+] to enter a number. Value: 10 to 60 seconds (increments of 10 seconds)
Power Off Timer (models for Europe)	Select whether to turn off the power automatically after a period of inactivity. Value: 1 hour, 2 hours, 3 hours, 4 hours, 5 hours, 6 hours, 9 hours, 12 hours, 1 day, 2 days, 3 days, 4 days, 5 days, 6 days, 1 week
Power Off Rule (models for Europe)	Select whether or not the machine enters Power Off mode for the following function. Select [On] to set the Power Off mode. <ul style="list-style-type: none"> • Network • Fax • USB Cable • USB Host • Application • NIC • Remote Diagnostics Value: Off, On  NOTE <ul style="list-style-type: none"> • Even when any of the functions is set to [On], if either [Fax] or [NIC] is set to [Off], the machine does not enter Power Off Mode. • Even when [Network] or [USB Cable] is set to [Off], if the machine does not communicate with the other devices, the machine will enter Power Off Mode. • [Fax] is Displayed only when the optional FAX Kit is installed. • [NIC] is displayed when the optional Network Interface Kit or Wireless Network Interface Kit is installed.
Motion Sensor	Automatically wake up from low power mode or sleep mode when someone approaches the device. Value: Ultra Low, 1 (Low), 2, 3 (High)
Energy Saver Recovery Level	Select the method of recovery from energy saver. Value: Full Recovery: This mode enables the use of all functions immediately. However, this mode saves less energy. Normal Recovery: In this mode, you can select the method from the following: enabling the use of all functions immediately or enabling the use of desired functions only. If you want to use all functions immediately, select the [Energy Saver] key to execute recovery.

Item	Description
Interrupt Clear Timer	Set the period after which the machine reverts to Normal mode when it has been set to Interrupt Copy mode and then left unused. Value: 5 to 495 seconds (in 5 second increments)
Ping Timeout	Set the time until timeout occurs when [Ping] is executed in "System/Network". Value: 1 to 30 seconds (in 1 second increments)

*1 This function will not be displayed when the optional Network Interface Kit or Fiery controller is installed.

*2 Displayed when the optional Card Authentication Kit is activated.

Display Settings

[Home] key > [...] > [System Menu] > [Device Settings] > [Display Settings]

Item	Description
Display Brightness	Set the brightness of the touch panel. Value: 1 (Darker), 2, 3, 4, 5 (Lighter)
Default Screen	Select the screen appearing right after start-up (default screen). Value: Home, Copy, Send, Fax^{*1}, Status, Custom Box, Job Box, USB Drive, Polling Box^{*1}, Fax Box^{*1}, Fax, Memory RX Box^{*1}, Internet Browser, Favorite, Home (Accessibility), Accessibility Copy, Accessibility Send, Accessibility Fax^{*1}, Application Name^{*2}
Wallpaper	➔ Editing the Home Screen (page 2-15)
Show Power Off Message	Set the mode whether display a confirmation message in power supply off. Value: Off, On
Quick Setup Registration (Copy)	Select the functions to be registered for Quick Setup. Six keys of the Quick Setup screen are allocated to typical functions but can be changed as necessary. Six items in the following options are available. Value: Off, Paper Selection, Zoom, Staple/Punch^{*3}, Density, Duplex, Combine, Collate/Offset, Original Image, Original Size, Original Orientation, Color Selection, Continuous Scan, Background Density Adj
Quick Setup Registration (Send)	Select the functions to be registered for Quick Setup. Six keys of the Quick Setup screen are allocated to typical functions but can be changed as necessary. Six items in the following options are available. Value: Off, Original Size, 2-sided/Book Original, Sending Size, Original Orientation, File Format, Density, Original Image, Scan Resolution, Fax TX Resolution^{*1}, Color Selection, Zoom, Continuous Scan, Background Density Adj
Quick Setup Registration (Fax)	➔ FAX Operation Guide
Quick Setup Registration (Storing in Box)	Select the functions to be registered for Quick Setup. Six keys of the Quick Setup screen are allocated to typical functions but can be changed as necessary. Six items in the following options are available. Value: Off, Color Selection, Storing Size, Density, 2-sided/Book Original, Scan Resolution, Zoom, Original Orientation, Original Size, Original Image, Continuous Scan, Background Density Adj

Item	Description
Quick Setup Registration (Box Print)	Select the functions to be registered for Quick Setup. Six keys of the Quick Setup screen are allocated to typical functions but can be changed as necessary. Six items in the following options are available. Value: Off, Paper Selection, Collate/Offset, Staple/Punch^{*3}, Duplex, Combine, Delete after Printed, Color Selection
Quick Setup Registration (Sending from Box)	Select the functions to be registered for Quick Setup. Six keys of the Quick Setup screen are allocated to typical functions but can be changed as necessary. Six items in the following options are available. Value: Off, Sending Size, Fax TX Resolution^{*1}, File Format, Delete after Transmitted, Color Selection

*1 Displayed only when the optional FAX Kit is installed.

*2 The running application will be displayed.

➔ [Application \(page 5-10\)](#)

*3 Displayed when the optional Document Finisher is installed. When a punching unit is not installed, this item name is "Staple".

Sound


[Home] key > [...] > [System Menu] > [Device Settings] > [Sound]



Item	Description
Buzzer	Set options for buzzer sound during the machine operations.
Tone	Set the tone of the buzzer. Value: Sound1, Beep
Volume	Set the buzzer volume level. Value: 0 (Mute), 1 (Minimum), 2, 3 (Medium), 4, 5 (Maximum)
Key Confirmation	Emit a sound when the operation panel and touch panel keys are selected. Value: Off, On (User Operation Only)
Job Finish	Emit a sound when a print job is normally completed. Value: Off, On, FAX Reception Only^{*1}
Ready	Emit a sound when the warm-up is completed. Value: Off, On
Warning	Emit a sound when errors occur. Value: Off, On
Optional Keyboard	Emit a sound to confirm key presses with a sound. Value: Off, On
Fax Speaker Volume^{*1}	➔ FAX Operation Guide
Fax Monitor Volume^{*1}	

*1 Displayed only when the optional FAX Kit is installed.

Original/Scan Settings

[Home] key > [...] > [System Menu] > [Device Settings] > [Original/Scan Settings]

Item	Description
Auto Detect Original Size	Select whether to automatically detect originals of special or non-standard size.
Detect Non-standard Size (Copy)	Set whether to detect non-standard size documents in the copy function. This setting takes precedence over the automatic (standard size) setting. Value: Off, On
Detect Non-standard Size (Send/Store)	Set whether to detect non-standard size documents in the send or save function. This setting takes precedence over the automatic (standard size) setting. Value: Off, On
System of Units	Select [Metric] when automatically detecting the originals in centimeter sizes. Select [Inch] when detecting the originals in inch sizes. Value: Metric, Inch
A6/Hagaki^{*1}	As A6 and Hagaki (Cardstock) are similar in size, select either one of them for automatic detection. Value: A6, Hagaki  NOTE If [Hagaki] is set, only the originals placed on the platen are detected.
Business Card/ID Card	As Business Card and ID Card are similar in size, select either one of them for automatic detection. Value: Business Card, ID Card
Folio^{*1}	Select whether to enable automatic detection of Folio. Value: Off, On
11×15"^{*1}	Select whether to enable automatic detection of 11×15" size. Value: Off, On
Legal/Oficio II/216×340 mm^{*2}	Set the original sizes for the device to detect automatically. Value: Legal, Oficio II, 216×340 mm

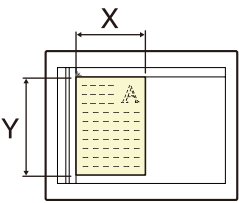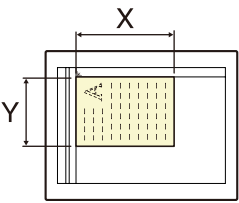Item	Description			
<p>Custom Original Size</p>	<p>Set up frequently-used custom original size. The custom size option is displayed on the screen to select original size. Select [On] for "Custom 1 (to 4)" and enter the desired size.</p> <p>Value</p> <p>Metric X: 50 to 432 mm (in 1 mm increments) Y: 50 to 297 mm (in 1 mm increments)</p> <p>Inch X: 2.00 to 17.00" (in 0.01" increments) Y: 2.00 to 11.69" (in 0.01" increments)</p> <p>X=Length, Y=Width</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>Vertical</p>  </div> <div style="text-align: center;"> <p>Horizontal</p>  </div> </div>			
<p>Prevent Light Reflection</p>	<p>Prevent light reflection when using the Erase Shadowed Areas feature. Value: Off, On</p>			
<p>Prevent Original Skewing</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td data-bbox="167 1052 469 1131" style="padding: 5px;">Same Width Originals</td> <td data-bbox="469 1052 1501 1131" rowspan="2" style="padding: 5px; vertical-align: top;"> When scanning the originals from the Document Processor, select [On] to prevent them from skewing. Value: Off, On </td> </tr> <tr> <td data-bbox="167 1131 469 1216" style="padding: 5px;">Different Width Originals</td> </tr> </table>	Same Width Originals	When scanning the originals from the Document Processor, select [On] to prevent them from skewing. Value: Off, On	Different Width Originals	
Same Width Originals	When scanning the originals from the Document Processor, select [On] to prevent them from skewing. Value: Off, On			
Different Width Originals				

*1 This function is displayed when "System of Units" is set to [**Metric**].

*2 This function is displayed when "System of Units" is set to [**Inch**].

Paper Feeding

[Home] key > [...] > [System Menu] > [Device Settings] > [Paper Feeding]



Configure the paper and paper source settings.

Cassette 1 (to 5) Settings

[Home] key > [...] > [System Menu] > [Device Settings] > [Paper Feeding] > [Cassette 1 (to 5) Settings]

 **NOTE**

[Cassette 5] is displayed when the following optional paper feeder is installed.
 [Cassette 5]: Side Feeder (3,000-sheet) or Side Feeder (3,500-sheet)

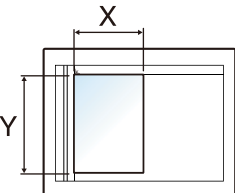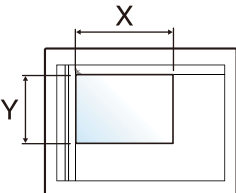Item	Description
<p>Paper Size*1</p>	<p>Select paper size. Paper size is automatically detected and selected when [Auto (Metric)] or [Auto (Inch)] is selected.</p> <p>Value: Auto (Metric), Auto (Inch), A3*2, A4*2, A4-R*2, A5*2, A5-R*2, A6*2, B4*2, B5*2, B5-R*2, B6*2, Folio*2, 216×340mm, SRA3*2, Ledger, Letter, Letter-R, Legal, Statement, 13"×19.2"*2*3, 13"×19"*2*3, 12×18", Executive, Oficio II, 8K, 16K, 16K-R, ISO B5, Envelope #10, Envelope #9*4, Envelope #6*4, Envelope Monarch*4, Envelope DL, Envelope C5, Envelope C4, Hagaki*2, Oufukuhagaki, Kakugata 2*3, Youkei 4, Youkei 2, Nagagata 3, Younaga 3*5, Size Entry</p> <p>If you selected [Size Entry], enter the paper size.</p> <p>Value</p> <p>Cassette1</p> <p>Metric</p> <p>X: 148 to 457 mm (in 1 mm increments)</p> <p>Y: 93 to 330 mm (in 1 mm increments)</p> <p>Inch</p> <p>X: 5.83 to 18.00" (in 0.01" increments)</p> <p>Y: 3.63 to 13.00" (in 0.01" increments)</p> <p>Cassette 2</p> <p>Metric</p> <p>X: 148 to 488 mm (in 1mm increments)</p> <p>Y: 93 to 330 mm (in 1mm increments)</p> <p>Inch</p> <p>X: 5.83 to 19.21" (in 0.01" increments)</p> <p>Y: 3.63 to 13.00" (in 0.01" increments)</p> <p>Cassette 5</p> <p>Metric</p> <p>X: 148 to 487 mm (in 1mm increments)</p> <p>Y: 100 to 330 mm (in 1mm increments)</p> <p>Inch</p> <p>X: 5.83 to 19.20" (in 0.01" increments)</p> <p>Y: 3.93 to 13.00" (in 0.01" increments)</p> <p>X=Length, Y=Width</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>Vertical</p>  </div> <div style="text-align: center;"> <p>Horizontal</p>  </div> </div>

Item	Description
Media Type ^{*6}	Select the media type. Value: Plain (60 - 105 g/m ²), Rough, Vellum, Thin (52 to 105 g/m ²), Recycled, Preprinted ^{*7} , Bond ^{*8} , Hagaki (Cardstock) ^{*8} , Color, Prepunched ^{*7} , Letterhead ^{*7} , Envelope ^{*8} , Thick (60 - 220 g/m ²), High Quality, Coated ^{*4} , Custom 1 to 8, Media Catalog

*1 When Cassette 3 (4) or the optional Side Feeder (3,000-sheet) is used, paper size does not appear.

*2 Paper size automatically detected in the cassette.

*3 Not displayed in Cassette 1.

*4 Not displayed in the optional Side Feeder (3,500-sheet).

*5 Not displayed in Cassette 1 to 4 and the optional Side Feeder (3,000-sheet).

*6 To change to a media type other than "Plain".

➔ [Media Type Setting \(page 8-18\)](#)

When a paper weight that cannot be loaded in the cassette is set for a media type, that media type does not appear.



*7 To print on preprinted or prepunched paper or on letterhead.

➔ [Special Paper Action \(page 8-22\)](#)

*8 Not displayed in Cassette 3 (4), the optional Side Feeder (3,000-sheet) or Side Feeder (3,500-sheet).

MP Tray Settings

[Home] key > [...] > [System Menu] > [Device Settings] > [Paper Feeding] > [MP Tray Settings]

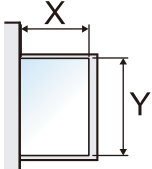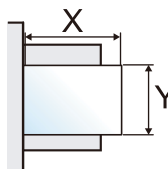Item	Description
Paper Size	Select paper size. Paper size is automatically detected and selected when [Auto (Metric)] or [Auto (Inch)] is selected. Value: Auto (Metric), Auto (Inch), A3 ^{*1} , A4 ^{*1} , A4-R ^{*1} , A5 ^{*1} , A5-R, A6 ^{*1} , B4 ^{*1} , B5 ^{*1} , B5-R ^{*1} , B6 ^{*1} , Folio ^{*1} , 216×340mm, SRA3 ^{*1} , Ledger, Letter, Letter-R, Legal, Statement, 13"×19.2", 13"×19.2" ^{*1} , 12×18", Executive, Oficio II, 8K, 16K, 16K-R, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Envelope C4, Hagaki ^{*1} , Oufukuhagaki, Kakugata 2, Youkei 4, Youkei 2, Younaga 3, Nagagata 3, Nagagata 4, 3R, Size Entry If you selected [Size Entry], enter the paper size. Value Metric X: 127 to 488 mm (in 1 mm increments) Y: 89 to 330 mm (in 1 mm increments) Inch X: 5.00 to 19.21" (in 0.01" increments) Y: 3.50 to 13.00" (in 0.01" increments) X=Length, Y=Width <div style="display: flex; justify-content: space-around; align-items: flex-start;"><div style="text-align: center;">Vertical </div><div style="text-align: center;">Horizontal </div></div>

Item	Description
Media Type ^{*2}	Select the media type. Value: Plain, Transparency, Rough, Vellum, Thin, Labels, Recycled, Preprinted ^{*3} , Bond, Cardstock, Color, Prepunched ^{*3} , Letterhead ^{*3} , Envelope, Thick, Coated, High Quality, Index Tab Dividers, Custom 1 to 8, Media Catalog

*1 Paper size automatically detected in the cassette.

*2 To change to a media type other than "Plain".

➔ [Media Type Setting \(page 8-18\)](#)

*3 To print on preprinted or prepunched paper or on letterhead.

➔ [Special Paper Action \(page 8-22\)](#)

 **NOTE**



If the optional FAX Kit is installed, the available media types for printing received faxes are as shown below. Plain, Rough, Vellum, Thin, Labels, Recycled, Bond, Cardstock, Color, Envelope, Thick, Coated, High Quality and Custom1 to 8

Inserter Tray 1 (2)

[Home] key > [...] > [System Menu] > [Device Settings] > [Paper Feeding] > [Inserter Tray 1 (2)]

 **NOTE**

[Inserter Tray 1 (2)] is displayed when the optional inserter is installed.

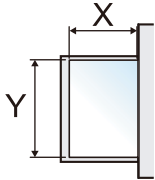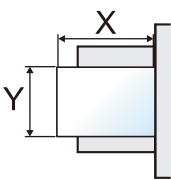Item	Description
Paper Size	Select the paper size. When [Auto (A/B)] or [Auto (Inch)] is selected, the paper size is automatically detected and selected. Value: Auto (Metric), Auto (Inch), A3 ^{*1} , A4 ^{*1} , A4-R ^{*1} , A5-R ^{*1} , A6, B4 ^{*1} , B5 ^{*1} , B5-R ^{*1} , Folio ^{*1} , SRA3 ^{*1} , Ledger, Letter, Letter-R, Legal, Statement, 13"×19.2", 13"×19.2" ^{*1} , 12×18", Executive, Oficio II, 8K, 16K, 16K-R, ISO B5, Size Entry If you selected [Size Entry], enter the paper size. Value Metric X: 210 to 487 mm (in 1 mm increments) Y: 140 to 330 mm (in 1 mm increments) Inch X: 8.27 to 19.20" (in 0.01" increments) Y: 5.50 to 13.00" (in 0.01" increments) X=Length, Y=Width <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>Vertical</p>  </div> <div style="text-align: center;"> <p>Horizontal</p>  </div> </div>
Media Type ^{*2}	Select the media type. Value: Plain, Vellum, Thin, Labels, Recycled, Preprinted ^{*3} , Bond, Color, Prepunched ^{*3} , Letterhead ^{*3} , Thick, High Quality, Index Tab Dividers, Custom 1 to 8, Media Catalog

*1 Paper size that can be automatically detected by the inserter tray.

*2 To change to a media type other than "Plain".



➔ [Media Type Setting \(page 8-18\)](#)

*3 To print on preprinted or prepunched paper or on letterhead.

➔ [Special Paper Action \(page 8-22\)](#)

Custom Paper Settings

[Home] key > [...] > [System Menu] > [Device Settings] > [Paper Feeding] > [Custom Paper Settings]

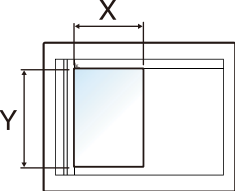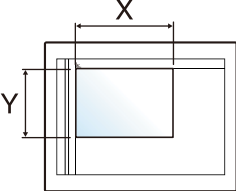Item	Description
<p>Custom Paper Settings</p>	<p>Set up frequently-used custom paper size.</p> <p>The custom size option is displayed on the screen to select paper size in the multipurpose tray.</p> <p>To register a custom paper size, select [On] and enter the desired size. Up to four custom paper sizes can be added.</p> <p>Select [Next >] to set the media type for each custom paper.</p> <p>Value</p> <p>Metric X: 127 to 488 mm (in 1 mm increments) Y: 89 to 330 mm (in 1 mm increments)</p> <p>Inch X: 5.82 to 19.21" (in 0.01" increments) Y: 3.50 to 13.00" (in 0.01" increments)</p> <p>X=Length, Y=Width</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>Vertical</p>  </div> <div style="text-align: center;"> <p>Horizontal</p>  </div> </div> <p>Media Type: Plain, Transparency, Rough, Vellum, Thin, Labels, Recycled, Preprinted, Bond, Cardstock, Color, Prepunched, Letterhead, Thick, Envelope, Coated, High Quality, Index Tab Dividers, Custom 1 to 8</p>

Media Type Setting

[Home] key > [...] > [System Menu] > [Device Settings] > [Paper Feeding] > [Media Type Setting]

Select weight for each media type.

The following media type and paper weight combinations are available.

Paper Weight	Weight (g/m ²)	Paper Weight	Weight (g/m ²)
Light	52 g/m ² to 59 g/m ²	Heavy 2 ^{*1}	136 g/m ² to 163 g/m ²
Normal 1	60 g/m ² to 74 g/m ²	Heavy 3 ^{*1}	164 g/m ² to 220 g/m ²
Normal 2	75 g/m ² to 90 g/m ²	Heavy 4 ^{*1}	221 g/m ² to 256 g/m ²
Normal 3	91 g/m ² to 105 g/m ²	Heavy 5 ^{*1}	257 g/m ² to 300 g/m ²
Heavy 1 ^{*1}	106 g/m ² to 135 g/m ²	Extra Heavy ^{*1}	Transparencies

*1 The processing speed will be slower than normal.

Each media type's default weight is indicated.

Media Type	Default	Media Type	Default
Plain	Normal 2	Color	Normal 3
Rough	Normal 3	Prepunched	Normal 2
Vellum	Heavy 1	Letterhead	Normal 2
Thin	Light	Envelope	Heavy 3
Labels	Heavy 2	Thick	Heavy 3
Recycled	Normal 2	High Quality	Normal 2
Preprinted	Normal 2	Coated	Heavy 1
Bond	Normal 3	Index Tab Dividers	Heavy 4
Cardstock	Heavy 4	Custom 1 to 8	Normal 2

For Custom 1-8, settings for duplex printing and media type name can be changed.

Item	Description	
Duplex Print	Permit	Duplex printing allowed.
	Prohibit	Duplex printing not allowed.
Name	Change names for Custom 1 to 8. Names should be not more than 16 characters. Selecting media type at multipurpose tray, the name after change will be displayed. ▶ Character Entry Method (page 11-9)	

Media Catalog

New media types can be registered.

The configuration methods are as follows:

1 Display the screen.

[Home] key > [...] > [System Menu] > [Device Settings] > [Paper Feeding] > [Media Catalog]

NOTE



If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 Configure the settings.

1 [Add/Edit] > [Add]

2 Configure the settings.

The available settings are shown below.


Item	Description
Name	Enter the media type name.  NOTE When [Generate Name from Type Detail and Weight] is selected, the name is generated based on the values set at [Media Type (Detail)] and [Weight].
Description	Enter the media type description.
Weight	Set the paper weight. Value: 52 to 300 (gsm)
Texture	Set the paper texture. Value: None, Antique, Cockle, Eggshell, Light Cockle, Semi-Vellum, Smooth, Super Smooth, Ultra Smooth, Uncalendared, Vellum
Media Type	Set the media type. Value: Paper, Transparency
Media Type (Detail)	Set the media type details. Value: Plain, Cardstock, Envelope, Envelope Plain, Envelope Window, Full Cut Tabs, Labels, Letterhead, Pre-Cut Tabs, Tab Stock
Tabs per bank	Set the number of tabs. Value: 0 to 32767  NOTE This is displayed when [Full Cut Tabs], [Pre-Cut Tabs] or [Tab Stock] is selected at [Media Type (Detail)].
Front Coating	Set coating of the front surface of the paper. Value: None, Glossy, High Gloss, Matte, Satin, Semigloss, Coated
Back Coating	Set coating of the back surface of the paper. Value: None, Glossy, High Gloss, Matte, Satin, Semigloss, Coated
Pre-Printed	Set whether or not to perform pre-printing. Value: False, True
Hole Type	Set the type of punch hole. Value: None, S-Generic, 2-Hole Generic, 3-Hole Generic, 4-Hole Generic, 5-Hole Generic, 6-Hole Generic, 7-Hole Generic, Plastic Comb US, Plastic Comb European, Wire Comb Round, Wire Comb Square, Wire Comb Square Small, Spiral Binding
Recycled Content Percentage	Set the recycled content percentage. Value: 0 to 100 (%)
Color Name	Set the colour of the paper. Value: White, Black, Blue, Brown, Buff, Cyan, Gold, Goldenrod, Gray, Green, Ivory, Magenta, Multi Color, Mustard, No Color, Orange, Pink, Red, Silver, Turquoise, Violet, Yellow
Size Profile List	Displays a list of registered "Size Profile".

Item	Description
Curl Correct	Perform correction of the amount of paper curl. Value: FU -10 to +10 Factory default: 0 FD -10 to +10 Factory default: 0
Gloss Adjust	Adjust the glossiness of the output image. Value: -2 to +2 Factory default: 0
Margin Adjust	Adjust the margins at the leading and trailing edges of the paper. Value: Front Margin 0.0 to 10 mm Factory default: 0.0 mm Back Margin 0.0 to 10 mm Factory default: 0.0 mm
Trans Volt Adjust	Adjust when white spots occur in output images with light colors. Value: 1st Side -10 to +10 Factory default: 0 2nd Side -10 to +10 Factory default: 0
Toner Limit Mode	Adjust when fusing defects occur due to surface unevenness or thickness of the paper. Value: Off, Low, High Factory default: Off
2nd Transfer Pressure	Please use the [Auto] setting under normal conditions. If image distortion occurs, set it to [High]; if streaks appear in the feed direction, setting it to [Low] may improve the issue. Value: Auto, Low, High Factory default: Auto

*1 This setting is effective only when printing from the Fiery controller or Production Print Suite.


Show Paper Setup Message









 

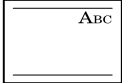





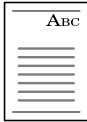

 

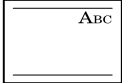





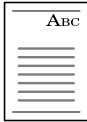

 

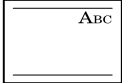


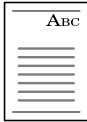
[Home] key > [...] > [System Menu] > [Device Settings] > [Paper Feeding] > [Show Paper Setup Message]

Item	Description
Show Paper Setup Message	Set whether to display the confirmation screen for the paper setting when a new paper is set for each cassette. Value: Off, On
Cassette 1 to 5	
Multipurpose Tray	 NOTE
Inserter Tray 1 (2)	[Cassette 5] and [Inserter Tray 1 (2)] are displayed when the following optional paper feeder is installed. [Cassette 5]: Side Feeder (3,000-sheet) or Side Feeder (3,500-sheet) [Inserter Tray 1]: Inserter [Inserter Tray 2]: Inserter

Paper Feed Settings




[Home] key > [...] > [System Menu] > [Device Settings] > [Paper Feeding] > [Paper Feed Settings]

Item	Description
Default Paper Source	Select the default paper source. Value: Cassette 1 (to 5), MP Tray  NOTE [Cassette 5] is displayed when the following optional paper feeder is installed. [Cassette 5]: Side Feeder (3,000-sheet) or Side Feeder (3,500-sheet)
Paper Selection	Set the default paper selection. Value: Auto, Default Paper Source

Item	Description																				
Auto Paper Selection	<p>If [Auto] is selected for Paper Selection, set the paper size selection method when the zoom changes.</p> <p>Value</p> <p>Most Suitable Size: Selects paper size based on the current zoom and the size of the original.</p> <p>Same as Original Size: Selects paper that matches the size of the original, regardless the zoom.</p>																				
Media for Auto (B & W)	<p>Select a default media type for auto paper selection when [Auto] is selected of Paper Selection. If [Plain] is selected, the paper source with plain paper loaded in the specific size is selected. Select [All Media Types] for the paper source with any kind of paper loaded in the specific size.</p> <p>Value: All Media Types, Plain, Transparency, Rough, Vellum, Thin, Labels, Recycled, Preprinted, Bond, Cardstock, Color, Prepunched, Letterhead, Envelope, Thick, Coated, High Quality, Index Tab Dividers, Custom 1 to 8</p>																				
<table border="1"> <tr> <td data-bbox="178 750 470 828">Paper Source for Front Cover</td> <td data-bbox="470 698 1503 1057" rowspan="2"> <p>Select the paper source in which the cover paper used for the Cover function is placed.</p> <p>Value: Cassette 1 (to 5), MP Tray, Inserter Tray 1 (2)</p> <p> NOTE</p> <p>[Cassette 5] and [Inserter Tray 1 (2)] are displayed when the following optional paper feeder is installed.</p> <p>[Cassette 5]: Side Feeder (3,000-sheet) or Side Feeder (3,500-sheet)</p> <p>[Inserter Tray 1]:Inserter</p> <p>[Inserter Tray 2]:Inserter</p> </td> </tr> <tr> <td data-bbox="178 828 470 1057">Paper Source for Back Cover</td> </tr> </table>	Paper Source for Front Cover	<p>Select the paper source in which the cover paper used for the Cover function is placed.</p> <p>Value: Cassette 1 (to 5), MP Tray, Inserter Tray 1 (2)</p> <p> NOTE</p> <p>[Cassette 5] and [Inserter Tray 1 (2)] are displayed when the following optional paper feeder is installed.</p> <p>[Cassette 5]: Side Feeder (3,000-sheet) or Side Feeder (3,500-sheet)</p> <p>[Inserter Tray 1]:Inserter</p> <p>[Inserter Tray 2]:Inserter</p>	Paper Source for Back Cover																		
Paper Source for Front Cover	<p>Select the paper source in which the cover paper used for the Cover function is placed.</p> <p>Value: Cassette 1 (to 5), MP Tray, Inserter Tray 1 (2)</p> <p> NOTE</p> <p>[Cassette 5] and [Inserter Tray 1 (2)] are displayed when the following optional paper feeder is installed.</p> <p>[Cassette 5]: Side Feeder (3,000-sheet) or Side Feeder (3,500-sheet)</p> <p>[Inserter Tray 1]:Inserter</p> <p>[Inserter Tray 2]:Inserter</p>																				
Paper Source for Back Cover																					
Separator Paper Source	<p>Select the default paper source for separator sheets.</p> <p>Value: Cassette 1 (to 5), MP Tray, Inserter Tray 1 (2)</p> <p> NOTE</p> <p>[Cassette 5] and [Inserter Tray 1 (2)] are displayed when the following optional paper feeder is installed.</p> <p>[Cassette 5]: Side Feeder (3,000-sheet) or Side Feeder (3,500-sheet)</p> <p>[Inserter Tray 1]:Inserter</p> <p>[Inserter Tray 2]:Inserter</p>																				
Special Paper Action	<p>When printing on Prepunched, Preprint, and Letterhead, punch-holes might not be aligned or the print direction might be upside-down depending on how originals are set and the combination of copying functions. In such a case, select [Adjust Print Direction] to adjust the print direction. When paper orientation is not important, select [Speed Priority].</p> <p>If [Adjust Print Direction] is selected, load paper according to the steps below. Example: copying on Letterhead</p> <table border="0" data-bbox="550 1624 1428 2016"> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>Original</td> <td>Paper</td> <td>Finished</td> <td>Cassette</td> <td>Multipurpose Tray</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>Original</td> <td>Paper</td> <td>Finished</td> <td>Cassette</td> <td>Multipurpose Tray</td> </tr> </table> <p>Value: Adjust Print Direction, Speed Priority</p>						Original	Paper	Finished	Cassette	Multipurpose Tray						Original	Paper	Finished	Cassette	Multipurpose Tray
																					
Original	Paper	Finished	Cassette	Multipurpose Tray																	
																					
Original	Paper	Finished	Cassette	Multipurpose Tray																	

Paper Output


[Home] key > [...] > [System Menu] > [Device Settings] > [Paper Output]

Item	Description
Paper Output	Copy/Box
	Printer
	Fax Port 1
	Fax Port 2^{*1}
<p>Select the output tray respectively for copy jobs, print jobs from Document Box, computers, and Fax RX data.</p> <p>Value:</p> <ul style="list-style-type: none"> • Lower Left Tray: Outputs to the Lower Left Tray of the machine. • Upper Left Tray: Outputs to the Upper Left Tray of the machine. • Right Tray: Outputs to the Right Tray of the machine. <p>with optional Finisher</p> <ul style="list-style-type: none"> • Right Tray: Outputs to the Right Tray of the machine. • Tray A: Delivery to the Tray A of the optional Document Finisher • Tray B: Delivery to the Tray B of the optional Document Finisher • Tray C: Delivery to the Tray C of the optional Document Finisher <p>with optional Mailbox</p> <ul style="list-style-type: none"> • Right Tray: Outputs to the Right Tray of the machine. • Tray A: Delivery to the Tray A of the optional Document Finisher • Tray B: Delivery to the Tray B of the optional Document Finisher • Tray C: Delivery to the Tray C of the optional Document Finisher • Tray 1 to 7: Delivery to tray 1 to 7 (tray 1 is the uppermost tray) of the optional Mailbox <p> NOTE Fax RX data output can be specified when the optional FAX Kit is installed.</p>	
Paper Output Behavior	Offset Documents by Job
	Offset One Page Documents
<p>Select whether to offset documents by Job.</p> <p>Value: Off, On</p> <p> NOTE This function is displayed when an optional Document Finisher is installed.</p>	
<p>Set whether one-page documents are sorted.</p> <p>Value: Off, On</p> <p> NOTE This function is displayed when an optional Document Finisher is installed.</p>	

*1 This is displayed when the option of two FAX Kits has been installed.

Function Key Assignment

[Home] key > [...] > [System Menu] > [Device Settings] > [Function Key Assignment]

Item	Description
Function Key 1	Assign a function to each function key.
Function Key 2	Value: None, Copy, Send, Fax Server* ¹ , Fax* ² , Custom Box, Job Box, USB Drive, Fax Box* ² , Polling Box* ² , Fax Memory RX Box* ² , Send to Me (Email)* ³ , Send to Me from Box (Email)* ³ , Internet Browser, ID Card Copy, Favorites* ⁴ , Application* ⁵
Function Key 3	
	 NOTE Select [Filter] to narrow down for [All], [Application], [Favorites] and [Others].

*1 This is displayed when the external server (Fax Server) is set.

*2 Displayed only when the optional FAX Kit is installed.

*3 Displayed when user login administration is enabled.

*4 The registered favorite will be displayed.

*5 The running application will be displayed.




Operation Assist


[Home] key > [...] > [System Menu] > [Device Settings] > [Operation Assist]

Item	Description
Orientation Confirmation	Select whether to display a screen for selecting the orientation of the originals to be placed on the platen when using the following functions. ➔ Original Orientation (page 6-26) <ul style="list-style-type: none"> • Zoom (XY Zoom) • Duplex • Margin/Centering • Border Erase • Combine • Memo Page • Page # • Staple/Punch (optional feature) • 2-sided/Book Original • Text Stamp • Bates Stamp Value: Off, On
Preset Limit	Restrict the number of copies that can be made at one time. Value: 1 to 9999 copies
Clear Settings after Job Started	Set whether to reset function settings to their defaults after the job starts. Value: Clear, Do Not Clear

Error Handling


[Home] key > [...] > [System Menu] > [Device Settings] > [Error Handling]

Item	Description
Duplexing Error	Set what to do when duplex printing is not possible for the selected paper sizes and media types. Value 1-sided: Printed in 1-sided Display Error: Message to cancel printing is displayed.
Finishing Error	Set alternative actions when finishing (Staple/Punch/Offset) is not available for the selected paper size or media type. Value Ignore: The setting is ignored and the job is printed. Display Error: Message to cancel printing is displayed.
No Staple Error	Set what to do when staples run out during printing. Value Ignore: Printing continues without stapling. Display Error: Message to cancel printing is displayed.  NOTE Requires the optional Document Finisher.
Finished Pages Exceeded	Set what to do when finishing (stapling or offsetting) capacity is exceeded during printing. Value Ignore: Printing continues without finishing. Display Error: Message to cancel printing is displayed.  NOTE Requires the optional Document Finisher.
Punch Waste Full Error	Set what to do when the punch waste box becomes full during printing. Value Ignore: Printing continues without punching. Display Error: Message to cancel printing is displayed.  NOTE Requires the optional Document Finisher and Punch Unit.
Paper Mismatch Error	Set what to do when the selected paper size or type does not match paper size or type loaded in the specified paper source while printing from the computer by specifying the cassette or multipurpose tray. Value Ignore: The setting is ignored and the job is printed. Display Error: Message to cancel printing is displayed.
Wrong Size Paper Loaded	Set what to do when it is detected that the multipurpose tray paper size setting does not match the actual paper size that is fed. Value Ignore: The setting is ignored and the job is printed. Display Error: Message to cancel printing is displayed.

Item	Description
Paper Jam before Staple	<p>The page from which printing is resumed when a paper jam occurs during a job with stapling can be selected.</p> <p>Value</p> <p>Resume at Top of Page: Resume printing from the first page of the document.</p> <p>Resume at Jammed Page: Resume printing from the page where the jam occurred.</p> <p> NOTE</p> <p>Requires the optional Document Finisher.</p>
Error Job Skip	<p>Set whether a job for which a "Add paper in cassette #" or "Add paper in Multipurpose Tray" error occurred when the job was started is automatically skipped after a set period of time elapses.</p> <p>Value: Off, On</p> <p> NOTE</p> <ul style="list-style-type: none"> • When a job is skipped, it is moved to the end of the job queue. • If [On] is selected, set the time until the job is skipped. The setting range is 5 to 90 (5 second increments).
Auto Error Clear	<p>If an error occurs during processing, processing stops to wait for the next step to be taken by the user. In the Auto Error Clear mode, automatically clear the error after a set amount of time elapses.</p> <p>Value: Off, On</p> <p> NOTE</p> <p>If you select [On] for Auto Error Clear, set the amount of time to wait before automatically clearing errors. The setting range is 5 to 495 seconds (in 5 second increments).</p>
Continue or Cancel Error Job	<p>Set which users can cancel or continue operations for jobs which were paused due to an error.</p> <p>Value: All Users, Job Owner Only</p> <p> NOTE</p> <p>Administrator can cancel all jobs regardless of this setting.</p>
Image Preview at DP Jam	<p>Set whether or not a preview of the scanned document appears when a paper jam occurs.</p> <p>Value: Off, On</p>
Staple Waste Full Error	<p>Set what to do when the staple waste box becomes full during printing.</p> <p>Value</p> <p>Ignore: The setting is ignored and the job is printed.</p> <p>Display Error: Message to cancel printing is displayed.</p> <p> NOTE</p> <p>Requires the optional 100-sheet Staple Finisher.</p>

Toner Settings

[Home] key > [...] > [System Menu] > [Device Settings] > [Toner Settings]

Item	Description
<p>Low Toner Alert</p>	<p>Set the amount of remaining toner to notify the administrator when to order a toner when the toner is running low.</p> <p>This notification is used for event report, Status Monitor, SNMP Trap.</p> <p>Value: Off, On</p> <p> NOTE</p> <p>If [On] is selected, set the amount of remaining toner to alert. The setting range is 5 to 100% (in 1% increments).</p>


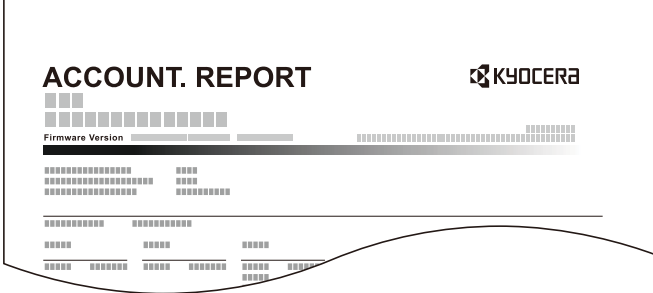
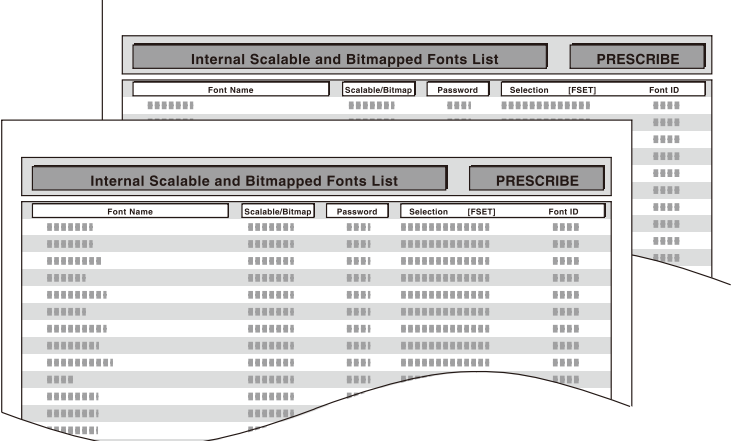
Notification/Report

Print reports to check the machine settings, status, and history. Settings for printing reports can also be configured.

Printing Report/List

[Home] key > [...] > [System Menu] > [Notification/Report] > "Printing Report/List" [Printing Report/List]

Item	Description
<p>Status Page</p>	<p>Prints the status page, allowing you to check the information including current settings, available memory space, and optional equipment installed.</p> <div data-bbox="614 1077 1270 1375" data-label="Image"> </div>
<p>Service Status</p>	<p>Prints the service status. More detailed information is available than on the Status Page. Service personnel usually print the service status pages for maintenance purpose.</p>
<p>Network Status</p>	<p>Prints the network status, allowing you to check the information including network interface firmware version, network address and protocol.</p> <div data-bbox="410 1626 1078 1928" data-label="Image"> </div>

Item	Description
Optional Network Status	<p>Prints the optional network status, allowing you to check the information including optional network interface firmware version, network address and protocol.</p> <p> NOTE This function is displayed when the optional Network Interface Kit or Wireless Network Interface Kit is installed.</p>
Print Accounting Report	<p>If job accounting is enabled, the total pages counted of all relevant accounts can be printed as an accounting report.</p> <div data-bbox="411 533 1066 824" style="border: 1px solid black; padding: 10px; margin: 10px 0;">  </div> <p>➔ Print Accounting Report (page 9-43)</p>
Font List	<p>Prints the font list, allowing you to check the font samples installed in the machine.</p> <div data-bbox="418 967 1152 1406" style="border: 1px solid black; padding: 10px; margin: 10px 0;">  </div>
Outgoing Fax Report	<p>➔ FAX Operation Guide</p>
Incoming Fax Report	<p>➔ FAX Operation Guide</p>
Address Book (Index)	<p>Prints addresses registered to the Address Book as a list in index order. The type of destination to print can be set. Value: All, Email, Folder, Fax</p>
Address Book (No.)	<p>Prints addresses registered to the Address Book as a list in address number order. The type of destination to print can be set. Value: All, Email, Folder, Fax</p>
One Touch List	<p>Prints addresses registered to the One Touch Key as an One Touch list. The type of destination to print can be set. Value: All, Email, Folder, Fax</p>
Fax Box List	<p>➔ FAX Operation Guide</p>
Application Status	<p>Prints Application Status, allowing you to check the information on the application installed in the machine.</p>

Item	Description
Configuration List	Print the system settings as the list.
Data Sanitization Report	Prints the data sanitization report.

Result Report Setting

[Home] key > [...] > [System Menu] > [Notification/Report] > "Result Report Setting"


Item	Description
Send Result Report	Automatically print a report of transmission result when a transmission is complete.
Email/Folder	Automatically print a report of transmission result when Email or SMB/FTP transmission is complete. Value: Off, On, Error Only
Fax^{*1}	➔ FAX Operation Guide
Canceled before Sending^{*2}	Print a send result report if the job is canceled before being sent. Value: Off, On
Recipient Format^{*2}	Select the Recipient Format for the send result report. Value: Name or Destination, Name and Destination
RX Result^{*1}	➔ FAX Operation Guide
Job Finish Notice Setting^{*1}	

*1 Displayed only when the optional FAX Kit is installed.

*2 When "Email/Folder" and "Fax" are set to [Off], this function will not be displayed.


Device Status Notification

[Home] key > [...] > [System Menu] > [Notification/Report] > "Device Status Notification"

Item	Description
Low Toner Alert	➔ Low Toner Alert (page 8-27)
Time for Maintenance Alert	Notify via Operation Panel Set whether or not to display on the operation panel when a periodic inspection is near. Value Off, Status Display, Display Status and Error
	Notify Externally (for administration use) Set the timing at which the administrator will be notified of the period remaining before the upcoming scheduled inspection when it is near. This notification is used for Event Reports, Status Monitors, and SNMPTraps (such as Printing Equipment Management Systems). Value Off, On  NOTE If [On] is selected, set the alert timing. The setting range is 5 to 100% (in 1% increments).

Message Board Settings

[Home] key > [...] > [System Menu] > [Notification/Report] > "Message Board Settings"

Item	Description
Message Board	Select whether to use the Message Board. Value: Off, On
Message List	Configure settings for the registered message board.
Add	Add a new message board.
Title/Body	Enter the title and body to display on the message board. The title can include up to 30 characters, and the body can include up to 300 characters.
Device to Show	Select where to show the message. Value Hide: Displays no message. Operation Panel: Displays a message on the operation panel. Embedded Web Server: Displays a message in Command Center RX. Panel + Web Server: Displays a message in the operation panel and the Command Center RX.
Place to Show	Select where to show the message in the touch panel. Value Login Screen: Login screen of user login administration Home Screen: Home Screen Login Screen+Home Screen: Login screen and Home screen of user login administration
Message Type	Select the message type. Value: Normal, Alert, Prohibition
Priority Show	Displays the message on the message board. Value: Off, On
Raise Priority	Raise the priority of the message board selected on the list.
Low Priority	Lower the priority of the message board selected on the list.
Delete	Deletes the message board selected on the list.
[] (information icon)	Display information on the selected message board.

Fax Communication Report

[Home] key > [...] > [System Menu] > [Notification/Report] > "Fax Communication Report"

Configure settings for Outgoing Fax report and Incoming Fax report.

➔ **FAX Operation Guide**


History Settings









[Home] key > [...] > [System Menu] > [Notification/Report] > "History Settings"





 **NOTE**

For details on the Log History, refer to the following:

➔ [History Management \(page 8-34\)](#)

Item		Description
Sending Log History	Auto Sending	This function automatically sends the log history to the specified destinations whenever a set number of jobs has been logged. Value: Off, On  NOTE If [On] is selected, specify the number of job histories. The setting range is 1 to 1,500.
	Destination	Set the destination to which log histories are sent. Only E-mail address can be set.
	Subject	Set the subject automatically entered when sending log histories by E-mail. Value: Up to 256 characters
	SSFC	Enter the subject of the printed job history with IC card authentication. Value: Up to 256 characters
	Personal Information	Select whether to include personal information in the job log. Value: Include, Exclude
	Send Log History	You can also send the log history to the specified destinations manually.

Item	Description
Login History Settings	Login History Select whether to record the Login History. Value: Off, On  NOTE If [On] is selected, set the number of histories to be recorded. The setting range is 1 to 1,000.
	Auto Sending Select whether the login history is automatically sent to the set address when the number of entries reaches the number set in "Login History". Value: Off, On  NOTE This function is displayed when "Login History" is set to [On].
	Destination Set the destination to which login histories are sent. E-mail address only can be set as destination.  NOTE This function is displayed when "Login History" is set to [On].
	Subject Set the subject automatically entered when sending login histories by E-mail. Value: Up to 256 characters  NOTE This function is displayed when "Login History" is set to [On].
	Log Reset Resets the recorded login histories.
Device Log History Settings	Device Log History Select whether to record the device log history. Value: Off, On  NOTE If [On] is selected, set the number of histories to be stored. The setting range is 1 to 1,000.
	Auto Sending Select whether the device log history is automatically sent to the set address when the number of entries reaches the number set in "Device Log History". Value: Off, On  NOTE This function is displayed when "Device Log History" is set to [On].
	Destination Set the destination to which device log histories are sent. E-mail address only can be set as destination.  NOTE This function is displayed when "Device Log History" is set to [On].
	Subject Set the subject automatically entered when sending device log histories by E-mail. Value: Up to 256 characters  NOTE This function is displayed when "Device Log History" is set to [On].

Item		Description
Secure Comm. Error Log	Secure Comm. Error Log	<p>Select whether to record the secure communication error log history.</p> <p>Value: Off, On</p> <p> NOTE If [On] is selected, set the number of histories to be stored. The setting range is 1 to 1,000.</p>
	Auto Sending	<p>Select whether the secure communication error log history is automatically sent to the set address when the number of entries reaches the number set in "Secure Comm. Error Log".</p> <p>Value: Off, On</p> <p> NOTE This function is displayed when "Secure Communication Error Log History" is set to [On].</p>
	Destination	<p>Set the destination to which secure communication error log histories are sent. E-mail address only can be set as destination.</p> <p> NOTE This function is displayed when "Secure Communication Error Log History" is set to [On].</p>
	Subject	<p>Set the subject automatically entered when sending secure communication error log histories by E-mail.</p> <p>Value: Up to 256 characters</p> <p> NOTE This function is displayed when "Secure Communication Error Log History" is set to [On].</p>

History Management

It is possible to perform Log Management for the following logs on this machine.

Item	Log subject	Log information
Jobs Log	Copy/Fax/Scan/Send/Print job completion	<ul style="list-style-type: none"> • Event occurrence date and time • Event type • Information on users logged in (or users who attempted to log in) • Event results (Success/Failure)
	Checking job status/Changing of jobs/Canceling of jobs	
Login History	Login/logout success and failure	
	User Account Lockout occurrence and cancellation	
Device Log History	Power on	
	Power off	
	Changing user properties	
	User information login password registration and change failure	
	Changing date and time	
	Changing security settings	
Secure Communication Error Log	Displaying and deletion of image data stored in Document Box	
	Communications failure in TLS and IPsec communications	

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

Function Settings


Configures settings for copying, sending and Document Box functions.

Function Defaults

[Home] key > [...] > [System Menu] > [Function Settings] > [Function Defaults]

Common

[Home] key > [...] > [System Menu] > [Function Settings] > [Function Defaults] > [Common]



Item	Description
Clear Settings after Job Started	➔ Clear Settings after Job Started (page 8-24)
File Name Entry	Set an automatically entered name (default) for jobs. Additional information such as Date and Time and Job No. can also be set. Value File Name: Up to 32 characters can be entered. Additional Info: None, Job No., Date and Time, Job No. & Date and Time, Date and Time & Job No.
Border Erase Default	Set the default width to be erased as a border. Value Metric: 0 to 50 mm (in 1 mm increments) Inch: 0 to 2" (in 0.01" increments)  NOTE To specify border erase widths around original, set the value in "Border". To specify border erase widths in the middle of original, set the value in "Gutter".
Border Erase to Back Page	Select the Border Erase Method for Back Page of a sheet. Value: Same as Front Page, Do Not Erase
Zoom	Select the enlarged/reduced default when paper size/sending size changed after the originals set. Value: 100%, Auto
System Stamp (Basic Settings)	Configure settings for stamps.
Text (Text Stamp)	Edit the test string for a template. Up to 8 templates can be registered.
Font Size (Page #)	Set the font size for page numbers when printing them. Value Size 1 to 3: 6.0 to 64.0 pt
Font Size (Bates Stamp)	When a bates stamp is used, set the font sizes that can be set. Value Size 1 to 3: 6.0 to 64.0 pt
Font Size (Text Stamp)	Set the font size for stamps when printing them. Value Size 1 to 3: 6.0 to 64.0 pt
DP Read Action	Set the operation when a document is scanned from the document processor. Value: Speed Priority, Quality Priority

Item	Description
Detect Multi-fed Originals	<p>When reading a document from the document processor, if the multiple feeding of documents is detected, then the reading stops automatically.</p> <p>Value:</p> <p>ON (Notify Immediately): In case of detecting that multiple sheets of original are fed at the same time, the message is displayed and stop scanning the original.</p> <p>ON (Notify when Scan Done): In case of detecting that multiple sheets of original are fed at the same time, a message is displayed after all documents are scanned. To enable this setting, set [Image Preview at DP Jam] to [On].</p> <p>➔ Image Preview at DP Jam (page 8-26)</p> <p>Off: It does not detect.</p>
Detect Stapled Originals	<p>When reading a document from the document processor, if a stapled document is detected, then the reading stops automatically.</p> <p>Value:</p> <p>On: In case of detecting that the original is stapled or the original is fed skewed, the message is displayed and stop scanning the original.</p> <p>Off: It does not detect.</p>
Detect Scan Failure	<p>If image defects due to paper creases or sticky notes are detected on the scanned document, scanning is stopped automatically.</p> <p>Value:</p> <p>ON (Notify Immediately): If image defects are detected, a message is displayed immediately and document scanning stops.</p> <p>ON (Notify when Scan Done): If image defects are detected, a message is displayed after all documents are scanned. To enable this setting, set [Image Preview at DP Jam] to [On].</p> <p>➔ Image Preview at DP Jam (page 8-26)</p> <p>Off: It does not detect.</p>
ID Card Copy/Scan	<p>Select the ID Card Copy/Scan default.</p> <p>Card Position on the Glass platen</p> <p>No card position specified or set it to top left.</p> <p>Value: Free, Top Left</p> <p>Finished Layout</p> <p>Sets the copy/scan position on the paper to center or top right.</p> <p>Value: Align to Center, Align to Top Right</p>

Copy/Print

[Home] key > [...] > [System Menu] > [Function Settings] > [Function Defaults] > [Copy/Print]

Item	Description
Original Size	<p>Set the default value for the original size. When Standard Size Detection is OFF, the size set in the default original size is displayed as an option. These settings are in the Original/Scan settings.</p> <p>Standard Size Detection: On</p> <p>Value: Auto (standard size), Auto (non-standard size)</p> <p>Standard Size Detection: Off</p> <p>Value: Auto (non-standard size), Original Size (default size)</p>
Original Orientation (Copy)	<p>Set the original orientation defaults.</p> <p>Value: Top Edge on Top, Top Edge on Left, Auto</p>



Item	Description
Original Image (Copy)	Set the default original document type for copying. Value: Text+Photo (Printer), Text+Photo (Magazine), Photo (Printer), Photo (Magazine), Photo (Photo Paper), Text, Text (Fine Line), Graphic/Map (Printer), Graphic/Map (Magazine)
Background Density Adj. (Copy)	Set the default Background Density (Copy). Value: Off, Auto, Manual (Darker 5)
Continuous Scan (Copy)	Select the default Continuous Scan (Copy) setting. Value: Off, On
Prevent Bleed-through (Copy)	Set the default value for preventing bleed-through (Copy). Value: Off, On
Skip Blank Page (Copy)	Select the default Skip Blank Page (Copy) settings. Value: Off, On
EcoPrint	Select the EcoPrint default. Value: Off, On
Toner Save Level (EcoPrint)	Select the default Toner Save Level (EcoPrint). Value: 1 (Lower) to 5 (Higher)  NOTE Raising the level reduces toner consumption, but image quality falls.
Margin Default	Set the default margin. Value Metric Left/Right: -18 to 18 mm (in 1 mm increments) Top/Bottom: -18 to 18 mm (in 1 mm increments) Inch Left/Right: -0.75 to 0.75" (in 0.01" increments) Top/Bottom: -0.75 to 0.75" (in 0.01" increments)
Border Erase (Copy)	Set the defaults for Border Erase (Copy). Value: Standard, Border Erase Sheet, Border Erase Book, Individual Border Erase
Collate/Offset	Set the defaults for Collate/Offset. Value: Off, Collate On, Offset Each Page, Offset Each Set
Auto Image Rotation (Copy)	Select the default Auto Image Rotation setting. Value: Off, On
Repeat Copy	Select the Repeat Copy default. Value: Off, On  NOTE <ul style="list-style-type: none"> • This function will not be displayed when the Data Security Function is active. • This function will not be displayed when Repeat Copy Job Retention is set to 0.
JPEG/TIFF Print	Select the image size (resolution) when printing JPEG or TIFF file. Value: Fit to Paper Size, Image Resolution, Fit to Print Resolution
XPS Fit to Page	Set the default value for the XPS fit to page function. Value: Off, On

Item	Description	
Reserve Next Priority	Specify whether the default screen appears when a subsequent copy job is reserved while printing is in progress. To have the default screen appear, select [On]. Value: Off, On	
Auto Image Rotation Action	Set whether the image is rotated when the orientation of the document to be printed is different from the orientation of the paper. Value Unrotated Manual Copy: If a paper source or zoom ratio is specified, the image is not rotated. Apply All: Rotates all images. Follow Image Size: The image is rotated if the rotated image fits on the paper.	
Auto % Priority	When a paper source of different size from the original is selected, select whether automatic zoom (reduce/zoom) is performed. Value: Off, On	
Paper Size for Small Original	Specify the paper size to be used for a case where the original is too small to be detected in the Auto Paper Selection mode. Value: Default Paper Source, A4-R, A4, A5-R, A6-R, B5-R, B5, B6-R, Letter-R, Letter, Statement-R	
Original Size of Undetected Original	Specify the action when original size is not detected. Value: Default Paper Source, Show Confirmation	
Erase Shadowed Areas (Copy)	Select the default Erase Shadowed Areas (Copy) setting. Value: Off, On	
Duplex	Set the defaults for Duplex.	
1-sided>>1-sided	Does not set the defaults for this function.	
1-sided>>2-sided	Binding in Finishing	Set the default binding orientation of copies. Value: Binding Left/Right, Binding Top
2-sided >>1-sided	Original	Set the default binding orientation of originals. Value: Binding Left/Right, Binding Top
2-sided>>2-sided	Original	Set the default binding orientation of originals. Value: Binding Left/Right, Binding Top
	Binding in Finishing	Set the default binding orientation of copies. Value: Binding Left/Right, Binding Top
Book>>1-sided	Original	Set the default binding orientation of originals. Value: Binding Left, Binding Right
Book>>2-sided	Original	Set the default binding orientation of originals. Value: Binding Left, Binding Right
	Binding in Finishing	Set the default desired Duplex option. Value: Book to 2-side, Book to Book

Send/Store

[Home] key > [...] > [System Menu] > [Function Settings] > [Function Defaults] > [Send/Store]

Item	Description
Original Size	Set the default value for the original size. When Standard Size Detection is OFF, the size set in the default original size is displayed as an option. These settings are in the Original/Scan settings. Standard Size Detection: On Value: Auto (standard size), Auto (non-standard size) Standard Size Detection: Off Value: Auto (non-standard size), Original Size (default size)
Original Orientation (Send/Store)	Set the original orientation defaults. Value: Top Edge on Top, Top Edge on Left, Auto
Color Selection (Send/Store)	Select the default color mode for scanning documents. Value: Auto Color (Color/Gray), Auto Color (Color/B & W), Full Color, Grayscale, Black & White
Color Type	Set the color type when you send color documents. Value: RGB(Profile:XXXX), sRGB
Scan Resolution	Select the default scanning resolution. Value: 600×600dpi, 400×400dpi Ultrafine, 300×300dpi, 200×400dpi Superfine, 200×200dpi Fine, 200×100dpi Normal
Fax TX Resolution *1	➔ FAX Operation Guide
Org. Image (Send/Store)	Set the default original document type for sending/storing. Value: Text+Photo, Photo, Text, Text (Fine Line), Text (for OCR)
Clarify Text (noise removal)	When scanning and sending a document in black and white, it eliminates background noise and improves the legibility of the text. Value: Off, On
Background Density Adj. (Send/Store)	Set the default Background Density (Send/Store). Value: Off, Auto, Manual (Darker 5)
Continuous Scan (Send/Store)	Select the default Continuous Scan (Send/Store) setting. Value: Off, On
Continuous Scan (Fax)*1	➔ FAX Operation Guide
Prevent Bleed-through (Send/Store)	Set the default Prevent Bleed (Send/Store). Value: Off, On
Border Erase/Full Scan (Send/Store)	Set the defaults for Border Erase/Full Scan (Send/Store). Value: Standard, Full Scan, Border Erase Sheet, Border Erase Book, Individual Border Erase
Border Erase/Full Scan (Fax)	➔ FAX Operation Guide
Skip Blank Page (Send/Store)	Select the default Skip Blank Page (Send/Store) settings. Value: Off, On
File Format	Set the default type of the files. Value: PDF, TIFF, JPEG, XPS, OpenXPS, High Comp. PDF, Word, Excel, PowerPoint

Item	Description
Image Quality (File Format)	Select the default PDF/TIFF/JPEG/XPS/OpenXPS/Word/Excel/PowerPoint file quality. Value: 1 Low Quality (High Comp.) to 5 High Quality (Low Comp.)
High Comp. PDF Image	Select the default quality setting for high compressed PDF files. Value: Compression Ratio Priority, Standard, Quality Priority
Color TIFF Compression	Select the compression method for sending the color documents in the TIFF format. Value: TIFF V6, TTN2
PDF/A	Select the default PDF/A setting. Value: Off, PDF/A-1a, PDF/A-1b, PDF/A-2a, PDF/A-2b, PDF/A-2u  NOTE If [On] is selected in "Digital Signature", [PDF/A-1a] and [PDF/A-1b] cannot be selected. ➔ Signature to File (page 8-42)
OCR Text Recognition Action	Configure settings for OCR Text Recognition Action. Value: Speed Priority, Quality Priority
OCR Text Recognition	Set the default OCR Text Recognition. Value: Off, On
Primary OCR Language	Set the default language of the text to be extracted. ([English] is selected as a default.) Select the language to extract from the options displayed on the touch panel.
OCR Output Format	Set the default OCR output format. Value: Text + Graphics, Text + Graphics with Scanned Image, Scanned Image with Searchable Text
File Separation	Select the default file separation setting. Value: Off, On  NOTE If you select [On], set the number of pages to be divided. The setting range is 1 to 500 pages.
Attach File to Email	Select how to attach the files to the E-mail. Value All Files in 1 Email: Attach and send all files in a single E-mail. 1 file per Email: Attach and send 1 file per E-mail.
Email Subject/Body	Set the subject and body automatically entered (default subject and body) when sending the scanned originals by E-mail. Three body messages can be registered, and the initial template can be used to choose which body message is used. Value Subject: Up to 256 characters can be entered. Body 1 to 3: Up to 500 characters can be entered.
iFax Subject/Body^{*2}	Set the subject and body automatically entered (default subject and body) when sending the scanned originals by i-FAX. Value Subject: Up to 256 characters can be entered. Body: Up to 500 characters can be entered.
Erase Shadowed Areas (Send)	Select the default Erase Shadowed Areas (Send) setting. Value: Off, On

Item		Description
Erase Shadowed Areas (Store)		Select the default Erase Shadowed Areas (Store) setting. Value: Off, On
2-sided/Book Original		Set the default value for 2-sided/Book Original.
1-sided		Does not set the defaults for this function.
2-sided	Binding in Original	Set the default binding orientation of originals. Value: Left/Right, Top
Book	Binding in Original	Set the default binding orientation of originals. Value: Left, Right

*1 Displayed only when the optional FAX Kit is installed.

*2 Displayed when the optional Internet FAX Kit is activated.

➔ [Internet FAX Kit\(A\) "Internet FAX Kit" \(page 11-6\)](#)

Copy/Print




[Home] key > [...] > [System Menu] > [Function Settings] > [Copy/Print]

Item	Description
Quick Setup Registration (Copy)	➔ Quick Setup Registration (Copy) (page 8-10)

Send/Store



[Home] key > [...] > [System Menu] > [Function Settings] > [Send/Store]

Item		Description
Default Screen		Set the default screen displayed when you select the [Send] key. Value: Destination, Address Book, One touch Key
Prevent Mis-sending Settings	Destination Check before Send	Select whether to display the confirmation screen of destinations after pressing the [Start] key when performing sending jobs. Value: Off, On
	Entry Check for New Dest.	When adding new destination, select whether to display the entry check screen to check the entered destination. Value: Off, On
	Destination Check on Selecting	Select whether to display the pop-up at the destination selection. Value: Off, On
	New Destination Entry	Select whether to permit direct entry of destination. Value: Prohibit, Permit
	Recall Destination	Select whether to permit usage of [Recall] on the Send screen. Value: Prohibit, Permit
	Broadcast	Set whether to enable broadcast. Value: Prohibit, Permit
	Destination History	Allow to use the destination history. Value: Prohibit, Permit
	Delete Destination History	Delete the destination history.
Quick Setup Registration (Send)		➔ Quick Setup Registration (Send) (page 8-10)

Item		Description
Signature to File	Digital Signature	Select whether to add a digital signature. Value: Off: Does not add a digital signature. Specify Each Job: Whether to add a digital signature is selected each time of sending. On: Always adds a digital signature when sending.
	Digital Signature Format	Select an algorithm used for encryption of digital signature. Value: SHA1, SHA-256, SHA-384, SHA-512  NOTE This function is displayed when "Digital Signature" is set to [Specify Each Job] or [On].
	Password Confirmation on Signature Permission	Select whether to confirm password when setting digital signature. Value: On, Off  NOTE This function is displayed when "Digital Signature" is set to [Specify Each Job].
	Password	Set a password required for setting digital signature. Enter a new security password 6 to 16 alphanumeric characters and symbols.  NOTE This function is displayed when "Password Confirmation on Signature Permission" is set to [On].


Email

[Home] key > [...] > [System Menu] > [Function Settings] > [Email]

Item		Description
Email Settings	SMTP (Email TX)	Select whether to send E-mail using SMTP. Value: Off, On
	SMTP Server Name	Enter the host name or IP address of the SMTP server.  NOTE Up to 256 characters can be entered.
	SMTP Port Number	Specify the port number to be used for SMTP. The default port number is 25. Value: 1 to 65535 (Port Number)
	Sender Address	Specify the sender address for when the machine sends E-mails, such as the machine administrator, so that a reply or non-delivery report will go to a person rather than to the machine. The sender address must be entered correctly for SMTP authentication. The maximum length of the sender address is 256 characters.
	SMTP Auth and Sender Address	When the user login is set to ON, login user name, password and E-mail address of login user are used for SMTP authentication and e-mail sender address. Value Use System Settings: Information set with [Sender Address] is used for SMTP authentication and E-mail sender address information. Use Login User Information: Login User information is used for SMTP authentication and E-mail sender address information.  NOTE If there is no e-mail address set for the user who logged in, the Sender Address set with [Sender Address] is used for E-mail sender address information.
POP3	POP3	Select whether to receive E-mail using POP3. Value: Off, On
	Remote Printing	➔ Remote Printing (page 8-52)

Sending Job - Folder

[Home] key > [...] > [System Menu] > [Function Settings] > [Sending Job - Folder]

Item	Description
FTP Settings	Select whether to send documents using FTP. To use the FTP Client, set the protocol to [On] for "Protocol Settings". The default port number is 21. Value: Off, On, 1 to 65535 (Port Number)
SMB Settings	Select whether to send documents using SMB. To use the SMB Client, set the protocol to [On] for "Protocol Settings". The default port number is 445. Value: Off, On, 1 to 65535 (Port Number)  NOTE When sending documents using SMBv1, set [SMBv1] to [On].

Fax/iFax

[Home] key > [...] > [System Menu] > [Function Settings] > [Fax/iFax]

Configure settings for FAX.

➔ [FAX Operation Guide](#)

WSD

[Home] key > [...] > [System Menu] > [Function Settings] > [WSD]

Item		Description
WSD Scan	Protocol Settings	Select whether to use WSD Scan. ^{*1} Value: Off, On
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable
WSD Print	Protocol Settings	Set whether to use our proprietary web services. WIA driver, TWAIN driver and Network FAX driver use this Enhanced WSD web service. ^{*1} Value: Off, On
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable

*1 The setting will be changed after restarting the device or network.

Address Book

[Home] key > [...] > [System Menu] > [Function Settings] > [Address Book]

Item		Description
Add/Edit (Common Address Book)		Configure settings for common address book. ➔ Adding a Destination (Common Address Book) (page 3-59)
Add/Edit (Departmental Address Book)		Configure settings for departmental address book. ➔ Adding a Destination (Departmental Address Book) (page 3-67)
Create Departmental Address Book		Create the departmental address book. ➔ Registering a Departmental Address Book (page 3-67)
Other Settings for Address Book	Sort	Select the default sort setting of the address for the address book. Value: No., Name
	Narrow Down	This procedure can be used to filter (narrow down) the types of destination listed when the address book is displayed. Value: Off, Email, Folder, Fax^{*1}, iFax^{*2}, Group
	Edit Restriction	Restrict editing of the address book. If you selected [Administrator Only], you can only edit the Address Book by logging in with administrator privileges. Value: Off, Administrator Only
	Sharing Common Address Book	Set whether to share the Common Address Book. Value: Off, On

Item	Description
External Address Book	➔ Command Center RX User Guide
Primary Address Book	Select whether the machine's address book or the External Address Book appears when the address book is displayed. Value: Common Address Book, Departmental Address Book, Ext Address Book ^{*3}

*1 Displayed only when the optional FAX Kit is installed.

*2 This function is displayed when the optional Internet FAX Kit is activated.

*3 This display appears only if the external address book is available.


One-Touch Key




[Home] key > [...] > [System Menu] > [Function Settings] > [One-Touch Key]

Item	Description
Add/Edit One Touch Key	Configure settings for One Touch Key. ➔ Adding a Destination on One Touch Key (page 3-77)
Edit Restriction	Restrict editing of the One Touch Key. If you selected [Administrator Only], you can only edit the One Touch Key by logging in with administrator privileges. Value: Off, Administrator Only

Send and Forward

[Home] key > [...] > [System Menu] > [Function Settings] > [Send and Forward]

Item	Description						
Forward Settings	Select whether to forward the original. Value: Off, On  NOTE When selecting [On], select rules to forward from [Email], [Folder (SMB)], [Folder (FTP)], [Fax] ^{*1} , [iFax (Via server-On)] ^{*2} , and [iFax (Via server-Off)] ^{*2} .						
Destination	<table border="1"> <thead> <tr> <th>Item</th> <th>Add</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Destination</td> <td>Add</td> <td>Set the destination to which the original is forwarded. One destination can be set. Follow the steps below to register the destination. <ul style="list-style-type: none"> • Addr. Book • Email • SMB • FTP ➔ Specifying Destination (page 5-43)</td> </tr> </tbody> </table>	Item	Add	Description	Destination	Add	Set the destination to which the original is forwarded. One destination can be set. Follow the steps below to register the destination. <ul style="list-style-type: none"> • Addr. Book • Email • SMB • FTP ➔ Specifying Destination (page 5-43)
Item	Add	Description					
Destination	Add	Set the destination to which the original is forwarded. One destination can be set. Follow the steps below to register the destination. <ul style="list-style-type: none"> • Addr. Book • Email • SMB • FTP ➔ Specifying Destination (page 5-43)					

Item	Description
Job Settings	Color Setting Configure the color settings for forwarded original. Value: Auto Color (Color/Grayscale), Auto Color (Color/B & W), Full Color, Grayscale, Black & White
	Scan Resolution Select resolution for stored original. Value: 600x600dpi, 400x400dpi Ultrafine, 300x300dpi, 200x400dpi Superfine, 200x200dpi Fine, 200x100dpi Normal
	File Format Select the file format of forwarded original. ➔ File Format for Send and Forward (page 8-47)
	File Separation Set whether originals are divided into multiple files before being forwarded. Value: Off, Each Page
	Email Subject Enter a maximum of 256 characters for the subject of forwarded E-mail. ➔ Character Entry Method (page 11-9)
	FTP Encrypted TX Set whether originals are encrypted before being forwarded. Value: Off, On  NOTE This function is displayed when TLS is set to [On] in Security Settings. ➔ Security Settings (page 8-75)
	Email Encrypted TX Sends encrypted E-mail using the electronic certificate. Encryption secures the document transmission. Value: Off, On  NOTE This function is displayed when S/MIME is configured in Command Center RX. ➔ Configuring S/MIME settings in the Command Center RX (page 6-87)
Digital Signature Email Add a digital signature to the email, using the electronic certificate. By adding a digital signature to an email, you can confirm the identity of the destination and detect tampering during transmission. Value: Off, On  NOTE This function is displayed when S/MIME is configured in Command Center RX. ➔ Configuring S/MIME settings in the Command Center RX (page 6-87)	

*1 Displayed only when the optional fax kit is installed.

*2 This function is displayed when the optional Internet FAX Kit is activated.

File Format for Send and Forward

[Home] key > [...] > [System Menu] > [Function Settings] > [Send and Forward] > [Job Settings] > [File Format]

Select the file format for forwarded original.

The table below lists the file formats and their details.

File format	Adjustable range of image quality	Color setting
PDF ^{*1}	1 Low Quality (High Comp.) to 5 High Quality (Low Comp.)	Auto Color (Color/Grayscale), Auto Color (Color/ Black and White), Full Color, Grayscale, Black and White
TIFF		
JPEG		Auto Color (Color/Grayscale), Full Color, Grayscale
XPS		Auto Color (Color/Grayscale), Auto Color (Color/ Black and White), Full Color, Grayscale, Black and White
OpenXPS		
High Comp. PDF ^{*1}	Compression Ratio Priority, Standard, Quality Priority	Auto Color (Color/Grayscale), Auto Color (Color/ Black and White), Full Color, Grayscale

*1 File format can be selected. (Value: [Off] / [PDF/A-1a] / [PDF/A-1b] / [PDF/A-2a] / [PDF/A-2b] / [PDF/A-2u])

PDF Encryption Functions

If you have selected PDF or High Comp. PDF for file format, you can restrict the access level for displaying, printing, and editing PDF's by assigning a secure password.

Items that can be set vary depending on the setting selected in "Compatibility".

When [Acrobat 3.0 and later] is selected

[Home] key > [...] > [System Menu] > [Function Settings] > [Send and Forward] > [Job Settings] > [Encryption]

Item		Value	Description
Password to Open Document		Off, On	Enter the password to open the PDF file. Select [Password], enter a password (up to 256 characters) and then select [OK]. Select [Confirmation] to enter the password again for confirmation, and select [OK].
Password to Edit/Print Document		Off, On	Enter the password to edit the PDF file. Select [Password], enter a password (up to 256 characters) and then select [OK]. Select [Confirmation] to enter the password again for confirmation, and select [OK]. When you have entered the password to edit/print document, you can specifically limit the operation.
Detail	Printing Allowed	Not Allowed, Allowed	Restricts printing of the PDF file.
	Changes Allowed	Not Allowed	Disables the change to the PDF file.
		Commenting	Can only add commenting.
		Page Layout except extracting Pages	Can change the page layout except extracting the pages of the PDF file.
	Any except extracting Pages	Can conduct all operations except extracting the pages of the PDF file.	
Copying of Text/Images/Others	Disable, Enable	Restricts the copying of text and objects on the PDF file.	

When [Acrobat 5.0 and later] is selected

[Home] key > [...] > [System Menu] > [Function Settings] > [Send and Forward] > [Job Settings] > [Encryption]

Item		Value	Description
Password to Open Document		Off, On	Enter the password to open the PDF file. Select [Password], enter a password (up to 256 characters) and then select [OK]. Select [Confirmation] to enter the password again for confirmation, and select [OK].
Password to Edit/Print Document		Off, On	Enter the password to edit the PDF file. Select [Password], enter a password (up to 256 characters) and then select [OK]. Select [Confirmation] to enter the password again for confirmation, and select [OK]. When you have entered the password to edit/print document, you can specifically limit the operation.
Detail	Printing Allowed	Not Allowed	Disables the printing of PDF file.
		Allowed (Low Resolution only)	Can print the PDF file only in low resolution.
		Allowed	Can print the PDF file in original resolution.
	Changes Allowed	Not Allowed	Disables the change to the PDF file.
		Inserting/Deleting/Rotating Pages	Can only insert, delete, and rotate the pages of the PDF file.
		Commenting	Can only add commenting.
		Any except extracting Pages	Can conduct all operations except extracting the pages of the PDF file.
Copying of Text/Images/Others	Disable, Enable	Restricts the copying of text and objects on the PDF file.	

RX/Forward Rules/Fax Box




[Home] key > [...] > [System Menu] > [Function Settings] > [RX/Forward Rules/Fax Box]

Configures settings for RX/Forward rules and FAX Box.



➔ [FAX Operation Guide](#)

Printer

[Home] key > [...] > [System Menu] > [Function Settings] > [Printer]

Item	Description
Emulation	<p>Select the emulation for operating this machine by commands oriented to other types of printers.</p> <p>Value: PCL6, IBM Proprinter, Line Printer, EPSON LQ-850, KPDL, KPDL (Auto)</p> <p> NOTE</p> <ul style="list-style-type: none"> • IBM Proprinter, Line Printer, and EPSON LQ-850 are displayed when the optional Emulation Upgrade Kit is installed. • When you have selected [KPDL (Auto)], set "Alt Emulation", too. • When you have selected [KPDL] or [KPDL (Auto)], set "KPDL Error Report", too.
KPDL Error Report	<p>When an error has occurred during printing in KPDL emulation mode, set whether or not the error report is output.</p> <p>Value: Off, On</p>
Alt Emulation	<p>When you have selected [KPDL (Auto)] as emulation mode, you can switch between KPDL and another emulation mode (alternative emulation) automatically according to the data to print.</p> <p>Value: PCL6, IBM Proprinter, Line Printer, EPSON LQ-850</p> <p> NOTE</p> <p>IBM Proprinter, Line Printer, and EPSON LQ-850 are displayed when the optional Emulation Upgrade Kit is installed.</p>
EcoPrint	<p>EcoPrint conserves toner when printing. This is recommended for test copies where faded printing is not a problem.</p> <p>Value: Off, On</p>
Toner Save Level (EcoPrint)	<p>Select the default Toner Save Level (EcoPrint).</p> <p>Value: 1 (Lower) to 5 (Higher)</p> <p> NOTE</p> <p>Raising the level reduces toner consumption, but image quality falls.</p>
Override A4/Letter	<p>Select whether to treat A4 size and Letter, which are similar in size, as the same size when printing.</p> <p>Value</p> <p>Off: A4 and Letter are not regarded as the same in size.</p> <p>On: A4 and Letter are regarded as the same in size. The machine will use whichever size is in the paper source.</p>
Duplex	<p>Select binding orientation for duplex mode.</p> <p>Value: 1-sided, 2-sided (Bind Long Edge), 2-sided (Bind Short Edge)</p>
Copies	<p>Set the default number of copies, from 1 to 9999.</p> <p>Value: 1 to 9999 copies</p>
Orientation	<p>Set the default orientation, [Portrait] or [Landscape].</p> <p>Value: Portrait, Landscape</p>
Form Feed TimeOut	<p>Receiving print data from the computer, the machine may sometimes wait if there is no information signaling that the last page does not have any more data to be printed. When the preset timeout passes, the machine automatically prints paper. The options are between 5 and 495 seconds.</p> <p>Value: 5 to 495 seconds (in 5 second increments)</p>

Item	Description
LF Action	Set the line feed action when the machine receives the line feed code (character code 0AH). Value: LF Only, LF and CR, Ignore LF
CR Action	Set the character return action when the machine receives the character return code (character code 0DH). Value: CR Only, LF and CR, Ignore CR
Job Name	Set whether the job name set in the printer driver is displayed. Value: Off, On  NOTE When selecting [On], select the job name to be displayed from [Job Name], [Job No. & Job Name], or [Job Name & Job No.].
User Name	Set whether the user name set in the printer driver is displayed. Value: Off, On
Paper Feed Mode	While printing from the computer, select how to feed paper when the paper source and type are specified. Value Auto: Search the paper source that matches the selected paper size and type. Fixed: Print on paper loaded in the specified paper source.
MP Tray Priority	If paper is set in the MP Tray then it is possible for priority to be given to that MP tray in the paper feed. Value Off: The printer driver settings are followed. Auto Feed: If Auto is selected in the printer driver and there is paper in the MP tray then the paper feed will be from the MP tray. Always: If there is paper in the MP tray then the paper feed will be from the MP tray regardless of what is set in the printer driver.
Auto Cassette Change	Select the following actions when the paper runs out in the paper source while printing. Value: Off, On  NOTE <ul style="list-style-type: none"> • When selecting [Off], the machine displays "Add the following paper in cassette #." (# is a cassette number) or "Add the following paper in the multipurpose tray.", and stops printing. • Load the paper according to the paper source displayed to resume printing. • To print from the other paper cassette, select [Paper Selection]. Select the desired paper source. • When selecting [On], the machine continues printing automatically when the other cassette contains the same paper as the currently-used cassette.
Message Banner Print	Set whether the confirmation screen appears before each sheet is printed when printing multiple banner sheets. Value: Off, On
Wide A4	Turn this to on to increase the maximum number of characters that can be printed in a line for an A4 page (78 characters at 10 pitch) and Letter size page (80 characters at 10 pitch). This setting is only effective in PCL6 emulation. Value: Off, On

Item	Description
Resolution	Set the resolution used for printing. Value: 600 dpi, 1200 dpi, 2400 dpi  NOTE Settings that are received from the printer driver have priority over the operation panel settings.
KIR	Select the default KIR (smoothing) setting. Value: Off, On
Printing Job Terminator	You can select the condition which regarded as a job termination if the print job could not be processed until the end due to your environment and the other reason. Value: EOJ (End of Job): The command recognized as a termination of the job data is regarded as one job until it is detected. End of Network Session: The data included in a network session at network connection is regarded as one job. UEL (Universal Exit Language): The UEL included in the termination of the job data is regarded as one job until it is detected.
Remote Printing	Select whether to prohibit printing that is performed without operating the machine. When [Prohibit] is selected, a document that has been stored in the document box from the printer driver can be printed from the machine. This prevents another person from seeing that document. Value: Prohibit, Permit  NOTE If [Prohibit] is selected, printing and storing using Quick Copy and Proof and Hold functions are disabled. Printing a received FAX (optional) is not prohibited.
Direct Printing from Web	Set whether to allow Direct Printing from Command Center RX. Value: Not Allowed, Allowed ➔ Command Center RX




Document Box

[Home] key > [...] > [System Menu] > [Function Settings] > [Document Box]

Item	Description
Custom Box - Add/Edit	➔ Creating a New Custom Box (page 5-58)
Auto File Deletion Time	Set the time to automatically delete stored documents.
Quick Setup Registration (Storing in Box)	➔ Quick Setup Registration (Storing in Box) (page 8-10)
Quick Setup Registration (Box Print)	➔ Quick Setup Registration (Box Print) (page 8-11)
Quick Setup Registration (Sending from Box)	➔ Quick Setup Registration (Sending from Box) (page 8-11)

Job Box

[Home] key > [...] > [System Menu] > [Function Settings] > [Job Box]

Item	Description
Quick Copy Job Retention	To maintain free space on the hard disk, you can set the maximum number of stored jobs. Value: number between 0 and 300  NOTE When 0 is set, Quick Copy cannot be used.
Repeat Copy Job Retention	To maintain free space on the hard disk, you can set the maximum number of stored jobs. Value: number between 0 and 50  NOTE <ul style="list-style-type: none"> • This function will not be displayed when the Data Security Function is activated. • When 0 is set, Repeat Copy cannot be used.
Deletion of Job Retention	This setting specifies that documents, such as Private Printing, Quick Copying, or Proof and Hold Printing, saved temporarily in the job box are automatically deleted after they have been saved for a set time. Value: Off, 1 hour, 4 hours, 1 day, 1 week  NOTE This function is valid for documents saved after the function is set. Regardless of this function setting, temporary documents are deleted when the power switch is turned off.
Deletion of PIN Print at Power Off	Configures whether to delete the jobs retained in the PIN Print box when the power is turned off. Value: Off, On

Fax Memory RX Box

[Home] key > [...] > [System Menu] > [Function Settings] > [Fax Memory RX Box]

Set whether to perform print immediately for the FAX documents received or to save them in the Fax Memory RX Box.

➔ [FAX Operation Guide](#)

Home

[Home] key > [...] > [System Menu] > [Function Settings] > [Home]

Configure settings for Home screen.

➔ [Editing the Home Screen \(page 2-15\)](#)

Status


[Home] key > [...] > [System Menu] > [Function Settings] > [Status]

Item	Description
Display Settings	Set the items that appear in the status screens for printing jobs, sending jobs, and storing jobs.
Printing Jobs Column 1	Value: Job Name, User Name, Print Pages x Copies, Total Printed Pages, Color/Black & White
Printing Jobs Column 2	Value: Job Name, User Name, Print Pages x Copies, Total Printed Pages, Color/Black & White
Sending Jobs Column 1	Value: Job Name, User Name, Destination, Original Pages, Color/Black & White
Sending Jobs Column 2	Value: Job Name, User Name, Destination, Original Pages, Color/Black & White
Storing Jobs Column 1	Value: Job Name, User Name, Original Pages, Color/Black & White
Storing Jobs Column 2	Value: Job Name, User Name, Original Pages, Color/Black & White
Job Status/Job Logs Settings	Set the display method of the Status/Log.
Display Jobs Detail Status	Value: Show All, My Jobs Only, Hide All
Display Jobs Log	Value: Show All, My Jobs Only, Hide All
Display Fax Log ^{*1}	Value: Show All, Hide All
Pause/Resume of All Print Jobs	Value: Prohibit, Permit

*1 Displayed only when the optional FAX Kit is installed.

Internet Browser

[Home] key > [...] > [System Menu] > [Function Settings] > [Internet Browser]


Item	Description
Internet Browser	Select whether to use the Internet browser. Value: Off, On
Browser Environment	This specifies Internet browser preferences such as your home page setting and how pages are displayed. Value: Home page: (Enter the address for Home page.) Text Size: Large, Medium, Small Display Mode: Normal, Just-Fit Rendering, Smart-Fit Rendering Cookie: Accept All, Reject All, Prompt before Accepting  NOTE This setting is not displayed if you selected [Off] for "Internet Browser".
Proxy	➔ Proxy (page 8-57)

Manual Staple

[Home] key > [...] > [System Menu] > [Function Settings] > [Manual Staple]

NOTE

Only displayed when the optional Finisher is installed.

Item	Description
Manual Staple	Select whether to use Manual Staple. Value: Off, On  NOTE If you selected [On], set the time until manual stapling mode is automatically cancelled. The setting range is 5 to 60 seconds (in 5-second increments).
Staple Position	Set the default Staple Position. Value: A4, Letter

Remote Services

[Home] key > [...] > [System Menu] > [Function Settings] > [Remote Services]


When the trouble occurs on this product, it is possible to explain the operational procedure and the troubleshooting method through the internet from our sales office by accessing the operation panel screen of this product while operating the screen.


NOTE

When using the remote service settings, it is necessary to make a contract with our company. Please contact our sales office or our authorized dealer (purchase source) for the details.

TWAIN/WIA

[Home] key > [...] > [System Menu] > [Function Settings] > [TWAIN/WIA]

Item		Description
Enhanced WSD	Protocol Settings	Set whether to use our proprietary web services.*1 Value: Off, On  NOTE Selecting [Off] will disable the functionality of WIA, TWAIN, and Network FAX driver.
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable

Item		Description
Enhanced WSD over TLS	Protocol Settings	Set whether to use our proprietary web services over TLS. ^{*1*2} Value: Off, On  NOTE Selecting [Off] will disable the functionality of WIA, TWAIN and Network FAX drivers.
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable

*1 The setting will be changed after restarting the device or network.

*2 Set "TLS" to [**On**] in Security Settings.

➔ [TLS \(page 8-91\)](#)

IMPORTANT

Depending on the protocol, there are models where you need to restart the network or turn the machine OFF and then ON after changing the setting.

CO2 Emission Chart

[Home] key > [...] > [System Menu] > [Function Settings] > [CO2 Emission Chart]

Item		Description
CO2 Emission Chart		Configure the CO2 emission chart settings.
	Default Display	Select the type of graph first displayed when checking the chart. Value: CO2 Emission, Power Consumption
	Default Display Unit	Configure the basic units for the graph. Value: Monthly, Year
	CO2 Emission Factor	Enter the CO2 emission coefficient released by your electricity provider. Value: 0 - 9999 (Units are g-CO2/kWh. Multiply by 1,000 for Kg-CO2/kWh.)
	Data Reset	Reset the information displayed in the CO2 emission chart. In the confirmation screen, click [OK].

Network Settings

Configures network settings.

Host Name

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Host Name]

Item	Description
Host Name	<p>Check the host name of the machine. Host name can be changed from Command Center RX.</p> <p>➔ Changing Device Information (page 2-72)</p>

Proxy



[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Proxy]




Item	Description
Proxy	<p>Set the proxy for connection to the Internet from an application.</p> <p>Value: Off, Use Different Proxy Server, Use the Same Proxy Server for All Protocols</p>
Proxy Server (HTTP)	<p>Set a proxy server (HTTP).</p> <p>Value: (Enter the proxy address and port number.)</p>
Proxy Server (HTTPS)	<p>Set a proxy server (HTTPS). This setup is available when "Proxy" is set to [Use Different Proxy Server].</p> <p>Value: (Enter the proxy address and port number.)</p>
Do Not Use Proxy for Following Domains	<p>Set domains for which no proxy is used.</p> <p>Value: (Enter the domain name.)</p>

Wi-Fi Direct Settings

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Wi-Fi Direct Settings]

Set Wi-Fi Direct.

Item	Description
Wi-Fi Direct	<p>Select whether to use Wi-Fi Direct.</p> <p>Value: Off, On</p>
Device Name	<p>Specify the device name.</p> <p> NOTE</p> <ul style="list-style-type: none"> • Up to 32 characters can be entered. • This function is displayed when [Wi-Fi Direct] is set to [On].
IP Address	<p>Check the IP address of the machine.</p> <p>➔ TCP/IP Setting (page 8-62)</p> <p> NOTE</p> <p>This function is displayed when [Wi-Fi Direct] is set to [On].</p>

Item	Description
Auto Disconnect	<p>Automatically disconnect devices connected through Wi-Fi Direct.</p> <p>Value: Off, On</p> <p> NOTE</p> <ul style="list-style-type: none"> • If you select [ON], set the waiting time for automatic disconnection. • This function is displayed when [Wi-Fi Direct] is set to [On].
Persistent Group	<p>Set whether Wi-Fi Direct connection as Persistent Group (information for the connection is kept even if the power is turned off).</p> <p>Value: Off, On</p> <p> NOTE</p> <p>This function is displayed when [Wi-Fi Direct] is set to [On].</p>
Password	<p>Select whether the Wi-Fi Direct password is automatically generated or created manually. When "Manual Creation" is set to [On], the "Persistent Group" setting changes to [On].</p> <p>Value: Off, On</p> <p> NOTE</p> <p>If "Manual Creation" is set to [On], set a password (8 or more characters).</p>

Wi-Fi Settings





[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Wi-Fi Settings]

Set Wi-Fi.





Wi-Fi

Item	Description
Wi-Fi	<p>Select whether to use Wi-Fi.</p> <p>Value: Off, On</p>

Setup






Item	Description		
Available Network	Displays access points to which the machine can connect.		
<table border="1"> <tr> <td data-bbox="167 309 395 405">Index</td> <td data-bbox="395 309 1503 405"> Select the key index of the access point. Value: 0 to 3 </td> </tr> </table>	Index	Select the key index of the access point. Value: 0 to 3	
Index	Select the key index of the access point. Value: 0 to 3		
Push Button Method	If the access point supports the push button method, wireless settings can be configured using the push button. This setting executes push button, and the connection is started by pressing the push button on the access point.  NOTE The push button method supports only the WPS.		
PIN Code Method (Device)	Starts connection using the machine's PIN code. Enter the PIN code into the access point. The PIN code of the machine is automatically generated.		
Custom Setup	The detailed settings for wireless LAN can be changed.		
<table border="1"> <tr> <td data-bbox="167 757 395 909">Network Name (SSID)</td> <td data-bbox="395 757 1503 909"> Set the SSID (Service Set Identifier) of the wireless LAN to which the machine connects.  NOTE Up to 32 characters can be entered. </td> </tr> </table>	Network Name (SSID)	Set the SSID (Service Set Identifier) of the wireless LAN to which the machine connects.  NOTE Up to 32 characters can be entered.	
Network Name (SSID)	Set the SSID (Service Set Identifier) of the wireless LAN to which the machine connects.  NOTE Up to 32 characters can be entered.		
<table border="1"> <tr> <td data-bbox="167 909 395 1032">Network Authentication</td> <td data-bbox="395 909 1503 1032"> Select network authentication type. Value: Open, WPA2/WPA-PSK, WPA2-PSK, WPA2/WPA-EAP, WPA2-EAP, WPA3-SAE/WPA2-PSK, WPA3-SAE, WPA3/WPA2-EAP, WPA3-EAP </td> </tr> </table>	Network Authentication	Select network authentication type. Value: Open, WPA2/WPA-PSK, WPA2-PSK, WPA2/WPA-EAP, WPA2-EAP, WPA3-SAE/WPA2-PSK, WPA3-SAE, WPA3/WPA2-EAP, WPA3-EAP	
Network Authentication	Select network authentication type. Value: Open, WPA2/WPA-PSK, WPA2-PSK, WPA2/WPA-EAP, WPA2-EAP, WPA3-SAE/WPA2-PSK, WPA3-SAE, WPA3/WPA2-EAP, WPA3-EAP		
<table border="1"> <tr> <td data-bbox="167 1032 395 1783">Encryption</td> <td data-bbox="395 1032 1503 1783"> Select encryption method. The setting values vary depending on the Network Authentication setting. Value: WPA2/WPA-PSK AES, Auto, Preshared key (Up to 64 characters) WPA2-PSK Preshared key (Up to 64 characters) WPA2/WPA-EAP AES, Auto WPA2-EAP WPA3-SAE/WPA2-PSK Preshared key WPA3-SAE Preshared key WPA3/WPA2-EAP - WPA3-EAP - </td> </tr> </table>	Encryption	Select encryption method. The setting values vary depending on the Network Authentication setting. Value: WPA2/WPA-PSK AES, Auto, Preshared key (Up to 64 characters) WPA2-PSK Preshared key (Up to 64 characters) WPA2/WPA-EAP AES, Auto WPA2-EAP WPA3-SAE/WPA2-PSK Preshared key WPA3-SAE Preshared key WPA3/WPA2-EAP - WPA3-EAP -	
Encryption	Select encryption method. The setting values vary depending on the Network Authentication setting. Value: WPA2/WPA-PSK AES, Auto, Preshared key (Up to 64 characters) WPA2-PSK Preshared key (Up to 64 characters) WPA2/WPA-EAP AES, Auto WPA2-EAP WPA3-SAE/WPA2-PSK Preshared key WPA3-SAE Preshared key WPA3/WPA2-EAP - WPA3-EAP -		

TCP/IP Setting

Item	Description
TCP/IP	Select whether to use TCP/IP Protocol. Value: Off, On
IPv4 Settings	Set up TCP/IP (IPv4) to connect to the network. This setting is available when [TCP/IP] is set to [On].
DHCP	Select whether to use the DHCP (IPv4) server. Value: Off, On
Auto-IP	Select whether to use Auto-IP. Value: Off, On
IP Address	Set the IP address. Value: ###.###.###.###  NOTE When DHCP is set to [On], the value cannot be entered.
Subnet Mask	Set the IP subnet mask. Value: ###.###.###.###  NOTE When DHCP is set to [On], the value cannot be entered.
Default Gateway	Set the IP gateway address. Value: ###.###.###.###  NOTE When DHCP is set to [On], the value cannot be entered.
DNS Server Address	Set the IP address of DNS (Domain Name System) server. Value: Use DNS Server from DHCP, Use following DNS Server  NOTE When [Use following DNS Server] is selected, you can enter static DNS server information in the Primary and Secondary fields provided.
DNS over TLS	Set whether to connect to a DNS server during communication protected by TLS. Value: Off, On, Auto

 **IMPORTANT**

- When setting the Auto-IP, enter "0.0.0.0" in [IP Address].
- After changing the setting, restart the network or turn the machine OFF and then ON.

Item	Description
IPv6 Settings	Set up TCP/IP (IPv6) to connect to the network. This setting is available when [TCP/IP] is [On].
IPv6	Select whether to use IPv6. Value: Off, On  NOTE Selecting [On] displays IP address in [IP Addr. (Link Local)] after restarting the network.
Manual Setting	Manually specify the IP address, prefix length, and gateway address of TCP/IP (IPv6). Value IP Address (Manual): 128-bits address is expressed in eight groups consisting of four-digit hexadecimal digits. The groups are separated by colon (:). Prefix Length: 0 to 128 Default Gateway: 128-bits address is expressed in eight groups consisting of four-digit hexadecimal digits. The groups are separated by colon (:).  NOTE <ul style="list-style-type: none"> This function is displayed when [IPv6] is set to [On]. To enter "Default Gateway", set [RA (Stateless)] to [Off].
RA (Stateless)	Select whether to use RA (Stateless). Value: Off, On  NOTE <ul style="list-style-type: none"> This function is displayed when [IPv6] is set to [On]. Selecting [On] displays IP address in [IP Address (Stateless)] after restarting the network.
DHCP	Select whether to use the DHCP (IPv6) server. Value: Off, On  NOTE <ul style="list-style-type: none"> This function is displayed when [IPv6] is set to [On]. Selecting [On] displays IP address in [IP Address (Stateful)] after restarting the network.
DNS Server Address	Set the IP address of DNS (Domain Name System) server. Value: Use DNS Server from DHCP, Use following DNS Server  NOTE When [Use following DNS Server] is selected, you can enter static DNS server information in the Primary and Secondary fields provided.
DNS over TLS	Set whether to connect to a DNS server during communication protected by TLS. Value: Off, On, Auto






 **IMPORTANT****After changing the setting, restart the network or turn the machine OFF and then ON.**

Wired Network Settings

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Wired Network Settings]







Configure wired network settings.

TCP/IP Setting

Item	Description
TCP/IP	Select whether to use TCP/IP Protocol. Value: Off, On
IPv4 Settings	Set up TCP/IP (IPv4) to connect to the network. This setting is available when [TCP/IP] is set to [On].
DHCP	Select whether to use the DHCP (IPv4) server. Value: Off, On
Auto-IP	Select whether to use Auto-IP. Value: Off, On
IP Address	Set the IP address. Value: ###.###.###.###  NOTE When DHCP is set to [On], the value cannot be entered.
Subnet Mask	Set the IP subnet mask. Value: ###.###.###.###  NOTE When DHCP is set to [On], the value cannot be entered.
Default Gateway	Set the IP gateway address. Value: ###.###.###.###  NOTE When DHCP is set to [On], the value cannot be entered.
Domain Name	Enter the domain name.  NOTE When DHCP is set to [On], the value cannot be entered.
DNS Server Address	Set the IP address of DNS (Domain Name System) server. Value: Use DNS Server from DHCP, Use following DNS Server  NOTE When [Use following DNS Server] is selected, you can enter static DNS server information in the Primary and Secondary fields provided.
DNS over TLS	Set whether to connect to a DNS server during communication protected by TLS. Value: Off, On, Auto

IMPORTANT

- When setting the Auto-IP, enter "0.0.0.0" in [IP Address].
- After changing the setting, restart the network or turn the machine OFF and then ON.

Item	Description
IPv6 Settings	Set up TCP/IP (IPv6) to connect to the network. This setting is available when [TCP/IP] is [On].
IPv6	Select whether to use IPv6. Value: Off, On  NOTE Selecting [On] displays IP address in [IP Addr. (Link Local)] after restarting the network.
Manual Setting	Manually specify the IP address, prefix length, and gateway address of TCP/IP (IPv6). Value: IP Address (Manual): 128-bits address is expressed in eight groups consisting of four-digit hexadecimal digits. The groups are separated by colon (:). Prefix Length: 0 to 128 Default Gateway: 128-bits address is expressed in eight groups consisting of four-digit hexadecimal digits. The groups are separated by colon (:).  NOTE <ul style="list-style-type: none"> This function is displayed when [IPv6] is set to [On]. To enter "Default Gateway", set [RA (Stateless)] to [Off].
RA (Stateless)	Select whether to use RA (Stateless). Value: Off, On  NOTE <ul style="list-style-type: none"> This function is displayed when [IPv6] is set to [On]. Selecting [On] displays IP address in [IP Address 1 to 5 (Stateless)] after restarting the network.
DHCP	Select whether to use the DHCP (IPv6) server. Value: Off, On  NOTE <ul style="list-style-type: none"> This function is displayed when [IPv6] is set to [On]. Selecting [On] displays IP address in [IP Address (Stateful)] after restarting the network.
Domain Name	Enter the domain name.  NOTE When DHCP is set to [On], the value cannot be entered.
DNS Server Address	Set the IP address of DNS (Domain Name System) server. Value: Use DNS Server from DHCP, Use following DNS Server  NOTE When [Use following DNS Server] is selected, you can enter static DNS server information in the Primary and Secondary fields provided.
DNS over TLS	Set whether to connect to a DNS server during communication protected by TLS. Value: Off, On, Auto

 **IMPORTANT**

After changing the setting, restart the network or turn the machine OFF and then ON.

Others

Item	Description
LAN Interface	Specify the settings for the LAN interface to be used. Value: Auto, 10BASE-T Half, 10BASE-T Full, 100BASE-TX Half, 100BASE-TX Full, 1000BASE-T


 **IMPORTANT**

After changing the setting, restart the network or turn the machine OFF and then ON.



Protocol Settings



[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Protocol Settings]


Configure protocol settings.

Item	Description
SMTP (Email TX)	➔ Email Settings (page 8-43)
POP3 (Email RX)	➔ POP3 (page 8-43)
FTP Client (Transmission)	➔ FTP Settings (page 8-43)
FTP Server (Reception)	Protocol Settings Select whether to receive documents using FTP.* ¹ Value: Off, On
	Available Network Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable
SMB Client (Transmission)	➔ SMB Settings (page 8-43)
SMB Server (Reception)	Protocol Settings Select whether to receive documents using SMB Server. Value: Off, On
	SMBv1 Select whether to use SMBv1. Value: Off, On
	Available Network Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable
WSD Scan	➔ WSD Scan (page 8-44)
WSD Print	➔ WSD Print (page 8-44)
iFax	Select whether to use i-FAX. Value: Off, On  NOTE This function is displayed when the optional Internet FAX Kit is activated.

Item		Description
ThinPrint	Protocol Settings	Select whether to use ThinPrint. To use the Thin Print protocol, set the protocol to [On] . The default port number is 4000.* ¹ * ² Value: Off, On, 1 to 32767 (Port Number)  NOTE This function is displayed only when the optional ThinPrint Option is activated.
	Thin Print over TLS	To use the Thin Print over TLS protocol, set [Thin Print Over TLS] and [TLS] to [On] . Value: Off, On  NOTE When selecting [On] , it also requires a certificate for TLS. The default certificate is the self-certificate of the machine. ➔ Command Center RX User Guide
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable
LPD	Protocol Settings	Selects whether to receive documents using LPD.* ¹ Value: Off, On
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable
Raw	Protocol Settings	Select whether to receive documents using Raw Port.* ¹ Value: Off, On
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable
IPP	Protocol Settings	Selects whether to receive documents using IPP. To use the IPP protocol, set [IPP] to [On] , and set [TLS] to [Off] . In addition, select [Not Secure (IPP&IPPS)] on IPP Security under Security Settings from the Command Center RX. The default port number is 631.* ¹ Value: Off, On, 1 to 32767 (Port Number)
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable
IPP over TLS	Protocol Settings	To use the IPP protocol, set [IPP] and [TLS] to [On] . The default port number is 443.* ¹ * ² Value: Off, On, 1 to 32767 (Port Number)  NOTE When selecting [On] , it also requires a certificate for TLS. the default certificate is the self-certificate of the machine. ➔ Command Center RX User Guide
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable

Item		Description
HTTP	Protocol Settings	Select whether to communicate using HTTP. ^{*1} Value: Off, On
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable
HTTPS	Protocol Settings	Select whether to communicate using HTTPS. ^{*1*2} Value: Off, On
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable
LDAP		Select whether to use LDAP. Value: Off, On
SNMPv1/v2c	Protocol Settings	Select whether to communicate using SNMP. ^{*1} Value: Off, On
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable
SNMPv3	Protocol Settings	Select whether to communicate using SNMPv3. ^{*1} Value: Off, On
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable
Enhanced WSD	Protocol Settings	Set whether to use our proprietary web services. ^{*1} Value: Off, On  NOTE Selecting [Off] will disable the functionality of WIA, TWAIN, and Network FAX driver.
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable
Enhanced WSD over TLS	Protocol Settings	Set whether to use our proprietary web services over TLS. ^{*1*2} Value: Off, On  NOTE Selecting [Off] will disable the functionality of WIA, TWAIN and Network FAX drivers.
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable
eSCL	Protocol Settings	Selects whether to receive scanned documents using eSCL. ^{*1} Value: Off, On
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable

Item		Description
eSCL over TLS	Protocol Settings	Selects whether to receive scanned documents using eSCL over TLS. ^{*1*2} Value: Off, On
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable
VNC (RFB)	Protocol Settings	This is set when starting up a VNC Viewer (E.g. RealVNC) to use the Remote Operation. ^{*1} The default port number is 9062. Value: Off, On, 1 to 32767 (Port Number)
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable
VNC (RFB) over TLS	Protocol Settings	This is set when starting up a VNC Viewer (E.g. RealVNC) to use Remote Operation protected by TLS. ^{*1*2} The default port number is 9063. Value: Off, On, 1 to 32767 (Port Number)  NOTE When selecting [On], it also requires a certificate for TLS. The default certificate is the self-certificate of the machine. ➔ Command Center RX User Guide
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable
Enhanced VNC over TLS	Protocol Settings	This is set when starting up Command Center RX to use Remote Operation protected by TLS. ^{*1*2} The default port number is 9061. Value: Off, On, 1 to 32767 (Port Number)  NOTE <ul style="list-style-type: none"> The default setting is [On]. When selecting [On], it also requires a certificate for TLS. The default certificate is the self-certificate of the machine. ➔ Command Center RX User Guide
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable
REST	Protocol Settings	Select whether to communicate using REST. ^{*1} Value: Off, On, 1 to 32767 (Port Number)
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable

Item		Description
REST over TLS	Protocol Settings	Select whether to communicate using REST over TLS. ^{*1*2} Value: Off, On, 1 to 32767 (Port Number)  NOTE When selecting [On], it also requires a certificate for TLS. the default certificate is the self-certificate of the machine. ➔ Command Center RX User Guide
	Available Network	Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable
Communication Protocol		Set the communication protocol to use. Value: MQTT, XMPP

*1 The setting will be changed after restarting the device or network.

*2 Set "TLS" to [On] in Security Settings.


➔ [TLS \(page 8-91\)](#)

IMPORTANT

Depending on the protocol, there are models where you need to restart the network or turn the machine OFF and then ON after changing the setting.

Ping

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Ping]

Item	Description
Ping	Checks if communication with the destination by entering the host name or IP address of the destination is possible.  NOTE If [Primary Network (Client)] is set to [Others], this item is not displayed. ➔ Primary Network (Client) (page 8-75)
Ping Timeout	➔ Ping Timeout (page 8-10)

Bonjour

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Bonjour]

Item	Description
Bonjour	Protocol Settings Select whether to use Bonjour. Value: Off, On
	Available Network Set whether to enable this function for each network of Wi-Fi Direct, Wi-Fi and wired. Value: Disable, Enable

IP Filter (IPv4)

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [IP Filter (IPv4)]

Item	Description
IP Filter (IPv4)	<p>Configure IP filters. IP filters restrict access to the machine based on the IP addresses and protocols.</p> <p>Specify the IP addresses or network addresses of the hosts to which access is granted from Command Center RX. If nothing is specified on this page, access from all hosts is allowed.</p> <p>Value: Off, On</p> <p>➔ Command Center RX User Guide</p>

IP Filter (IPv6)

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [IP Filter (IPv6)]

Item	Description
IP Filter (IPv6)	<p>Configure IP filters. IP filters restrict access to the machine based on the IP addresses and protocols.</p> <p>Specify the IP addresses or network addresses of the hosts to which access is granted from Command Center RX. If nothing is specified on this page, access from all hosts is allowed.</p> <p>Value: Off, On</p> <p>➔ Command Center RX User Guide</p>

IPSec

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [IPSec]

Item	Description
IPSec	<p>Select whether to use IPSec.</p> <p>Value: Off, On</p>

Restart Network

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Restart Network]

Item	Description
Restart Network	Restarts the network.

Optional Network

[Home] key > [...] > [System Menu] > [Network Settings] > "Optional Network"

Configure settings for the optional Network Interface Kit.




 **NOTE**
 This menu is displayed when the optional Network Interface Kit or Wireless Network Interface Kit is installed.

Host Name

Item	Description
Host Name	<p>Check the host name of the machine. Host name can be changed from Command Center RX.</p> <p>➔ Changing Device Information (page 2-72)</p>

Wi-Fi Direct Settings

Set Wi-Fi Direct.

Item	Description
Wi-Fi Direct	Select whether to use Wi-Fi Direct. Value: Off, On
Device Name	Specify the device name.  NOTE <ul style="list-style-type: none"> Up to 32 characters can be entered. This function is displayed when [Wi-Fi Direct] is set to [On].
Network Name (SSID)	Set the SSID (Service Set Identifier) of the wireless LAN to which the machine connects.  NOTE <ul style="list-style-type: none"> Up to 32 characters can be entered. This function is displayed when [Wi-Fi Direct] is set to [On].
Preshared Key	Set the Preshared Key.  NOTE <ul style="list-style-type: none"> Up to 64 characters can be entered. This function is displayed when [Wi-Fi Direct] is set to [On].
IPv4 Settings	Set up TCP/IP (IPv4) to connect to the network. This setting is available when [TCP/IP] is set to [On].
IP Address	Set the IP address. Value: ###.###.###.###
Subnet Mask	Set the IP subnet mask. Value: ###.###.###.###
Start Address	Set the start address. Value: ###.###.###.###
End Address	Set the End address. Value: ###.###.###.###
Lease Time	Set the time to assign an IP address to a client (lease time). Value: 1 to 60 minutes (1 minute increments)




Wireless Network

Configure settings for the optional Wireless Network Interface Kit.

**NOTE**

This function is displayed when the Wireless Network Interface Kit is installed.

Item		Description
Connection Status		You can check the wireless LAN status.
Setup	Available Network	Select access points to which the machine can be connected, enter the Preshared Key and start a connection.
	Push Button Method	<p>If the access point supports the push button method, wireless settings can be configured using the push button. This setting executes push button, and the connection is started by pressing the push button on the access point.</p> <p> NOTE The push button method supports only the WPS.</p>
	PIN Code Method (Device)	Starts connection using the machine's PIN code. Enter the PIN code into the access point. The PIN code of the machine is automatically generated.
	PIN Code Method (Terminal)	Starts connection using the PIN code of the access point. Enter the PIN code of the access point.

Item	Description	
Setup	Custom Setup	The detailed settings for wireless LAN can be changed.
	Network Name (SSID)	Set the SSID (Service Set Identifier) of the wireless LAN to which the machine connects.  NOTE Up to 32 characters can be entered.
	Connection Mode	Set the connection mode. Value: Ad Hoc, Infrastructure  NOTE <ul style="list-style-type: none"> • Ad Hoc: Directly communicates with the device without going through an access point. This method cannot be used to connect to two or more devices. • Infrastructure: Performs communication through an access point.
	Channel	Set channel. Use [-] / [+] or the numeric keys to enter a number. Value: 1 to 11
	Network Authentication	Select network authentication type. To select other options, open the device home page from a computer. Value: Open, Shared, WPA-PSK*1, WPA2-PSK*1
Encryption	Select encryption method. If the option other than [Disable] is selected, enter the WEP key or the Preshared key. The setting values vary depending on the Network Authentication setting. Select [Data Encryption]. When Network Authentication is set to [Open] or [Shared]: Value: Disable, WEP When Network Authentication is set to [WPA-PSK] or [WPA2-PSK]: Value: TKIP*2, AES, Auto*2, Preshared Key  NOTE <ul style="list-style-type: none"> • If [WEP] is selected, enter the WEP key. Up to 26 characters can be entered. • If [TKIP], [AES] or [Auto] is selected, enter the Preshared key. Enter the value in 8 to 64 characters. 	
TCP/IP Setting	For details on setting value. ➔ TCP/IP Setting (page 8-62) ➔ Bonjour (page 8-68) ➔ IPSec (page 8-69)	
Others	For details on setting value. ➔ MAC Address Filter (page 8-73)	

*1 Not displayed if you selected [Ad Hoc] for "Connection Mode".

*2 Not displayed if you selected [WPA2-PSK] for "Network Authentication".

Wired Network Settings



NOTE

This menu is displayed when the optional Network Interface Kit is installed.

Item		Description
TCP/IP Setting		For details on setting value. <ul style="list-style-type: none"> ➔ TCP/IP Setting (page 8-62) ➔ Bonjour (page 8-68) ➔ IPSec (page 8-69)
Others	LAN Interface	Select the LAN Interface type.*1 Value: Auto, 10Base-Half, 10Base-Full, 100Base-Half, 100Base-Full, 1000BASE-T NOTE This function is displayed when the optional Network Interface Kit is installed.
	MAC Address Filter	Select whether to use MAC Address Filter. <ul style="list-style-type: none"> ➔ Operation Guide for the optional Network Interface Kit Value: Off, On




*1 The setting will be changed after restarting the device or network.

Restart Network

Item	Description
Restart Network	Restarts the network.

Connectivity

[Home] key > [...] > [System Menu] > [Network Settings] > "Connectivity"

Item		Description
Bluetooth Settings	Bluetooth Keyboard	Use Bluetooth keyboard. Value: Off, On
	Device	Select a keyboard.
Fax Server	Fax Server	Select whether to use FAX Server. Value: On, Off
	Address Settings	This specifies a prefix, suffix, and domain name to be attached to a destination.  NOTE For information about the fax server, contact the fax server administrator.
	File Format	Set the default type of the files. Value: PDF, TIFF, XPS
	Address Book Type	This specifies the External Address Book to be used.  NOTE <ul style="list-style-type: none"> • This setting is available when [FAX Server] is set to [On]. • This is not displayed if the External Address Book setting is not configured. <p>➔ Command Center RX User Guide</p>
NFC		Use NFC (Near Field Communication). Value: Off, On
Remote Operation		Configure settings for remote operation. Value: Off, On When you set it to [On], set the Use Restriction. Value: Off, Use Password, Administrator Only When selecting [Off], users without administrator privileges can also execute remote operation. When selecting [Use Password], enter the password, then re-enter it to confirm. When selecting [Administrator Only], only administrator can execute remote operation.  NOTE When selecting [Administrator Only], the remote operation using VNC software is unavailable.

Others

[Home] key > [...] > [System Menu] > [Network Settings] > "Others"


Item	Description
Primary Network (Client)	<p>Select the network interface to be used for the send function that this machine functions as a client, the network authentication and connecting to external address book.</p> <p>Value: Wi-Fi, Wired Network, Optional Network</p> <ul style="list-style-type: none"> [Optional Network] is displayed when the optional Network Interface Kit or Wireless Network Interface Kit is installed. You can set and use "[Wired Network] or [Wi-Fi]", and "[Optional Network]" individually for the e-mail send connection.
Restart Entire Device	Restart the machine without turning the power switch off. Use this to deal with any unstable operation by the machine. (Same as the computer restart.)

Security Settings

Configures security settings.

Security Quick Setup

[Home] key > [...] > [System Menu] > [Security Settings] > [Security Quick Setup]

Item	Description
Security Quick Setup	<p>Select a security level close to the your operating environment, and customize the security functions as necessary.</p> <p>Value</p> <p>Level 1: This is the factory default.</p> <p>Level 2: The security functions of network are changed.</p> <p>Level 3: All functions that protect the machine are enabled, and functions that are not protected are disabled.</p> <p> NOTE</p> <ul style="list-style-type: none"> This function is available when you have logged in as administrator. <ul style="list-style-type: none"> ➔ Adding a User (Local User List) (page 9-6) The settings will be enabled when the device or network is restarted after selecting the level. <ul style="list-style-type: none"> ➔ Restart Entire Device (page 8-95) ➔ Restart Network (page 8-73) If you change any security settings after selecting the security level, "Custom" is displayed on Security Quick Setup.

The configuration methods are as follows:

1 Display the screen.

[Home] key > [...] > [System Menu] > [Security Settings] > [Security Quick Setup]

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 Select a security level according to your operating environment.**3 Configure the security function as necessary.****NOTE**

Refer to the following for the settings of each security level.

➔ [Functions List of Security Quick Setup \(page 11-33\)](#)

4 Restart the device or network.

➔ [Restart Entire Device \(page 8-95\)](#)

➔ [Restart Network \(page 8-73\)](#)

Interface Block Setting



[Home] key > [...] > [System Menu] > [Security Settings] > "Interface Block Setting"

This allows you to protect this machine by blocking the interface with external devices such as USB hosts or optional interfaces.

Item	Description
USB Host	This locks and protects the USB port (USB host). Value: Unblock, Block
USB Device	This locks and protects the USB interface connector (USB Device). Value: Unblock, Block
USB Drive	This locks and protects the USB memory slot. Value: Unblock, Block NOTE This function is available when USB Host is set to [Unblock].
Optional Interface 1	This locks and protects the optional interface slots. Value: Unblock, Block NOTE You can set this feature for each slot.
Optional Interface 2	
Restart Entire Device	Restart the machine without turning the power switch off. IMPORTANT After changing "Interface Block Setting", restart the network or turn the machine OFF and then ON.

Device Security Settings

[Home] key > [...] > [System Menu] > [Security Settings] > "Device Security Settings"







Item	Description
Unusable Time *1	Set a time period during which the machine will not print received faxes. ➔ FAX Operation Guide
Job Status /Job Logs Settings	➔ Job Status/Job Logs Settings (page 8-54)
Security Level	Specify the security level. Value Low: This mode is used during maintenance. Do not use normally. High: This is the security setting we recommend. Use this setting normally. Very High: In addition to [High] setting, this setting disables the machine settings to be changed from external command.  NOTE This function is available when you have logged in as machine administrator. ➔ Adding a User (Local User List) (page 9-6)
Remote Printing	➔ Remote Printing (page 8-52)
Software Verification	Verify the installed software. Select [Start Verification] to start verification. If an error occurs during software verification, contact your dealer or service representative.
Administrator Authentication on Firm Update	Request administrator to approve when updating firmware. Value: Off, On
Allowlisting	In case if the unauthorized program or the program that has tampered are installed, the stored data or the contents of the communication in this program might be stolen. Once this function is activated, execution of the unauthorized software or the tampering of the software can be prevented, and possible to maintain the reliability of the system. Value: Off, On  NOTE <ul style="list-style-type: none"> • After setting to [On], it is necessary to turn the power off and on. • Once this function is activated, the start up of this product will be slowed. • When detecting the malicious program, there are two types of method "Event report" and "Event log" to grasp the contents. The Event report can be enable by Command Center RX > "Management Settings: Notification/Report" [Recipient1 (to 3) E-mail Address] > specify the mail address, and [Notify when Malicious Program is Detected] > [On]. The Event log can be enable by Command Center RX > "Management Settings: History settings" [Device Log History] > [On] or, from the machine's control panel, [Home] key > [...] > [System Menu] > [Notification/Report] > "History settings" [Device Log History Settings] > [Device Log History] > [On]. • In case of setting [Security Quick Setup screen] to [Level 3], [Device Log History] in the [Management Settings: History Settings] will be set to [On]. ➔ Remote Printing (page 8-52)
Remaining Print Jobs on Logging out	This setting is for print jobs that require security considerations such as jobs with passwords. If [Cancel] is selected, any print jobs including suspended one are canceled when the user logs out. Value: Cancel, Continue
Administrator Authentication on Data Import/Export	Request administrator to approve when importing or exporting data. Value: Off, On


*1 Displayed only when the optional FAX Kit is installed.


Data Security

[Home] key > [...] > [System Menu] > [Security Settings] > "Device Security Settings" [Data Security]

Configure settings for data stored in the SSD, hard disk, and machine's memory.

Item	Description
Hard Disk/SSD Initialization	Change security functions.  NOTE <ul style="list-style-type: none"> This function is displayed when the Data Security Function is active. Enter the security password to change security functions. The default setting is "000000".
Data Overwrite Method	The method used to overwrite data can be changed. Refer to the following for details.  Data Encryption/Overwrite Operation Guide Value 1-time Overwrite Method: The 1-time overwrite method overwrites unneeded data areas (in the case of overwriting) or all the data areas (in the case of system initialization) with specific numbers to prevent data restoration. 3-time Overwrite Method (A): The 3-time overwrite method complies with DoD 5220.22-M, and overwrites unneeded data areas (in the case of overwriting) or all the data areas (in the case of system initialization) with specific numbers, their complements, and random numbers to prevent data restoration. Data restoration is not possible even through a sophisticated restoration technique.  NOTE The 3-time Overwrite Method (A) may take more time than the 1-time Overwrite Method.
Security Password	Customize the security password so that only the administrator can use the Data Encryption/Overwrite. Enter a new security password 6 to 16 alphanumeric characters and symbols. Enter the password again for confirmation.  IMPORTANT Avoid any easy-to-guess numbers for the security password (e.g. 11111111 or 12345678).
System Initialization	Overwrite all the data stored in the hard disk/SSD when disposing of the machine.  IMPORTANT If you accidentally turn the power switch off during initialization, the hard disk/SSD might possibly crash or initialization might fail.  NOTE If you accidentally turn the power switch off during initialization, turn the power switch on again. Initialization automatically restarts.

Item	Description
Data Sanitization	<p>Return the following information registered in the machine to the factory defaults.</p> <ul style="list-style-type: none">• Address Book• Favorites• System settings• Fax transmission and reception / forwarding data• Transmission histories• Local FAX Name• Local FAX Number• Data saved in Custom Box• Optional applications <p> NOTE</p> <ul style="list-style-type: none">• Print the data sanitization report and then confirm that security data is deleted.<ul style="list-style-type: none">➔ Data Sanitization Report (page 8-29)• Once in progress, the processing cannot canceled.• Before performing this function, disconnect modular, network, and other cables.• Before performing this function, set all interface block settings to [Unblock].<ul style="list-style-type: none">➔ Interface Block Setting (page 8-76)• Do not turn the power off while sanitizing the data. If the power is turned off during data erasing, erasing will be executed automatically when the power is restored, however, complete erasure cannot be guaranteed.


Item	Description
Run Immediately	Data Sanitization will be performed.
Reserve a Sanitization Time	<p>Completely erase address and image data saved in the device at the scheduled time.</p> <p>Value: Off, On</p> <p>If [On] is selected, set the date and time that sanitization is to be performed. The setting range is Year (2000 to 2035), Month (1 to 12), Day (1 to 31), Hour (0 to 23).</p>
Device Use After Sanitization	<p>The device use restriction after the data sanitization is completed.</p> <p>The device cannot be used if [Prohibit] is selected.</p> <p>Value: Permit, Prohibit</p>
Data Overwrite Method	<p>The method used to overwrite data can be changed.</p> <p>Refer to the following for details.</p> <p>➤ Data Encryption/Overwrite Operation Guide</p> <p>Value:</p> <p>3-time Overwrite Method (A): The 3-time overwrite method complies with DoD 5220.22-M, and overwrites unneeded data areas (in the case of overwriting) or all the data areas (in the case of system initialization) with specific numbers, their complements, and random numbers to prevent data restoration. Data restoration is not possible even through a sophisticated restoration technique.</p> <p>7-time Overwrite Method (A): The 7-time overwrite method complies with DoD 5220.22-M, and overwrites unneeded data areas (in the case of overwriting) with specific numbers, their complements, and random numbers to prevent data restoration. Data restoration is not possible even through a sophisticated restoration technique.</p> <p>7-time Overwrite Method (B): The 7-time overwrite method complies with BSI/VSITR, and overwrites unneeded data areas (in the case of overwriting) with specific numbers, their complements, and random numbers to prevent data restoration. Data restoration is not possible even through a sophisticated restoration technique.</p> <p> NOTE</p> <p>The 7-time Overwrite Method (A) or 7-time Overwrite Method (B) may take more time than the 3-time Overwrite Method (A).</p>
Data Sanitization Report	Print the data sanitization report.

Information erased

Category	Data erased
Devices/jobs	<ul style="list-style-type: none"> • Job settings configured by users • Network settings • Image data saved in Document Box, etc. • Data registered in One Touch keys • Job histories • User information (user list, address book, Document Box registered by the user, etc.) • Account information of job accounting • Network certificates • Initial screen on machine changed by service representative
FAX (Option)	<ul style="list-style-type: none"> • Fax settings configured by users • Communication restriction settings • Encryption key settings • Transmission histories • Scheduled jobs • Conditional reception/forwarding settings
Application/favorite	<ul style="list-style-type: none"> • Application/favorite added by a user or service representative • Trial functions

Installation of OCR Dictionary


[Home] key > [...] > [System Menu] > [Security Settings] > "Device Security Settings" [Installation of OCR Dictionary]

Item	Description
OCR Dictionary Installation	<p>Install the OCR Dictionary.</p> <p> NOTE For information on dictionary data, consult your Service Representative.</p>

Backup and Restore

[Home] key > [...] > [System Menu] > [Security Settings] > "Device Security Settings" [Backup and Restore]

Make settings relating to backup of documents or settings currently stored on the system.

Item	Description
Backup	-
Run Immediately	Specify the backup destination to start the backup.
Auto Backup	<p>Data in the system is backed up at the specified time. Backup cannot be run if the system is turned off at the specified date and time. When Auto Backup is performed, the data is saved to the directory set at [Backup Location Settings].</p> <p>Value: Off, Daily, Weekly When [Daily] is set, set the time to run the backup. Value: Hour (0 to 23), Minute (0 to 59) When [Weekly] is set, set the day of the week and time to run the backup. Value: Monday to Sunday, Hour (0 to 23), Minute (0 to 59)</p>
Items to Backup	<p>Set the data to back up.</p> <p>Value: All: All data excluding the documents of the fax related box are saved. Specify Each Item: Set the data to back up individually. Include Documents of Fax Related Box: Set whether to save the documents of the fax related box.</p> <p> NOTE For details on data to be backed up, refer to the following. ▶ Items to Backup (page 8-82)</p>
Restore	<p>Imports the backup data. Select the directory where the backup data is stored, and select the backup file to import.</p> <p>Value: USB, SMB</p>
History Settings	Display the backup or restore history.
Backup Location Settings	Make settings when saving backups to SMB.

Items to Backup

Category	Data erased
Machine Settings	<ul style="list-style-type: none"> • Device Settings • Network settings • Job Accounting/Authentication • Media Catalog
User Information and Box	<ul style="list-style-type: none"> • Documents of Custom Box • Fax Related Box/Forward Settings • Favorites, Shortcuts, etc. • Common Address Book • Departmental Address Book • Document files of the box


Confidential Document Detection Setting

[Home] key > [...] > [System Menu] > [Security Settings] > "Device Security Settings" [Confidential Document Detection Setting]


Configure confidential document detection settings.

You can block confidential document scanning to prevent important data from being leaked.

Watermarks, header/footer settings and stamp (image, size, colour) can be registered as detection means.

 **NOTE**

Depending on the characteristics of the watermark (such as being faint or small) and the condition of the document being scanned, it may not be detected as a confidential document.

Item		Description
Confidential Document Detection		<p>If information that identifies the document as confidential is detected on the scanned document, scanning is stopped automatically.</p> <p>Value:</p> <p>On (Display Alert): If information that identifies the document as confidential is detected, a warning is displayed.</p> <p>On (Request Password): If information that identifies the document as confidential is detected, a password input screen is displayed.</p> <p>On (Cancel job): If information that identifies the document as confidential is detected, the executed job is canceled.</p> <p>Off: Information that indicates the document as confidential will not be detected.</p> <p> NOTE</p> <p>If you selected [On (Request Password)], set the password. The password may be between 6 and 16 characters long.</p>
Text to Detect	Watermark	<p>Select the watermark text string to detect. (Multiple items may be selected.)</p> <p>Value: CLASSIFIED, CONFIDENTIAL, DO NOT COPY, TOP SECRET, NO COPYING</p>
	Header/Footer	<p>Select the header/footer text string to detect. (Multiple items may be selected.)</p> <p>Value: CLASSIFIED, CONFIDENTIAL, DO NOT COPY, TOP SECRET, NO COPYING</p>
Language	Watermark	Set the language for the [Text to Detect].
	Header/Footer	
Position to Detect (Header/ Footer)		<p>Select the [Text to Detect] detection position. (Multiple items may be selected.)</p> <p>Value: Top Right, Top Middle, Top Left, Bottom Right, Bottom Middle, Bottom Left</p>
Text Registration (Header/ Footer)		<p>[Text to Detect] can be registered.</p> <p>Value: Text 1 (to 5) (Up to 32 characters)</p>

Item	Description
Detection Sensitivity	Set the detection sensitivity for each watermark selected in [Text to Detect].
Sensitivity Range	Set the detection sensitivity. Value: 1 (Low) to 5 (High)
Stamp box setting (Command Center RX)	Register the stamp (image, size, colour) to be detected. Procedure: <ol style="list-style-type: none">1 Using the document application, create a document with the image, size and colour stamp to be detected placed on a blank page (one page) of any desired size.2 Save the document you create as a PDF file.3 Register this saved PDF file to this machine by the stamp box setting of Command Center RX. <p>➔ Command Center RX User Guide</p>

System Stamp




[Home] key > [...] > [System Menu] > [Security Settings] > "System Stamp"


Printing Jobs

[Home] key > [...] > [System Menu] > [Security Settings] > "System Stamp" [Printing Jobs]

Configure settings for stamps when a document is printed.

After configuring the setting, return to the Copying Functions or Custom Box (Printing a Document) screen from System Menu, and select the [Reset] key.

Item		Description
Text Stamp	Text Stamp	Select whether to print a text stamp on all printing jobs. Value: Off, On  NOTE When [On] is selected, the Text Stamp settings cannot be changed when printing.
	Edit Text	Select a text string to be stamped from templates, or enter a maximum of 32 characters for the text string.  NOTE Templates that have been set will appear. For details on registering templates, refer to the following: ➔ Text (Text Stamp) (page 8-35)
	Stamp Method	Select the stamp method for the text stamp. Value: Each Print Page, Each Original Page
	Position	Set the text stamp position. Value: Top Left, Top Middle, Top Right, Middle Left, Center, Middle Right, Bottom Left, Bottom Middle, Bottom Right  NOTE Specify the detailed stamp position using numeric values, and to set the stamp position and angle when a stamp is placed on the back side of the paper in duplex printing.
	Font	Set the font of the text stamp. Value Font: Courier, Letter Gothic Size: Font sizes registered in Font (Text Stamp) are displayed. ➔ Font Size (Text Stamp) (page 8-35) Color: Black, White Style: None, Bold, Italic, Bold/Italic Display Pattern: Transparent, Clipping, Overwrite Density: 10 to 100% (in 10% increments)




Item		Description
Bates Stamp	Bates Stamp	Select whether to print a bates stamp on all printing jobs. Value: Off, On  NOTE When [On] is selected, the Bates Stamp settings cannot be changed when printing.
	Edit Text	Set the default Bates Stamp. (Max.: 6) Value: Date, User Name, Serial Number, Numbering, Text 1, Text 2  NOTE To set [Text 1] or [Text 2], enter a maximum of 32 characters for the text string.
	Date Format	Set the date display format. Value: MM/DD/YYYY (Month/Day/Year), DD/MM/YYYY (Day/Month/Year), YYYY/MM/DD (Year/Month/Day)
	Numbering Default	Set the starting sequence number. If you select [Fixed Digit Number] > [On], you can set the number of digits of the serial number (1 to 7 digits). Value Start #: 1 to 9999999 Fixed Digit Number: Off, On
	Position	Set the stamp position to be printed. Value: Top Left, Top Middle, Top Right, Middle Left, Center, Middle Right, Bottom Left, Bottom Middle, Bottom Right  NOTE Specify the detailed stamp position using numeric values, and to set the stamp position when a stamp is placed on the back side of the paper in duplex printing.
	Font	Set the font of the text stamp. Value Font: Courier, Letter Gothic Size: Font sizes registered in Font (Text Stamp) are displayed. ➔ Font Size (Bates Stamp) (page 8-35) Character Border: Off, Circle, Rectangle, Underline Color: Black, White Style: None, Bold, Italic, Bold/Italic Display Pattern: Transparent, Clipping, Overwrite Density: 10 to 100% (in 10% increments)

Sending Jobs

[Home] key > [...] > [System Menu] > [Security Settings] > "System Stamp" [Sending Jobs]

Configure stamp settings for sending documents.

After configuring the setting, return to the Sending Functions or Custom Box (Sending Documents) screen from System Menu, and select the [Reset] key.

Item		Description
Text Stamp	Text Stamp	Select whether to print a text stamp on all sending jobs. Value: Off, On  NOTE When [On] is selected, the Text Stamp settings cannot be changed when sending.
	Edit Text	Select a text string to be stamped from templates, or enter a maximum of 32 characters for the text string.  NOTE Templates that have been set will appear. For details on registering templates, refer to the following: ➔ Text (Text Stamp) (page 8-35)
	Position	Set the text stamp position. Value: Top Left, Top Middle, Top Right, Middle Left, Center, Middle Right, Bottom Left, Bottom Middle, Bottom Right  NOTE Specify the detailed stamp position using numeric values, and to set the stamp angle.
	Font	Set the font of the text stamp. Value Font: Courier, Letter Gothic Size: Font sizes registered in Font (Text Stamp) are displayed. ➔ Font Size (Text Stamp) (page 8-35) Character Border: Off, Circle, Rectangle, Underline Color: Black, Cyan, Magenta, Yellow, Red, Green, Blue, White Style: None, Bold, Italic, Bold/Italic Display Pattern: Transparent, Clipping, Overwrite Density: 10 to 100% (in 10% increments)




Item		Description
Bates Stamp	Bates Stamp	Select whether to print a bates stamp on all sending jobs. Value: Off, On  NOTE When [On] is selected, the Bates Stamp settings cannot be changed when printing.
	Edit Text	Set the default Bates Stamp. (Max.: 6) Value: Date, User Name, Serial Number, Numbering, Text 1, Text 2  NOTE To set [Text 1] or [Text 2], enter a maximum of 32 characters for the text string.
	Date Format	Set the date display format. Value: MM/DD/YYYY (Month/Day/Year), DD/MM/YYYY (Day/Month/Year), YYYY/MM/DD (Year/Month/Day)
	Numbering Default	Set the starting sequence number. If you select [Fixed Digit Number] > [On], you can set the number of digits of the serial number (1 to 7 digits). Value Start #: 1 to 9999999 Fixed Digit Number: Off, On
	Position	Set the stamp position to be printed. Value: Top Left, Top Middle, Top Right, Middle Left, Center, Middle Right, Bottom Left, Bottom Middle, Bottom Right  NOTE Specify the detailed stamp position using numeric values.
	Font	Set the font of the text stamp. Value Font: Courier, Letter Gothic Size: Font sizes registered in Font (Text Stamp) are displayed. ➔ Font Size (Bates Stamp) (page 8-35) Color: Black, Cyan, Magenta, Yellow, Red, Green, Blue, White Style: None, Bold, Italic, Bold/Italic Display Pattern: Transparent, Clipping, Overwrite Density: 10 to 100% (in 10% increments)

Storing Jobs

[Home] key > [...] > [System Menu] > [Security Settings] > "System Stamp" [Storing Jobs]

Configure stamp settings for storing documents in USB drive.

After configuring the setting, return to the Custom Box (Storing Documents) screen from System Menu, and select the [Reset] key.

Item		Description
Text Stamp	Text Stamp	<p>Select whether to print a text stamp on all storing jobs.</p> <p>Value: Off, On</p> <p> NOTE When [On] is selected, the Text Stamp settings cannot be changed when storing.</p>
	Edit Text	<p>Select a text string to be stamped from templates, or enter a maximum of 32 characters for the text string.</p> <p> NOTE Templates that have been set will appear. For details on registering templates, refer to the following: ➔ Text (Text Stamp) (page 8-35)</p>
	Position	<p>Set the text stamp position.</p> <p>Value: Top Left, Top Middle, Top Right, Middle Left, Center, Middle Right, Bottom Left, Bottom Middle, Bottom Right</p> <p> NOTE Specify the detailed stamp position using numeric values.</p>
	Font	<p>Set the font of the text stamp.</p> <p>Value Font: Courier, Letter Gothic Size: Font sizes registered in Font (Text Stamp) are displayed. ➔ Font Size (Text Stamp) (page 8-35) Color: Black, Cyan, Magenta, Yellow, Red, Green, Blue, White Style: None, Bold, Italic, Bold/Italic Display Pattern: Transparent, Clipping, Overwrite Density: 10 to 100% (in 10% increments)</p>

Item		Description
Bates Stamp	Bates Stamp	Select whether to print a bates stamp on all storing jobs. Value: Off, On  NOTE When [On] is selected, the Bates Stamp settings cannot be changed when storing.
	Edit Text	Set the default Bates Stamp. (Max.: 6) Value: Date, User Name, Serial Number, Numbering, Text 1, Text 2  NOTE To set [Text 1] or [Text 2], enter a maximum of 32 characters for the text string.
	Date Format	Set the date display format. Value: MM/DD/YYYY (Month/Day/Year), DD/MM/YYYY (Day/Month/Year), YYYY/MM/DD (Year/Month/Day)
	Numbering Default	Set the starting sequence number. If you select [Fixed Digit Number] > [On], you can set the number of digits of the serial number (1 to 7 digits). Value Start #: 1 to 9999999 Fixed Digit Number: Off, On
	Position	Set the stamp position to be printed. Value: Top Left, Top Middle, Top Right, Middle Left, Center, Middle Right, Bottom Left, Bottom Middle, Bottom Right  NOTE Specify the detailed stamp position using numeric values, and to set the stamp angle.
	Font	Set the font of the text stamp. Value Font: Courier, Letter Gothic Size: Font sizes registered in Font (Text Stamp) are displayed. ➔ Font Size (Bates Stamp) (page 8-35) Character Border: Off, Circle, Rectangle, Underline Color: Black, Cyan, Magenta, Yellow, Red, Green, Blue, White Style: None, Bold, Italic, Bold/Italic Display Pattern: Transparent, Clipping, Overwrite Density: 10 to 100% (in 10% increments)

Authentication Security

[Home] key > [...] > [System Menu] > [Security Settings] > "Authentication Security"

If user authentication is enabled, configure the user authentication settings.

➔ [Authentication Security \(page 9-4\)](#)

Unknown User Settings

[Home] key > [...] > [System Menu] > [Security Settings] > "Unknown User Settings"

This specifies the behavior for handling the jobs sent with unknown or unsend login user names or User ID.



NOTE

This function is displayed in case if User login administration or Job accounting is enabled.

➔ [Unknown ID Job \(page 9-47\)](#)

Network

[Home] key > [...] > [System Menu] > [Security Settings] > "Network"

Item	Description
TLS	Select whether to use TLS for communication. Value: Off, On
Network Access	Select whether to communicate using SNMP and IPSec. ➔ SNMPv1/v2c (page 8-66) ➔ SNMPv3 (page 8-66) ➔ IPSec (page 8-69)

Job Accounting/Authentication

[Home] key > [...] > [System Menu] > [Job Accounting/Authentication]

Configure settings related to machine management.

- ➔ [Overview of User Login Administration \(page 9-2\)](#)
- ➔ [Overview of Job Accounting \(page 9-29\)](#)
- ➔ [Authentication Security \(page 9-4\)](#)
- ➔ [Unknown User Settings \(page 9-47\)](#)
- ➔ [ID Card Settings \(page 9-25\)](#)

Add/Delete Application

[Home] key > [...] > [System Menu] > [Add/Delete Application]

Configure settings for Application.

- ➔ [Application \(page 5-10\)](#)
- ➔ [Applications \(page 11-7\)](#)

Adjustment/Maintenance


Adjust printing quality and conduct machine maintenance.

Image Adjustment

[Home] key > [...] > [System Menu] > [Adjustment/Maintenance] > "Image Adjustment"

Item		Description
Density		Adjust density.
Copy		Adjust copy density. Adjustment can be made in 7 levels. Value: -3 (Lighter), -2, -1, 0 (Normal), +1, +2, +3 (Darker)
Send/Box		Adjust scan density when sending or storing the data in Document Box. Adjustment can be made in 7 levels. Value: -3 (Lighter), -2, -1, 0 (Normal), +1, +2, +3 (Darker)
Fax^{*1}		➔ FAX Operation Guide
Clarify Text (Noise Removal) Settings		Adjust the legibility of characters.
Clarify Text Level		Value: 1 (low), 2 (normal), 3 (high)
Noise Removal Level		Value: Off, On (1 (low), 2 (normal), 3 (high))
Background Density Adj.		Darkens or lightens overall background density adjustment.
Copy (Auto)		Darkens or lightens overall background density adjustment during copying. Adjustment can be made in 7 levels. Value: -3 (Lighter), -2, -1, 0 (Normal), +1, +2, +3 (Darker)
Send/Box (Auto)		Darkens or lightens overall background density when sending images or storing them in the Document Box. Adjustment can be made in 7 levels. Value: -3 (Lighter), -2, -1, 0 (Normal), +1, +2, +3 (Darker)
Sharpness Adjustment		Adjust the sharpness of the image outline.
Copy	All	Sharpen or blur overall image outlines during copying. Adjustment can be made in 7 levels. Value: -3 (Blur), -2, -1, 0, +1, +2, +3 (Sharpen)
	Text/ Fine Line	Sharpen text/fine line during copying. Adjustment can be made in 4 levels. Value: 0 (Normal), 1, 2, 3 (Sharpen)
Send/ Box	All	Sharpen or blur overall image outlines when sending or storing them in the Document Box. Adjustment can be made in 7 levels. Value: -3 (Blur), -2, -1, 0, +1, +2, +3 (Sharpen)
	Text/ Fine Line	Adjust sharpness of the text/fine line when during sending or storing them in the Document Box. Adjustment can be made in 4 levels. Value: 0 (Normal), 1, 2, 3 (Sharpen)
Contrast		You can increase or decrease the overall contrast.
Copy		Increases or decreases the overall contrast of copies. Value: -3 (Lower), -2, -1, 0 (Normal), +1, +2, +3 (Higher)
Send/Box		Increases or decreases the overall contrast when documents are sent or saved in a document box. Value: -3 (Lower), -2, -1, 0 (Normal), +1, +2, +3 (Higher)




Item	Description
Auto Color Correction	<p>This setting allows you to adjust the detection level used by the machine to determine whether the original is color or black and white in Auto Color Selection Mode. Setting a lower value will result in more originals being identified as color, while a larger value will tend to increase the number of originals being identified as black and white.</p> <p>Value: 1 (Color), 2, 3, 4, 5 (B & W)</p>
Correcting Black Lines	<p>Correct fine lines (streaks caused by contamination), which may appear on the image, when the document processor is used.</p> <p>Value</p> <p>Off: No correction performed.</p> <p>On (Low): Correction performed. The reproduction of fine lines on the original may become lighter than when using [Off].</p> <p>On (High): Select this item if a streak remains after using [On (Low)]. The reproduction of fine lines on the original may become lighter than when using [On (Low)].</p>
Image Adjustment	<p>Select any of the adjustment menus to execute image adjustments to improve the printed image.</p> <p>➔</p>
Drum Refresh	<p>Remove image blur and white dots from the printout. It takes about 1 minute and 20 seconds. The time required may vary depending on the operating environment.</p> <p>Value: Execute, Not Execute</p> <p> NOTE</p> <p>Drum Refresh cannot be performed while printing, Execute Drum Refresh after the printing is done.</p>
Developer Refresh	<p>Adjust the printed image that is too light or incomplete, even though there is enough toner.</p> <p>Value: Execute, Not Execute</p> <p> NOTE</p> <p>Waiting time may be longer when the toner is refilled during developer refresh.</p>
Laser Scanner Cleaning	<p>Remove vertical white lines from the printout.</p> <p>Value: Execute, Not Execute</p>
Calibration	<p>Calibrate the device to ensure correct toner overlapping and consistency with the original tone.</p> <p>Value: Execute, Not Execute</p> <p> NOTE</p> <p>Perform Color Registration when correct toner overlapping is not ensured even after performing Calibration, and perform Tone Curve Adjustment if consistency with the original tone is not ensured.</p>
Calibration Cycle	<p>Set the calibration cycle.</p> <p>Value:</p> <p>Auto: Automatically sets the cycle for calibration.</p> <p>Short: Priority is given to image quality.</p> <p>Standard: Balances image quality and print speed.</p> <p>Long: Priority is given to print speed.</p> <p> NOTE</p> <p>When [Custom] is displayed as setting item, the setting cannot be changed.</p>

Item	Description
Calibration	<p>Calibrate the device to ensure correct color overlapping and consistency with the original tone by media type.</p> <p>➔ Calibration (page 10-52)</p> <p> NOTE</p> <ul style="list-style-type: none"> • This calibration also will be applied to the cassettes and multipurpose tray which have same media type paper. • Perform Color Registration when correct toner overlapping is not ensured even after performing Calibration, and perform Tone Curve Adjustment if consistency with the original tone is not ensured.
Tone Curve Adjustment (Simple)	<p>After prolonged use, or from the effects of surrounding temperature or humidity, the printed output tone may differ from the original. Perform this function to ensure consistency with the original tone.</p> <p>➔ Tone Curve Adjustment (page 10-48)</p>
Tone Curve Adjustment (Detail)	
Auto Drum Refresh	<p>This specifies the Auto Drum Refresh execution time.</p> <p>Value:</p> <p>Off: Auto Drum Refresh not performed.</p> <p>Short: Short Auto Drum Refresh execution time.</p> <p>Standard: Standard Auto Drum Refresh execution time.</p> <p>Long: Long Auto Drum Refresh execution time.</p>

*1 Displayed only when the optional FAX Kit is installed.


Behavior Adjustment

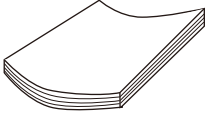[Home] key > [...] > [System Menu] > [Adjustment/Maintenance] > "Behavior Adjustment"

Item	Description
Correct Paper Curl	<p>Some paper types and paper stored in certain conditions may curl. This feature can be used to correct paper curling.</p> <p>Value: Auto, Reduce Downcurl, Reduce Upcurl</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p>Upcurl</p> </div> <div style="text-align: center;">  <p>Downcurl</p> </div> </div>
Silent Mode	<p>Set the Silent Mode. Select this mode when the running noise is uncomfortable.</p> <p>Value: Off, On</p> <p> NOTE</p> <p>When [On] is selected, it may take time for the next print job to start.</p>

Others

[Home] key > [...] > [System Menu] > [Adjustment/Maintenance] > "Others"

Item		Description
Diagnostics	Memory Diagnostics	Perform this function to check the machine memory.
	Software Verification	➔ Software Verification (page 8-77)
Online Software Update	Firmware	Check for any firmware updates.
	HyPAS Application	Check for any HyPAS application updates.
Online Software Update Settings	Firmware Update	<p>Check to see if online firmware update is available. Value: Allowed, Not Allowed</p> <p> NOTE If [Allowed] is selected, you can set [Notification of the Latest] to [On] to receive firmware update notifications.</p>
Restart/ Initialization	Restart Network	➔ Restart Network (page 8-69)
	Restart Network (Optional Network)	➔ Restart Network (page 8-73)
	Restart Entire Device	➔ Restart Entire Device (page 8-75)
	Format SD Card	<p>Format the SD card. To use an SD card, it is necessary to format the SD card on this machine first. When the formatting is complete, data can be written to the SD card.</p>
	System Initialization	➔ System Initialization (page 8-78)
Disabling Devices/Functions		Make settings when saving backups to SMB.

9 User Authentication and Accounting (User Login, Job Accounting)


This chapter explains the following topics:

Overview of User Login Administration	9-2	Job Accounting (Local)	9-32
Managing the Job Account from PC	9-2	Adding an Account	9-32
Enabling User Login Administration	9-3	Restricting the Use of the Machine	9-33
Setting User Login Administration	9-4	Editing an Account	9-34
Authentication Security	9-4	Deleting an Account	9-34
Adding a User (Local User List)	9-6	Job Accounting for Printing	9-35
Changing User Properties	9-8	Job Accounting for Scan Using	
Delete a user	9-9	TWAIN	9-36
User Login Administration for Printing	9-10	Job Accounting for Scan Using WIA	9-37
Managing the Users to Scan Using		Job Accounting for the FAX Transmitted	
TWAIN	9-11	from a Computer	9-38
Managing the Users to Scan Using		Configuring Job Accounting	9-39
WIA	9-12	Default Counter Limit	9-39
Managing the Users that Send Faxes		Count by Paper Size	9-40
from a PC	9-13	Counting the Number of Pages	
Local Authorization	9-14	Printed	9-41
Server Settings	9-15	Print Accounting Report	9-43
Configuring Network User Privileges	9-16	Using Job Accounting	9-44
Group Authorization Settings	9-17	Login	9-44
Guest Authorization Settings	9-19	Logout	9-44
Obtain NW User Property	9-21	Apply Limit	9-45
Simple Login Settings	9-22	Copier/Printer Count	9-46
ID Card Settings	9-25	Unknown User Settings	9-47
PIN Login	9-27	Unknown ID Job	9-47
Using User Login Administration	9-28	Registering Information for a User	
Login/Logout	9-28	whose ID is Unknown	9-48
Overview of Job Accounting	9-29		
To Manage the Number of Sheets Used			
on Jobs Printed from a PC	9-29		
Enabling Job Accounting	9-31		

Overview of User Login Administration

User login administration specifies how the user access is administered on this machine. Enter a correct login user name and password for user authentication to login.

- 1 Enable User Login Administration
 - ➔ [Enabling User Login Administration \(page 9-3\)](#)
- 2 Set the user
 - ➔ [Adding a User \(Local User List\) \(page 9-6\)](#)
- 3 Enter the login user name and password and execute the job
 - ➔ [Using User Login Administration \(page 9-28\)](#)

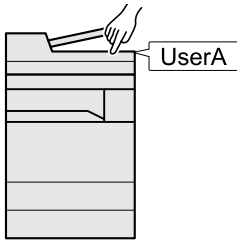

Access are in three levels - "User", "Administrator", and "Machine Administrator". The security levels can be modified only by the "Machine Administrator".


Managing the Job Account from PC

In addition to the above settings, the following are necessary to manage the job account from PC.

To Manage the Users to Print from PCs

Printer driver settings are necessary to manage the users that print on the machine from PCs.

- ➔ [User Login Administration for Printing \(page 9-10\)](#)

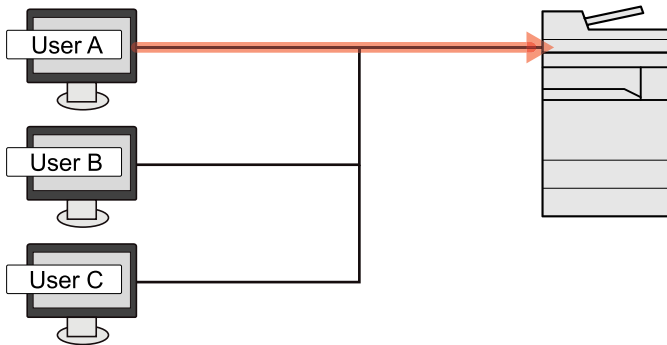

Managing the Users to Use TWAIN for Scanning

TWAIN driver settings on the PC are necessary to manage the users that use TWAIN for scanning.

- ➔ [Managing the Users to Scan Using TWAIN \(page 9-11\)](#)

Managing the Users to Use WIA for Scanning

WIA driver settings on the PC are necessary to manage the users that use WIA for scanning.

- ➔ [Managing the Users to Scan Using WIA \(page 9-12\)](#)

Managing the Users to Send Faxes from a PC

FAX driver settings on the PC are necessary to manage the users that send faxes from a PC.

- ➔ [Managing the Users that Send Faxes from a PC \(page 9-13\)](#)

The optional FAX Kit is required in order to make use of fax functionality.

Enabling User Login Administration

This enables user login administration. Select one of the following authentication methods:

Item	Descriptions
Local Authentication	User authentication based on user properties on the local user list stored in the machine.
Network Authentication	User authentication based on Authentication Server. Use a user property stored in Authentication Server to access the network authentication login page.

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "User Login Setting" [User Login].

2 Configure the settings.

Select [Local Authentication] or [Network Authentication].

Select [Off] to disable user login administration.

If you select [Local Authentication], set [Local Authorization].

➔ [Local Authorization \(page 9-14\)](#)

If you select [Network Authentication], set [Server Settings].

➔ [Server Settings \(page 9-15\)](#)



NOTE

If you cannot login because of the setting of the machine, login with any administrator registered in the local user list and correct the settings.

Setting User Login Administration

This registers, alters and deletes users and configures the settings for User Login Administration.

Authentication Security

If user authentication is enabled, configure the user authentication settings.

User Account Lockout Setting

You can prohibit the use of a user account if an incorrect password is entered repeatedly to login with that account.

1 Display the screen.

[Home] key > [...] > [System Menu] > [Job Accounting/Authentication] > "Authentication Security" [User Account Lockout Settings]



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 Configure the settings.

The following settings can be selected.

Item	Descriptions
Lockout	Select whether or not account lockout policy is enabled. Value: Off, On
Lockout Policy	Specify the conditions and the extent to which the account lockout is applied. Value Number of Retries until Locked: Specify how many login retries are allowed until the account is locked out. (1 to 10 times) Lockout Duration: Specify how long the account is to be locked out until it is unlocked. (1 to 60 minutes) Lockout Target: Specify the extent to which the account lockout is applied. You can select from [All] or [Remote Login Only]. Remote Login Only locks out all operations from outside the operation panel.
Locked out Users List	Displays a list of locked out users. You can unlock a user by selecting the user in the list, and selecting [Unlock]. NOTE This function is displayed when account lockout policy is enabled.

Password Policy Settings

You can prohibit the setting and use of passwords that do not comply with the password policy.

Setting the Password Policy makes it more difficult to break the password.

1 Display the screen.

[Home] key > [...] > [System Menu] > [Job Accounting/Authentication] > "Authentication Security"
[Password Policy Settings]



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 Configure the settings.

The following settings can be selected.

Item	Descriptions
Password Policy	Select whether or not password policy is enabled. Value: Off, On
Minimum Password Length	Set the minimum password length of characters for password. Value: Off, On (1 to 64 characters)
Password Complexity	Set the password complexity. Value Reject common PW and 3 consecutive same chars: Off, On At least one uppercase letter (A-Z): Off, On At least one lowercase letter (a-z): Off, On At least one number (0-9): Off, On At least one symbol: Off, On
Maximum Password Age	Set the maximum password age. Value: Off, On (1 to 180 days)
Policy Violated User List	List of users do not meet password policy requirements.

Adding a User (Local User List)

You can add up to 1000 users (including the default login user name).

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "User Login Setting" [Add/Edit Local User].

2 Enter the user information.

[Add] > Enter the user information

Item	Descriptions
User Name ^{*1}	Enter the name displayed on the user list (up to 32 characters).
Login User Name ^{*1}	Enter the login user name to login (up to 64 characters). The same login user name cannot be registered.
Login Password ^{*1}	Enter the password to login (up to 64 characters). Reenter the same password for confirmation.
Access Level Settings ^{*1}	Select "Administrator" or "User" for user access privileges.
Access Level	Select [Administrator] or [User] for user access privileges.
System Admin Permission	If the user privileges set in the [Access Level] are [User], select the privileges that can be set from the following. <ul style="list-style-type: none"> • Original/Paper Settings • Address Book • User/Job Account Information • Basic Network Settings • Basic Device Settings • Advanced Device/Network Settings
Account Name	Add an account where the user belongs. The user, who registered his/her account name, can login without entering the account ID. → Overview of Job Accounting (page 9-29) NOTE <ul style="list-style-type: none"> • Search by account ID or account name. Select either [No.] or [Name] to switch between [No.] and [Name]. • Select [Account Name] or [Account ID] to sort the account list.
Email Address	The user can register his/her E-mail address. The registered address will be automatically selected for subsequent operations that need any E-mail function.
ID Card Info	Register ID card information. Place the ID card on the ID card reader. NOTE This function is displayed when the optional ID Card Authentication Kit is activated. → Applications (page 11-7)

Item	Descriptions
Local Authorization *2	Set usage authority for each user.
Print Restriction	Select whether or not use of the print function of the printer is prohibited. Applicable print functions are as follows: <ul style="list-style-type: none"> • Print from Box • Print from USB Drive • Print Report • Print from PC
Copy Restriction	Select whether or not use of the copy print function is prohibited.
Duplex Restriction	Select whether only duplex printing is allowed.
Combine Restriction	Specify whether only Combine is allowed.
EcoPrint Restriction	Specify whether only EcoPrint is allowed.
Send Restriction	Select whether or not use of the send function is prohibited.
Fax TX Restriction *3	Select whether or not use of the fax send function is prohibited.
Storing Restriction in Box	Select whether or not use of the box store function is prohibited.
Storing Restr. in USB	Select whether or not use of the USB Drive store function is prohibited.
My Panel	You can register the language selection, initial screen, and shortcut settings for each user. Settings registered here can be applied simply by logging in.

*1 Be sure to enter the items.

*2 Displayed when Local Authorization is enabled.

➔ [Local Authorization \(page 9-14\)](#)

*3 Displayed only when the optional FAX Kit is installed.



NOTE

- For details on entering characters, refer to the following:
 ➔ [Character Entry Method \(page 11-9\)](#)
- If you selected [**Send**] or [**Fax**] in the Default Screen for "My Panel", select the screen to display from [**Destination**], [**Machine Address Book**], [**Individual Address Book**] or [**Ext Address Book**].

3 Select [Save].

A new user is added on the local user list.



NOTE

If simple login is enabled, a confirmation screen appears when new registration is finished asking if you will configure simple login settings. To configure simple login settings, select [**Yes**]. If you select [**No**], you will return to the user list screen.

For the procedure for configuring simple login settings, refer to the following:

➔ [Simple Login Settings \(page 9-22\)](#)

Changing User Properties

Types of user properties that could be changed may be different depending on user access privilege.

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "User Login Setting" [Add/Edit Local User].

2 Change the user properties.

Changing user properties

- 1 Select [⋮] (information icon) for the user whose properties you wish to change.



NOTE

- Select [User Name] or [Login User ID] to sort the user list.
- Search by name or login user name. Select either [Login Name] or [Name] to switch between [Login Name] and [Name].

- 2 Enter the user information.

Item
User Name
Login User Name ^{*1}
Login Password
Access Level Settings ^{*1}
Account Name ^{*1}
Email Address
ID Card Information ^{*1}
Local Authorization ^{*1*2}
My Panel

*1 You can change only when you log in with machine administrator authority.

*2 Displayed when Local Authorization is enabled.

➔ [Local Authorization \(page 9-14\)](#)

For details on each items, refer to step 3 of "Adding a User (Local User List)" to change a user property.

➔ [Adding a User \(Local User List\) \(page 9-6\)](#)

- 3 Select [Save].

The user information is changed.

Delete a user

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "User Login Setting" [Add/Edit Local User].

2 Delete a user

- 1 Select the user to delete.

- 2 [Delete] > [Delete]

The selected user will be deleted.



NOTE

The default user with machine administrator rights cannot be deleted.

User Login Administration for Printing


To manage the users that print on this machine from a PC, the following settings are necessary in the printer driver. Instructions are based on interface elements as they appear in Windows.

1 Display the screen.

- 1 Select **[Start]** button, **[All apps]**, **[Windows Tools]**, **[Control Panel]**, and **[Devices and Printers]**.
- 2 Right-click the printer driver icon of the machine, and click the **[Printer properties]** menu of the printer driver.
- 3 Click **[Administrator]** on the **[Device Settings]** tab.

2 Configure the settings.

- 1 Select **[User Login]** on the **[User Login]** tab.

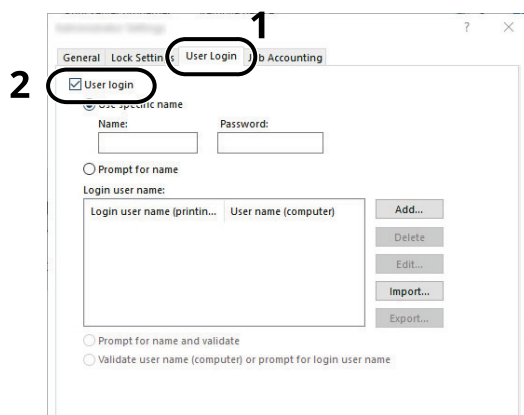

- 2 Set the User Login Administration.

[Use specific name]: This option can be used to specify a user name and password to use the same User login for every print job. If this option is selected, the user does not have to type the name and password for each print job.

[Prompt for name]: A screen for entering the user name and password will be displayed when attempting a printing. The user name and password must be entered each time a printing is attempted.

[Prompt for name and validate]: A screen for entering the user name and password will be displayed when attempting a printing. The user name and password stored in the Login user name list needs to be entered. The user name and password must be entered each time a printing is attempted.

[Validate user name (computer) or prompt for login user name]: When printing, the Windows user name is searched in the "Login user names" and printing is possible if the name is registered. If the name is not registered, the printing will be canceled for users with only user authority. If the user has administrator privileges, the screen to enter the user name and password will appear.

- 3 Click **[OK]**.



NOTE

For other settings of job accounting, refer to the following:


➔ **Printer Driver User Guide**

Managing the Users to Scan Using TWAIN

To manage the users that scan using TWAIN, the following settings are necessary in the TWAIN driver. Instructions are based on interface elements as they appear in Windows.

1 Display the screen.

- 1 Click the search box in the taskbar, and type "TWAIN Driver Setting" in there. Select [**TWAIN Driver Setting**] in the search list. TWAIN Driver screen is displayed.
- 2 Select the machine, and click [**Edit**].

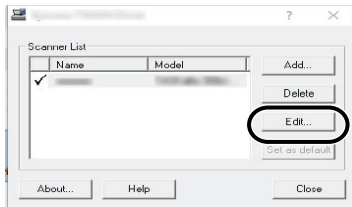

2 Configure the settings.

- 1 Click [**User Authentication Settings**].
- 2 Select the checkbox beside [**Authentication**], and enter Login User Name and Password.




- 3 Click [**OK**].

Managing the Users to Scan Using WIA

To manage the users that scan using WIA, the following settings are necessary in the WIA driver. Instructions are based on interface elements as they appear in Windows.


1 Display the screen.

- 1 Select the [Start] button, [All apps], [Windows Tools] and [Control Panel]. Enter "Scanner" into the search field on the control panel. Select [View scanners and cameras] in the search list then the Scanners and Cameras screen appears.
- 2 Select the same name as this machine from WIA Drivers, and press [Properties].

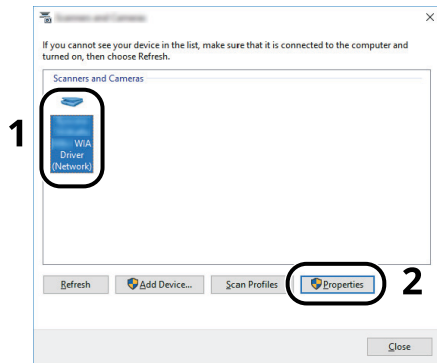

2 Configure the settings.

- 1 Select the checkbox beside [Authentication] on the [Settings] tab, and enter Login User Name and Password.

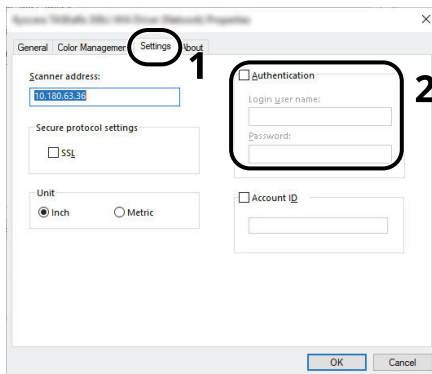

- 2 Click [OK].

Managing the Users that Send Faxes from a PC


To manage the users that send faxes from a PC, the following settings are necessary in the FAX driver. Instructions are based on interface elements as they appear in Windows.

1 Display the screen.

- 1 Select the [Start] button, [All apps], [Windows Tools], [Control Panel] and [Devices and Printers].
- 2 Right-click the printer driver icon of the machine, and click the [Printing preferences] menu of the printer driver.
- 3 Click [FAX TX Setting] on the [Printing Preferences] window.

2 Configure the settings.

- 1 Select [User Login] on the [Authentication] tab.

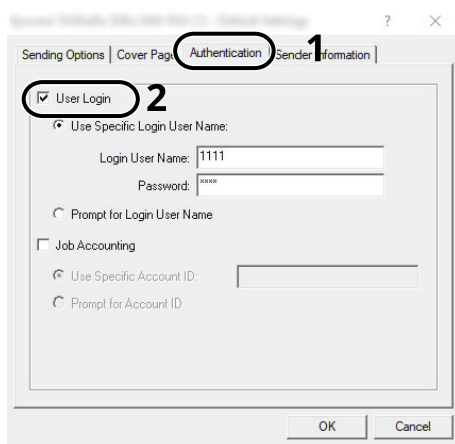

- 2 Set the User Login Administration.

[Use Specific Login User Name]: This option can be used to specify a user name and password to use the same User login for every FAX job. If this option is selected, the user does not have to type the name and password for each FAX job.

[Prompt for Login User Name]: A screen for entering the user name and password will be displayed when attempting a transmission. The user name and password must be entered each time a transmission is attempted.

- 3 Click [OK].

Local Authorization

Select whether or not to use Local Authorization.

NOTE

When using Local Authorization, the user authentication type must be set to **[Local Authentication]**.

➔ [Enabling User Login Administration \(page 9-3\)](#)

1 Display the screen.

- 1 **[Home]** key > [...] > **[System Menu]** > **[Job Accounting/Authentication]**

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "User Login Setting" **[Local Authorization]**.

2 Configure the settings.

Select **[Off]** or **[On]**.

Server Settings

Set the server type when network authentication is enabled.

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "User Login Setting" [User Login] > [Network Authentication]

2 Configure the settings.

- 1 Select [NTLM], [Kerberos] or [Ext.] as the server type and enter the host name (256 characters or less) for the Authentication Server.
When selecting [Ext.] as the server type, enter the port number.



NOTE

- Selecting [Add/Edit/Delete Domain] displays the domain registration list. In the domain registration list screen, select [Add/Edit], and enter the domain name. Up to 10 domain names can be registered.
- Once [Use Multiple Authentication Server] is done, network authentication will be done in the order of a primary server and a secondary server registered in the specified domain at the time of log-in.
- If two or more domains are registered, select [Default Domain] and select the default domain.

- 2 Select [OK].



NOTE

If the login user name and password are rejected, check the following settings.

- Network Authentication setting of the machine
- User property of the Authentication Server
- Date and time setting of the machine and the Authentication Server

Configuring Network User Privileges

Sets whether to grant local user privileges to network users.

By configuring this, the information of a network user who logs in will be registered as that of a local user.

By setting a department name to the registered local user information, network users can collaborate with the department management.

The domain name will be displayed in the user information of local users granted with privileges.

NOTE

Please refer to the following regarding local user information.

➔ [Adding a User \(Local User List\) \(page 9-6\)](#)

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "User Login Setting" [**Network User Authority**].

2 Configure the settings.

You can configure various settings by setting "Give Local User Authority" to "On."

Item	Descriptions
User Full Action	This is set when granting local user privileges to configure the actions that will be taken when the number of users exceeds the limit. Value: Off, On
Authority When Offline	Sets the expiration date of the granted local user privileges when network authentication is not used. Value: Always Enabled, Specify Enabled Period (1~180)
Local Authorization Defaults	Sets the allowed initial values of the local user privileges to be granted.

Group Authorization Settings

Set restrictions of the machine usage by each individual group registered in the authentication server.

NOTE

To use the group authorization settings, [**Network Authentication**] must be selected for the authentication method in "Enabling User Login Administration". Select [**On**] for "LDAP" in "Protocol Settings".

→ [Enabling User Login Administration \(page 9-3\)](#)

→ [Protocol Settings \(page 8-64\)](#)

Group Authorization

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "User Login Setting" [**Group Authorization**].

2 Configure the settings.

Select [**On**] or [**Off**].

Group List (Up to 20)

Register the groups that are restricted the machine usage. Other users and groups belong to "Others".

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "User Login Setting" [**Group List**].

2 Configure the settings.

[Add] > Add information on each item

Item	Descriptions
Group Name	Enter the name displayed on the group list (up to 32 characters).
Group ID*¹	Enter the ID displayed on the group list (between 1 and 4294967295).
Access Level	Select [Administrator] or [User] for group access privileges.
Print Restriction	Select whether or not to reject usage of print functions for the printer. Applicable print functions are as follows: <ul style="list-style-type: none"> • Print from Box • Print from USB Drive • Print Report • Print from PC

Item	Descriptions
Copy Restriction	Select whether or not to reject usage of copy functions.
Duplex Restriction	Select whether only duplex printing is allowed.
Combine Restriction	Specify whether only Combine is allowed.
EcoPrint Restriction	Specify whether only EcoPrint is allowed.
Send Restriction	Select whether or not to reject usage of the send functions.
Fax TX Restriction^{*2}	Select whether or not to reject usage of the FAX transmissions.
Storing Restriction in Box	Select whether or not to reject usage of storing in the document boxes.
Storing Restr. in USB	Select whether or not to reject usage of storing in the USB drive.

*1 For "Group ID", specify PrimaryGroupID assigned by Active Directory of Windows.

*2 Displayed only when the optional FAX Kit is installed.



NOTE

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 11-9\)](#)

3 Register the group.

Select [**Save**].

A new group is added on the group list.

Guest Authorization Settings

When User Login Administration is enabled, set the functions that guest users who cannot log in to the machine are allowed to use.

NOTE

To use Guest Authorization Set., User Login Administration must be enabled in "Enabling User Login Administration".

➔ [Enabling User Login Administration \(page 9-3\)](#)

Enabling Guest Authorization

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "User Login Setting" [**Guest Authorization Set.**].

2 Configure the settings.

Select [On] or [Off].

NOTE

- If the guest authorization setting is enabled, the [Logout] key must be selected when logging in.
- In the guest user default settings, only monochrome copying can be used. If you wish to use a different function, log in as a user who can use that function, or change the settings in the guest properties.

Configuring Guest Property

Register guest user information and functions that are restricted.

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "User Login Setting" [**Guest Property**].

2 Configure the settings.

Check the settings and change or add information as needed.

Item	Descriptions
User Name	Enter the name displayed on the user list (up to 32 characters). The default setting is "GuestUser".
Access Level	The authority of the user appears. This cannot be changed.
Account Name	Add an account where the user belongs. If the user does not belong to any account, select [Other Account].
Authorization Rules	<p>Set usage authority for each user. The items you can restrict the access level with are as follows.</p> <p>Print Restriction: Select whether or not use of the print function of the printer is prohibited. Applicable print functions are as follows:</p> <ul style="list-style-type: none"> • Print from Box • Print from USB Drive <p>Copy Restriction: Select whether or not use of the copy print function is prohibited.</p> <p>Duplex Restriction: Select whether only duplex printing is allowed.</p> <p>Combine Restrict.: Specify whether only Combine is allowed.</p> <p>EcoPrint Restriction: Specify whether only EcoPrint is allowed.</p> <p>Send Restriction: Select whether or not use of the send function is prohibited.</p> <p>Fax TX Restriction:^{*1} Select whether or not use of the fax send function is prohibited.</p> <p>Storing Restriction in Box: Select whether or not use of the box store function is prohibited.</p> <p>Storing Restr. in USB: Select whether or not use of the USB Drive store function is prohibited.</p>

*1 Displayed only when the optional FAX Kit is installed.

3 Register the guest user information.

Select [**OK**].

Obtain NW User Property

Set the required information to obtain the network user property from the LDAP server. The user name and E-mail address obtained with this setting is shown in the user information, the status confirmation screen, and the header of E-mail.


 **NOTE**

To obtain the network user property from the LDAP server, [**Network Authentication**] must be selected for the authentication method in "Enabling User Login Administration". Select [**On**] for "LDAP" in "Protocol Settings".

- ➔ [Enabling User Login Administration \(page 9-3\)](#)
- ➔ [Protocol Settings \(page 8-64\)](#)

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]

 **NOTE**

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "User Login Setting" [**Obtain NW User Property**].

2 Configure the settings.

Select [**On**] for "Obtain NW User Property" and add information on each item

Item	Descriptions
LDAP Server Information	
Server Name* ¹	Enter the LDAP server name or the IP address (up to 64 characters). If a server name is not entered, user information will be acquired from the server set for Network Authentication.
Port	Port number for LDAP server. The default port number is 389.
Acquisition of User Information	
Name 1* ²	Enter the LDAP Attribute to obtain the user name to be displayed from the LDAP server (up to 32 characters).
Name 2* ³	Enter the LDAP Attribute to obtain the user name to be displayed from the LDAP server (up to 32 characters).
Email Address* ⁴	Enter the LDAP Attribute to obtain the E-mail address from the LDAP server (up to 256 characters).
Authentic at Type* ⁵	Set the authentication method. Select [Simple] or [SASL]. After changing the setting, restart the system or turn the power off and then on.
Search Timeout	Set the amount of time to wait before time-out in seconds (from 5 to 255 seconds).
LDAP Security	Select the type of encryption according to the type of security employed by the LDAP server. The value is [Off], [TLS] or [STARTTLS].

- *1 If using Active Directory of Windows, the server name may be the same as the server name entered in the network authentication.
- *2 If using Active Directory of Windows, display Name of Attribute may be used as "Name 1".
- *3 "Name 2" can be left out. When you assign display Name in "Name 1" and department in "Name 2", and if the value of displayName is "Mike Smith" and the value of department is "Sales" in Active Directory of Windows, the user name appears as "Mike Smith Sales".
- *4 If using Active Directory of Windows, mail of Attribute may be used as E-mail Address.
- *5 Appears when the server type is set to "Kerberos" in "Network Authentication".

3 Select [OK].

Simple Login Settings

The simple login function allows users to log in simply by selecting a user name. Users must be registered in advance to use this functionality.

NOTE

- For user registration, refer to the following:
 - ➔ [Adding a User \(Local User List\) \(page 9-6\)](#)
- To use Simple Login, User Login Administration must be enabled in "Enabling User Login Administration".
 - ➔ [Enabling User Login Administration \(page 9-3\)](#)
- When the guest authorization setting is enabled, the Simple Login screen is not displayed.

Enabling Simple Login

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "User Login Setting" [**Simple Login**].

2 Configure the settings.

Select [**On**] or [**Off**].

Simple Login Key

Register users to use simple login. You can add up to 20 users.

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "User Login Setting" [Simple Login Key].

2 Enter the user information.

- 1 Select the key to which you want to register a user.
- 2 Enter the user name to be displayed.



NOTE

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 11-9\)](#)

- 3 Select [Select user].
- 4 To specify the user from local users, select [Local User]. To specify from network users, select [Network User].

The procedure differs depending on the transmission method selected.

Specifying the user from local users

Select the user to be set for simple login.



NOTE

- Search by login user name or name. Select either [Login Name] or [Name] to switch between [Login Name] and [Name].
- Select [User Name] or [Login User Name] to sort the user list.

Specifying the user from network users



Select the entry field for "Login User Name" and "Login Password", enter the information of the user to be registered, and select **[OK]**.

If you are specifying a user for whom a domain is set in network authentication, select the "Domain" and select the domain where the user is registered.



NOTE

For details on entering characters, refer to the following:

➔ [Character Entry Method \(page 11-9\)](#)

- 5 Select **[On]** or **[Off]** for "Password".
- 6 Select the user icon to be displayed.

3 Register the user.

Select **[Save]**.

ID Card Settings

If ID card authentication is enabled, select the authentication type.

NOTE

This function appears when the Card Authentication kit is activated.

➔ [Applications \(page 11-7\)](#)

Keyboard Login

When ID card authentication is enabled, select whether or not login by keyboard is allowed.

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "ID Card Settings" [**Keyboard Login**].

2 Configure the settings.

Select [**Permit**] or [**Prohibit**].

Additional Authentication

Select whether or not to require password entry after authenticating by ID card.

NOTE

This function does not appear when the server type is set to [NTLM] or [Kerberos] in "Network Authentication".

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "ID Card Settings" [Additional Authentication].

2 Configure the settings.

Select [Off], [Use Password] or [Use PIN Code].

NOTE

[Use PIN Code] is displayed only when using PIN Code Authorization.

➔ [PIN Login \(page 9-27\)](#)

Quick Job Printing

When a user logs in using an ID card, it displays a list of user-controlled print jobs that were saved in the job-holding box.

NOTE

For details about the quick job printing, please refer to the following.

➔ [Printing Documents from Private Print Box \(page 4-21\)](#)

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "User Login Setting" [Quick Job Printing].

2 Configure the settings.

Configure various settings by setting "Display List on Login" to [On].

Item	Description
Logout after Printing	Sets whether to automatically logout after printing.
Skip Password and Copies Confirmation	Sets whether or not to skip password code entry and verify the number of copies when printing.*1

*1 When a PIN codes is configured.

PIN Login

NOTE

When using PIN Code Authorization, the network authentication must be enabled and **[Ext.]** must be selected for server type.

➔ [Enabling User Login Administration \(page 9-3\)](#)

➔ [Server Settings \(page 9-15\)](#)

1 Display the screen.

- 1 **[Home]** key > [...] > **[System Menu]** > **[Job Accounting/Authentication]**

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "User Login Setting" **[PIN Login]**.

2 Configure the settings.

Select **[On]** or **[Off]**.

Using User Login Administration

This section explains procedures while setting job accounting.

Login/Logout

If user login administration is enabled, the login user name and login password entry screen appears each time you use this machine.

Use the procedure below to login and logout.

Login

If the login user name entry screen appears during operations, log in by referring to the following:

➔ [Login \(page 2-30\)](#)


Logout

When the operations are complete, select the **[Logout]** key to return to the login user name and login password entry screen.

Overview of Job Accounting

Job accounting manages the copy/print/scan/FAX count accumulated by individual accounts by assigning an ID to each account.


- 1 Enable job accounting.
 - ➔ [Enabling Job Accounting \(page 9-31\)](#)
- 2 Setting an account.
 - ➔ [Job Accounting \(Local\) \(page 9-32\)](#)
- 3 Enter the assigned account ID when performing the job.
 - ➔ [Using User Login Administration \(page 9-28\)](#)
- 4 Count the number of pages copied, printed, scanned and faxed.

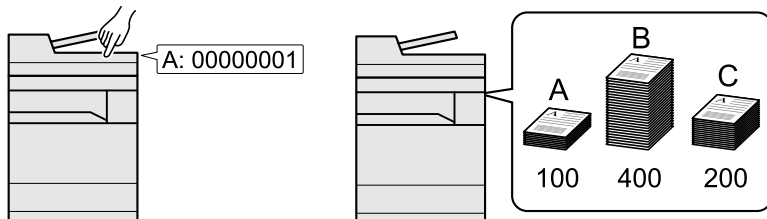

To Manage the Number of Sheets Used on Jobs Printed from a PC

To manage the number of jobs to be printed from the PC on the network, you need to configure settings by using the printer driver on the PC.

- 1 Set Job Accounting for the PC on the network by using the printer driver.
 - ➔ [Job Accounting for Printing \(page 9-35\)](#)
- 2 Execute printing.
- 3 Count the number of pages printed.

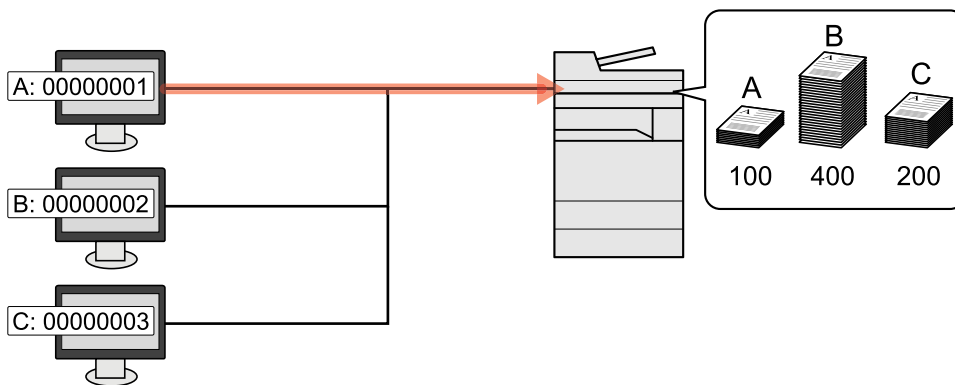

Managing the Scan Job Account by Using TWAIN

To manage the scan job account by using TWAIN, you need to configure the TWAIN driver settings on the computer connected to the machine.

➔ [Job Accounting for Scan Using TWAIN \(page 9-36\)](#)

Managing the Scan Job Account by Using WIA

To manage the scan job account by using WIA, you need to configure the WIA driver settings on the computer connected to the machine.

➔ [Job Accounting for Scan Using WIA \(page 9-37\)](#)

Managing the FAX Job Transmitted from a PC

To manage the number of FAX jobs transmitted from the PC, you need to configure the settings by using the FAX Driver on the PC.

➔ [Job Accounting for the FAX Transmitted from a Computer \(page 9-38\)](#)

The optional FAX Kit is required in order to make use of fax functionality.

Enabling Job Accounting

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]

 **NOTE**

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "Job Accounting Setting" [Job Accounting].

2 Configure the settings.

Select [Local] or [Network].

Select [Off] to disable job accounting.

 **NOTE**

When the display returns to System Menu default screen, logout is automatically executed and the screen to enter the Account ID appears. To continue the operation, enter the Account ID.

Job Accounting (Local)

You can add, change and delete an account and set the restriction for each account.

Adding an Account

Up to 1000 individual accounts can be added.

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "Job Accounting Setting" [Add/Edit Job Accounting].

2 Enter the account information.

- 1 [Add] > Add information on each item

Item	Descriptions
Account Name	Enter the account name (up to 32 characters).
Account ID	Enter the account ID as many as eight digits (between 0 and 99999999).
Restriction	This prohibits printing/scanning or restricts the number of sheets to load. ➔ Restricting the Use of the Machine (page 9-33)



NOTE

- For details on entering characters, refer to the following:
 - ➔ [Character Entry Method \(page 11-9\)](#)
- Any "Account ID" that has already registered cannot be used. Enter any other account ID.

- 2 Select [Redister].

A new account is added on the Account List.

Restricting the Use of the Machine

This section explains how to restrict the use of the machine by account or the number of sheets available.

The items that can be restricted differ depending on whether "Individual" or "Total" is selected for "Copy/Print Count".

➔ [Copier/Printer Count \(page 9-46\)](#)

Restriction Items

[Individual] selected for "Copy/Printer Count"

Item	Descriptions
Copy Restriction (Total)	Limits the number of sheets used for copying.
Print Restriction (Total)	Limits the number of sheets used for printing. Applicable print functions are as follows: <ul style="list-style-type: none"> • Print from Box • Print from USB Drive • Print Report • Print from PC
Scan Restriction (Others)	Limits the number of sheets scanned (excludes copying).
Fax TX Restriction^{*1}	Limits the number of sheets sent by fax.
Fax Port Restriction	Restricts the ports used for faxing. This is displayed when two optional FAX Kits are installed.

*1 This is displayed when the optional FAX Kit is installed.

[Total] selected for Copy/Printer Count

Item	Descriptions
Print Restriction (Total)	Limits the total number of sheets used for copying and printing.
Scan Restriction (Others)	Limits the number of sheets scanned (excludes copying).
Fax TX Restriction^{*1}	Limits the number of sheets sent by fax.
Fax Port Restriction	Restricts the ports used for faxing. This is displayed when two optional FAX Kits are installed.

*1 This is displayed when the optional FAX Kit is installed.

IMPORTANT

Select [Off], [Use Port 1 Only] or [Use Port 2 Only] as the "Fax Port Restriction" setting.

Applying Restriction

Restriction can be applied in the following modes:

Item	Descriptions
Off	No restriction is applied.
Counter Limit	Restricts the print counter in one-page increments up to 9,999,999 copies.
Reject Usage	Restriction is applied.

Editing an Account

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "Job Accounting Setting" [Add/Edit Job Accounting].

2 Edit an account.

- 1 Select [⋮] (information icon) for the account name you wish to edit.



NOTE

- Search by account ID or account name. Select either [ID] or [Name] to switch between [ID] and [Name].
- Select [Account Name] or [Account ID] to sort the account list.

- 2 Change the account information.

- 3 Select [Save].

The account information is changed.

Deleting an Account

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "Job Accounting Setting" [Add/Edit Job Accounting].

2 Delete an account.

- 1 Select the account name you wish to delete.



NOTE

- Search by account ID or account name. Select either [ID] or [Name] to switch between [ID] and [Name].
- Select [Account Name] or [Account ID] to sort the account list.

- 2 [Delete] > [Delete]

The account is deleted.

Job Accounting for Printing


To manage the number of jobs to be printed from the PC on the network, you need configure the following settings by using the printer driver on the PC. Instructions are based on interface elements as they appear in Windows.

1 Display the screen.

- 1 Select the [Start] button, [All apps], [Windows Tools], [Control Panel], and [Devices and Printers].
- 2 Right-click the printer driver icon of the machine, and click the [Printer properties] menu of the printer driver.
- 3 Click [Administrator] on the [Device Settings] tab.

2 Configure the settings.

- 1 Select [Job accounting] on the [Job Accounting] tab.

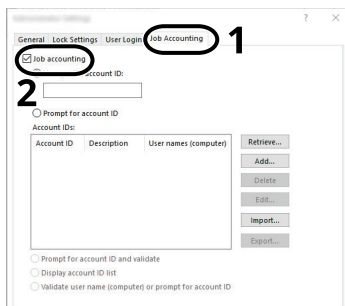

- 2 Set the Account ID.

[Use specific account ID]: Enter the Account ID. Printing will be performed using the entered Account ID. If this option is selected, the user does not have to enter the Account ID for each print job.

[Prompt for account ID]: A screen for entering the Account ID will be displayed when attempting a printing. The Account ID must be entered each time a printing is attempted.

[Prompt for account ID and validate]: A screen for entering the Account ID will be displayed when attempting a printing. The Account ID stored in the Account ID list needs to be entered. The Account ID must be entered each time a printing is attempted.

[Display account ID list]: The Account ID list is displayed when printing. The Account ID to be used needs to be selected from the list.

[Validate user name (computer) or prompt for account ID]: When printing, the Windows user name is searched in the "Account IDs" and printing is possible if the name is registered. If the Account ID is not registered, the screen for entering the Account ID will appear.

- 3 Click [OK].



NOTE

For other settings of job accounting, refer to the following:


➔ **Printer Driver User Guide**

Job Accounting for Scan Using TWAIN

To manage the number of jobs scanned by using TWAIN, you need to configure the following settings by using the TWAIN Driver on the computer. Instructions are based on interface elements as they appear in Windows.


1 Display the screen.

- 1 Click the search box in the taskbar, and type "TWAIN Driver Setting" in there. Select [**TWAIN Driver Setting**] in the search list. TWAIN Driver screen is displayed.
- 2 Select the machine, click [**Edit**].

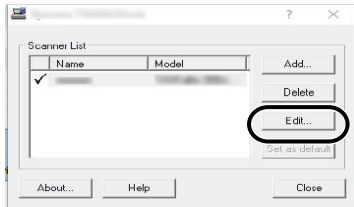

2 Configure the settings.

- 1 Click [**User Authentication Settings**].
- 2 Select the checkbox beside [**Account**], and enter the account ID.

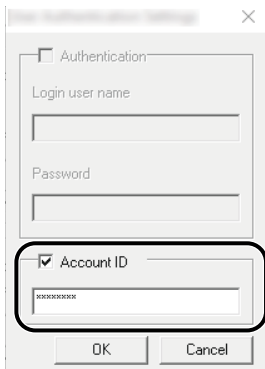


- 3 Click [**OK**].

Job Accounting for Scan Using WIA

To manage the number of jobs scanned by using WIA, you need to configure the following settings by using the WIA Driver on the computer. Instructions are based on interface elements as they appear in Windows.


1 Display the screen.

- 1 Select the [Start] button, [All apps], [Windows Tools] and [Control Panel]. Enter "Scanner" into the search field on the control panel. Select [View scanners and cameras] in the search list then the Scanners and Cameras screen appears.
- 2 Select the same name as this machine from WIA Drivers, and press [Properties].

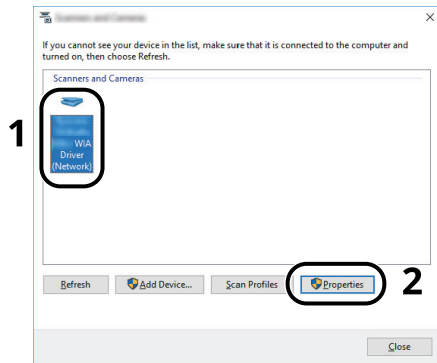

2 Configure WIA Driver.

- 1 Select the checkbox beside [Account ID] on the [Settings] tab, and enter the Account ID.

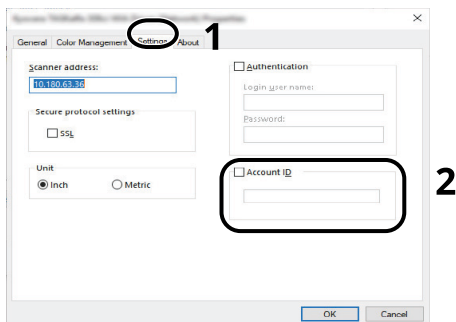

- 2 Click [OK].

Job Accounting for the FAX Transmitted from a Computer

To manage the number of FAX jobs transmitted from the computer, you need to configure the following settings by using the FAX Driver on the computer. Instructions are based on interface elements as they appear in Windows.



NOTE


FAX functions are available only on products with the fax function installed.

1 Display the screen.

- 1 Select the [Start] button, [All apps], [Windows Tools], [Control Panel], and [Devices and Printers].
- 2 Right click the name of the machine to be used as the FAX Driver and select [Printing preferences] from the resulting pull-down menu.
- 3 Click [FAX TX Setting] in the [Printing Preferences] window.

2 Configure the settings.

- 1 Select [Job Accounting] on the [Authentication] tab.

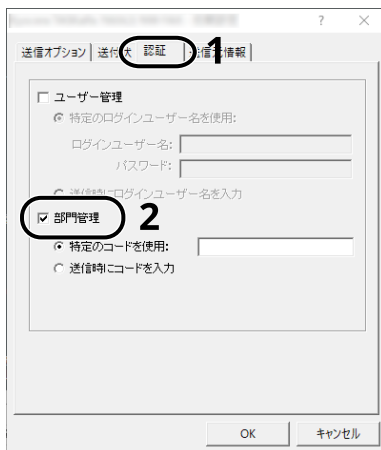

- 2 Set the Job Accounting.

[Use Specific Account ID]: This option can be used to specify an account ID to use the same Account ID for every FAX job. If this option is selected, the user does not have to enter the Account ID for each FAX job.

[Prompt for Account ID]: A screen for entering the Account ID will be displayed when attempting a transmission. The Account ID must be entered each time a transmission is attempted.

- 3 Click [OK].

Configuring Job Accounting

Default Counter Limit

When you add a new account, you can change the default restrictions on the number of sheets used. You can set any number from 1 to 9,999,999.

The items that can be set differ depending on whether **[Individual]** or **[Total]** is selected for "Copy/Printer Count".

➔ [Copier/Printer Count \(page 9-46\)](#)

1 Display the screen.

- 1 **[Home]** key > [...] > **[System Menu]** > **[Job Accounting/Authentication]**



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "Job Accounting Setting" **[Job Accounting Setting]**.

2 Configure the settings.

Select the item for "Default Counter Limit" > use **[+]**, **[-]** or the numeric keys to enter the default restriction on the number of sheets > **[OK]**

[Individual] selected for "Copy/Printer Count"

Item	Description
Copy Restriction (Total)	Sets the default restriction on the number of sheets used for copying.
Print Restriction (Total)	Sets the default restriction on the number of sheets used for printing. Applicable print functions are as follows: <ul style="list-style-type: none"> • Print from Box • Print from USB Drive • Print Report • Print from PC
Scan Restriction (Others)	Sets the default restriction on the number of sheets used for scanning (excludes copying).
Fax TX Restriction *1	Sets the default restriction on the number of sheets used for sending faxes.

*1 This function is displayed only when the optional FAX Kit is installed.

[Total] selected for "Copy/Printer Count"

Item	Description
Print Restriction (Total)	Sets the default restriction on the total number of sheets used for copying and printing.
Scan Restriction (Others)	Sets the default restriction on the number of sheets used for scanning (excludes copying).
Fax TX Restriction *1	Sets the default restriction on the number of sheets used for sending faxes.

*1 This function is displayed only when the optional FAX Kit is installed.

Count by Paper Size

This counts the number of pages by paper size (e.g. Letter).

NOTE

Paper size is available in five types, 1 to 5. These types are specified in accounting reports.

➔ [Print Accounting Report \(page 9-43\)](#)

In addition to paper size, media type can also be specified (e.g. count the letter-size color paper used). If you do not specify the media type, the number of used sheets will be counted for the specified sheet size, regardless of the media type.

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "Job Accounting Setting" [Job Accounting Setting].

2 Configure the settings.

- 1 "Count by Paper Size" [Paper Size 1 (to 5)] > [On]
- 2 Select [Paper Size].
- 3 Select the paper size.
- 4 Select [Media Type] to specify media type.
- 5 Select the media type.
- 6 Select [OK].

Counting the Number of Pages Printed

This counts the number of pages printed. Counts are classified into Total Job Accounting and Each Job Accounting. A new count can also be started after resetting the count data which was stored for a certain period of time.

The table below lists the item you can view.

Item	Descriptions
Printed Pages	Displays the number of pages used in printing for each of the following item.
Count by Function	Displays the number of pages used to copy, print, FAX and their total.
Count by Paper Size	Displays the number of pages used in the selected paper size as well as the number of pages used in other paper sizes. ▶ Count by Paper Size (page 9-40)
Count by Duplex	Displays the number of pages used in Duplex (1-sided) mode, Duplex (2-sided) mode and the total for both.
Count by Combine	Displays the number of pages used in Combine (None) mode, Combine (2 in 1) mode, Combine (4 in 1 and 8 in 1) and the total for all three.
Scanned Pages	Displays the number of pages scanned for copying, faxing, printing and other functions, as well as the total number of pages scanned.
Fax Transmission Pages	Displays the number of pages faxed. This function is displayed only when the optional FAX Kit is installed.
Fax Transmission Time	Displays the total duration of FAX transmissions. This function is displayed only when the optional FAX Kit is installed.
Counter Reset	Resets the counter. Select [Reset] in the confirmation screen.

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "Job Accounting Setting" [Job Accounting Counter].

2 Check the number of pages.

Total Accounting

This counts the number of pages for all accounts and resets the counts for those accounts together at the same time.

- 1 Select [**Total**] to check the count.
Select [**Counter Reset**] to reset the counter.
- 2 Confirm the count and select [**Close**].

Each Job Account

This counts the number of pages for each account and resets the counts by account. When checking Each Job Accounting, select the account for which you want to check the count.

- 1 Select the account.



NOTE

- Search by account ID or account name. Select either [**ID**] or [**Name**] to switch between [**ID**] and [**Name**].
- Select [**Account Name**] or [**Account ID**] to sort the account list.
- To display an account other than your own account, select [**Other Account**].


- 2 Check the count.
Select [**Counter Reset**] to reset the counter.
- 3 Confirm the count and select [**Close**].

Print Accounting Report

The total pages counted of all relevant accounts can be printed as an accounting report.

Reports have different formats depending on how the count of copiers and printers is administered.

When "Individual" is selected for Managing the Copy/Printer Count.

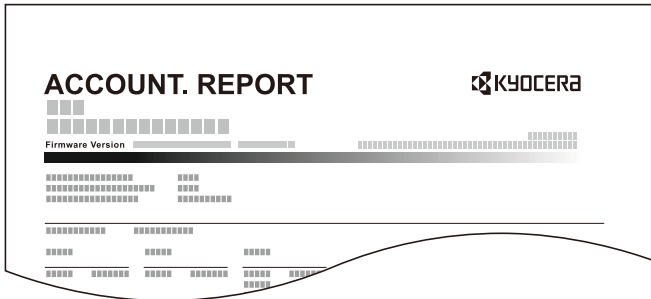

If count by paper size is being performed, then the report will be printed per size.

Use the procedure below to print a job accounting report.

1 Prepare paper.

Check that A4 or Letter paper is loaded in the cassette.

2 Display the screen.

[Home] key > [...] > [System Menu] > [Job Accounting/Authentication]



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

3 Print the report.

"Job Accounting Setting" [Print Accounting Report] > [Print]

Accounting report is printed.

Using Job Accounting

This section explains procedures while setting job accounting.

Login

If job accounting is enabled, an account ID entry screen appears each time you use this machine.

1 Enter the account ID using the numeric keys > [Login]

NOTE

- If you entered a wrong character, select [C] (Clear) and enter the account ID again.
- If the entered account ID does not match the registered ID, a warning beep will sound and login will fail. Enter the correct account ID.
- By selecting [Check Counter], you can refer to the number of pages printed and the number of pages scanned.

When the screen to enter the login user name and password appears

If user login administration is enabled, the screen to enter the login user name and password appears. Enter a login user name and password to login. If the user has already registered the account information, the account ID entry would be skipped.

➔ [Adding a User \(Local User List\) \(page 9-6\)](#)

2 Proceed to complete the rest of the steps.

Logout

When the operations are complete, select the [Logout] key to return to the account ID entry screen.

Apply Limit

This specifies how the machine behaves when the counter has reached the limit of restriction. The table below describes the action taken.

Item	Descriptions
Immediately *1	Job stops when the counter reaches its limit.
Subsequently	Printing/scanning of the job continues but the subsequent job will be rejected.
Alert Only	Job continues while displaying an alert message.

*1 The next job will be prohibited in sending or in storing in the box.

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 "Job Accounting Setting" [Job Accounting Setting] > "Default Setting" [Apply Limit]

2 Configure the settings.

Select [Immediately], [Subsequently], or [Alert Only].

Copier/Printer Count

You can select how the copying and printing page counts are shown - either the total of both or each of copying and printing individually. The selection may influence restriction on the count and count method. For details, refer to the following:

- ➔ [Restricting the Use of the Machine \(page 9-33\)](#)
- ➔ [Counting the Number of Pages Printed \(page 9-41\)](#)
- ➔ [Print Accounting Report \(page 9-43\)](#)

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 "Job Accounting Setting" [Job Accounting Setting] > "Default Setting" [Copy/Printer Count]

2 Configure the settings.

Select [Total] or [Individual].

Unknown User Settings

Unknown ID Job

This specifies the behavior for handling the jobs sent with unknown or unsend login user names or User ID. If the User Login is set to invalid and Job Accounting is set to valid, follow the procedure when the Account ID is unknown.

1 Display the screen.

- 1 [Home] key > [...] > [System Menu] > [Job Accounting/Authentication]



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "Unknown User Settings" [Unknown ID Job].

2 Configure the settings.

Select [Permit] or [Reject].

Item	Descriptions
Permit	The job is permitted to be printed.
Reject	The job is rejected (not printed).

Registering Information for a User whose ID is Unknown

If you register user information for a user whose ID is unknown, you can check information on the Job Status or Job History screens. In addition, you can restrict available functions.

NOTE

This function is displayed when [**Unknown ID Job**] is set to [**Permit**].

➔ [Unknown ID Job \(page 9-47\)](#)

1 Display the screen.

- 1 [**Home**] key > [...] > [**System Menu**] > [**Job Accounting/Authentication**]


NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

- 2 Select "Unknown User Settings" [**User Property**].

2 Enter the user information.

Enter the user information > [**OK**]

Item	Descriptions
User Name	Enter the name displayed on the user list (up to 32 characters).
Account Name	Register an account for a user whose ID is unknown. ➔ Overview of Job Accounting (page 9-29)  NOTE <ul style="list-style-type: none"> • Search by account ID or account name. Select either [ID] or [Name] to switch between [ID] and [Name]. • Select [Account Name] or [Account ID] to sort the account list.
Authorization Rules	Set usage authority. The following restriction items are available: Print Restriction: Select whether or not use of the print function of the printer is prohibited. Applicable print functions are as follows: <ul style="list-style-type: none"> • Print from PC

10 Troubleshooting

This chapter explains the following topics:

Regular Maintenance	10-2	Remove any jammed paper in the Lower Left Tray	10-76
Cleaning	10-2	Remove any jammed paper in the Right Tray	10-77
Cleaning Glass Platen	10-2	Remove any jammed paper in the Document Processor	10-78
Cleaning inside of the Document Processor	10-2	Remove any jammed paper in the Inserter	10-81
Cleaning Slit Glass	10-3	Remove any jammed paper in the Finisher (Inner)	10-84
Toner Container Replacement	10-4	Remove any jammed paper in the Finisher (Tray A)	10-86
Replace the Waste Toner Box	10-7	Remove any jammed paper in the Finisher (Tray B)	10-90
Loading Paper	10-9	Remove any jammed paper in the Mailbox	10-93
Replacing Staples (65-sheet Staple Finisher)	10-10	Remove any jammed paper in the Folding Unit (Finisher)	10-94
Replacing Staples (100-sheet Staple Finisher)	10-11	Remove any jammed paper in the Folding Tray (Finisher)	10-101
Replacing Staples (Folding Unit)	10-13	Clearing a Staple Jam	10-105
Disposing of the Staple Waste (100-sheet Staple Finisher)	10-15	Clearing a Staple Jam of the 100-sheet Staple Finisher	10-107
Disposing of the Punch Waste	10-17	Clearing a Staple Jam of the Folding Unit (Finisher)	10-110
Troubleshooting	10-19		
Solving Malfunctions	10-19		
Machine Operation Trouble	10-19		
Printed Image Trouble	10-24		
Remote Operation	10-26		
Responding to Messages	10-28		
Adjustment/Maintenance	10-47		
Overview of Adjustment/Maintenance	10-47		
Tone Curve Adjustment	10-48		
Image Adjustment	10-52		
Calibration	10-53		
Clearing Paper Jams	10-54		
Jam Location Indicators	10-54		
Remove any jammed paper in Cassette 1	10-57		
Remove any jammed paper in Cassette 2	10-59		
Remove any jammed paper in Cassette 3	10-61		
Remove any jammed paper in Cassette 4	10-63		
Remove any jammed paper in Cassette 5 (Side Feeder (3,000-sheet))	10-66		
Remove any jammed paper in Cassette 5 (Side Feeder (3,500-sheet))	10-67		
Remove any jammed paper in the Multipurpose Tray	10-69		
Remove any jammed paper in Right Cover 1	10-70		
Remove any jammed paper in Right Cover 2	10-73		
Remove any jammed paper in the Upper Left Tray/Finisher (Tray C)	10-74		

Regular Maintenance

Cleaning

Clean the machine regularly to ensure optimum printing quality.



CAUTION

For safety, always unplug the power cord before cleaning the machine.



Cleaning Glass Platen

Wipe the backside of the original cover, the inside of the document processor and the glass platen with a soft cloth dampened with alcohol or mild detergent.



IMPORTANT

Do not use thinner or other organic solvents.

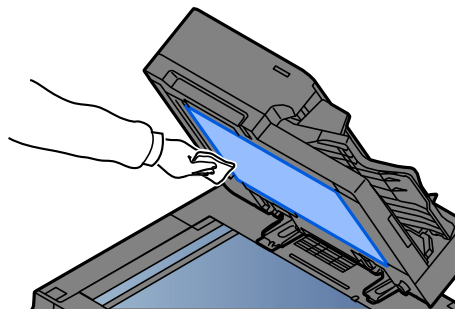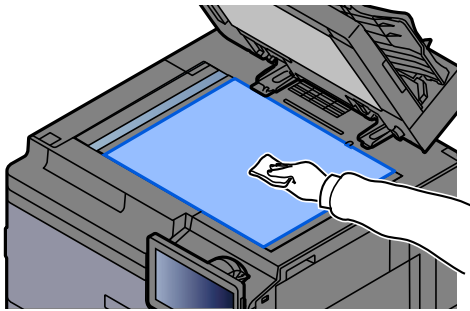

Cleaning inside of the Document Processor



When using the document processor that features dual scanning, clean the dual scanning unit with the supplied cleaning cloth.




IMPORTANT

Do not use alcohol, thinner or other organic solvents.

- 1 Remove the cloth from the cleaning cloth compartment and open the document processor cover.

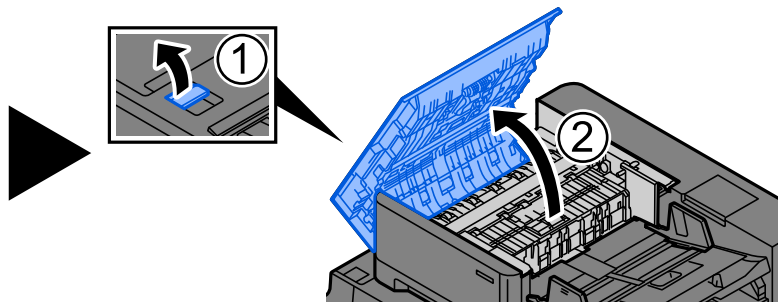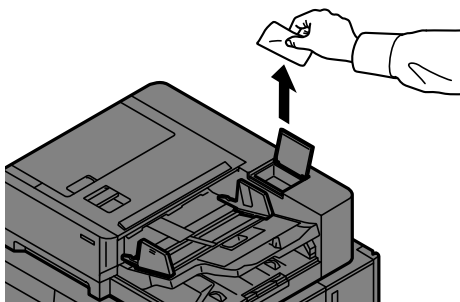

2 Clean inside of the document processor.

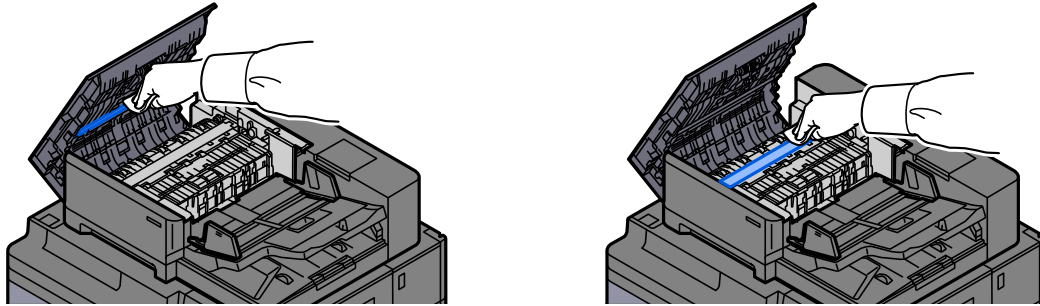

Cleaning Slit Glass

When using the document processor, clean the slit glass surface and the reading guide with the supplied cleaning cloth.


✓ IMPORTANT

Clean the slit glass surface with the supplied cleaning cloth.


NOTE

Dirt on the slit glass or the reading guide may cause black streaks to appear in the output.

1 Remove the cloth from the cleaning cloth compartment.

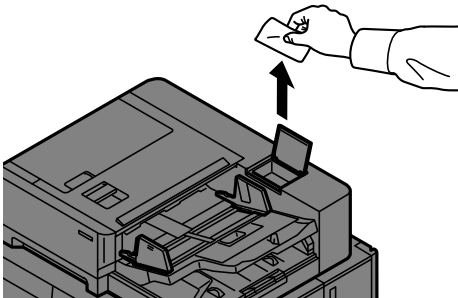

2 Clean the slit glass surface and the reading guide.

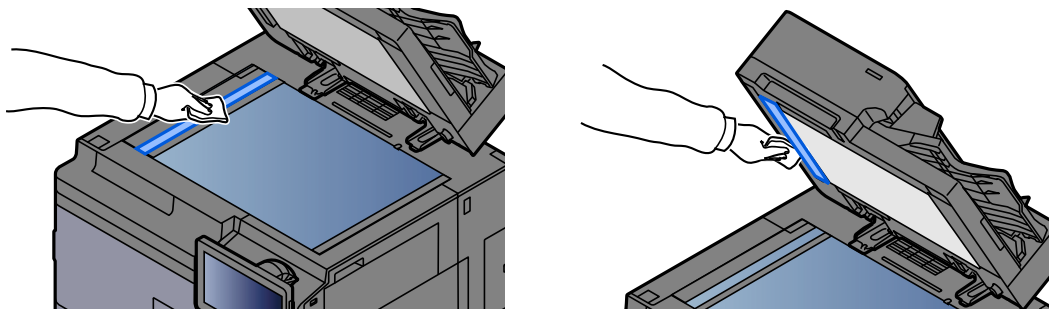

Toner Container Replacement

When toner is empty, the following message will be displayed. Replace the toner container.

"Toner is empty."

When toner runs low, the following message will be displayed. Make sure you have a new toner container available for replacement.

"Toner is low. (Replace when empty.)"


NOTE

- For the toner container, always use a genuine toner container. Using a toner container that is not genuine may cause image defects and product failure.
- The memory chip in the toner container of this product stores information necessary for improving customer convenience, operation of the recycling system for used toner containers, and planning and development of new products. The stored information does not include information that makes it possible to identify individuals, and is only used anonymously for the above purposes.


CAUTION

Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.


1 Open the front cover.

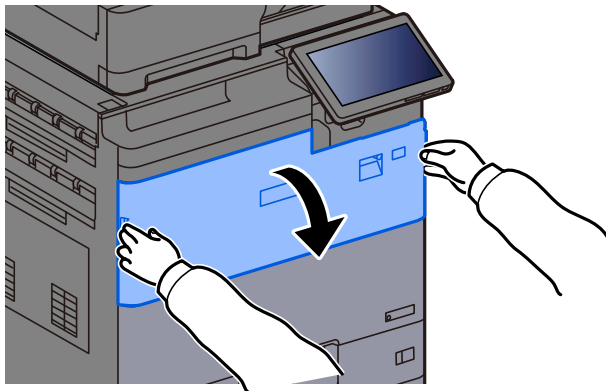


2 Remove the toner container.

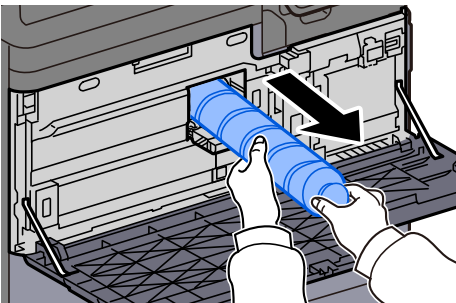


3 Put used toner container into the plastic waste bag.

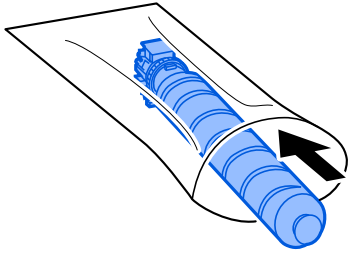


4 Remove the new toner container from the box.

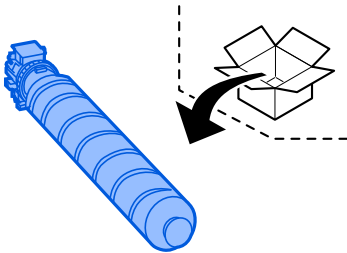


✔ **IMPORTANT**
Do not touch the points shown below.

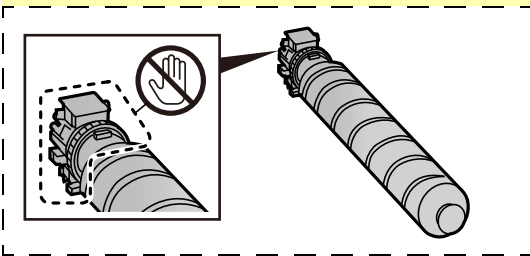


5 Tap the toner container.

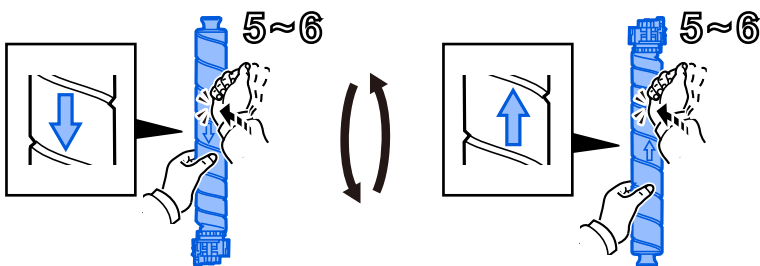

6 Shake the toner container.

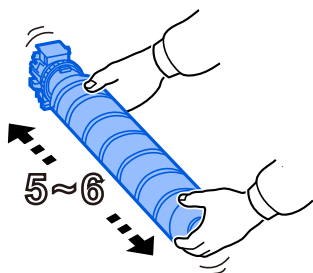


7 Install the toner container.

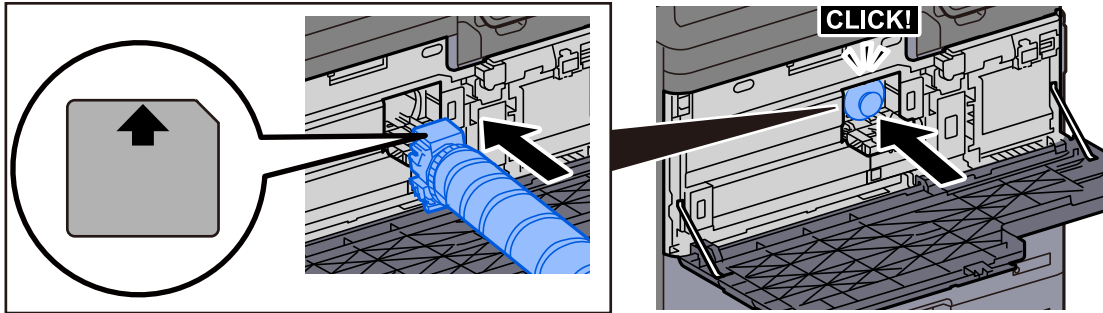

✔ IMPORTANT

Insert the toner container all the way.

8 Close the front cover.

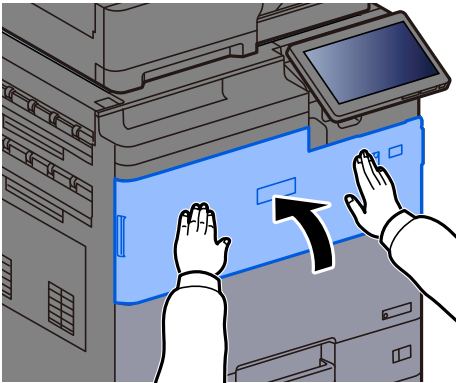

💡 NOTE

- If the front cover does not close, check that the new toner container is installed correctly.
- Return the exhausted toner container to your dealer or service representative. The collected toner container will be recycled or disposed in accordance with the relevant regulations.

Replace the Waste Toner Box


When the waste toner box is full, the following message will be displayed. Immediately replace the waste toner box.
"Replace the waste toner box."




CAUTION

Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.


- 1 Open the waste toner box cover.

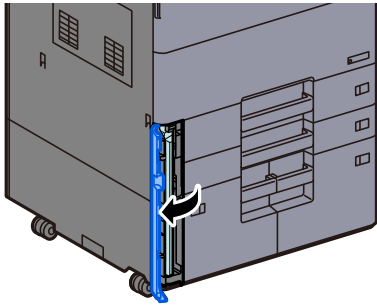


- 2 Remove the Waste Toner Box.

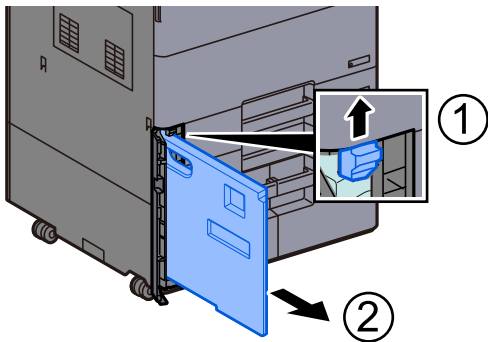


- 3 Put used Waste Toner Box into the plastic waste bag.

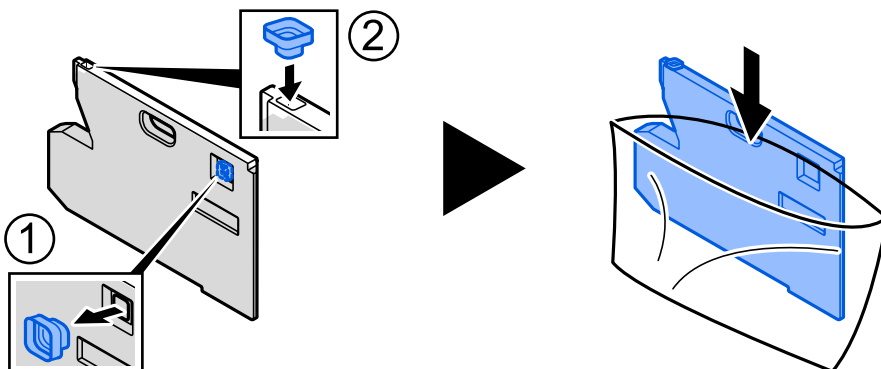


4 Remove the new Waste Toner Box.

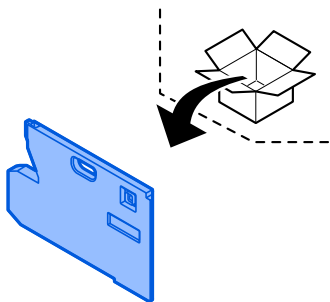

5 Install the Waste Toner Box.

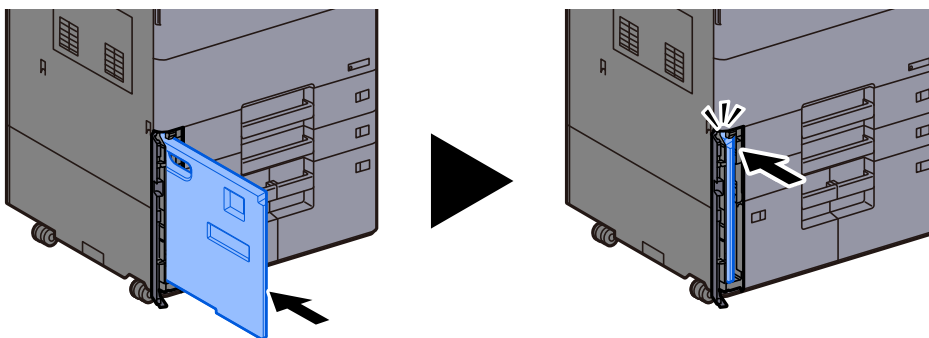

6 Close the waste toner box cover.

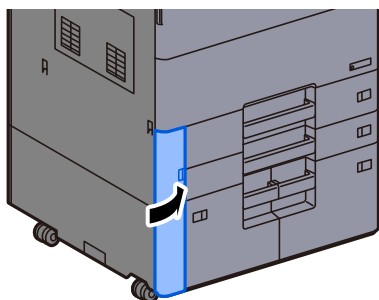

NOTE

Return the exhausted waste toner box to your dealer or service representative. The collected waste toner box will be recycled or disposed in accordance with the relevant regulations.

Loading Paper

When Cassette # runs out of paper, the following messages will be displayed.

"Add paper in cassette #"

"Add paper in Multipurpose tray"

- ➔ [Loading in Cassettes \(page 3-4\)](#)
- ➔ [Loading in the Large Capacity Feeder \(page 3-11\)](#)
- ➔ [Loading in the Side Feeder \(3,000-sheet\) \(page 3-18\)](#)
- ➔ [Loading in the Side Feeder \(3,500-sheet\) \(page 3-20\)](#)
- ➔ [Loading Paper in the Multipurpose Tray \(page 3-13\)](#)



NOTE

If [**Show Paper Setup Message**] is set to [**On**], the confirmation screen for the paper setting will be displayed when a new paper is set. If a paper is changed, change the settings of the paper.

- ➔ [Cassette 1 \(to 5\) Settings \(page 8-14\)](#)
- ➔ [MP Tray Settings \(page 8-15\)](#)

Replacing Staples (65-sheet Staple Finisher)

When the Staple Unit runs out of staples, the following messages will be displayed. The staple cartridge holder need to be replenished with staples.


"Staple is empty."




NOTE

If the Staple Unit runs out of staples, contact your dealer or service representative.


1 Open the finisher front cover 1.

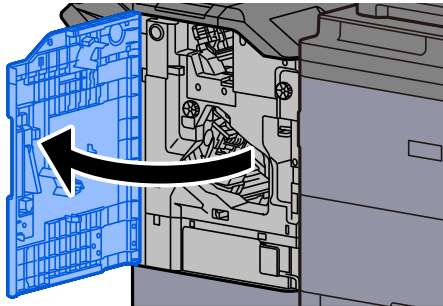

2 Remove the Staple Cartridge Holder (A).

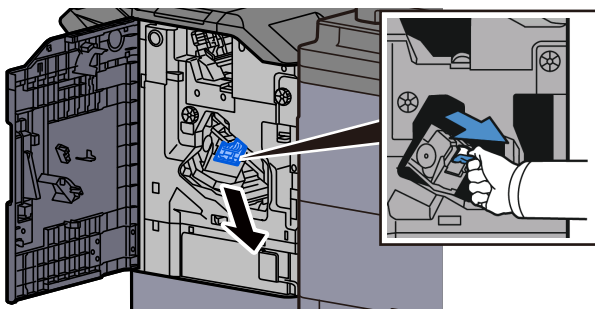


3 Replace the staples.

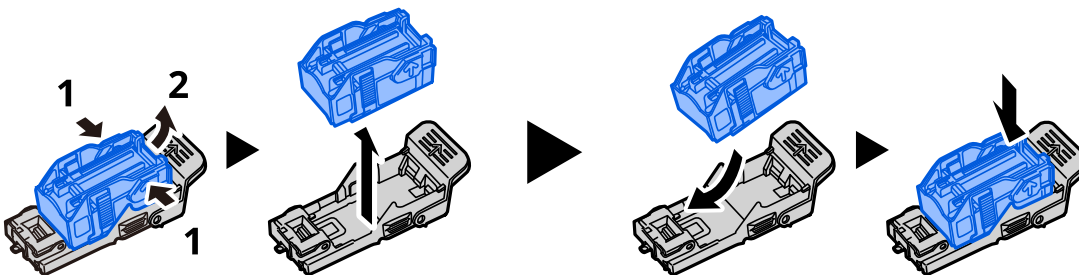

4 Install the Staple Cartridge Holder (A).



5 Close the cover.

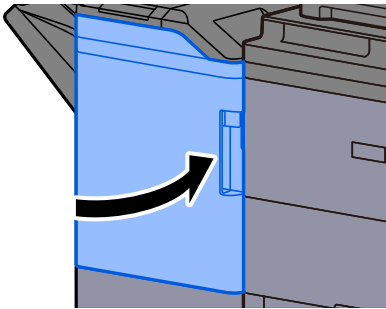

Replacing Staples (100-sheet Staple Finisher)

When the Staple Unit runs out of staples, the following messages will be displayed. The staple cartridge holder need to be replenished with staples.


"Staple is empty."




NOTE

If the Staple Unit runs out of staples, contact your dealer or service representative.


1 Open the finisher front cover 1.

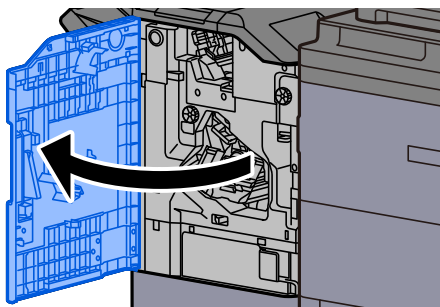

2 Remove the Staple Cartridge Holder (A).

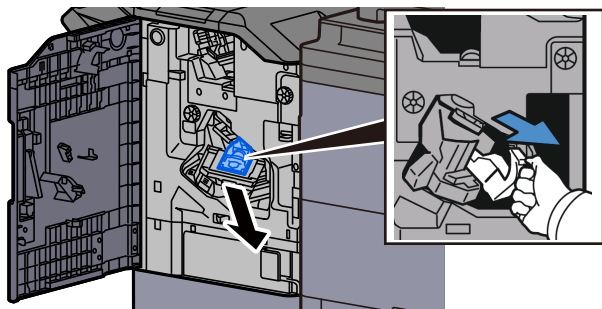


3 Replace the staples.

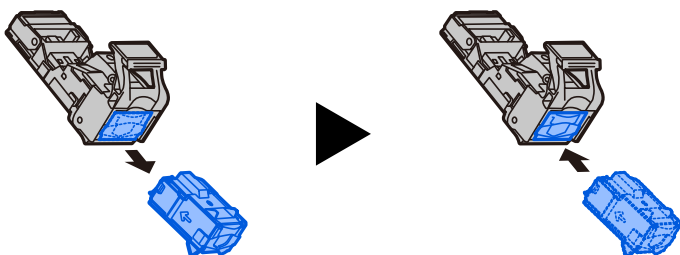

4 Install the Staple Cartridge Holder (A).



5 Close the cover.

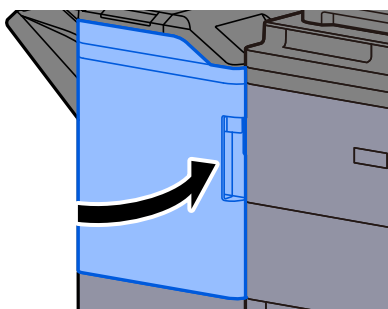

Replacing Staples (Folding Unit)

When the Staple Unit runs out of staples, the following messages will be displayed. The staple cartridge holder need to be replenished with staples.


"Staple is empty."




NOTE

If the Staple Unit runs out of staples, contact your dealer or service representative.


1 Open the finisher front cover 1 and 2.

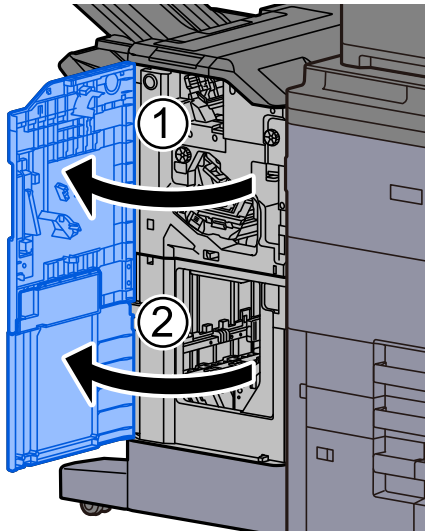


2 Remove the Staple Cartridge Holder (B) or (C).

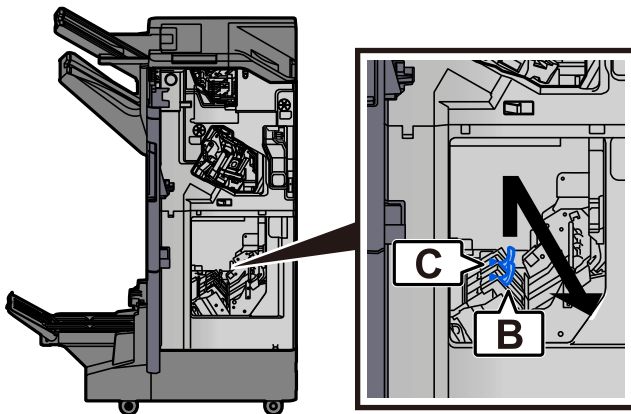


3 Replace the staples.

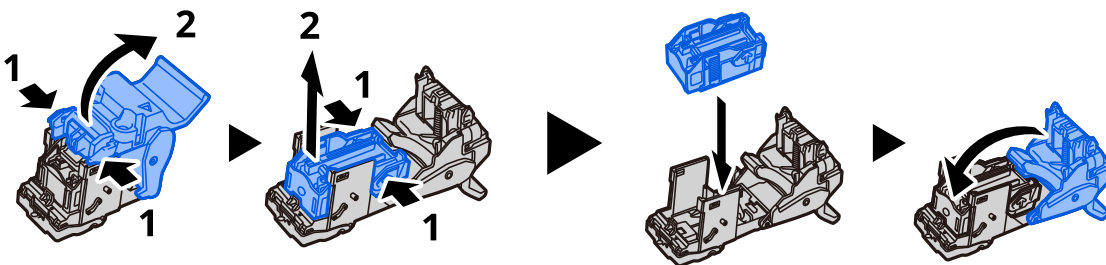

4 Install the Staple Cartridge Holder (B) or (C).

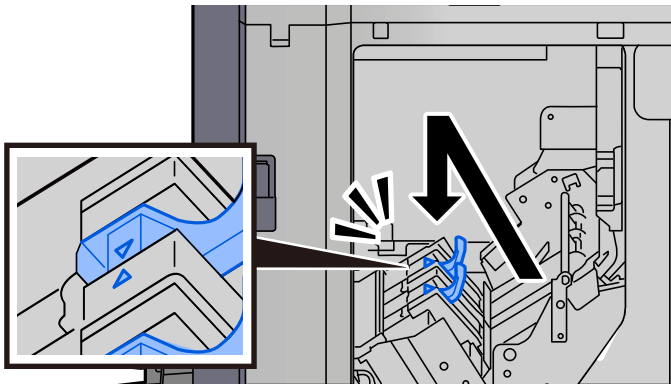

5 Close the covers.

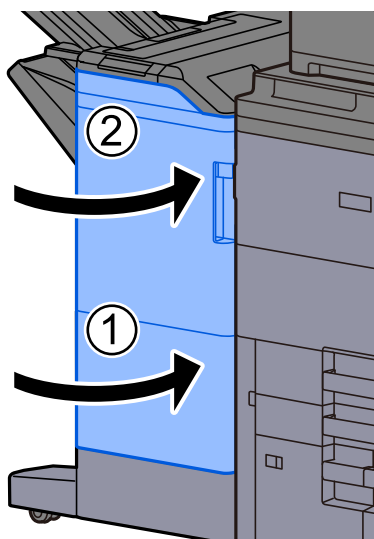


Disposing of the Staple Waste (100-sheet Staple Finisher)

When the staple waste box is full, the following messages will be displayed. Empty the staple waste box.


"Check the staple waste box."

Leave the power switch on the machine switched ON while performing this procedure.

1 Open the finisher front cover 1.

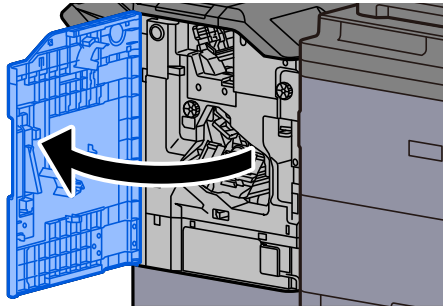

2 Remove the Staple Waste Box.

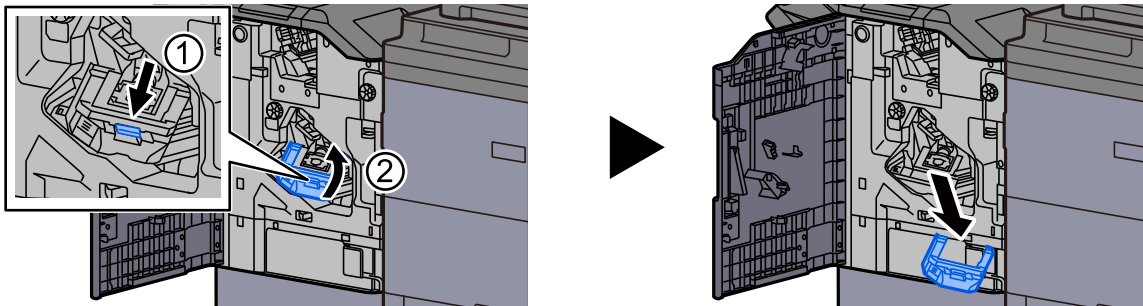


NOTE

Take care not to spill the staple waste when removing the box.


3 Empty the Staple Waste Box.



4 Install the Staple Waste Box.

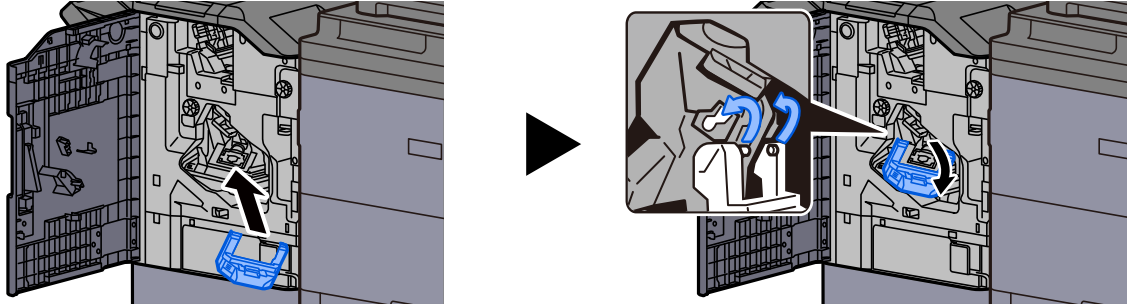

5 Close the cover.

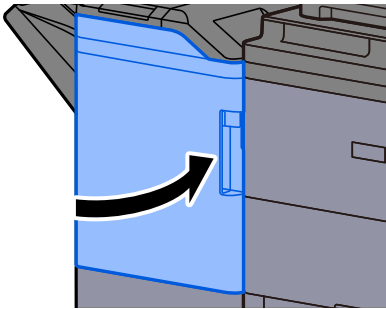


Disposing of the Punch Waste

When the waste punch box is full, the following messages will be displayed. Empty the punch waste box.


"Empty the punch waste box"

Leave the power switch on the machine switched ON while performing this procedure.

1 Open the finisher front cover 1.

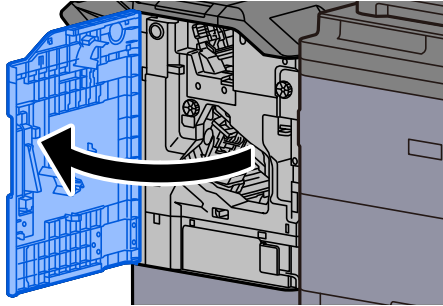


2 Remove the Punch Waste Box.

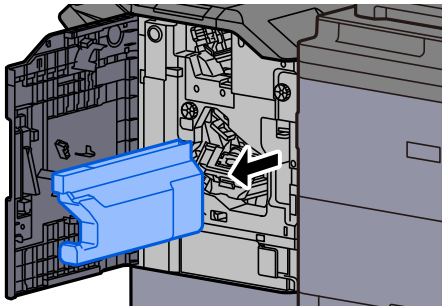


NOTE

Take care not to spill the waste hole punch scraps when removing the box.


3 Empty the Punch Waste Box.

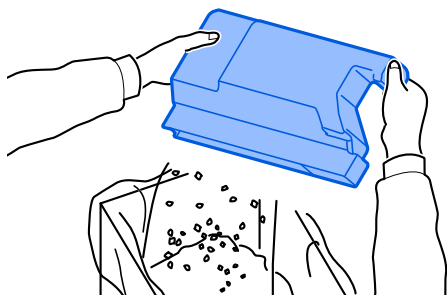

4 Install the Punch Waste Box.

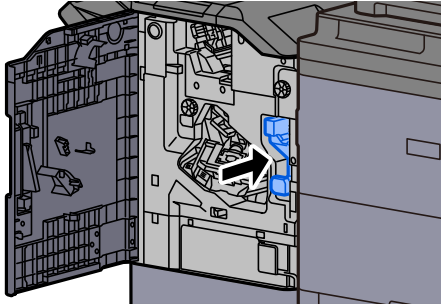

5 Close the cover.

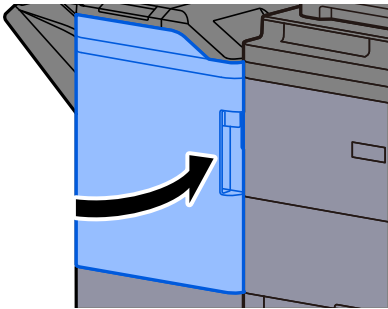

Troubleshooting

Solving Malfunctions

The table below provides general guidelines for problem solving.

If a problem occurs with your machine, look into the checkpoints and perform procedures indicated on the following pages. If the problem persists, contact your Service Representative.


 **NOTE**




When contacting us, the serial number will be necessary. To check the serial number, refer to the following:

➔ [Display for Device Information \(page 2-20\)](#)

Machine Operation Trouble

When the following machine operation troubles occur, implement appropriate procedures.

Symptom	Checkpoints	Corrective Actions	Reference Page
An application does not start.	Is the Auto Panel Reset time short?	Set the Auto Panel Reset time to 30 seconds or more.	page 8-8
The screen does not respond when the power switch is turned on.	Is the machine plugged in?	Plug the power cord into an AC outlet.	—
The touch panel is not responsive or malfunctions.	Is the touch panel operated with wet hands?	Dry your hands to operate the touch panel.	—
	Are you operating with gloves on?	Use your bare hands or a stylus pen to operate the touch panel.	—
	Is the machine installed near a device that generates electrical noise (generator, air conditioner, etc.)?	Install the machine away from devices that generate electrical noise.	—
Pressing the [Start] key does not produce copies.	Is there a message on the screen?	Determine the appropriate response to the message and respond accordingly.	page 10-28
	Is the machine in Sleep mode?	Select any key on the operation panel to recover the machine from Sleep mode.	page 2-46
Blank sheets are ejected. 	Are the originals loaded correctly?	When placing originals on the platen, place them face-down and align them with the original size indicator plates.	page 5-2
		When placing originals in the document processor, place them face-up.	page 5-4
	—	Check that the settings of the application software.	—

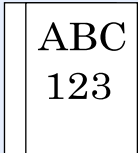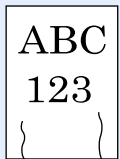Symptom	Checkpoints	Corrective Actions	Reference Page
Paper often jams.	Is the paper loaded correctly?	Load the paper correctly.	page 3-4
	—	Turn the orientation 180 degrees around in which the paper is positioned.	page 3-4
	Is the paper of the supported type? Is it in good condition?	Remove the paper, turn it over, and reload it.	page 3-4
	Is the paper curled, folded or wrinkled?	Replace the paper with new paper.	page 3-4
	Are there any loose scraps or jammed paper in the machine?	Remove any jammed paper.	page 10-54
2 or more sheets are overlaps when ejected. (multi feed) 	—	Load the paper correctly.	page 3-2
Printouts are wrinkled. 	Is the paper loaded correctly?	Load the paper correctly.	page 3-4
	—	Turn the orientation 180 degrees around in which the paper is positioned.	page 3-4
	Is the paper damp?	Replace the paper with new paper.	page 3-4
Printouts are curled. 	—	Turn the orientation 180 degrees around in which the paper is positioned.	page 3-4
	Is the paper damp?	Replace the paper with new paper.	page 3-4
Printer driver cannot be installed.	Is the driver installed with the host name while Wi-Fi or Wi-Fi Direct function is available?	Specify the IP address instead of the host name.	page 2-51

Symptom	Checkpoints	Corrective Actions	Reference Page
Cannot print.	Is the machine plugged in?	Plug the power cord into an AC outlet.	—
	Is the machine powered on?	Turn on the power switch.	page 2-10
	Are the USB cable and network cable connected?	Connect the correct USB cable and network cable securely.	page 2-8
	Is the print job paused?	Resume printing.	page 7-11
	When the wired or Wi-Fi network is configured using the name resolution, does the IP address (private address) of the other network which can not access coexists?	The number of host name and domain name which can be used with the machine is one respectively. Configure the network under this restriction.	—
		Change the settings of name resolution such as NetBEUI and DNS, or network environment settings.	Command Center RX User Guide
Select Wi-Fi, Wired Network or Optional Network as an unlimited-use network on Primary Network (Client).		page 8-75	
	Set to [Wired Network] or [Wi-Fi] either one of [On] , and set the other setting to [Off] .	page 8-64	
Cannot print with USB drive. USB drive not recognized.	Is the USB host blocked?	Select [Unblock] in the USB host settings.	page 8-76
	—	Check that the USB drive is securely plugged into the machine.	—
While "Auto-IP" is already set to [On] , the IP address is not assigned automatically.	Is a value other than "0.0.0.0" entered for the link local address of TCP/IP(v4)?	Enter "0.0.0.0" for the IP address of TCP/IP(v4).	page 2-33

Symptom	Checkpoints	Corrective Actions	Reference Page
Cannot send via SMB.	Is the network cable connected?	Connect the correct network cable securely.	page 2-8
	Have the network settings for the equipment been configured properly?	Configure the TCP/IP settings properly.	page 8-62
	Have the folder sharing settings been configured properly?	Check sharing settings and access privileges under the folder properties.	page 3-46
	Is the selected interface selected as the Primary Network?	Specify the host name or IP address of the interface selected as the Primary Network, or set the interface to be used again.	page 8-75
	Has the SMB protocol been set to [On] ?	Set the SMB protocol setting to [On] .	page 8-64
	Has [Host Name] been entered properly? *1	Check the name of the computer to which data is being sent.	page 5-22
	Has [Path] been entered properly?	Check the share name for the shared folder.	page 5-22
	Has [Login User Name] been entered properly? *1 *2	Check the domain name and login user name.	page 5-22
	Has the same domain name been used for [Host Name] and [Login User Name] ?	Delete the domain name and backslash ("/") from [Login User Name] .	page 5-22
	Has [Login Password] been entered properly?	Check the login password.	page 5-22
	Have exceptions for Windows Firewall been configured properly?	Configure exceptions for Windows Firewall properly.	page 3-50
	Do the time settings for the equipment, domain server, and data destination computer differ?	Set the equipment, domain server, and data destination computer to the same time.	—
	Is the screen displaying Send error?	Refer to Responding to Send Error.	page 10-42
Cannot send via the e-mail.	Is the E-mail send size limit set in the SMTP server registered on the machine?	Check the limit value is entered to "E-mail Size Limit" of [E-mail] setting in Command Center RX and change the value as necessary.	page 2-73

Symptom	Checkpoints	Corrective Actions	Reference Page
The machine is emitting steam in the area around the paper ejection slot.	Check the room temperature to see if it is low, or if damp paper was used.	Depending on the printing environment and the paper's condition, the heat generated during printing will cause the moisture in the paper to evaporate, and the steam emitted may look like smoke. This is not a problem, and you can continue printing. If the steam concerns you, raise the room temperature, or replace the paper with a newer, dryer paper.	—
Cannot create Searchable PDF file.	Is the proper language selected?	Check the language to extract.	page 6-78
	Can the texts on the original not be recognized as texts, or is the PDF creation time taken?	Check the following: <ul style="list-style-type: none"> The original orientation is correct. When setting the originals with the mixed orientation at once, [On] is selected for [Auto Image Rotation]. 	page 6-78
Cannot search a text that you want to search on the PDF file.	Have you set [OCR Text Recognition] in [File Format] ?	Set [OCR Text Recognition] in [File Format] .	page 6-78
	Are the texts of the scanned original faded or too light?	Set [Density] to darker level.	page 6-64
	Is the background of the scanned original too dark and the texts are difficult to recognize?	Set [Background Density Adj.] to [Auto] or [Manual] and manually adjust the density lighter. Otherwise, set [Density] to darker level.	page 6-64 page 6-67
	Is the text or image on the back of the original visible on the front?	Set [Prevent Bleed-through] to [On] .	page 6-68
Cannot find the machine with WSD.	Did you search by specifying the machine's IP address or host name?	For security reasons, [HTTP] protocol is set to [Off] , and therefore you cannot search by IP address or host name.	—




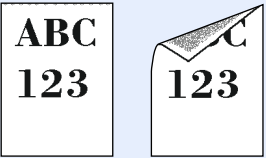


*1 You can also enter a full device name as the host name (for example, pc001.abcdnet.com).

*2 You can also enter login user names in the following formats:
Domain_name/user_name (for example, abcdnet/james.smith)
User_name@domain_name (for example, james.smith@abcdnet)

Printed Image Trouble

When the following printed image trouble occurs, implement appropriate procedures.

Symptom	Checkpoints	Corrective Actions	Reference Page
<p>Printouts are totally too light.</p> 	Is the paper damp?	Replace the paper with new paper.	page 3-2
	Have you changed the density?	Select appropriate density level.	page 6-64 page 8-92
	Is EcoPrint mode enabled?	Disable [EcoPrint] mode.	page 8-37
	—	Run [Developer Refresh].	page 10-52
	—	Run [Laser Scanner Cleaning].	page 10-52
	—	Make sure the paper type setting is correct for the paper being used.	page 8-18
<p>White background parts of the image appear to have a slight overall coloration.</p> 	Have you changed the density?	Select appropriate density level.	page 6-64 page 8-92
	—	Run [Developer Refresh].	page 10-52
	—	Run [Drum Refresh].	page 10-52
<p>Copies have a moire pattern (dots grouped together in patterns and not aligned uniformly).</p> 	Is the original a printed photograph?	When making copies Set the original image to [Printer Output] or [Book/Magazine] in [Photo].	page 6-64
<p>Texts are not clearly printed.</p> 	Did you choose appropriate image quality for the original?	Select appropriate image quality.	page 6-64
<p>Black or color dots appear on the white background.</p> 	Is the original holder or the glass platen dirty?	Clean the original holder or the glass platen.	page 10-2
	—	Run [Developer Refresh].	page 10-52

Symptom	Checkpoints	Corrective Actions	Reference Page
Printed images are fuzzy. Printed images are cut off. 	Is the device used in an environment with high humidity or where the temperature or humidity changes suddenly?	Use in an environment that has suitable humidity.	—
	—	Run [Drum Refresh].	page 10-52
Printed images are skewed. 	Are the originals placed correctly?	When placing originals on the platen, align them with the original size indicator plates.	page 5-2
	—	When placing originals in the document processor, align the original width guides securely before placing the originals.	page 5-4
	Is the paper loaded correctly?	Check the position of the paper width guides.	page 3-4
Printed images have vertical lines. 	Is the slit glass dirty?	Clean the slit glass.	page 10-3
	—	Run [Laser Scanner Cleaning].	page 10-52
Dirt on the top edge or back of the paper. 	Is the interior of the machine dirty?	Open the right cover. If the machine interior is dirty with toner, clean it using soft, dry, lint-free cloth.	page 10-2
Part of the image is periodically faint or shows white lines. 	—	Open and then close the right cover.	—
	—	Run [Drum Refresh].	page 10-52
	—	Run [Developer Refresh].	page 10-52
Print on the back of the sheet is visible on the front. 	—	Set [Prevent Bleed-through] to [On].	page 6-68 page 8-37

Remote Operation

This function enables the system administrator to explain how to operate the panel and troubleshoot to user, by accessing operation panel of the machine at remote using browser and VNC software.

Executing Remote Operation from Browser

This procedure explains how to execute Remote Operation from Command Center RX using Google Chrome.



NOTE

To execute Remote Operation using other browsers, refer to the following:

➔ [Command Center RX User Guide](#)

1 Display the screen.

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Protocol Settings]

2 Set "Enhanced VNC (RFB) over TLS" to [On].

➔ [Protocol Settings \(page 8-64\)](#)



NOTE

You can configure the protocol settings using Command Center RX.

➔ [Command Center RX User Guide](#)

3 Configure settings for remote operation.

1 [Home] key > [...] > [System Menu] > [Network Settings] > "Connectivity" [Remote Operation] > [On]

2 Select [Off], [Use Password], or [Administrator Only].

When you select [Use Password], enter the password in "Password" and "Confirm Password", then select [OK].

➔ [Remote Operation \(page 8-74\)](#)



NOTE

You can configure settings for remote operation using Command Center RX

➔ [Command Center RX User Guide](#)

4 Restart the machine.

➔ [Restart Entire Device \(page 8-75\)](#)

5 Start up the browser.

Enter "https://" and host name of the machine to access the Command Center RX

➔ [Accessing Command Center RX \(page 2-70\)](#).

6 Select [Device Information/Remote Operation] > [Remote Operation].

7 Click [Start] button.

NOTE

- If the user is logged in to the device, the permission confirmation screen will be displayed on the operation panel. Select [Yes].
- If pop-up blocking of the browser occurs during connection of the Remote Operation, select Always allow pop-ups from https:// [host name], and click Done. Perform Remote Operation after waiting 1 minute or more.

When the Remote Operation is started up, the operation panel screen will be displayed on the system administrator's or user's PC screen.

Executing Remote Operation from VNC Software

1 Display the screen.

[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" [Protocol Settings]

2 Set "Enhanced VNC (RFB)" to [On].

➔ [Protocol Settings \(page 8-64\)](#)

NOTE

- When setting "VNC (RFB) over TLS" to [On], the communication is encrypted.
- You can configure the protocol settings using Command Center RX.

➔ [Command Center RX User Guide](#)

3 Startup the remote operation.

- 1 Start up the VNC software.
- 2 Enter the following format separated by a colon to start up the remote operation.
"IP address: port number"

NOTE

When setting "VNC (RFB)" to [On] in step 2, the default port number is 9062. When setting "VNC (RFB) over TLS" to [On], the default port number is 9063.

➔ [Protocol Settings \(page 8-64\)](#)

Responding to Messages

If the touch panel or the computer displays any of these messages, follow the corresponding procedure.

 **NOTE**

When contacting us, the serial number will be necessary. To check the serial number, refer to the following:

➔ [Display for Device Information \(page 2-20\)](#)

A

Message	Checkpoints	Corrective Actions	Reference Page
Abnormalities were detected.	—	The error was detected. The execution of the program is stopped. Please contact to the service representatives.	—
Acceptable staple count exceeded.*1	Is the acceptable number of sheets exceeded?	Select [Continue] to print without using Staple. Select [Cancel] to cancel the job.	—
Access point was not detected.	—	Check if the access point has been set correctly.	—
Add paper in cassette #.	Is the indicated cassette out of paper?	Load paper. Select the available paper. Select [Continue] to print.	page 3-3
	Are five or less envelopes loaded in the cassette?	Pull the cassette and loosen the paper length and width guides slightly.	—
Add paper in Multipurpose tray.	Is the paper of the selected size loaded in the multipurpose tray?	Load paper. Select the available paper. Select [Continue] to print.	page 3-13
Adjusting Scanner.	—	The machine is under the adjustment to maintain its quality. Please wait.	—

*1 When Auto Error Clear is set to [**On**], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

➔ [Auto Error Clear \(page 8-26\)](#)

B

Message	Checkpoints	Corrective Actions	Reference Page
Box is not found.	—	The specified box cannot be found. Job is canceled. Select [End] .	—
Box limit exceeded.*1	Is [End] displayed on the screen?	The specified box is full, and no further storage is available. Job is canceled. Select [End] . Try to perform the job again after printing or deleting data from the box.	—
	—	Repeat Copy box is full, and no further repeat copy is available. Select [Continue] to print scanned pages. Select [Cancel] to cancel the job.	—
Broadcast error	—	An error has occurred during broadcast transmission. The job is canceled. Select [End] .	—

*1 When Auto Error Clear is set to **[On]**, processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:


➔ [Auto Error Clear \(page 8-26\)](#)

C

Message	Checkpoints	Corrective Actions	Reference Page
Calibrating...	—	The machine is under the adjustment to maintain its quality. Please wait.	—
Cannot Banner Print.	—	System stamp is set up. Banner print cannot be carried out. Job is canceled. Select [End] .	—
Cannot connect to Authentication Server.*1	—	Set machine time to match the server's time.	page 2-32
	—	Check the domain name.	page 9-2
	—	Check the host name.	page 9-2
	—	Check the connection status with the server.	—
Cannot connect to Server.	—	Check the connection status with the server.	—
Cannot connect.	—	This appears when the Wi-Fi or Wi-Fi Direct connection did not complete. Check the settings, and check the signal conditions.	page 8-57 page 8-58

Message	Checkpoints	Corrective Actions	Reference Page
Cannot duplex print on this paper.*¹	Did you select a paper size/type that cannot be duplex printed?	If the selected paper is not changed and [Continue] is selected, duplex is released. Select the available paper. Select [Continue] to print.	page 6-48
Cannot duplex print on this paper size.*¹			
Cannot duplex print on this paper type.*¹			
Cannot fold this paper.	Did you select a paper size/type that cannot be folded?	If the selected paper is not changed and [Continue] is selected, fold is released. Select the available paper. Select [Continue] to print.	page 6-27
Cannot fold this paper size.			
Cannot fold this paper type.			
Cannot offset this paper.*¹	Did you select a paper size/type that cannot be offset?	If the selected paper is not changed and [Continue] is selected, offset is released. Select the available paper. Select [Continue] to print.	page 6-29
Cannot offset this paper size.*¹			
Cannot offset this paper type.*¹			
Cannot output this paper to the tray.	Is the cassette you selected correct?	Select the available paper. Select [Continue] to print.	—
Cannot perform remote printing.	—	Remote printing is prohibited. The job is canceled. Select [End].	page 8-52
Cannot print the specified number of copies.*¹	—	Only one copy is available. Select [Continue] to continue printing. Select [Cancel] to cancel the job.	—
Cannot process this job.*¹	—	Restricted by Authorization settings. The job is canceled. Select [End].	—
	—	Restricted by Job Accounting. The job is canceled. Select [End].	page 9-31
Cannot punch at the specified position.	Have you selected a position that cannot be punched?	If the selected paper is not changed and [Continue] is selected, punch is released. Select the available paper. Select [Continue] to print.	page 6-32
Cannot punch this paper.	Did you select a paper size/type that cannot be punched?	If the selected paper is not changed and [Continue] is selected, punch is released. Select the available paper. Select [Continue] to print.	page 6-32
Cannot punch this paper size.			
Cannot punch this paper type.			

Message	Checkpoints	Corrective Actions	Reference Page
Cannot read data in this ID card.	—	In registration process, the ID card information was not read correctly. Hold again the ID card over the ID card reading part. If the same message still appears, the ID card may not be compatible with this product. Change it to another ID card.	—
Cannot recognize.	—	Make sure your ID card has been registered.	—
Cannot staple at the specified position.	Have you selected a position that cannot be stapled?	If the selected paper is not changed and [Continue] is selected, staple is released. Select the available paper. Select [Continue] to print.	page 6-30
Cannot staple this paper.*1	Did you select a paper size/ type that cannot be stapled?	If the selected paper is not changed and [Continue] is selected, staple is released. Select the available paper. Select [Continue] to print.	page 6-30
Cannot staple this paper size.*1			
Cannot staple this paper type.*1			
Cannot use ##### due to a failure.	—	Call service representative.	—
Cannot use following functions due to scanner failure. >> Copy, Send, Fax, Storing in Box	—	Scanner of this machine has failed. Contact your service representative. You can use the print function.	—
Cannot use this function due to a hard disk failure.	—	Call service representative.	—
Check the document processor.	Is the top cover of the document processor open?	Close the document processor cover.	—
	Is the document processor open?	Close the document processor.	—
Check the paper in the multipurpose tray.	—	The paper size is different. Set selected size paper and select [Continue].	page 3-13
Check the side feeder.	—	The side feeder is not installed correctly. Attach the side feeder.	—

Message	Checkpoints	Corrective Actions	Reference Page
Check the staple waste box.	Is the staple waste box full?	Follow the instructions on the screen, and empty the staple waste box.	page 10-15
	—	The staple waste box is not installed correctly. Set it correctly.	page 10-15
Check the toner container.	—	Open the main unit front cover and remove the toner container. Shake carefully and replace.  NOTE If you select [Open Toner Container Cover], you can open the Toner Container Cover that you closed accidentally.	—
Confidential document was detected.	—	The machine detects the document guard pattern. Job is canceled. Select [End].	—


*1 When Auto Error Clear is set to **[On]**, processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:
 ➔ [Auto Error Clear \(page 8-26\)](#)

E

Message	Checkpoints	Corrective Actions	Reference Page
Empty the punch waste box.	Is the punch waste box full?	Follow the instructions on the screen. and empty the punch waste box.	page 10-17
Encrypted PDF Password error.	Is the password you input correct?	Password is not entered or is incorrect.	—
Error occurred at cassette #.	—	Open the cassette. Check inside the machine and remove the paper.	—

F

Message	Checkpoints	Corrective Actions	Reference Page
Failed to activate.	—	Failed to activate the application. Contact administrator.	—
	—	Expansion Authentication is disabled. Turn the power switch off and on. If the error exists, contact administrator.	—

Message	Checkpoints	Corrective Actions	Reference Page
Failed to send via SMB.	Is the machine and the PC to which the scanned image is to be sent connected to the network?	<p>Check the network and SMB settings.</p> <ul style="list-style-type: none"> The network cable is connected. The hub is not operating properly. The server is not operating properly. Host name and IP address Port number 	page 2-6
	Is the account information (user ID, password) used to access the shared folder to which the scanned image is to be sent incorrect?	<p>Check the following settings of the PC to which the scanned image is to be sent.</p> <ul style="list-style-type: none"> Host name Path Login user name <p> NOTE If the sender is a domain user, specify the domain name. [Login User ID]@[Domain Name] Example: sa720XXXX@km</p> <ul style="list-style-type: none"> Login password Folder share permissions of the recipient 	—
Failed to specify Job Accounting.*1	—	Failed to specify Job Accounting when processing the job externally. The job is canceled. Select [End] .	—
Failed to store job retention data.	—	The job is canceled. Select [End] .	—
FAX box limit exceeded.	—	<p>Follow the instructions on the screen and delete documents from the FAX box to make room for FAX reception.</p> <p>To check the canceled job, select the [Status/Job Cancel] key and then [Printing Jobs] to check receipt result.</p>	FAX Operation Guide
Finisher tray is full of paper.	Is the acceptable storage capacity exceeded?	Remove the paper. Printing then resumes.	—
Folding tray is full of paper.	Is the acceptable storage capacity exceeded?	Remove the paper. Printing then resumes.	—
Folding Unit is detached.	—	Close the folding unit.	—

*1 When Auto Error Clear is set to **[On]**, processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

➔ [Auto Error Clear \(page 8-26\)](#)

H

Message	Checkpoints	Corrective Actions	Reference Page
Hard Disk error.	—	<p>An error has occurred on the hard disk. Job is canceled. Select [End].</p> <p>The error cords are as follows. 01: The amount of data that can be saved at once has been exceeded. Restart the system or turn the power OFF/ON. If the error still occurs, divide the file into smaller files. If the error occurs after the file is divided, the hard disk is damaged. Execute [System Initialization]. 04: Insufficient space on the hard disk to complete this operation. Move data or delete unneeded data.</p>	—

I

Message	Checkpoints	Corrective Actions	Reference Page
Incorrect account ID.*1	—	The account ID was incorrect when processing the job externally. The job is canceled. Select [End] .	—
Incorrect box password.	—	The box password was incorrect when processing the job externally. The job is canceled. Select [End] .	—
Incorrect Login User Name or Password.*1	—	The login user name or password was incorrect when processing the job externally. The job is canceled. Select [End] .	—
Install the punch waste box.	—	Follow the instructions on the screen. and install the punch waste box.	page 10-17
Install the waste toner box.	—	The waste toner box is not installed correctly. Set it correctly.	page 10-7

*1 When Auto Error Clear is set to **[On]**, processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:
 ➔ [Auto Error Clear \(page 8-26\)](#)

J

Message	Checkpoints	Corrective Actions	Reference Page
Job Accounting restriction exceeded.*1	Is the acceptable printing count restricted by Job Accounting exceeded?	The printing count exceeded the acceptable count restricted by Job Accounting. Cannot print any more. The job is canceled. Select [End] .	—

*1 When Auto Error Clear is set to **[On]**, processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

➔ [Auto Error Clear \(page 8-26\)](#)

K

Message	Checkpoints	Corrective Actions	Reference Page
KPDL error.*1	—	PostScript error has occurred. The job is canceled. Select [End] .	—

*1 When Auto Error Clear is set to **[On]**, processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

➔ [Auto Error Clear \(page 8-26\)](#)

M

Message	Checkpoints	Corrective Actions	Reference Page
Machine failure.	—	Internal error has occurred. Make a note of the error code displayed on the screen. Call service representative.	—
Mailbox tray # is full of paper.	Is the acceptable storage capacity exceeded?	Remove the paper. Printing then resumes.	—
Main unit inner tray is full of paper.	Is the acceptable storage capacity exceeded?	Remove the paper. Printing then resumes.	—
Malicious program was detected.	—	There might be the unauthorized program. The execution is stopped. Please contact to the administrator.	—
Maximum number of scanned pages.	Is the acceptable scanning count exceeded?	Cannot scan pages any more. Follow the instructions on the screen.	—

Message	Checkpoints	Corrective Actions	Reference Page
Memory is full. ^{*1}	—	The memory is full and the job cannot be continued. Select [Continue] to print the scanned pages. The print job cannot be processed completely. Select [Cancel] to cancel the job.	—
	—	The process cannot be performed due to insufficient memory. If only [End] is available, select [End] . The job will be canceled. When insufficient memory occurred frequently, contact your dealer or service representative.	—

*1 When Auto Error Clear is set to **[On]**, processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:
 ➔ [Auto Error Clear \(page 8-26\)](#)

N

Message	Checkpoints	Corrective Actions	Reference Page
Non-genuine toner installed.	Is the installed toner container our own brand?	We will not be liable for any damage caused by the use of third party supplies in this machine.	—

P

Message	Checkpoints	Corrective Actions	Reference Page
Paper jam.	—	If a paper jam occurs, the machine will stop and the location of the jam will be indicated on the screen. Leave the machine on and follow the instructions to remove the jammed paper.	page 10-54
Paper left.	—	Remove paper from the finisher tray.	—
	—	Remove the paper from the folding tray of the finisher.	—
	—	Remove paper from the document finisher.	—
Perform Tone Curve Adjustment in the System Menu.	Over long periods of use, the effects of the ambient temperature and humidity can cause output hues to vary slightly.	Run [Tone Curve Adjustment] .	page 10-48


Message	Checkpoints	Corrective Actions	Reference Page
Performing Drum Refresh...	—	The machine is under the adjustment to maintain its quality. Please wait.	—
Preparing to print.	—	The machine is under the adjustment to maintain its quality. Please wait.	—

R

Message	Checkpoints	Corrective Actions	Reference Page
Regulating the temperature...	—	The machine is under the adjustment to maintain its quality. Please wait.	—
Remove originals in the document processor.	Are there any originals left in the document processor?	Remove originals from the document processor.	—
Replace all originals and press [Continue].	—	Remove originals from the document processor, put them back in their original order, and place them again. Select [Continue] to resume printing. Select [Cancel] to cancel the job.	—
Running security function...	—	Running security function. Please wait.	—

S

Message	Checkpoints	Corrective Actions	Reference Page
Scanner memory is full.*1	—	Scanning cannot be performed due to insufficient memory of the scanner. Follow the instructions on the screen.	—
Scheduled sending jobs exceeded.	—	The number of jobs has exceeded the limit set for delayed transmission. Select [End] . The job is canceled. Wait until the delayed transmission is executed, or cancel the delayed transmission and then perform the job again.	—
Select another cassette.	Is the cassette you selected correct?	The specified cassette is a fax special stage. Select another valid cassette. Select [Continue] to print.	—

Message	Checkpoints	Corrective Actions	Reference Page
Send Error. *1	—	An error has occurred during transmission. The job is canceled. Select [End] . Refer to Responding to Send Error for the error code and corrective actions.	page 10-42
Skewed originals or multi originals fed at once.	—	See the caution attached on the document processor and check the originals. If the originals are jammed, follow the instructions on the screen to remove the originals.	—
SSD error.	—	An error has occurred on the SSD. Job is canceled. Select [End] . The error cords are as follows. 01: The amount of data that can be saved at once has been exceeded. Restart the system or turn the power OFF/ON. If the error still occurs, divide the file into smaller files. If the error occurs after the file is divided, the SSD is damaged. Execute [System Initialization] . 04: Insufficient space on the SSD to complete this operation. Move data or delete unneeded data.  NOTE Please be aware that when you carry out initialization of the system, the data saved in SSD will be erased.	—
Staple is empty. *1	Has the staple cartridge holder run out of staples?	If the staples are depleted, the machine will stop and the location of staple depletion will be indicated on the screen. Leave the machine on and follow the instructions to replace the staple case. Select [Continue] to print without stapling. Select [Cancel] to cancel the job.	page 10-10 page 10-11 page 10-13
Staple is empty. (Manual Staple)	Has staple cartridge holder A run out of staples?	Add staples to staple cartridge holder A.	page 10-10

Message	Checkpoints	Corrective Actions	Reference Page
Staple jam.	—	If a staple jam occurs, the machine will stop and the location of the jam will be indicated on the screen. Leave the machine on and follow the instructions to remove the jammed staple.	page 10-105
System error.	—	System error has occurred. Follow the instructions on the screen.	—

*1 When Auto Error Clear is set to **[On]**, processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

➔ [Auto Error Clear \(page 8-26\)](#)

T

Message	Checkpoints	Corrective Actions	Reference Page
The cover is open.	Is there any cover which is open?	Close the cover indicated on the screen.	—
The device cannot be connected because allowed connections would be exceeded.	Are ten handheld devices connected simultaneously?	Cancel a connection to a portable device that is not being used, or set the machine's auto disconnect time to break portable device connections.	page 8-58
The password does not meet password policy.	Is the password expired?	Change the login password. The job is canceled. Select [End] .	page 9-5 page 9-6
	Is the password policy requirement (such as password length or required characters) changed?	Confirm the password policy requirements and change the login password. The job is canceled. Select [End] .	page 9-5 page 9-6
The phone receiver is off the hook.	—	Put down the receiver.	—
The slit glass requires cleaning.	—	Clean the slit glass using the cleaning cloth supplied with the document processor.	page 10-3
The toner container is improperly installed.	—	The toner container is improperly installed or not installed. Open the front cover and set the toner container correctly.	—
This ID card is already registered to another user.	—	Your ID card has already been registered. Change it to another ID card.	—
This user account is locked out.	—	Contact administrator. The job is canceled. Select [End] .	—
Time for maintenance soon. #####	—	Call service representative.	—

Message	Checkpoints	Corrective Actions	Reference Page
Toner is empty.	—	Replace the toner container to our specified toner container.	page 10-4
Toner is low. (Replace when empty.)	—	It is almost time to replace the toner container. Obtain a new toner container.	—
Toner type mismatch.	Does the type of toner you have match the model?	Please install correct toner.	—
Tray # is full of paper.	Is the acceptable storage capacity exceeded?	Remove the paper. Printing then resumes.	—

U

Message	Checkpoints	Corrective Actions	Reference Page
Unknown Toner Installed. PC [C][M][Y][K]	Does the installed toner container's regional specification match the machine's?	Install the specified container.	—
USB Drive error.*1	Is writing to a USB drive prohibited?	An error occurred in the USB drive. The job stopped. Select [End] . The error cord is as follows. 01: Connect a USB drive that can be written to.	—
	—	An error occurred in the USB drive. The job stopped. Select [End] . The error cord is as follows. 01: The amount of data that can be saved at once has been exceeded. Restart the system or turn the power OFF/ON. If the error still occurs, the USB drive is not compatible with the machine. Use the USB drive formatted by this machine. If the USB drive cannot be formatted, it is damaged. Connect a compatible USB drive.	page 5-71
USB Drive is full.*1	—	The job is canceled. Select [End] . Insufficient free space in the USB drive. Delete unneeded files.	—
USB Drive is not formatted.	Is the USB drive formatted by this machine?	Perform [Format] on this machine.	—

*1 When Auto Error Clear is set to **[On]**, processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

➔ [Auto Error Clear \(page 8-26\)](#)




W



Message	Checkpoints	Corrective Actions	Reference Page
Warning for high temperature. Adjust the room temperature.	—	Print quality may be deteriorated. Adjust the temperature and the humidity of your room.	—
Warning for low temperature. Adjust the room temperature.	—	Print quality may be deteriorated. Adjust the temperature and the humidity of your room.	—
Warning low memory.	—	Cannot start the job. Try again later.	—
Waste toner box almost full.	—	It is almost time to replace the waste toner box. Obtain a new waste toner box.	—
Waste toner box is full.	Is the waste toner box full?	Replace the waste toner box.	page 10-7

Y

Message	Checkpoints	Corrective Actions	Reference Page
You cannot use this box.	—	You cannot use the specified box. Job is canceled. Select [End] .	—

Responding to Send Error

Error Code	Message	Corrective Actions	Reference Page
1101	Failed to send the e-mail. Failed to send i-FAX.	Check the host name of the SMTP server on the Command Center RX.	page 2-73
	Failed to send via FTP.	Check the host name of FTP.	page 5-25
	Failed to send via SMB.	Check the host name of SMB.	page 5-22
1102	Failed to send via SMB.	Check the SMB settings. <ul style="list-style-type: none"> • Login user name and login password  NOTE If the sender is a domain user, specify the domain name. <ul style="list-style-type: none"> • Host name • Path 	page 5-22
	Failed to send the e-mail.	Check the following on the Command Center RX. <ul style="list-style-type: none"> • SMTP login user name and login password • POP3 login user name and login password • E-mail size limit 	page 2-73
	Failed to send i-FAX.	Check the following on the Command Center RX. <ul style="list-style-type: none"> • SMTP login user name and login password • POP3 login user name and login password 	Refer to FAX Operation Guide
	Failed to send via FTP.	Check the FTP settings. <ul style="list-style-type: none"> • Login user name and login password  NOTE If the sender is a domain user, specify the domain name. <ul style="list-style-type: none"> • Path • Folder share permissions of the recipient 	page 5-25
1103	Failed to send via SMB.	Check the SMB settings. <ul style="list-style-type: none"> • Login user name and login password  NOTE If the sender is a domain user, specify the domain name. <ul style="list-style-type: none"> • Path • Folder share permissions of the recipient 	page 5-22
	Failed to send via FTP.	Check the FTP settings. <ul style="list-style-type: none"> • Path • Folder share permissions of the recipient 	page 5-25

Error Code	Message	Corrective Actions	Reference Page
1104	Failed to send the e-mail.	<p>Check the e-mail address.</p> <p> NOTE If the address is rejected by the domain, you cannot send the email.</p>	page 5-20
	Failed to send i-FAX.	<p>Check the i-FAX address.</p> <p> NOTE If the address is rejected by the domain, you cannot send the email.</p>	Refer to FAX Operation Guide
1105	Failed to send via SMB.	<p>Check the following settings.</p> <p>[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" > [Protocol Detail] > [SMB Client (Transmission)]</p>	page 8-62
	Failed to send the e-mail.	Select [On] of the SMTP settings on the Command Center RX.	page 2-73
	Failed to send via FTP.	<p>Check the following settings.</p> <p>[Home] key > [...] > [System Menu] > [Network Settings] > "Network Settings" > [Protocol Detail] > [FTP Client (Transmission)]</p>	page 8-62
	Failed to send i-FAX.	Select [On] of the i-FAX settings on the Command Center RX.	Refer to FAX Operation Guide
1106	Failed to send the e-mail. Failed to send i-FAX.	Check the sender address of SMTP on the Command Center RX.	page 2-73
1131	Failed to send via FTP.	<p>Enable the TLS.</p> <p>[Home] key > [...] > [System Menu] > [Security Settings] > "Network" [TLS]</p>	page 8-91
1132	Failed to send via FTP.	<p>Check the following of the FTP server.</p> <ul style="list-style-type: none"> • Is FTPS available? • Is the encryption available? 	—
1133	Job is canceled. Press [End].	<p>Server certificate has expired.</p> <p>Check the network and FTP settings.</p> <ul style="list-style-type: none"> • Check time/date setting of the machine. • Make sure server is using a valid certificate. 	—
1134	Job is canceled. Press [End].	<p>Check the network and Command Center RX.</p> <ul style="list-style-type: none"> • Network Settings : Protocol, FTP Client(Transimssion):Hash 	—

Error Code	Message	Corrective Actions	Reference Page
2101	Failed to send via SMB.	Check the network and SMB settings. <ul style="list-style-type: none"> • The network cable is connected. • The hub is not operating properly. • The server is not operating properly. • Host name and IP address • Port number 	—
	Failed to send via FTP.	Check the network and FTP settings. <ul style="list-style-type: none"> • The network cable is connected. • The hub is not operating properly. • The server is not operating properly. • Host name and IP address • Port number 	—
	Failed to send the e-mail. Failed to send i-FAX.	Check the network and Command Center RX. <ul style="list-style-type: none"> • The network cable is connected. • The hub is not operating properly. • The server is not operating properly. • POP3 server name of the POP3 user • SMTP server name 	page 2-73
2102 2103	Failed to send via FTP.	Check the network. <ul style="list-style-type: none"> • The network cable is connected. • The hub is not operating properly. • The server is not operating properly. 	—
		Check the following of the FTP server. <ul style="list-style-type: none"> • Is FTP available? • The server is not operating properly. 	—
	Failed to send the e-mail. Failed to send i-FAX.	Check the network. <ul style="list-style-type: none"> • The network cable is connected. • The hub is not operating properly. • The server is not operating properly. 	—
2201 2202 2203 2231	Failed to send the e-mail. Failed to send via FTP. Failed to send via SMB. Failed to send i-FAX.	Check the network. <ul style="list-style-type: none"> • The network cable is connected. • The hub is not operating properly. • The server is not operating properly. 	—
2204	Failed to send the e-mail. Failed to send i-FAX.	Check the e-mail size limit of the SMTP settings on the Command Center RX.	page 2-73
3101	Failed to send the e-mail. Failed to send i-FAX.	Check the authentication methods of both the sender and the recipient.	—
	Failed to send via FTP.	Check the network. <ul style="list-style-type: none"> • The network cable is connected. • The hub is not operating properly. • The server is not operating properly. 	—
3201	Failed to send the e-mail. Failed to send i-FAX.	Check the SMTP user authentication method of the recipient.	—

Error Code	Message	Corrective Actions	Reference Page
4801	Job is canceled. Press [End] .	Turn the power switch off and back on. If this error occurs several times, make a note of the displayed error code and contact your service representative.	—
4802	Failed to send the email. Check the encryption certificate of each destination by the Command Center RX. Job is canceled. Press [End] .	Turn the power switch off and back on. If this error occurs several times, make a note of the displayed error code and contact your service representative.	—
4803	Job is canceled. Press [End] .	Server certificate has expired. Check the network and SMTP settings. <ul style="list-style-type: none"> • Check time/date setting of the machine. • Make sure server is using a valid certificate. 	—
4804	Job is canceled. Press [End] .	Check the network and Command Center RX. <ul style="list-style-type: none"> • Network Settings : Protocol, SMTP(E-mail TX):Hash 	—
4901	An error occurred while validating the server certificate.	Check the SMTP server certificate.	—
4902	Your certificate has expired.	Check the SMTP server certificate.	—
4903	An error occurred while validating the X509 certificate.	Check the X509 certificate.	—
4904	The certificate has been revoked.	Check the SMTP server certificate.	—
4905	An error occurred while setting the encryption / signing certificate.	Check the settings related to the certificate and the imported certificate.	Command Center RX User Guide
4906	Certificate verification did not complete within the set time.	<ul style="list-style-type: none"> • Check the verification environment of the OCSP/CRL certificate and other certificates • Extend the timeout deadline • Change the certificate verification level 	Command Center RX User Guide
4a02	Failed to initialize S/MIME.	Turn the power switch off and then on again. If it occurs repeatedly, write down the error code displayed on the touch panel, check the operation description and then contact the service representative.	—
4a03	Failed to specify S/MIME encryption.	Turn the power switch off and then on again. If it occurs repeatedly, write down the error code displayed on the touch panel, check the operation description and then contact the service representative.	—
4a04	Failed to scan the S/MIME encryption certificate.	<ul style="list-style-type: none"> • Check and correct the settings related to the S/MIME certificate. • Turn the power switch off and then on again. If it occurs repeatedly, write down the error code displayed on the touch panel, check the operation description and then contact the service representative. 	Command Center RX User Guide

Error Code	Message	Corrective Actions	Reference Page
4a06	Failed to specify job accounting S/MIME Signature.	Turn the power switch off and then on again. If it occurs repeatedly, write down the error code displayed on the touch panel, check the operation description and then contact the service representative.	—
4a07	Failed to scan the S/MIME signature certificate.	<ul style="list-style-type: none"> • Check and correct the settings related to the S/MIME signature certificate. • Turn the power switch off and then on again. If it occurs repeatedly, write down the error code displayed on the touch panel, check the operation description and then contact the service representative. 	Command Center RX User Guide
4a08	The sender's email address and the email address on the signature certificate do not match.	Check the sender's email address and the email address on the signature certificate, and correct the email address(es).	—
0007 4201 4701 5101 5102 5103 5104 7101 7102 7103 720f	—	Turn the power switch off and back on. If this error occurs several times, make a note of the displayed error code and contact your service representative.	page 2-10
9181	—	The scanned original exceeds the acceptable number of pages of 999. Send the excess pages separately.	—
Other	Job is canceled. Press [End] .	Press [End] and restart the machine.	page 2-10

Adjustment/Maintenance

Overview of Adjustment/Maintenance

If there is an image problem and the message to run adjustment or maintenance menu appears, run Adjustment/Maintenance in the system menu.

The table below lists the item you can carry out.

Item		Description	Reference Page
Tone Curve Adjustment		The printed output tone may differ from the original. Perform this function to ensure consistency with the original tone.	page 10-48
Image Adjustment	Drum Refresh	Remove image blur and white dots from the printout.	page 10-52
	Developer Refresh	Adjust the printed image that is too light or incomplete, even though there is enough toner.	
	Laser Scanner Cleaning	Remove vertical white lines from the printout.	
	Calibration	Calibrate the device to ensure correct toner overlapping and consistency with the original tone.	
Calibration		Calibrate the device to ensure correct color overlapping and consistency with the original tone by media type.	page 10-53

Tone Curve Adjustment

After prolonged use, or from the effects of surrounding temperature or humidity, the printed output tone may differ from the original. Perform this function to ensure consistency with the original tone. Before executing Tone Curve Adjustment, execute calibration.


If calibration does not improve the tones, perform Tone Curve Adjustment.

➔ [Calibration on page 10-52](#)

A total of 3 pattern pages (No. 1 to 3) are printed during adjustment. The printed patterns are read sequentially during the adjustment.

Tone Curve Adjustment (Simple)

1 Load paper.

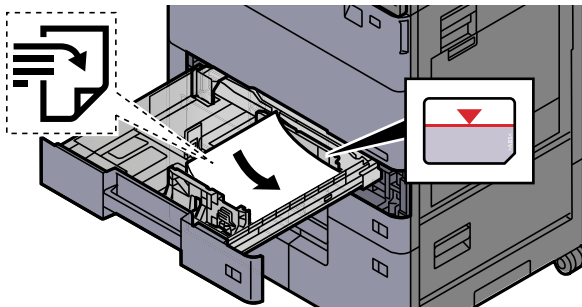

✔ IMPORTANT

- Load the paper with the print side facing up.
- After removing new paper from its packaging, fan the paper before loading it in the cassettes.
 - ➔ [Loading in Cassettes \(page 3-4\)](#)
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator (see illustration above).
- If paper is loaded without adjusting the paper length guide and paper width guide, the paper may skew or become jammed.

2 Display the screen.


[Home] key > [...] > [System Menu] > [Adjustment/Maintenance] > "Image Adjustment" [Tone Curve Adjustment (Simple)]

3 Adjust the tone curve.

- 1 Select [**Start**].

A pattern is printed. Check that the number "1" is printed at the bottom of the pattern.

- 2 As shown in the illustration, place the printed side down on the platen with the edge with the arrows toward the back.

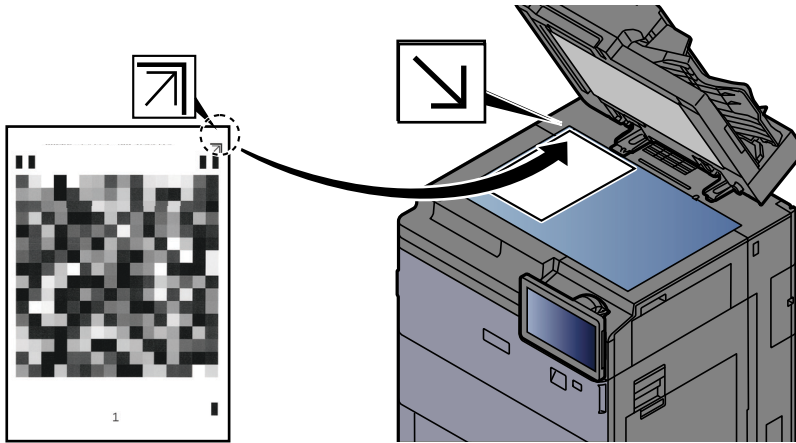


- 3 Select [**Start**].

The pattern is read and adjustment begins. The second pattern is output.

- 4 Check that the number "2" (to "3") is printed at the bottom of the pattern and repeat steps 2 to 3 twice to read patterns 2 and 3 in sequence.
- 5 Select [**OK**] in the adjustment end confirmation screen.

Tone Curve Adjustment (Detail)

1 Load paper.

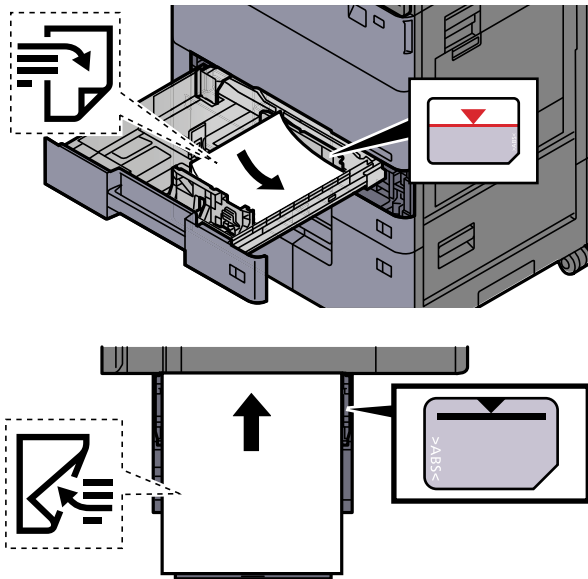

✔ IMPORTANT

- Load the paper with the print side facing up.
- After removing new paper from its packaging, fan the paper before loading it in the cassettes.
➔ [Loading in Cassettes \(page 3-4\)](#)
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator (see illustration above).
- If paper is loaded without adjusting the paper length guide and paper width guide, the paper may skew or become jammed.

2 Display the screen.


[Home] key > [...] > [System Menu] > [Adjustment/Maintenance] > "Image Adjustment" [Tone Curve Adjustment (Detail)]

3 Adjust the tone curve.

1 [Cassette 1 (to 5)] or [MP Tray] > [Start]

A pattern is printed. Check that the number "1" is printed at the bottom of the pattern.

2 As shown in the illustration, place the printed side down on the platen with the edge with the arrows toward the back.

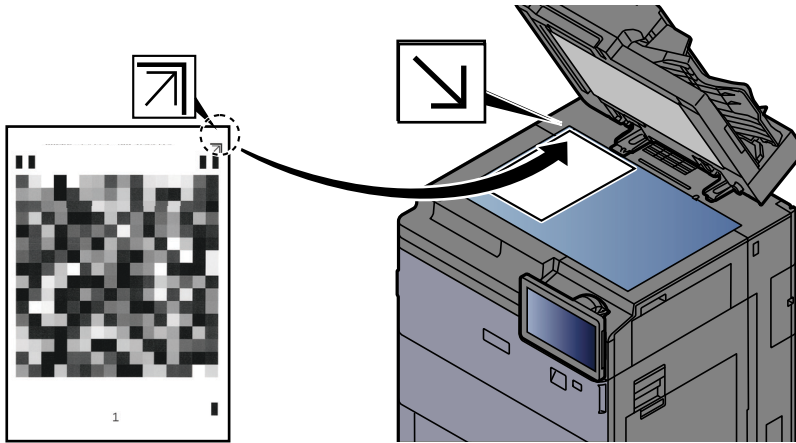

3 Select [Start].

The pattern is read and adjustment begins. The second pattern is output.

4 Check that the number "2" (to "3") is printed at the bottom of the pattern and repeat steps 2 to 3 twice to read patterns 2 and 3 in sequence.

5 Select [OK] in the adjustment end confirmation screen.

Image Adjustment

Select any of the adjustment menus to execute image adjustments to improve the printed image.

1 Display the screen.

Select the [Home] key > [...] > [System Menu] > [Adjustment/Maintenance] > "Image Adjustment" [Image Adjustment].

2 Select the item to adjust.

Select the image adjustment menu to be performed.

Item	Description
Drum Refresh	Remove image blur and white dots from the printout.
Developer Refresh	Adjust the printed image that is too light or incomplete, even though there is enough toner.
Laser Scanner Cleaning	Remove vertical white lines from the printout.
Calibration	Calibrate the device to ensure correct toner overlapping and consistency with the original tone.

3 Perform the Image Adjustment.

Select [Start]. "Image Adjustment" begins.



NOTE

- Drum Refresh cannot be performed while printing. Execute Drum Refresh after the printing is done.
- Waiting time may be longer when the toner is refilled during developer refresh.
- When consistency with the original tone is not ensured even after performing calibration, refer to the following:

➔ [Tone Curve Adjustment \(page 10-48\)](#)

Calibration

Calibrate the device to ensure correct color overlapping and consistency with the original tone by media type.

1 Display the screen.

Select the [Home] key > [...] > [System Menu] > [Adjustment/Maintenance] > "Image Adjustment" [Calibration].

2 Select the item to adjust.

Select [Cassette 1 (to 5)] or [MP Tray].

3 Perform the Calibration.

Select [Start]. "Calibration" begins.



NOTE

- This calibration also will be applied to the cassettes and multipurpose tray which have same media type paper.
- When consistency with the original tone is not ensured even after performing calibration, refer to the following:
 - ➔ [Tone Curve Adjustment \(page 10-48\)](#)


Clearing Paper Jams

If a paper jam occurs, printing stops and the location at which the paper jam has occurred and the following message appear on the touch panel.

"Paper Jam."


Refer to these procedures to remove the jammed paper.

Jam Location Indicators

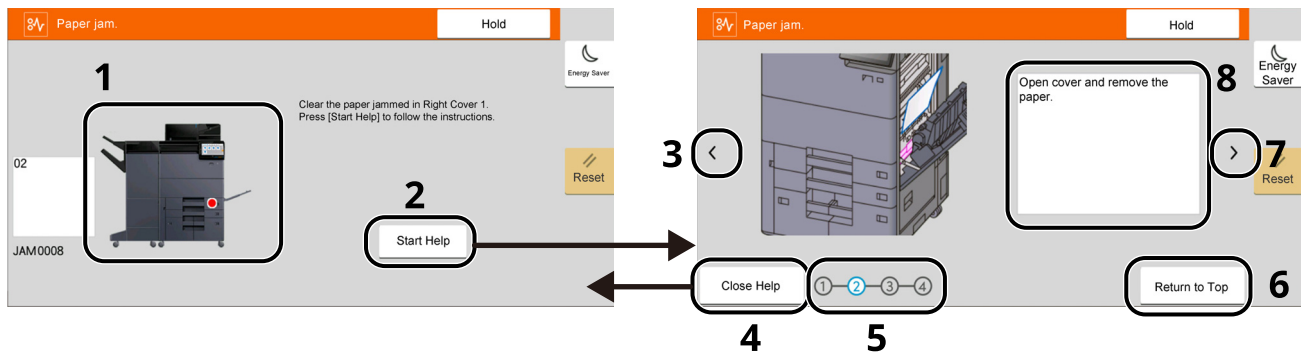

- 1 Shows the location of a paper jam.
- 2 Shows the Help screen. The Help screen shows the procedure to clear the jam.
- 3 Returns to the previous step.
- 4 Closes the Help screen and returns to the original screen.
- 5 Shows the selected step.
- 6 Returns to step 1.
- 7 Advances to the next step.
- 8 Shows the removal procedure.

If a paper jam occurs, the location of the jam will be displayed on the touch panel as well as the clearing instructions.

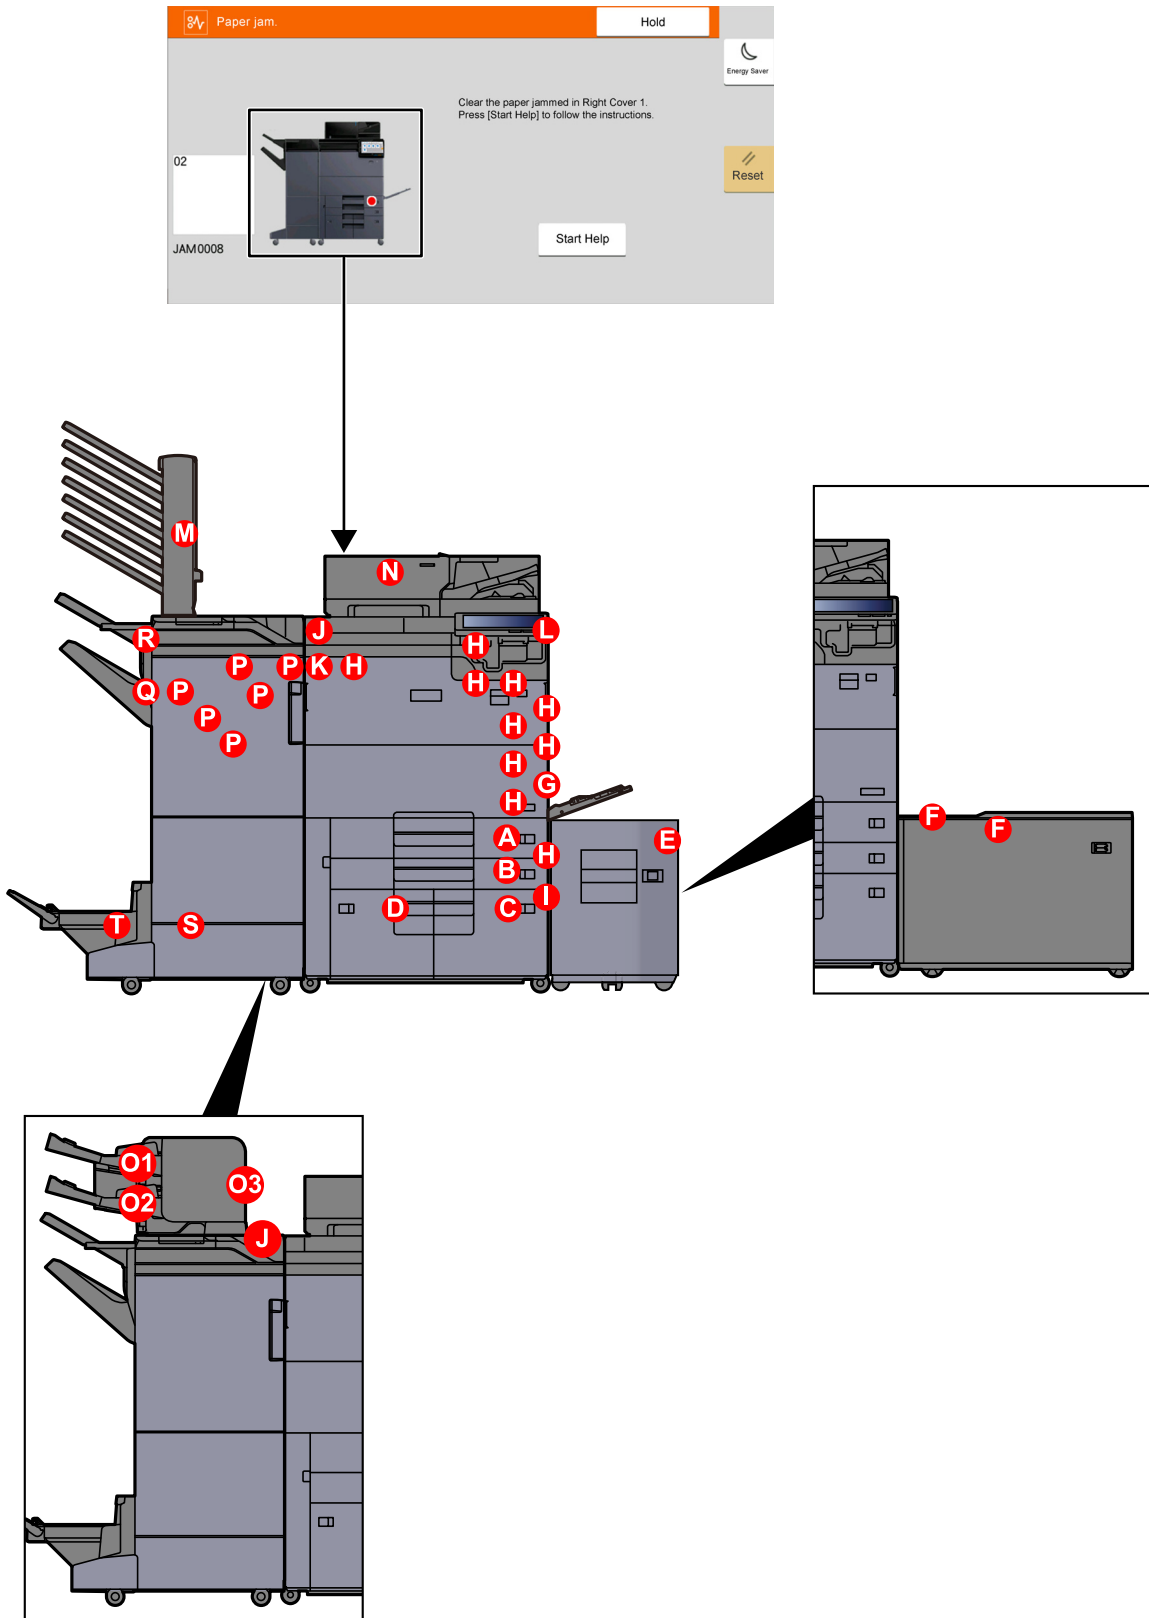

Paper Jam Location Indicator	Paper Jam Location	Reference Page
A	Cassette 1	page 10-57
B	Cassette 2	page 10-59
C	Cassette 3	page 10-61
D	Cassette 4	page 10-61
E	Cassette 5 (Side Feeder (3,000-sheet))	page 10-66
F	Cassette 5 (Side Feeder (4,000-sheet))	page 10-67
G	Multipurpose Tray	page 10-69
H	Right Cover 1	page 10-70
I	Right Cover 2	page 10-73
J	Upper Left Tray/Finisher (Tray C)	page 10-74
K	Lower Left Tray	page 10-76
L	Right Tray	page 10-77
M	Mailbox	page 10-93
N	Document Processor	page 10-78
O1	Inserters	page 10-81
O2		
O3		
P	Finisher (Inner)	page 10-84
Q	Finisher (Tray A)	page 10-86
R	Finisher (Tray B)	page 10-90
S	Folding Unit	page 10-94
T	Folding Tray	page 10-101

After you remove the jam, the machine will warm up again and the error message will be cleared. The machine resumes with the page that was printing when the jam occurred.


Remove any jammed paper in Cassette 1

Here, we'll explain the procedures for cassette 1, as an example.


CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


1 Open Right Cover 1.

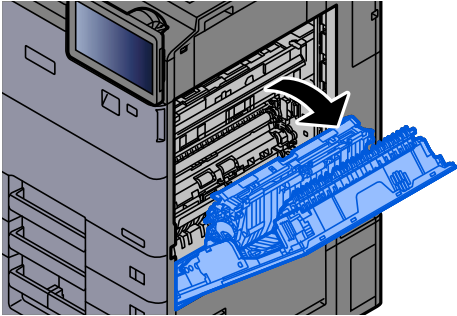


2 Remove any jammed paper.

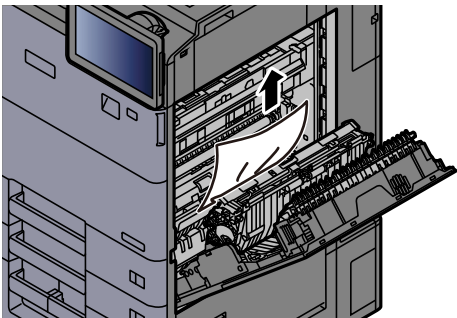

3 Pull Cassette 1 out toward you until it stops.

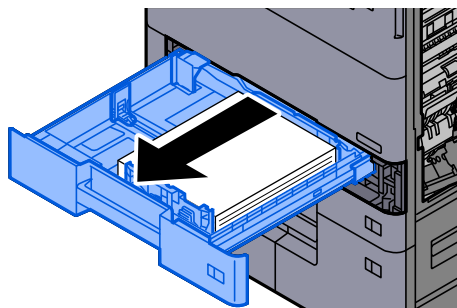


4 Remove any jammed paper.

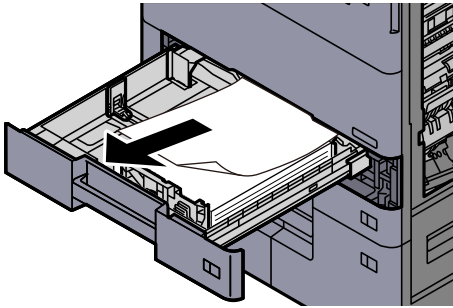


NOTE

The cassette can be removed.

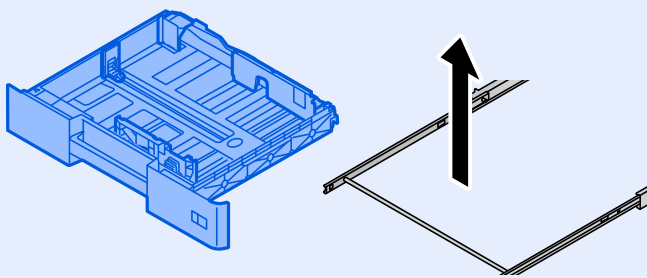

5 Push Right Cover 1 and Cassette 1 back in.

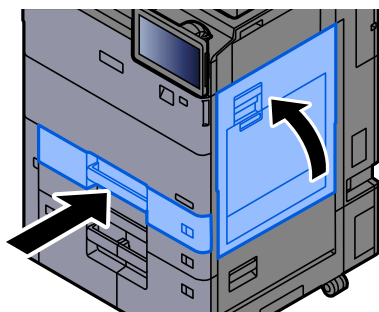


Remove any jammed paper in Cassette 2


CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


1 Open Right Cover 1.

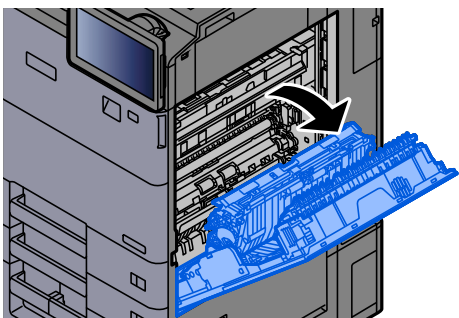


2 Remove any jammed paper.

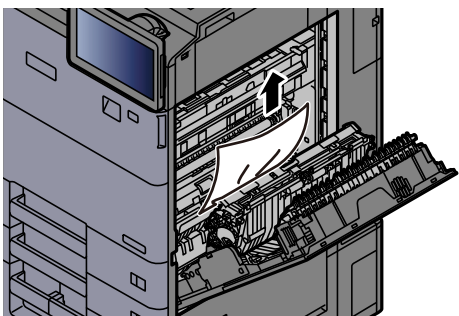

3 Pull Cassette 2 out toward you until it stops.

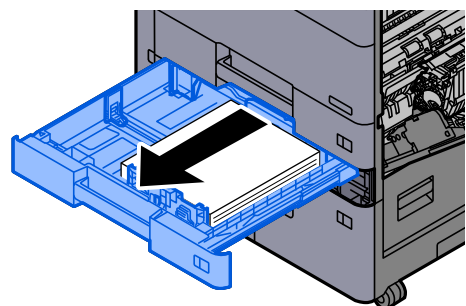


4 Remove any jammed paper.

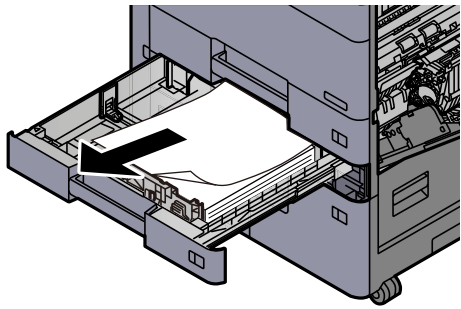


NOTE

The cassette can be removed.

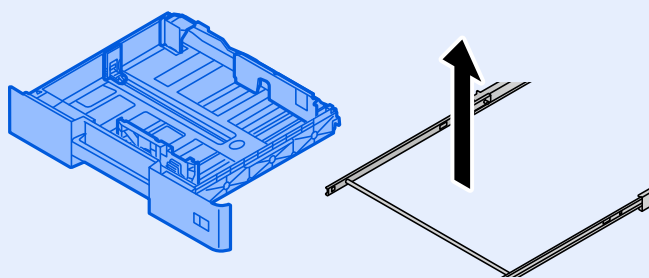

5 Push Right Cover 1 and Cassette 2 back in.

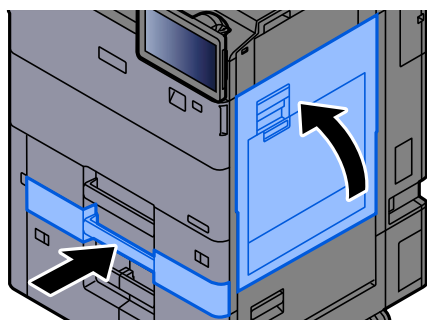


Remove any jammed paper in Cassette 3


CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


- 1 If the optional side feeder is installed, detach the side feeder.

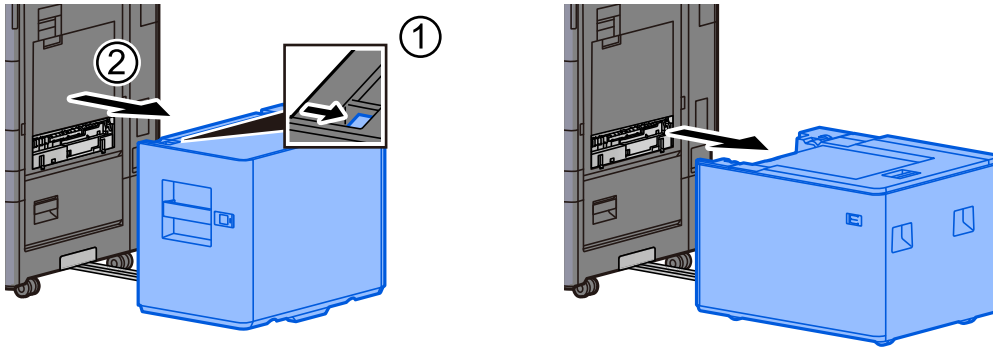


- 2 Open Right Cover 2.

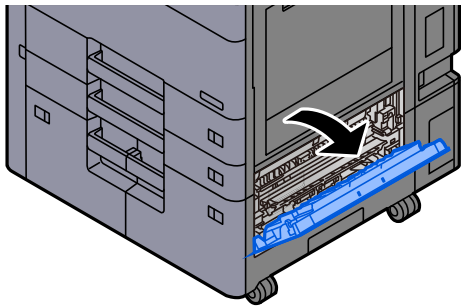


- 3 Remove any jammed paper.

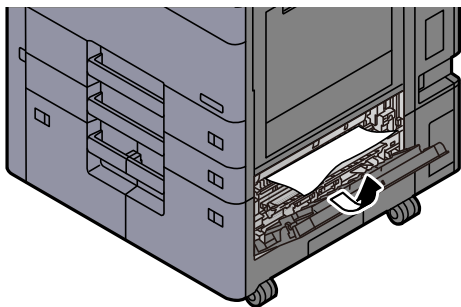


- 4** Pull Cassette 3 out toward you until it stops.

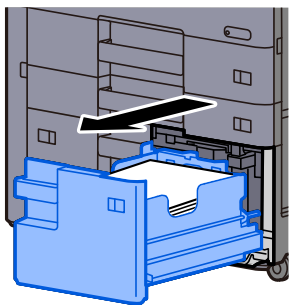



- 5** Remove any jammed paper.

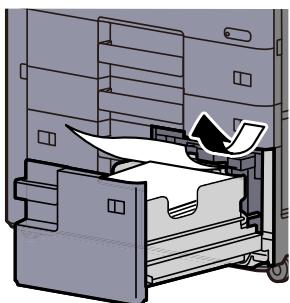

- 6** Push Right Cover 2 and Cassette 3 back in.

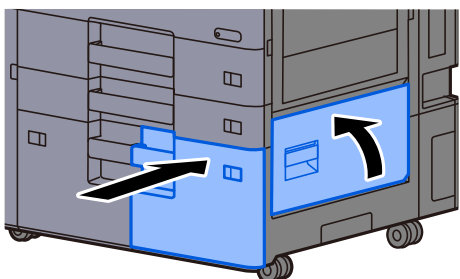

- 7** If the optional side feeder is installed, return the side feeder to the original position.

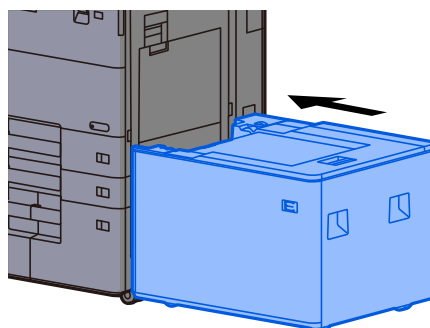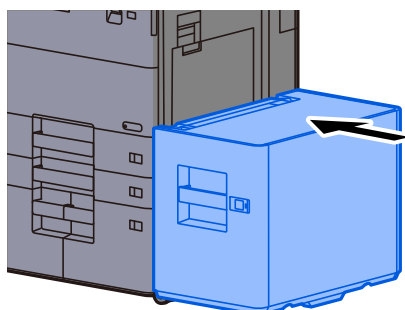


Remove any jammed paper in Cassette 4


CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


- 1 If the optional side feeder is installed, detach the side feeder.

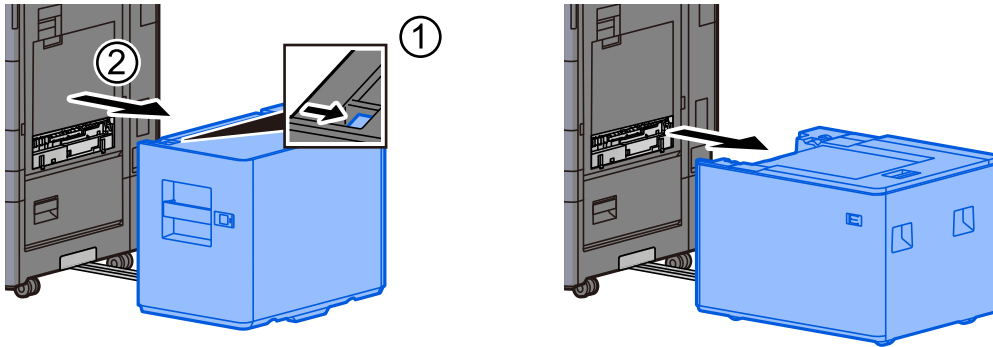


- 2 Open Right Cover 2.

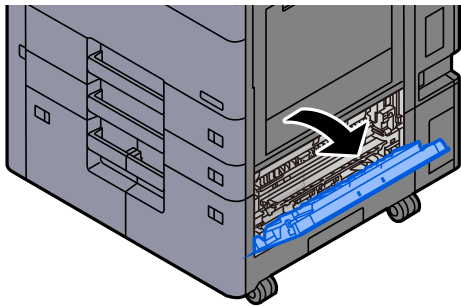


- 3 Remove any jammed paper.

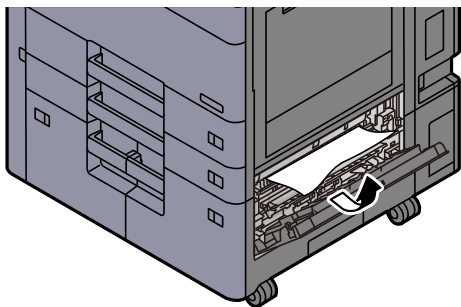


4 Pull Cassette 3 out toward you until it stops.

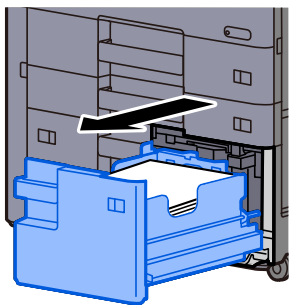


5 Pull Cassette 4 out toward you until it stops.

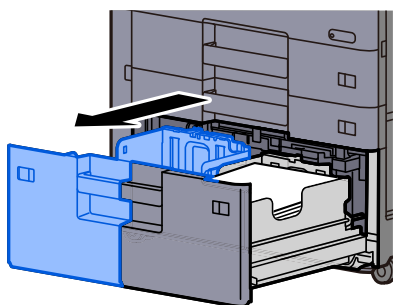


6 Pull out paper feed unit (B1).

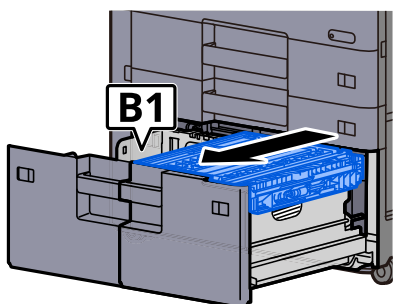


7 Open cover (B2).

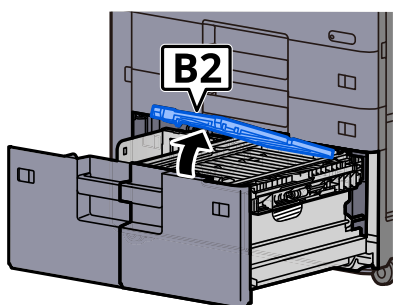


8 Remove any jammed paper.

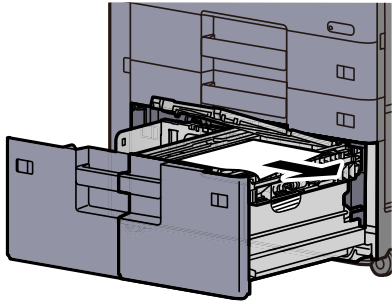



9 Push the paper feed unit, Cassette 2 and Cassette 4 back in.

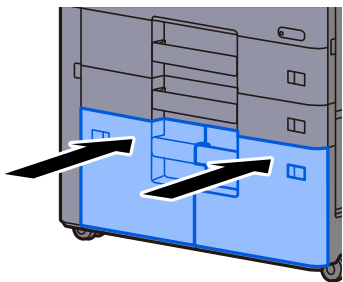

10 Return the cover to the original position.

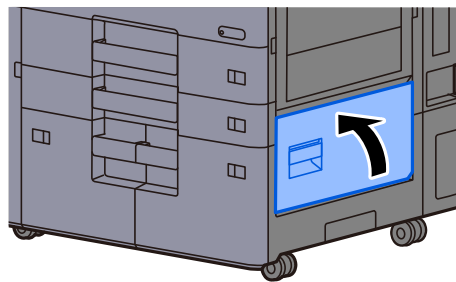

11 If the optional side feeder is installed, return the side feeder to the original position.

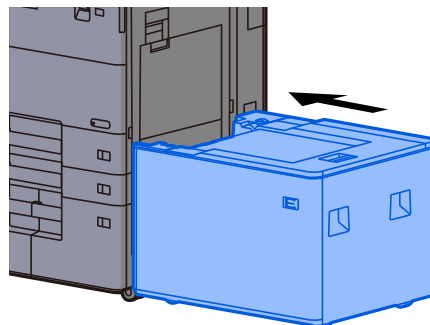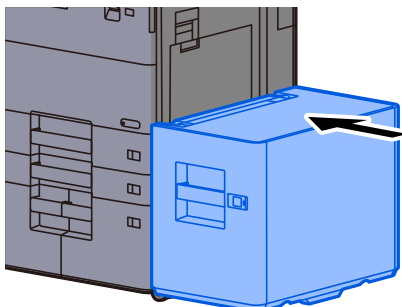


Remove any jammed paper in Cassette 5 (Side Feeder (3,000-sheet))


CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


1 Detach the side feeder.

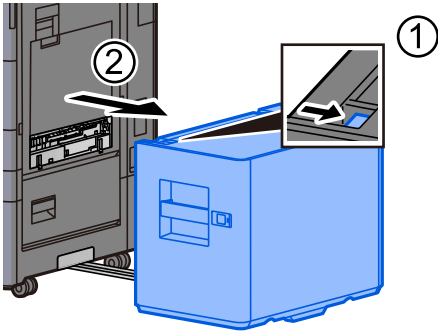


2 Remove any jammed paper.

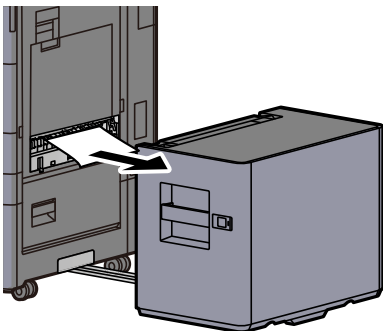


3 Pull Cassette 5 out toward you until it stops.

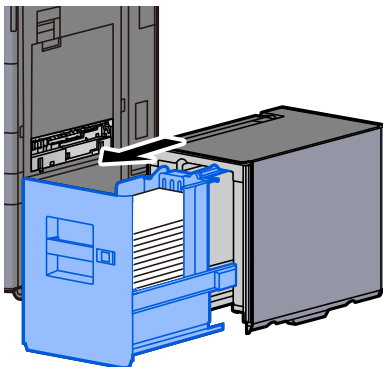

4 Remove any jammed paper.

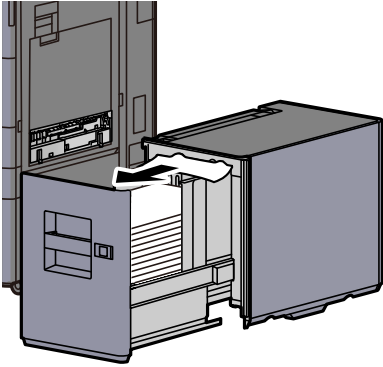


5 Return Cassette 5 and the side feeder to the original position.

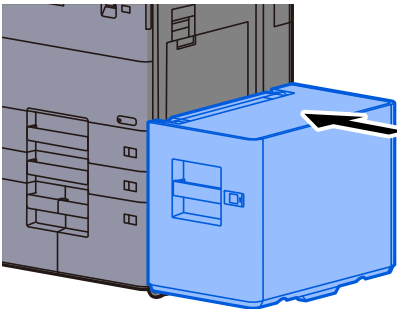


Remove any jammed paper in Cassette 5 (Side Feeder (3,500-sheet))


1 Open the conveyor cover.

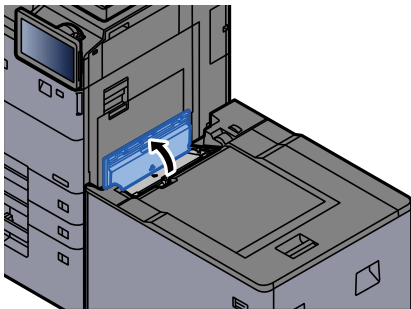


2 Remove any jammed paper.

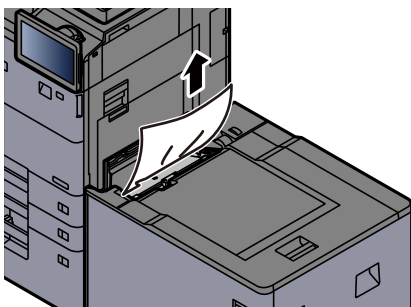


3 Open the top cover.

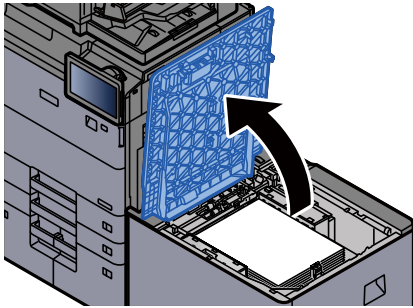

4 Remove any jammed paper.

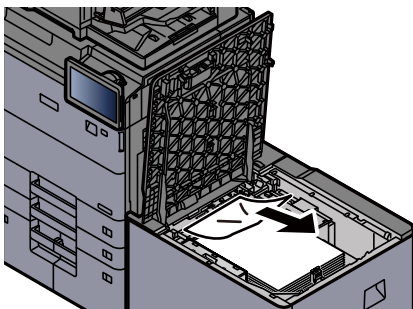

5 Close the top cover.

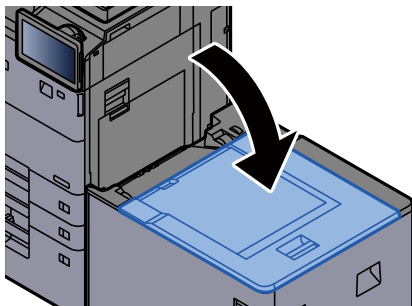


Remove any jammed paper in the Multipurpose Tray


CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.

1 Remove any jammed paper.

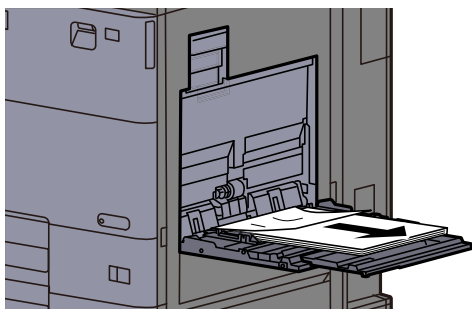

2 Remove all the paper.

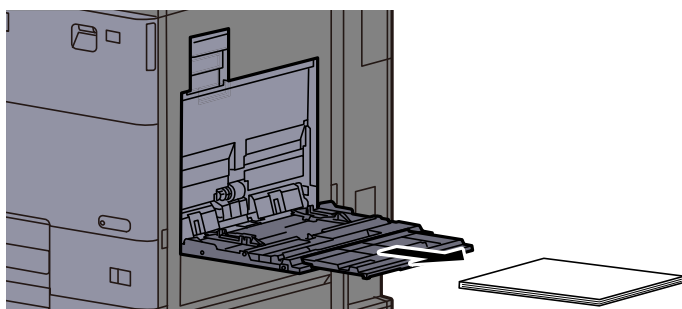

3 Reload the paper.




Remove any jammed paper in Right Cover 1

CAUTION

The fixing unit is extremely hot. Take sufficient care when working in this area, as there is a danger of getting burned.

- 1 If the optional side feeder is installed, detach the side feeder.

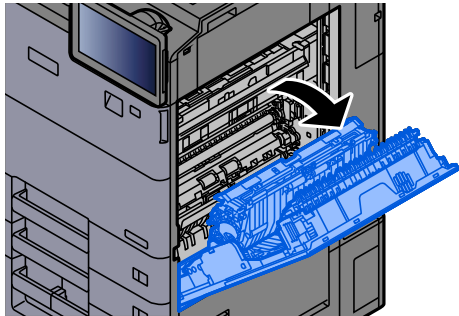


NOTE


Remove the paper from the multipurpose tray.

- 2 Remove any jammed paper.


- 1 Lift lever A2 to release the pressure on the rollers and remove any jammed paper.
- 2 After removing the paper, lower lever A2 and return it to its original position.

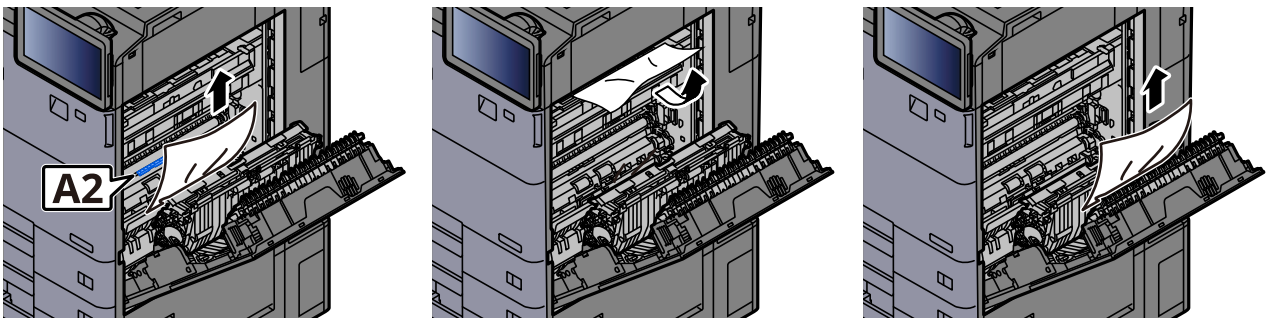


- 3 Open the conveyor cover.

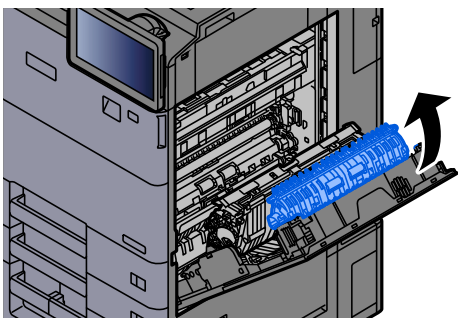

4 Remove any jammed paper.

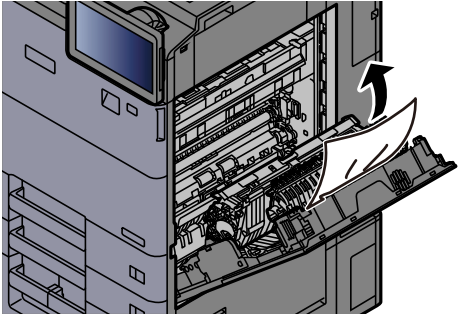


5 Open the front cover.

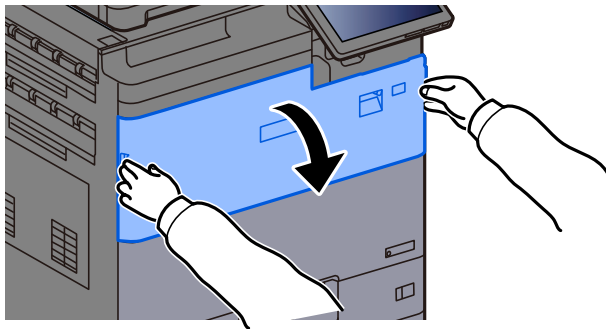


6 Pull out the bridge unit.


If there is any paper remaining inside the unit, remove the jammed paper.

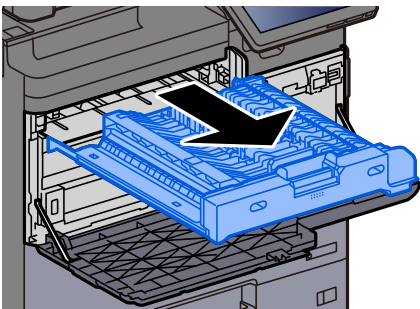

7 Open the bridge unit cover.

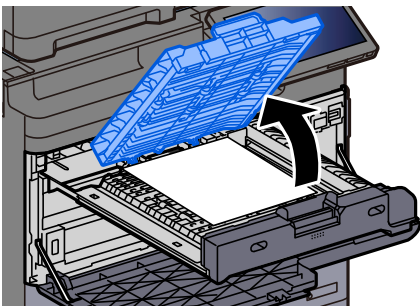


8 Remove any jammed paper.

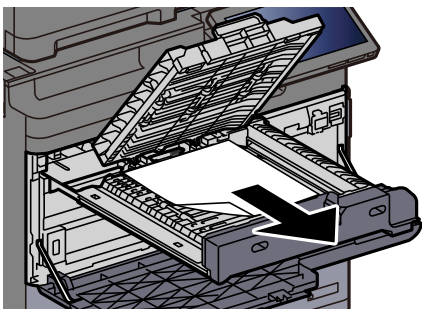



NOTE

Remove the paper from the multipurpose tray.

9 Return the bridge unit to the original position.

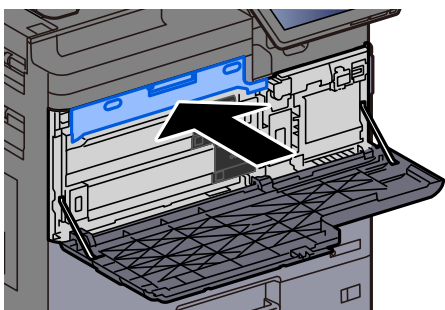

10 Return the covers to the original position.

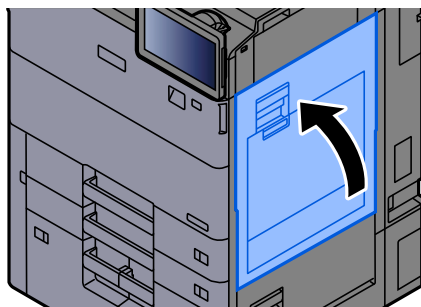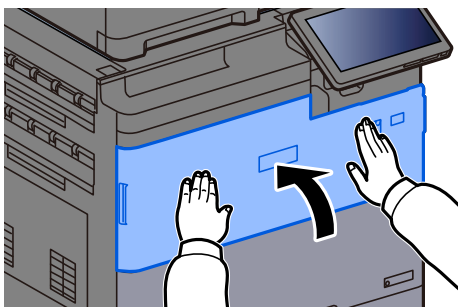


Remove any jammed paper in Right Cover 2


CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


- 1 If the optional side feeder is installed, detach the side feeder.

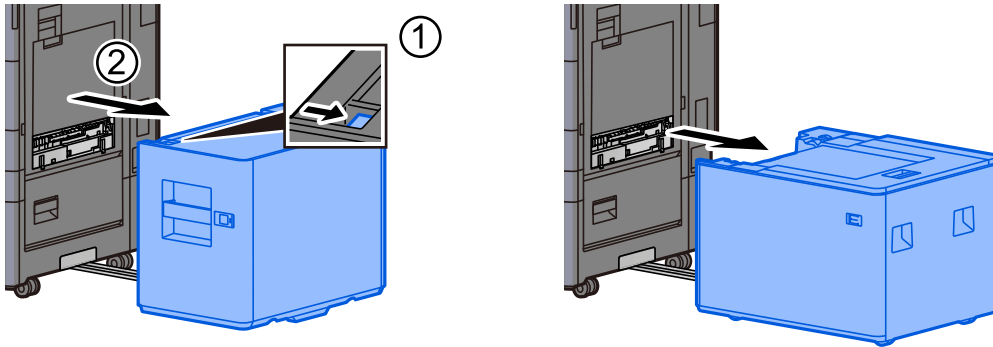


- 2 Open Right Cover 2.

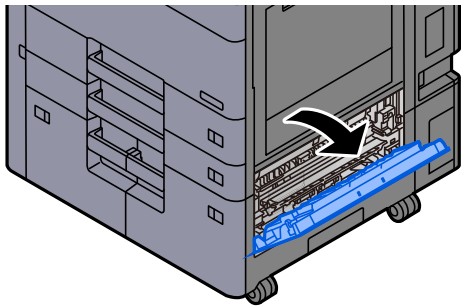



- 3 Remove any jammed paper.

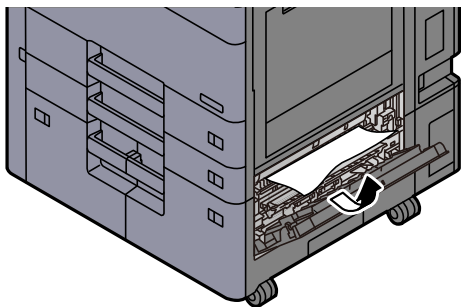

4 Return the cover 2 to the original position.

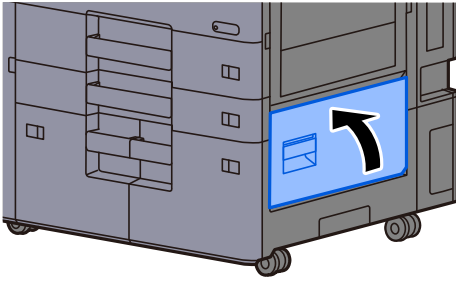

5 If the optional side feeder is installed, return the side feeder to the original position.

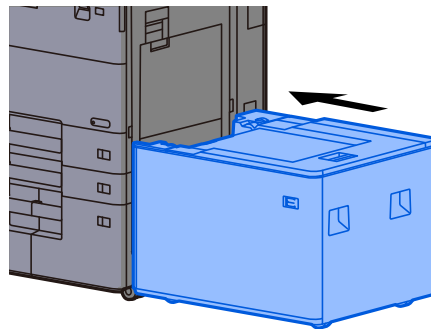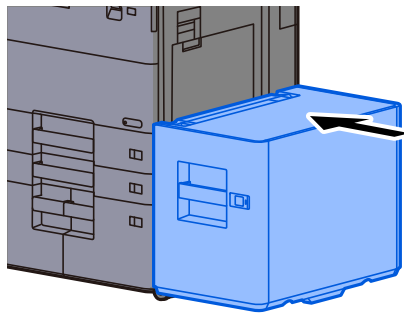


Remove any jammed paper in the Upper Left Tray/Finisher (Tray C)


! CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


1 Open the upper left cover.

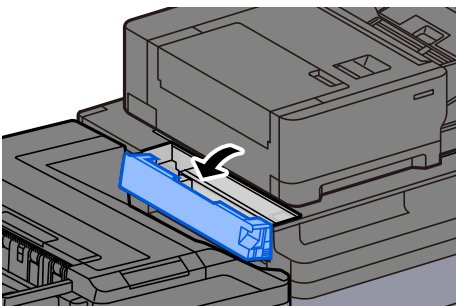


2 Open the conveyor cover (A3).

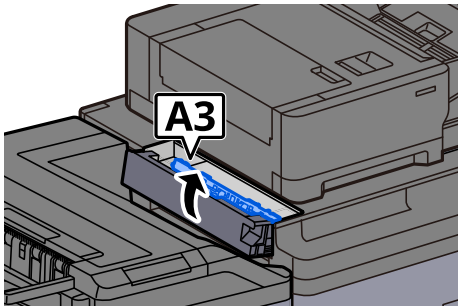

3 Remove any jammed paper.

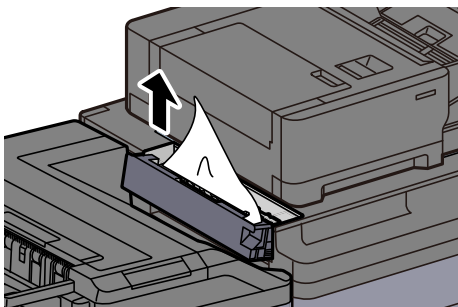

4 Return the cover to the original position.

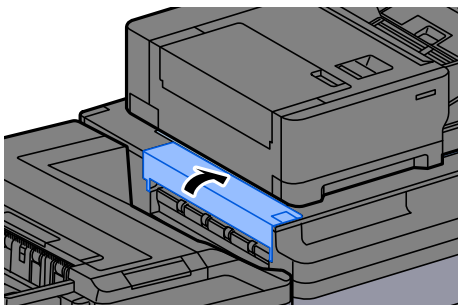


Remove any jammed paper in the Lower Left Tray


CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


1 Remove any jammed paper.

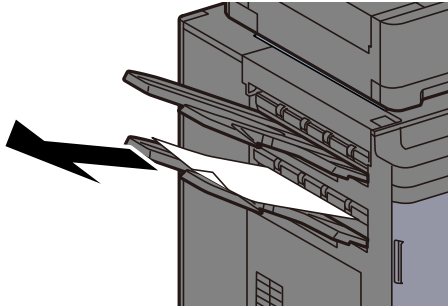

2 Open Right Cover 1.

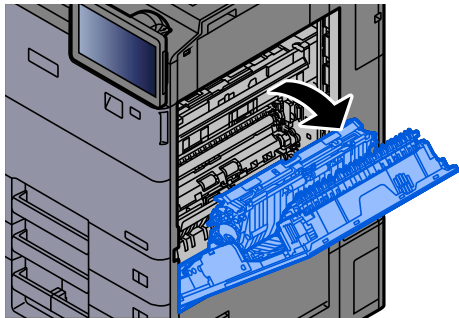

3 Return the cover to the original position.

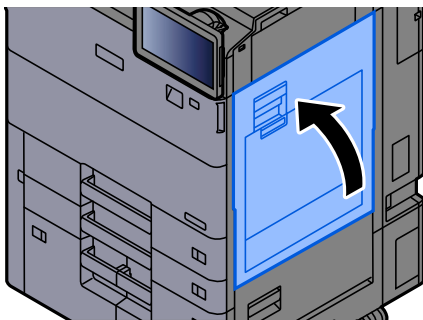


Remove any jammed paper in the Right Tray


CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


1 Remove any jammed paper.

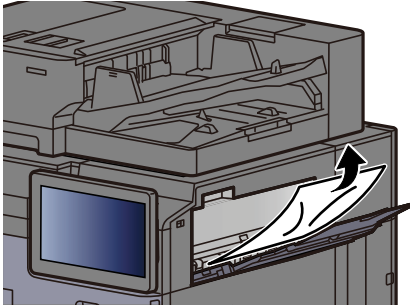

2 Open Right Cover 1.

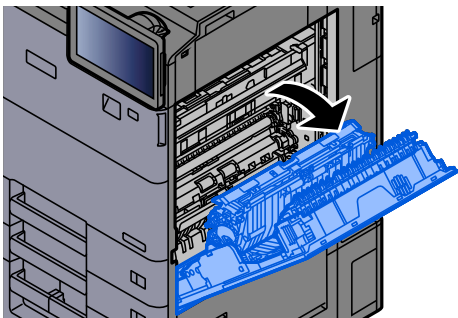

3 Return the cover to the original position.

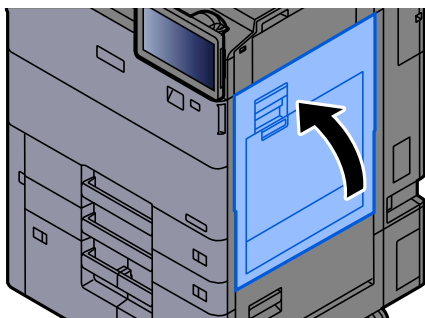


Remove any jammed paper in the Document Processor


CAUTION

If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


- 1 Remove the originals from the Original Table.

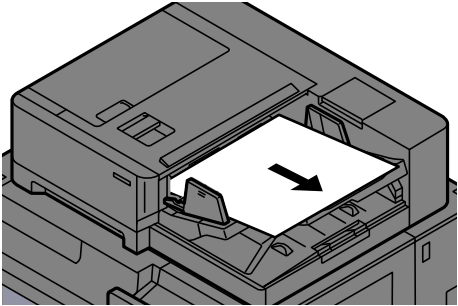


- 2 Open the document processor cover.

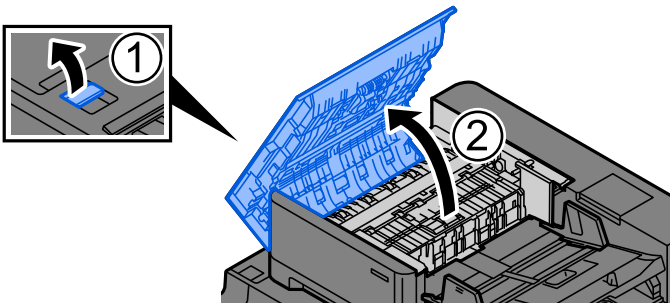


- 3 Turn dial (C) to remove any jammed paper.

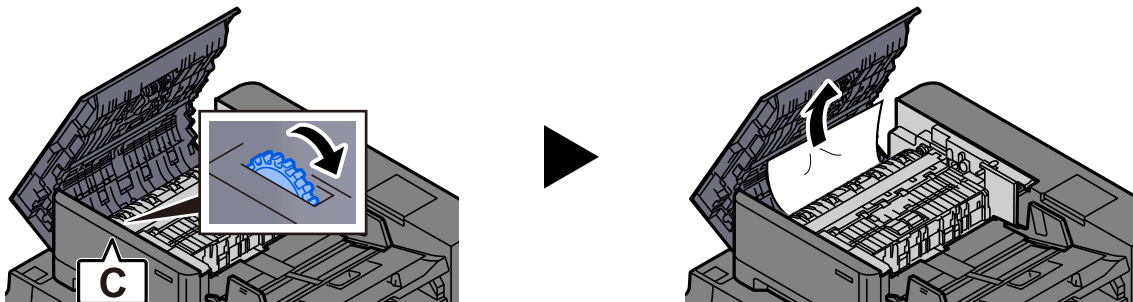

- 4 Turn dial (C) to remove any jammed paper.

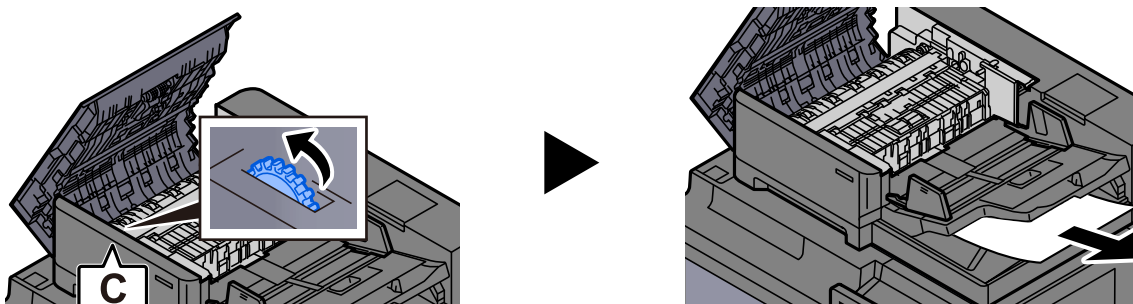


5 Return the cover to the original position.

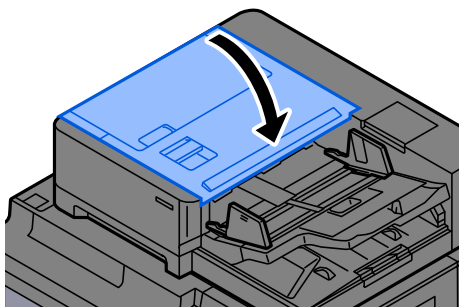


Straight path (Document Processor)


1 Remove the originals from the straight path tray.

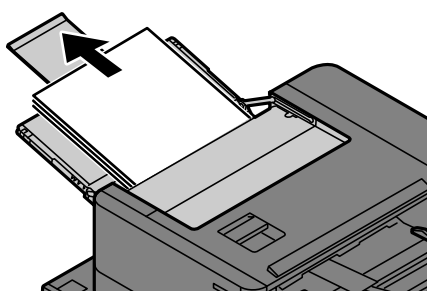


2 Close the straight path tray.

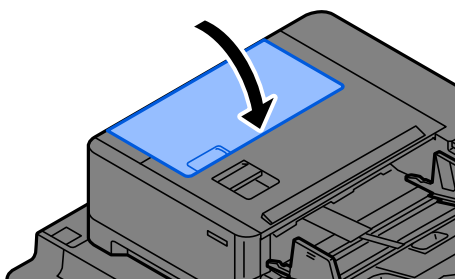


3 Open the document processor cover.

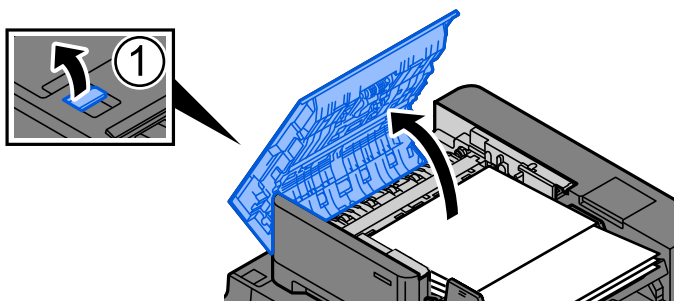

4 Remove the originals from the Original Table.

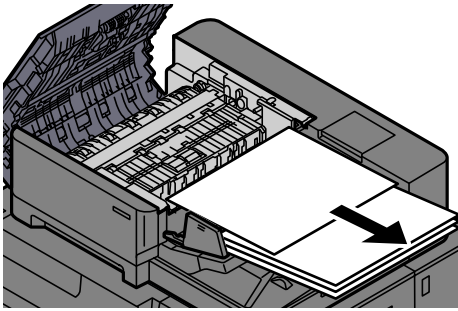

5 Return the cover to the original position.

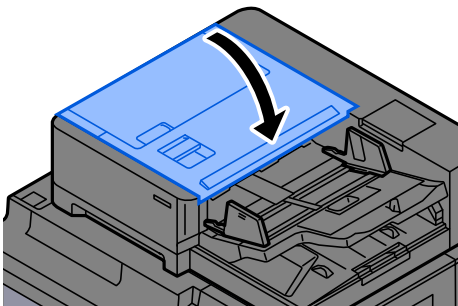


Remove any jammed paper in the Inserter

CAUTION


- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.

Vertical transport section


- 1 Open the right cover.

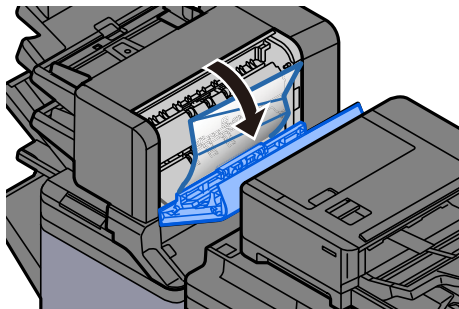


- 2 Remove any jammed paper.

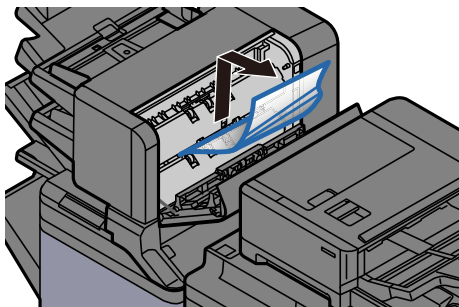


- 3 Return the cover to the original position.

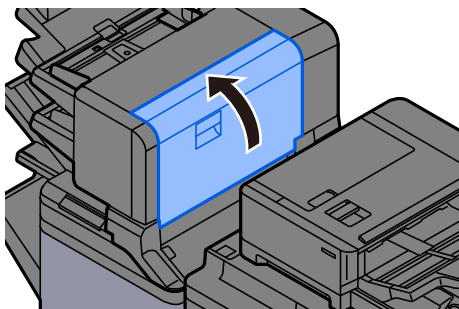


4 Open the conveyor cover on the inserter.

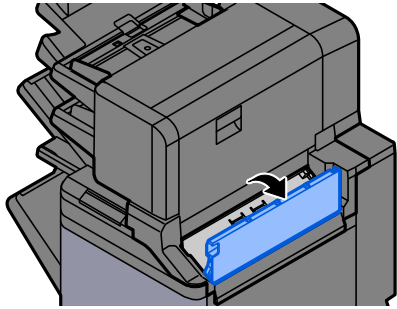

5 Remove any jammed paper.

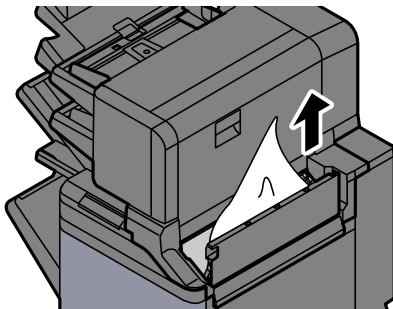


6 Close the conveyor cover

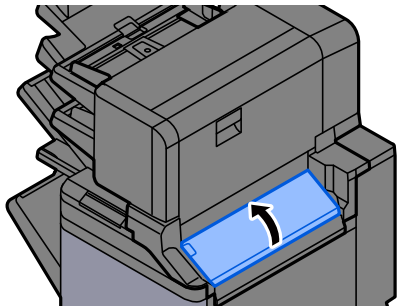


Tray 1 lift error


1 Reload paper in tray 1.

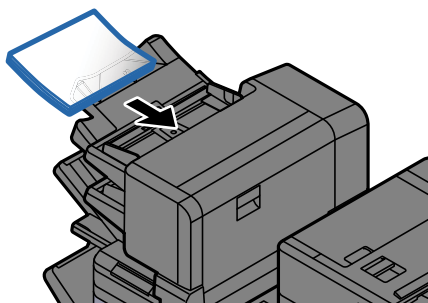

2 Open the right cover.

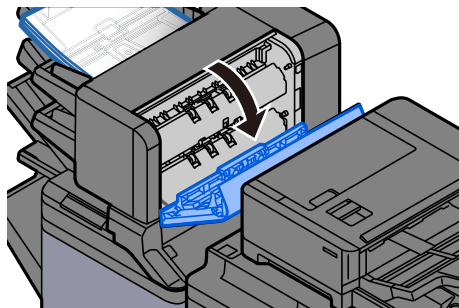


3 Close the right cover.

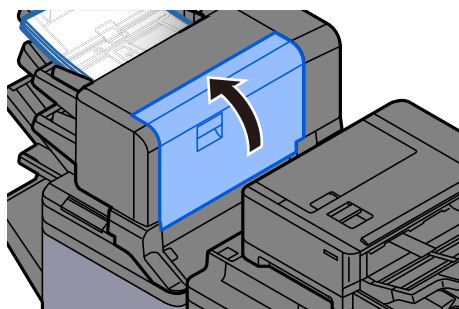


Tray 2 lift error


1 Reload paper in tray 2.

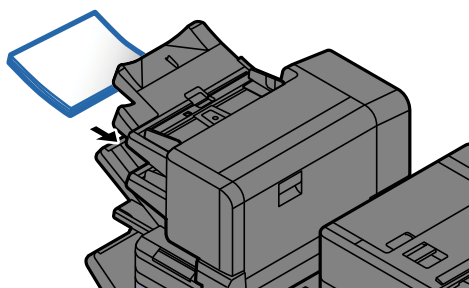

2 Open the right cover.

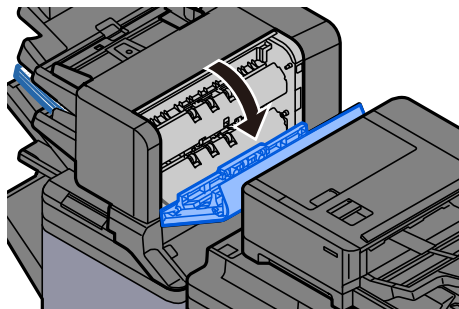

3 Close the right cover.

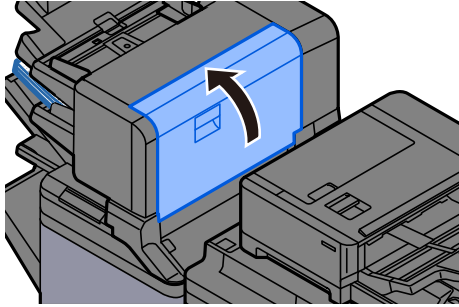


Remove any jammed paper in the Finisher (Inner)


CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


1 Open the finisher front cover 1.

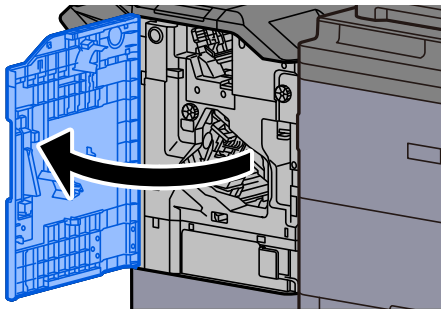


2 Remove the Punch Waste Box.

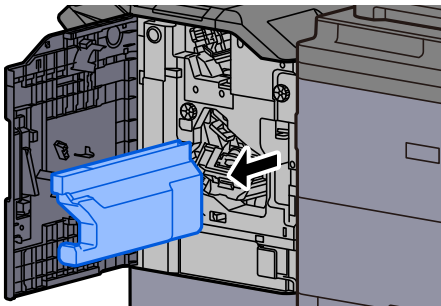


3 Open the conveyor guide (D1).

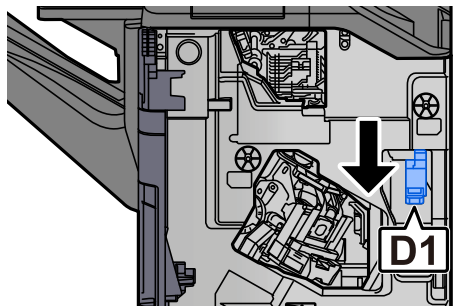


4 Remove any jammed paper.

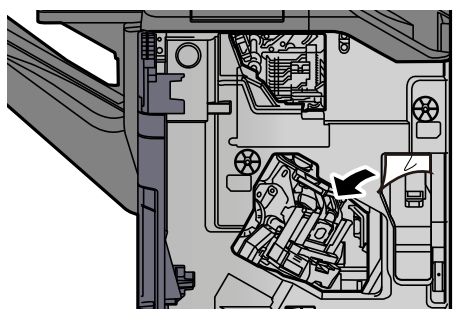


5 Return the conveyor guide (D1) to the original position.

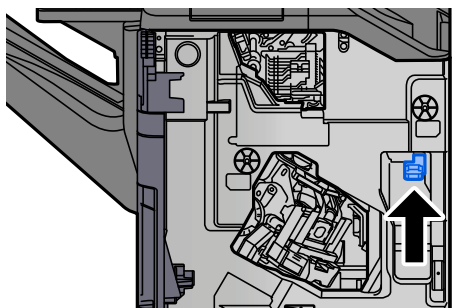

6 Install the Punch Waste Box.

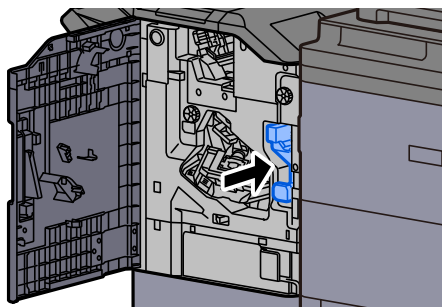

7 Return the cover to the original position.

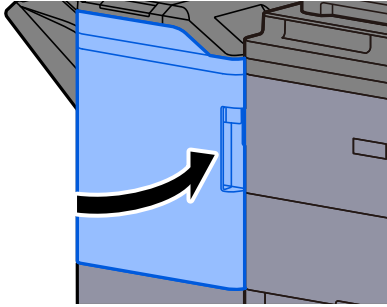


Remove any jammed paper in the Finisher (Tray A)


CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


1 Remove any jammed paper.

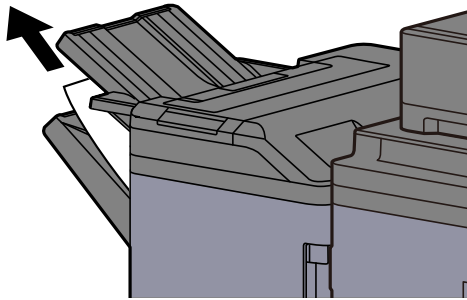


2 Open the finisher front cover 1.

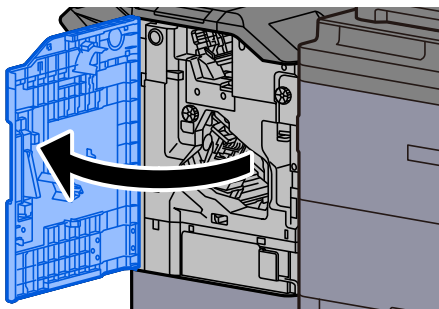


3 Turn knob (D7).

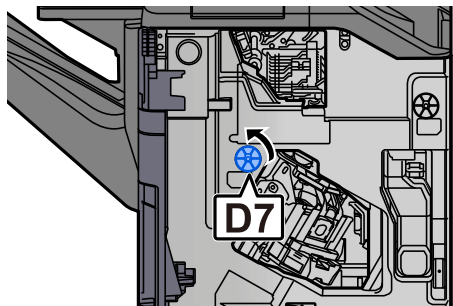


4 Remove any jammed paper.

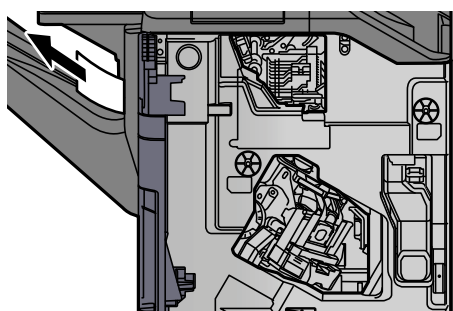


5 Open the conveyor guide (D3).

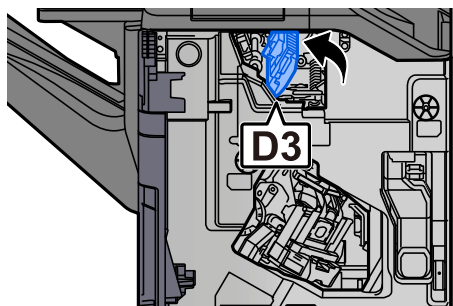


6 Remove any jammed paper.

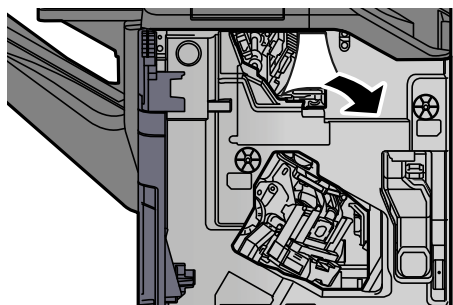


7 Return the conveyor guide (D3) to the original position.

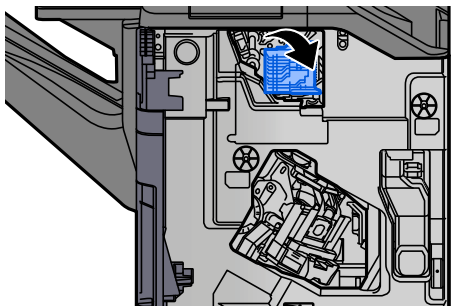


8 Remove the Punch Waste Box.

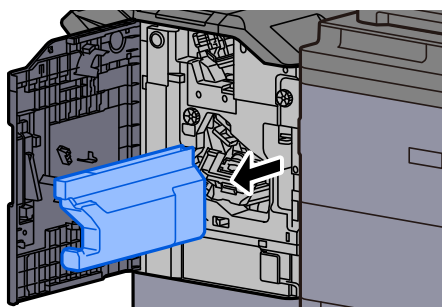


9 Open the conveyor guide (D1).

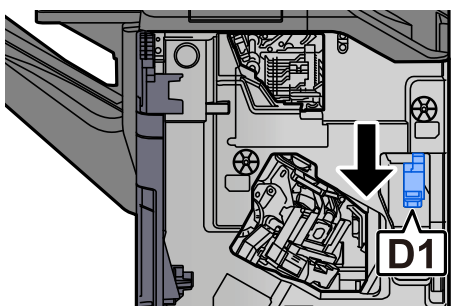


10 Remove any jammed paper.

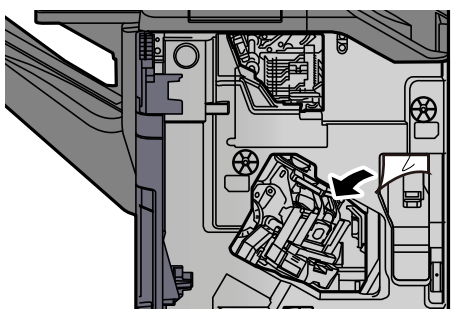


11 Return the conveyor guide (D1) to the original position.

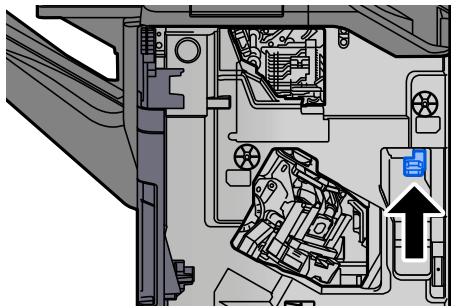

12 Install the Punch Waste Box.

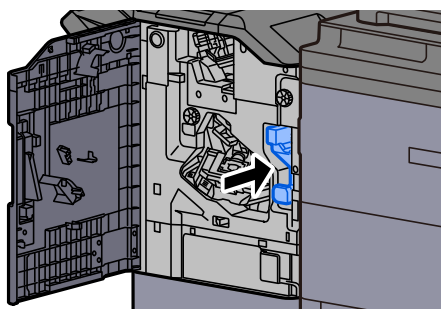

13 Return the cover to the original position.

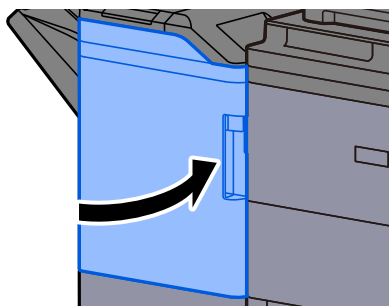


Remove any jammed paper in the Finisher (Tray B)


CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


1 Remove any jammed paper.

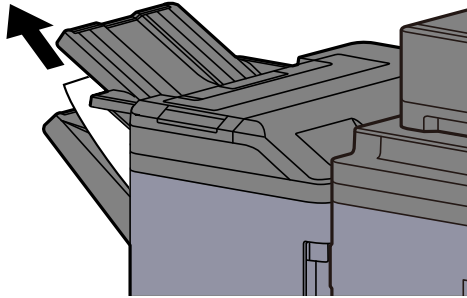


2 Open the finisher front cover 1.

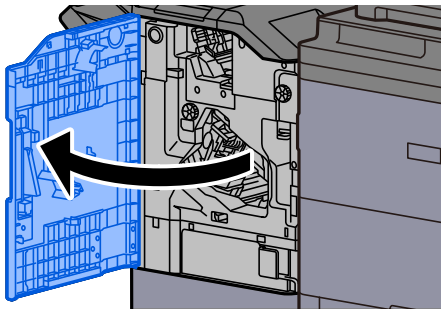


3 Open the conveyor guide (D6).

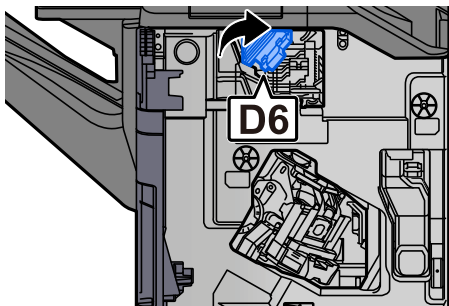


4 Remove any jammed paper.

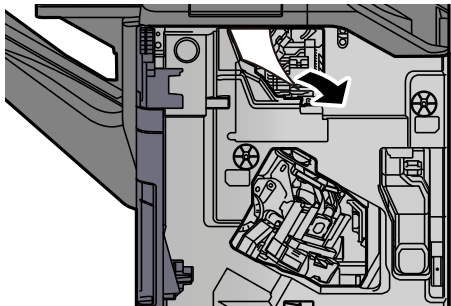


5 Return the conveyor guide (D6) to the original position.

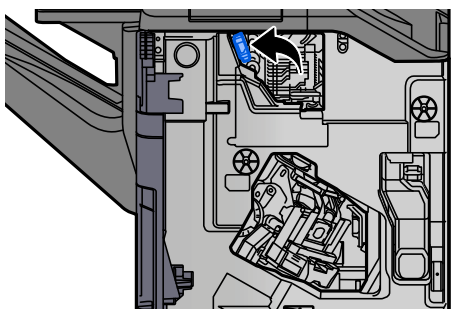


6 Remove the Punch Waste Box.

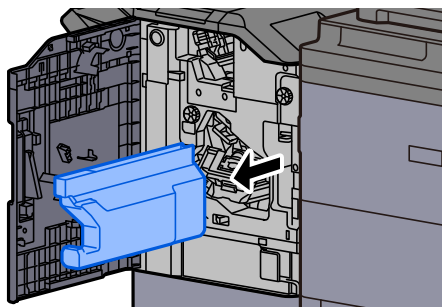


7 Open the conveyor guide (D1).

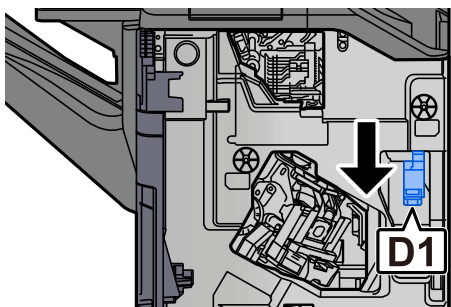


8 Remove any jammed paper.

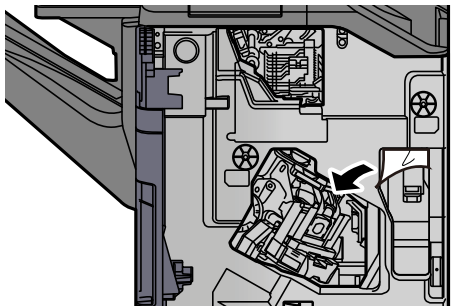


9 Return the conveyor guide (D1) to the original position.

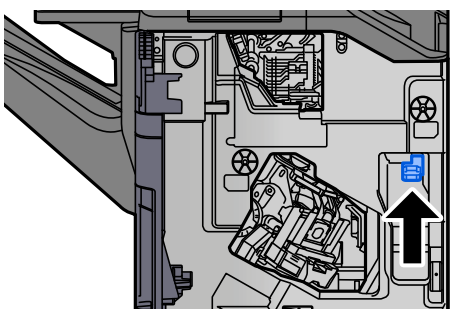

10 Install the Punch Waste Box.

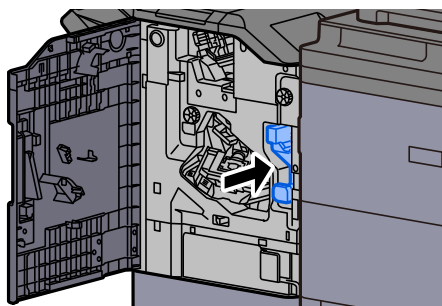

11 Return the cover to the original position.

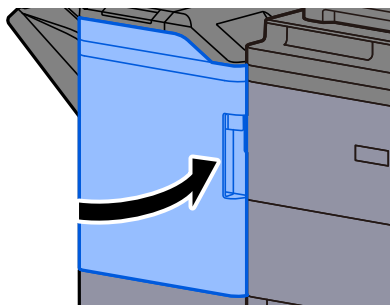


Remove any jammed paper in the Mailbox


CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


1 Open the mailbox cover.

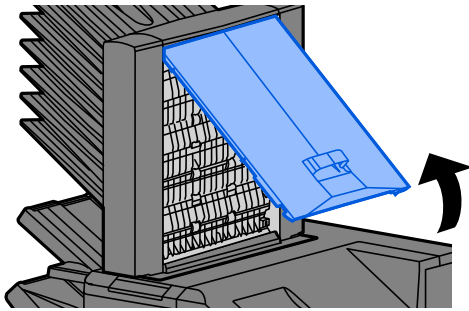

2 Remove any jammed paper.

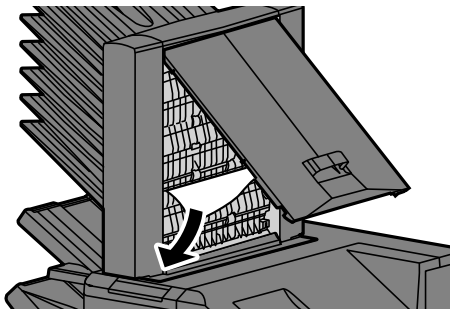

3 Close the cover.

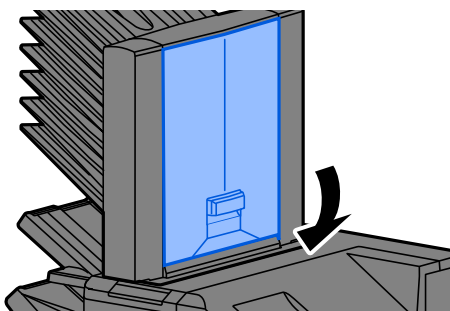


Remove any jammed paper in the Folding Unit (Finisher)


CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


- 1 Open the finisher front cover 1 and 2.

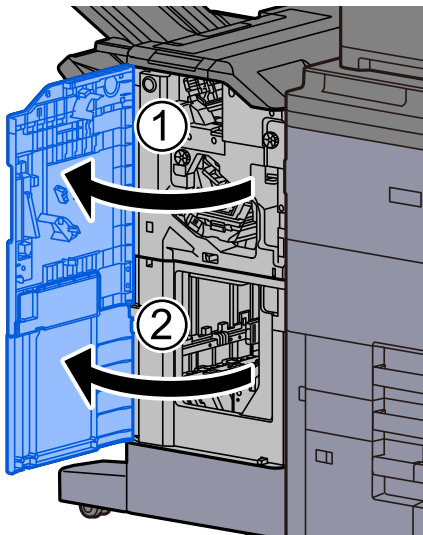


- 2 Open the conveyor guide (D8).

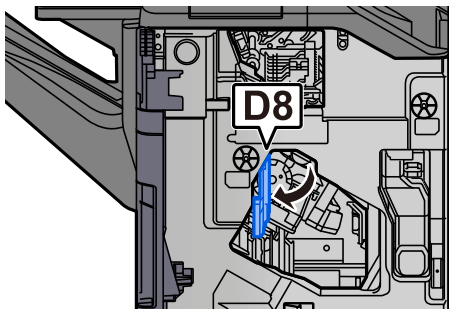


- 3 Remove any jammed paper.

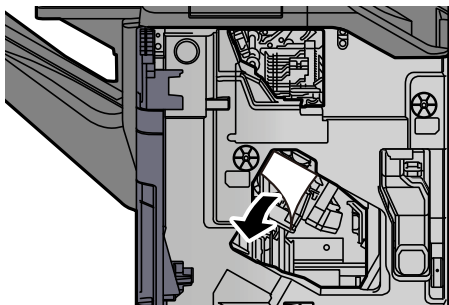


4 Open the conveyor guide (D9).

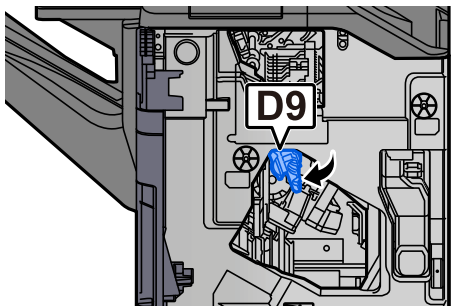


5 Remove any jammed paper.

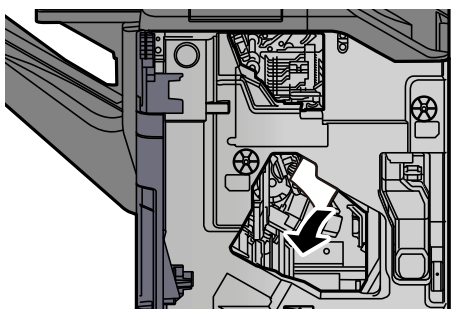


6 Open the conveyor guide (D10).

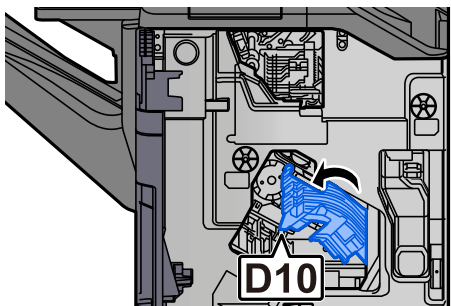


7 Remove any jammed paper.

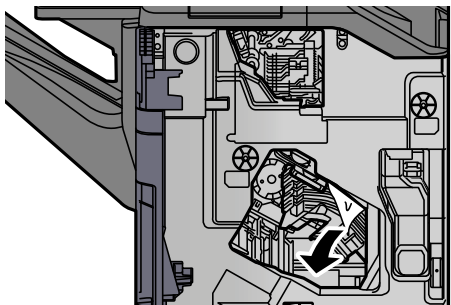


8 Return the conveyor guide (D10) to the original position.

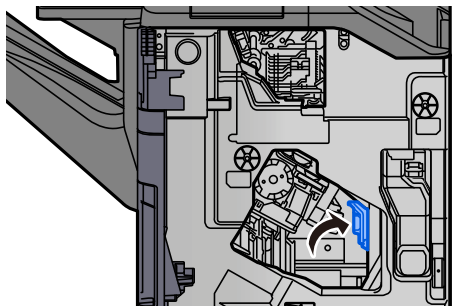

9 Return the conveyor guide (D9 and D8) to the original position.

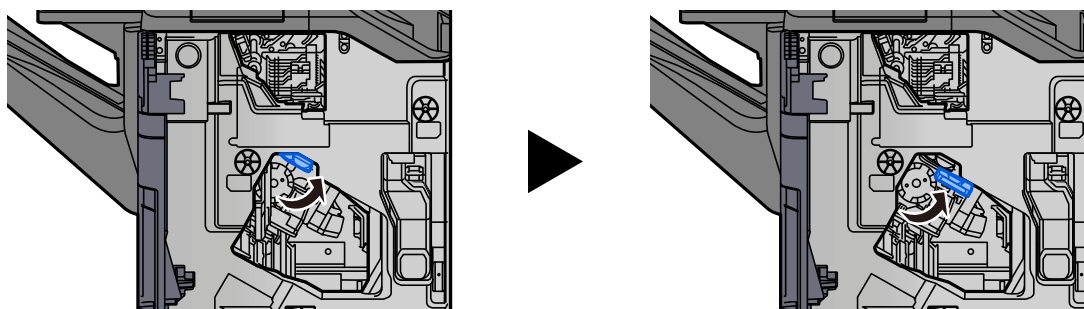


10 Open the conveyor guide (D11).

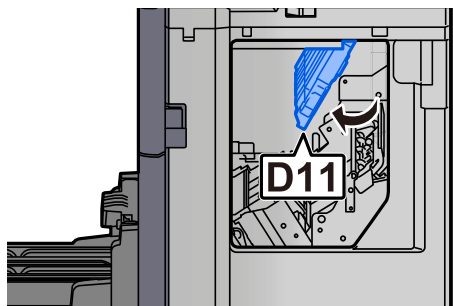


11 Remove any jammed paper.




12 Return the conveyor guide (D11) to the original position.

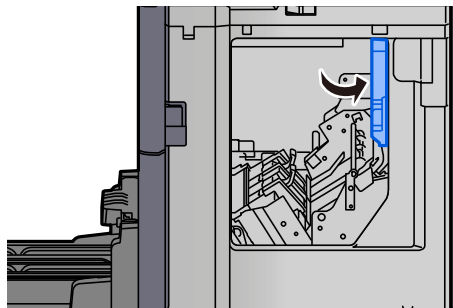


13 Remove paper from inside the finisher.

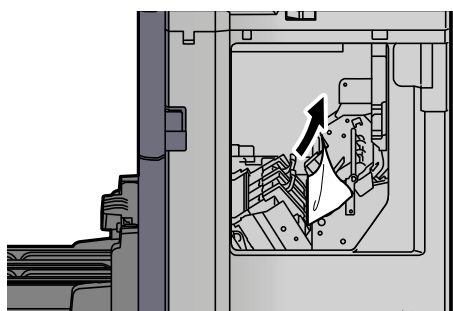


14 Return the covers to the original position.

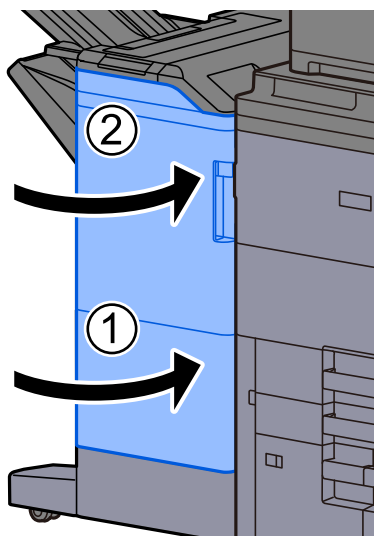


15 Lift the release lever to pull the folding unit out.

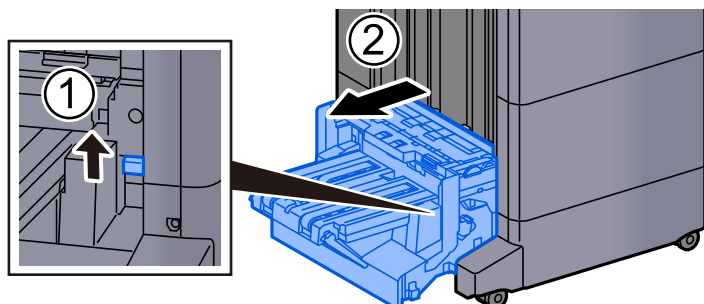


16 Open the folding unit top cover.

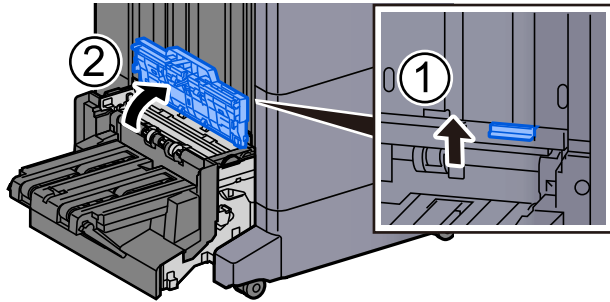


17 Turn dial (D12).

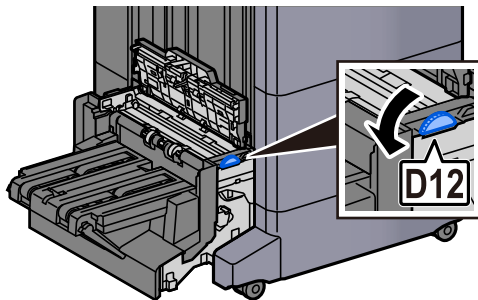


18 Remove any jammed paper.

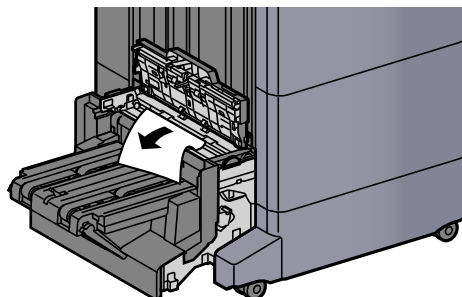


19 Open the folding unit conveyor guide.

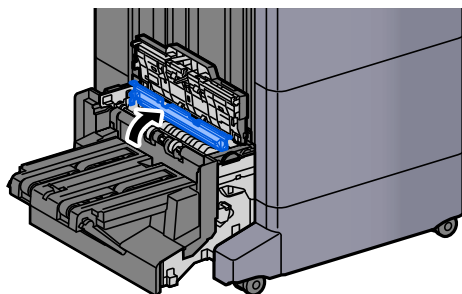


20 Turn dial (D12).

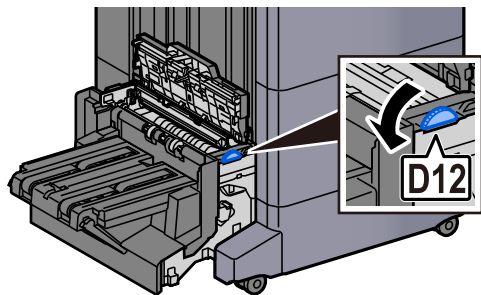


21 Remove any jammed paper.

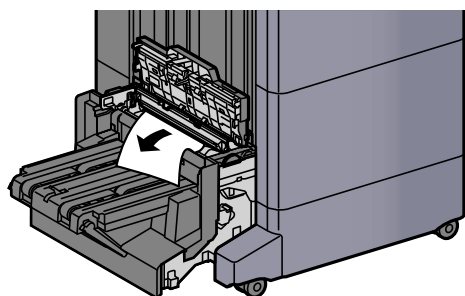


22 Lift the folding tray.

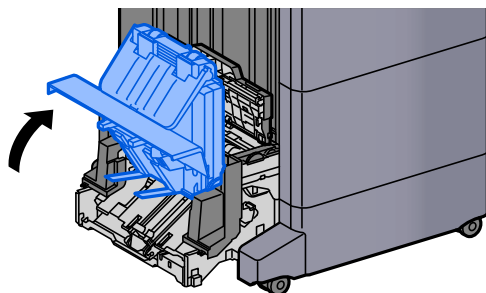


23 Remove any jammed paper.

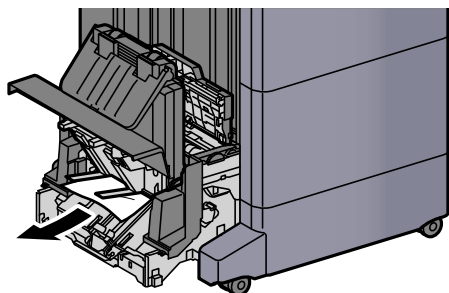

24 Return the covers to the original position.

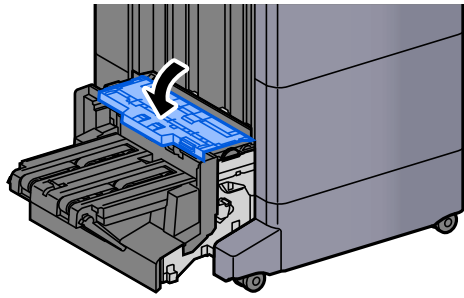

25 Return the folding unit to the original position.

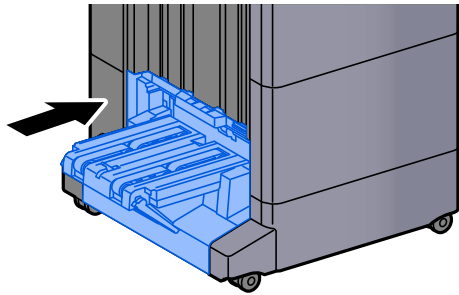


Remove any jammed paper in the Folding Tray (Finisher)


CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


- 1 Lift the release lever to pull the folding unit out.

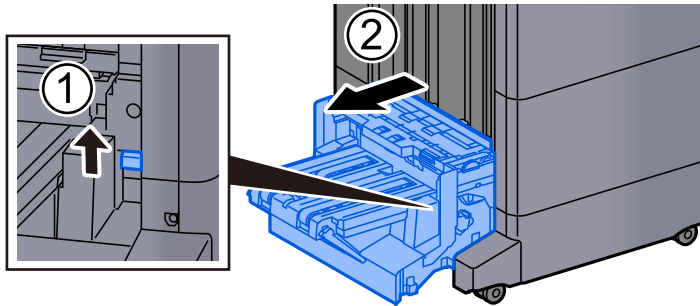


- 2 Open the folding unit top cover.

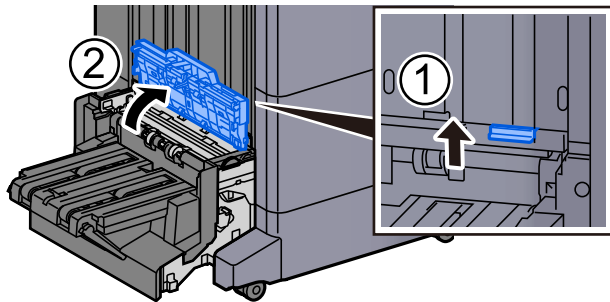


- 3 Turn dial (D12).

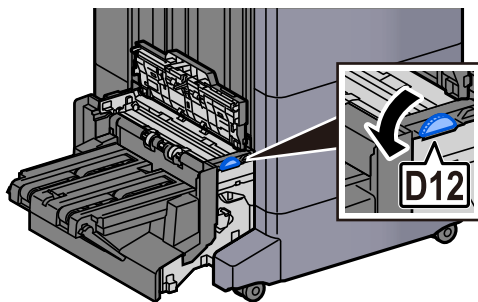


4 Remove any jammed paper.

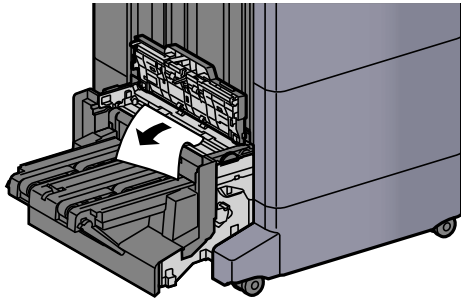


5 Open the folding unit conveyor guide.

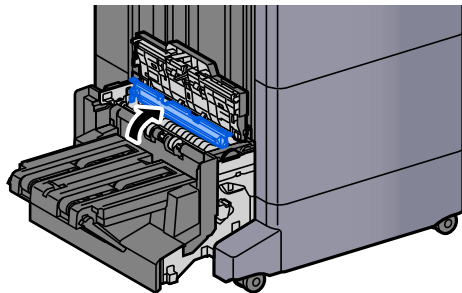


6 Turn dial (D12).

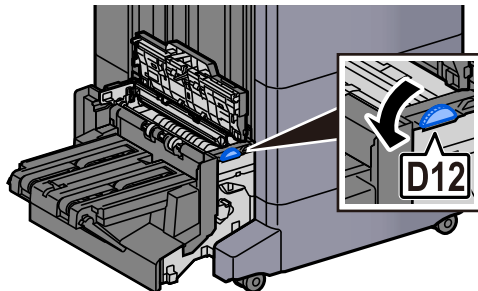


7 Remove any jammed paper.

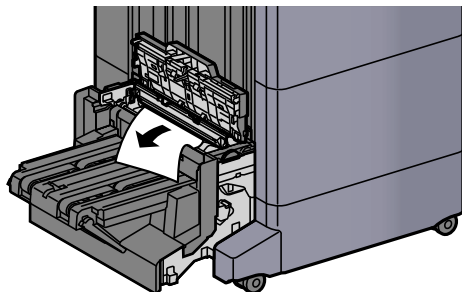


8 Lift the folding tray.

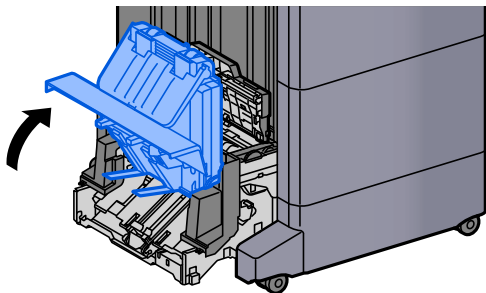


9 Remove any jammed paper.

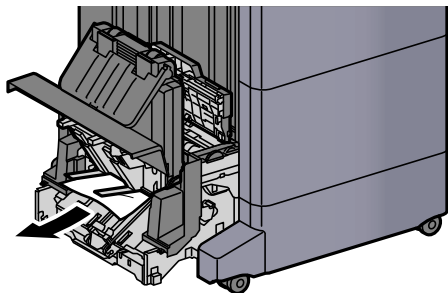


10 Return the covers to the original position.

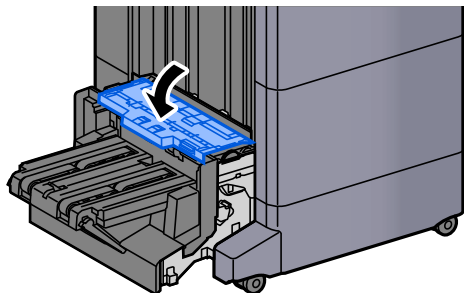


11 Return the folding unit to the original position.

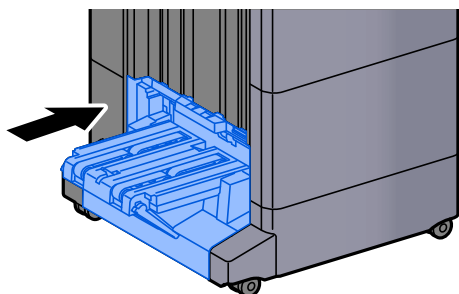


12 Open the finisher front cover 1 and 2.

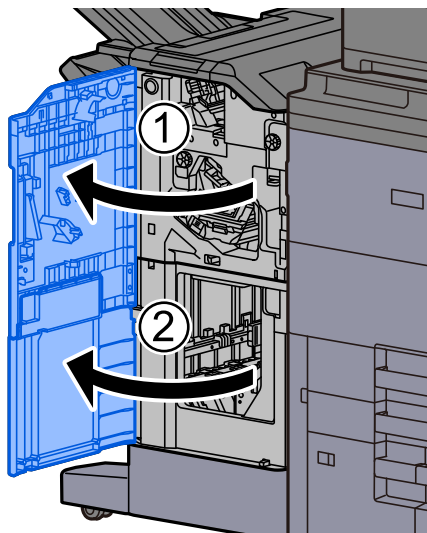

13 Remove paper from inside the finisher.

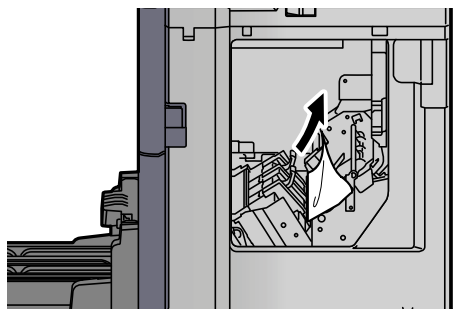

14 Return the covers to the original position.

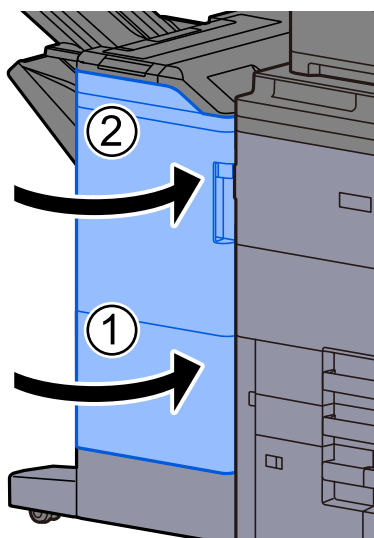


Clearing a Staple Jam

Clearing a Staple Jam of the 65-sheet Staple Finisher


- 1 Open the finisher front cover 1.




- 2 Open the conveyor guide (D4 and D3).

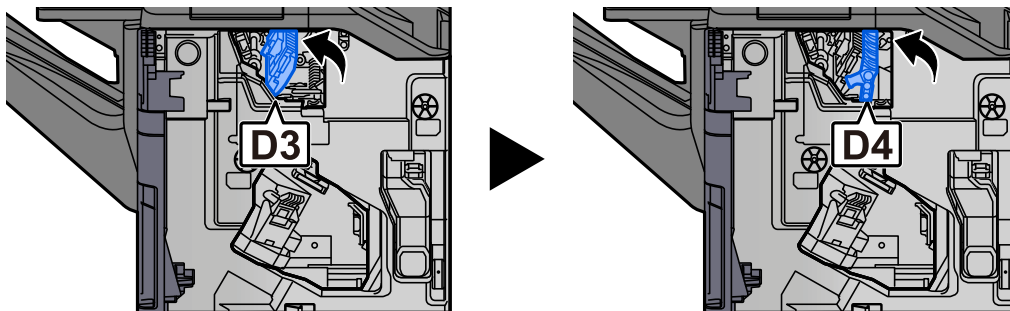


- 3 Turn knob (D5).

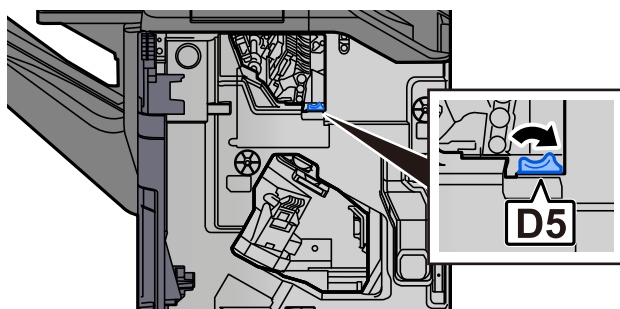


- 4 Remove any jammed paper.

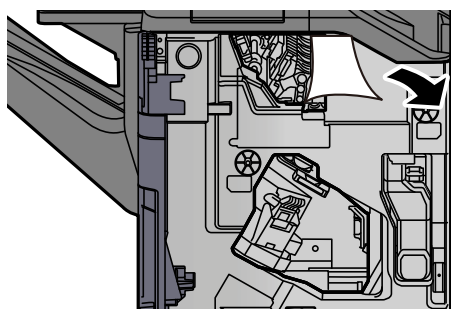


5 Return the conveyor guide (D4 and D3) to the original position.

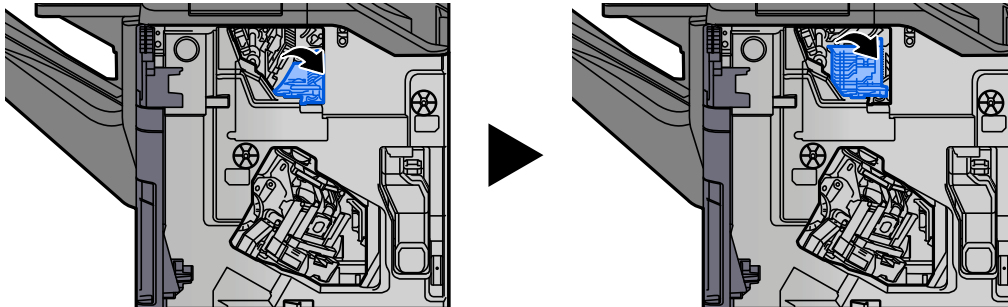

6 Remove the Staple Cartridge Holder (A).

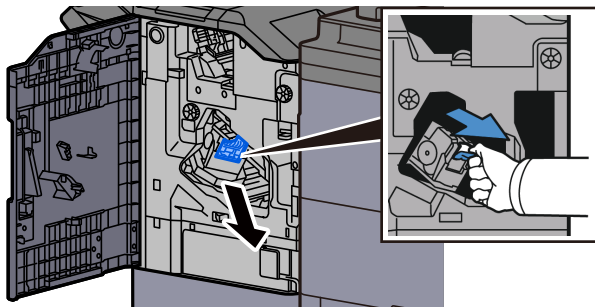


7 Remove the jammed staple.

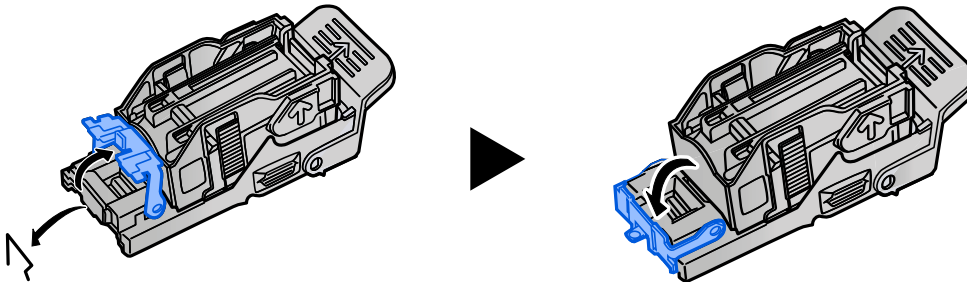

8 Install the Staple Cartridge Holder (A).




9 Return the cover to the original position.

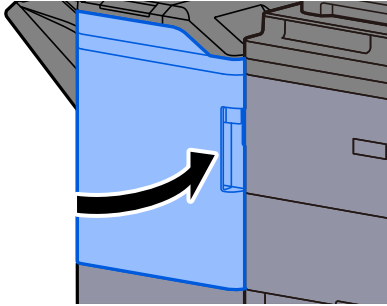


Clearing a Staple Jam of the 100-sheet Staple Finisher


1 Open the finisher front cover 1.

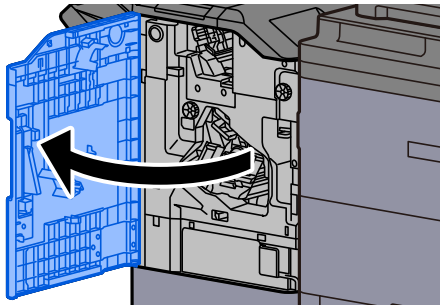


2 Open the conveyor guide (D4 and D3).

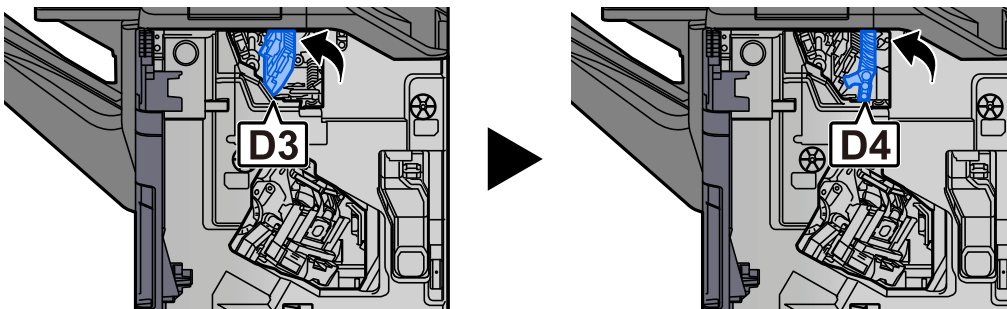


3 Turn knob (D5).

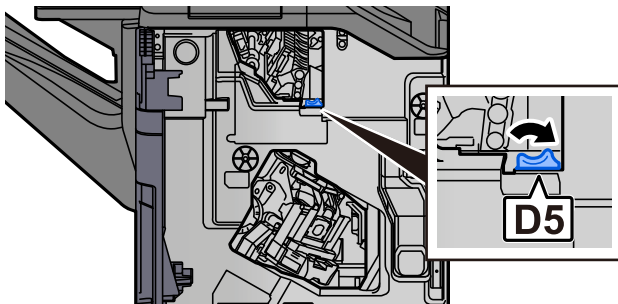


4 Remove any jammed paper.

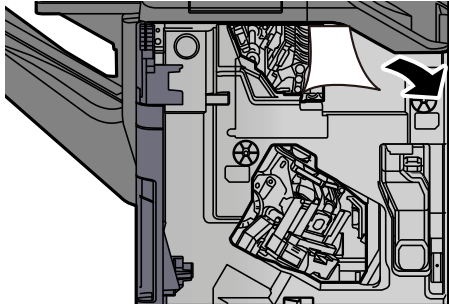


5 Return the conveyor guide (D4 and D3) to the original position.

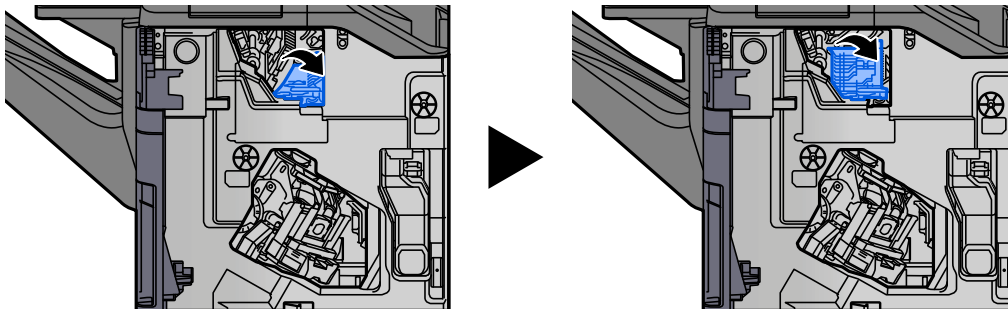


6 Remove the Staple Cartridge Holder (A).

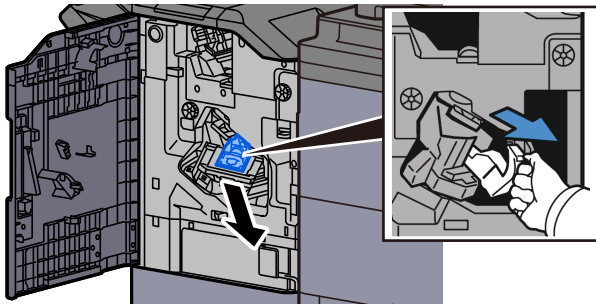


7 Remove the jammed staple.

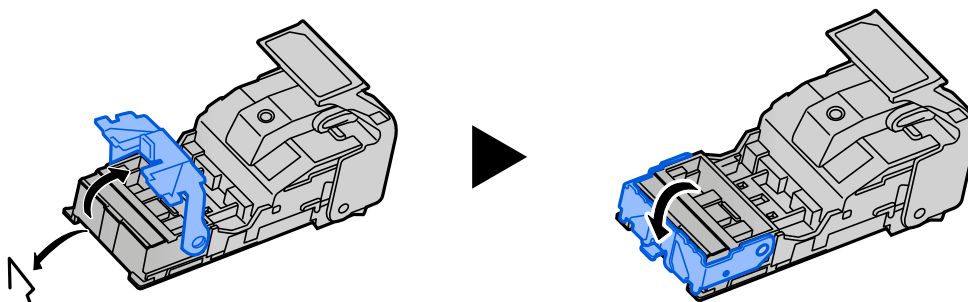

8 Install the Staple Cartridge Holder (A).

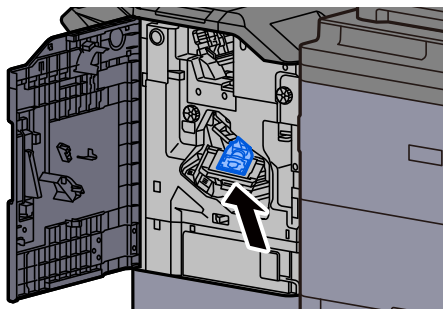


9 Return the cover to the original position.

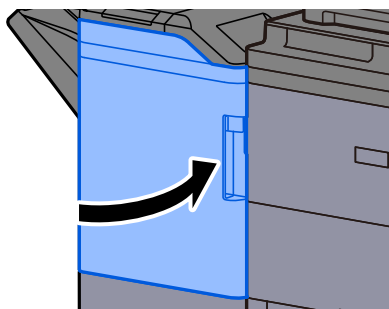


Clearing a Staple Jam of the Folding Unit (Finisher)


- 1 Open the finisher front cover 1 and 2.

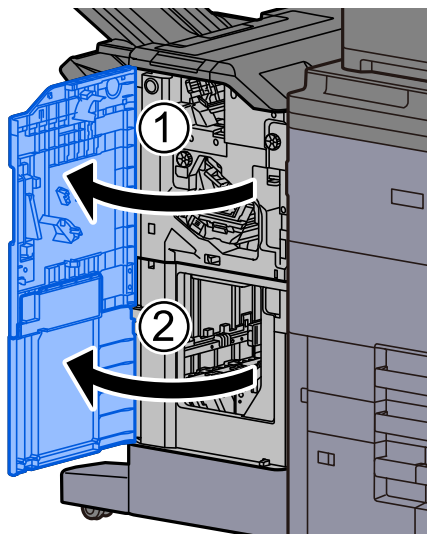


- 2 Remove paper from inside the finisher.

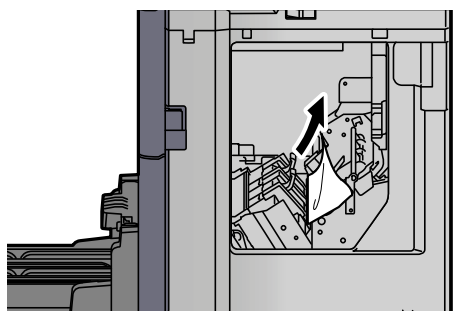


- 3 Remove the Staple Cartridge Holder (B) or (C).

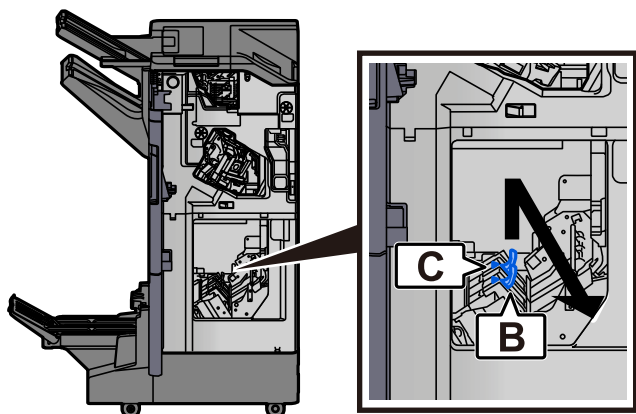


4 Remove the jammed staple.

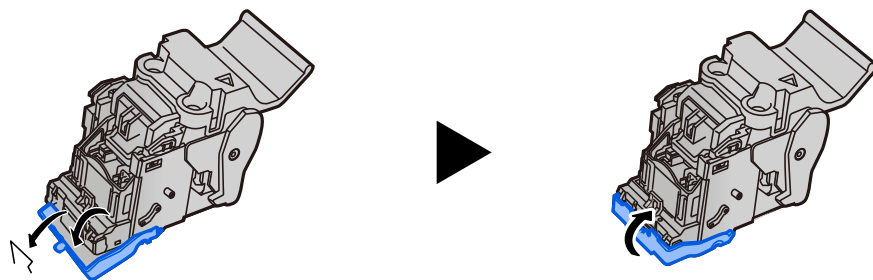


5 Install the Staple Cartridge Holder (B) or (C).

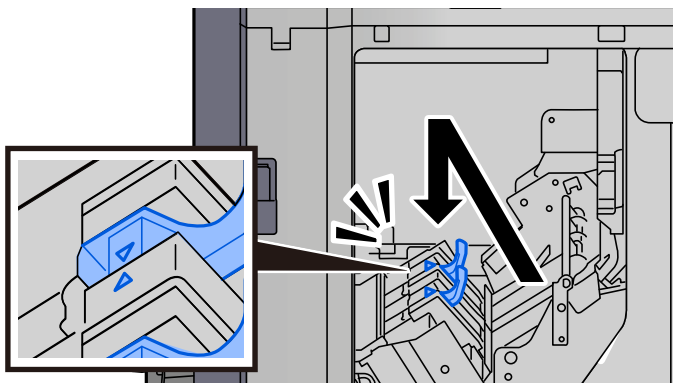


6 Return the covers to the original position.

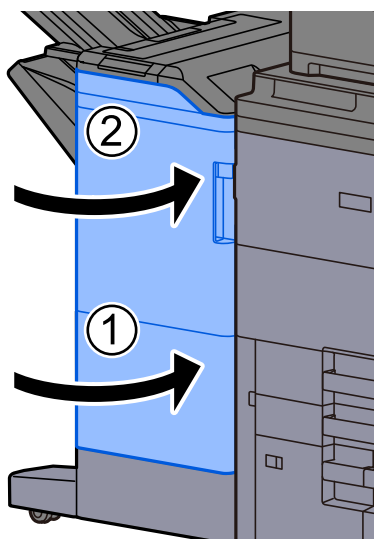


7 Lift the release lever to pull the folding unit out.

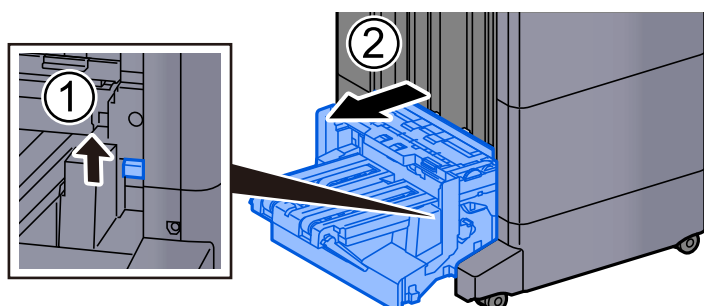


8 Open the folding unit top cover.

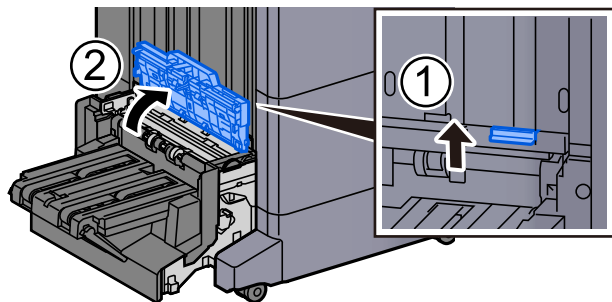


9 Turn dial (D12).

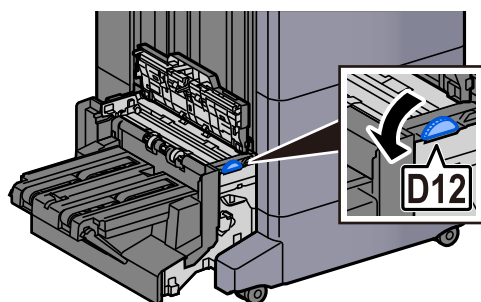


10 Remove any jammed paper.

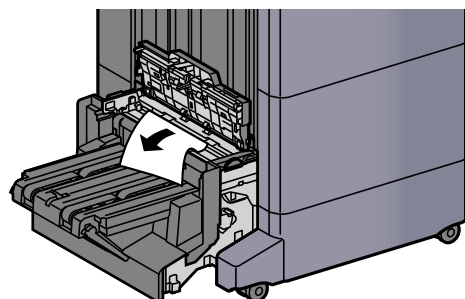


11 Open the folding unit conveyor guide.

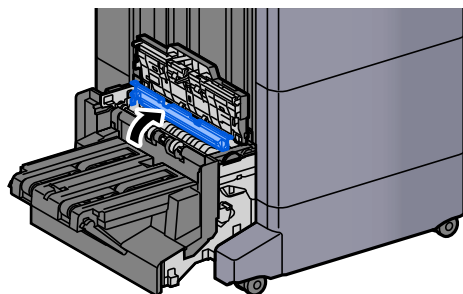


12 Turn dial (D12).

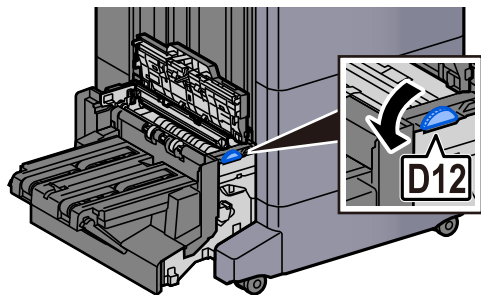


13 Remove any jammed paper.

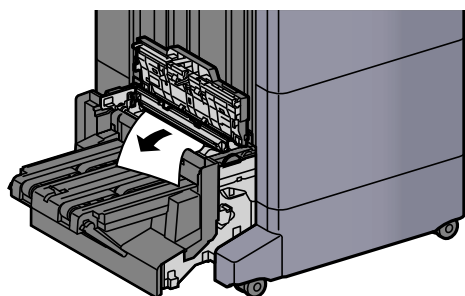


14 Lift the folding tray.

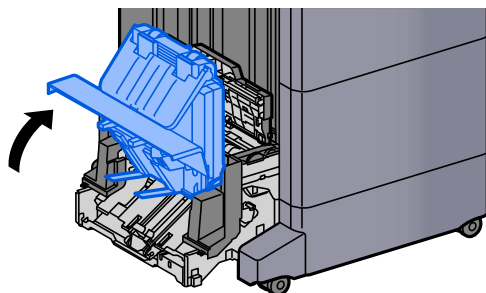


15 Remove any jammed paper.

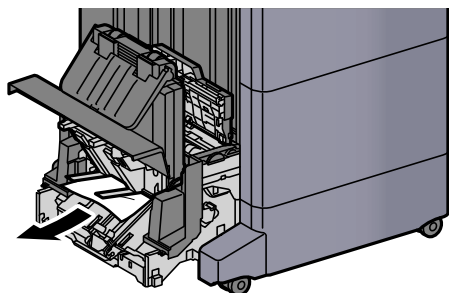

16 Return the covers to the original position.

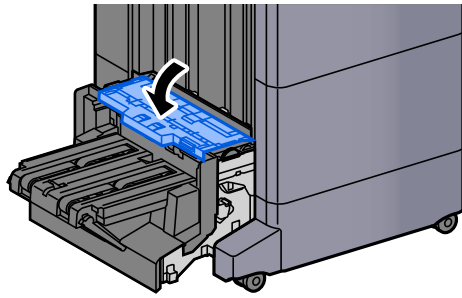

17 Return the folding unit to the original position.

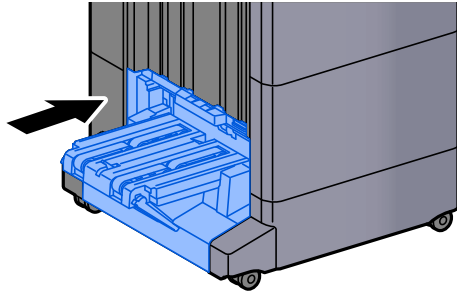

11 Appendix


This chapter explains the following topics:


Optional Equipment	11-2	Send Protocols: SMTP (E-mail TX)	11-37
Overview of Optional Equipment	11-2	E-mail: POP3 User Settings	11-38
Applications	11-7	Print protocols	11-38
Starting Application Use	11-7	Send Protocols	11-39
Checking Details of Application	11-8	Other Protocols	11-40
Character Entry Method	11-9	TCP/IP: Bonjour Settings	11-41
Entry Screens	11-9	Network Settings	11-42
Entering Characters	11-11	Connectivity	11-42
Paper	11-12	Interface Block	11-42
Basic Paper Specifications	11-12	Energy Saver/Timer	11-43
Choosing the Appropriate Paper	11-13	User Account Lockout Setting	11-43
Special Paper	11-16	Job Status/Job Logs Settings	11-43
Specifications	11-20	Edit Restriction	11-43
Machine	11-20	Prevent Mis-sending Settings	11-44
Copy Functions	11-23	History Settings	11-45
Printer Functions	11-24	Glossary	11-46
Scanner Functions	11-25		
Document Processor	11-25		
Side Feeder (3,000-sheet)	11-26		
Side Feeder (3,500-sheet)	11-26		
65-sheet Staple Finisher	11-27		
100-sheet Staple Finisher	11-28		
Punch Unit (For Finisher)	11-28		
Mailbox (For Finisher)	11-29		
Folding Unit (For Finisher)	11-29		
Z-Fold (For Finisher)	11-30		
Banner Tray	11-30		
Inserter Tray (For Finisher)	11-31		
Backing up your data	11-32		
Backing up your data using KYOCERA			
Net Viewer	11-32		
Backing up your data using Command			
Center RX	11-32		
Backing up your date using USB Drive ...	11-32		
Functions List of Security Quick Setup	11-33		
TLS	11-33		
Serverside Settings	11-33		
Clientside Settings	11-34		
IPv4 Settings (Wired Network)	11-34		
IPv4 Settings (Wireless Network)	11-35		
IPv6 Settings (Wired Network)	11-35		
IPv6 Settings (Wireless Network)	11-35		
Send Protocols: FTP Client			
(Transmission)	11-36		
Other Protocols: HTTP (Client)	11-36		
Other Protocols: SOAP	11-37		
Other Protocols: LDAP	11-37		

Optional Equipment

Overview of Optional Equipment

The following optional equipment is available for the machine.

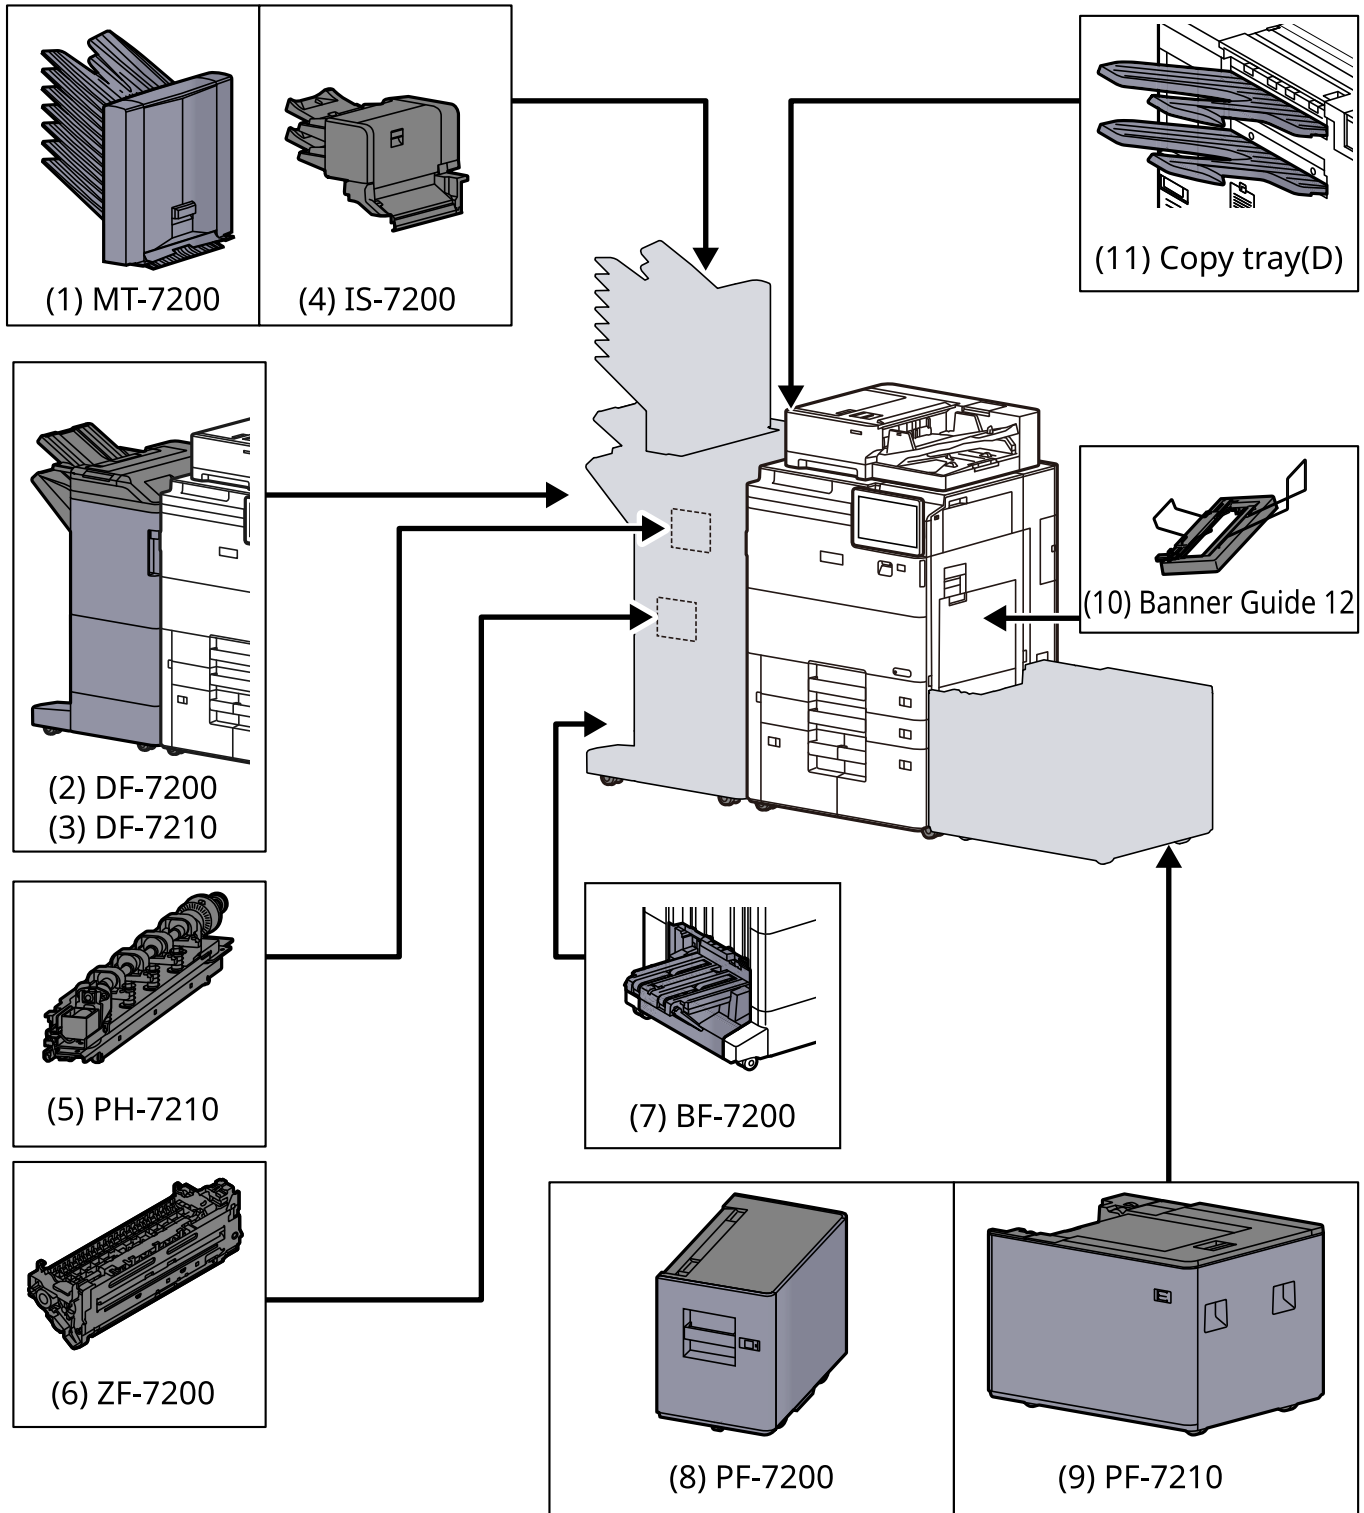

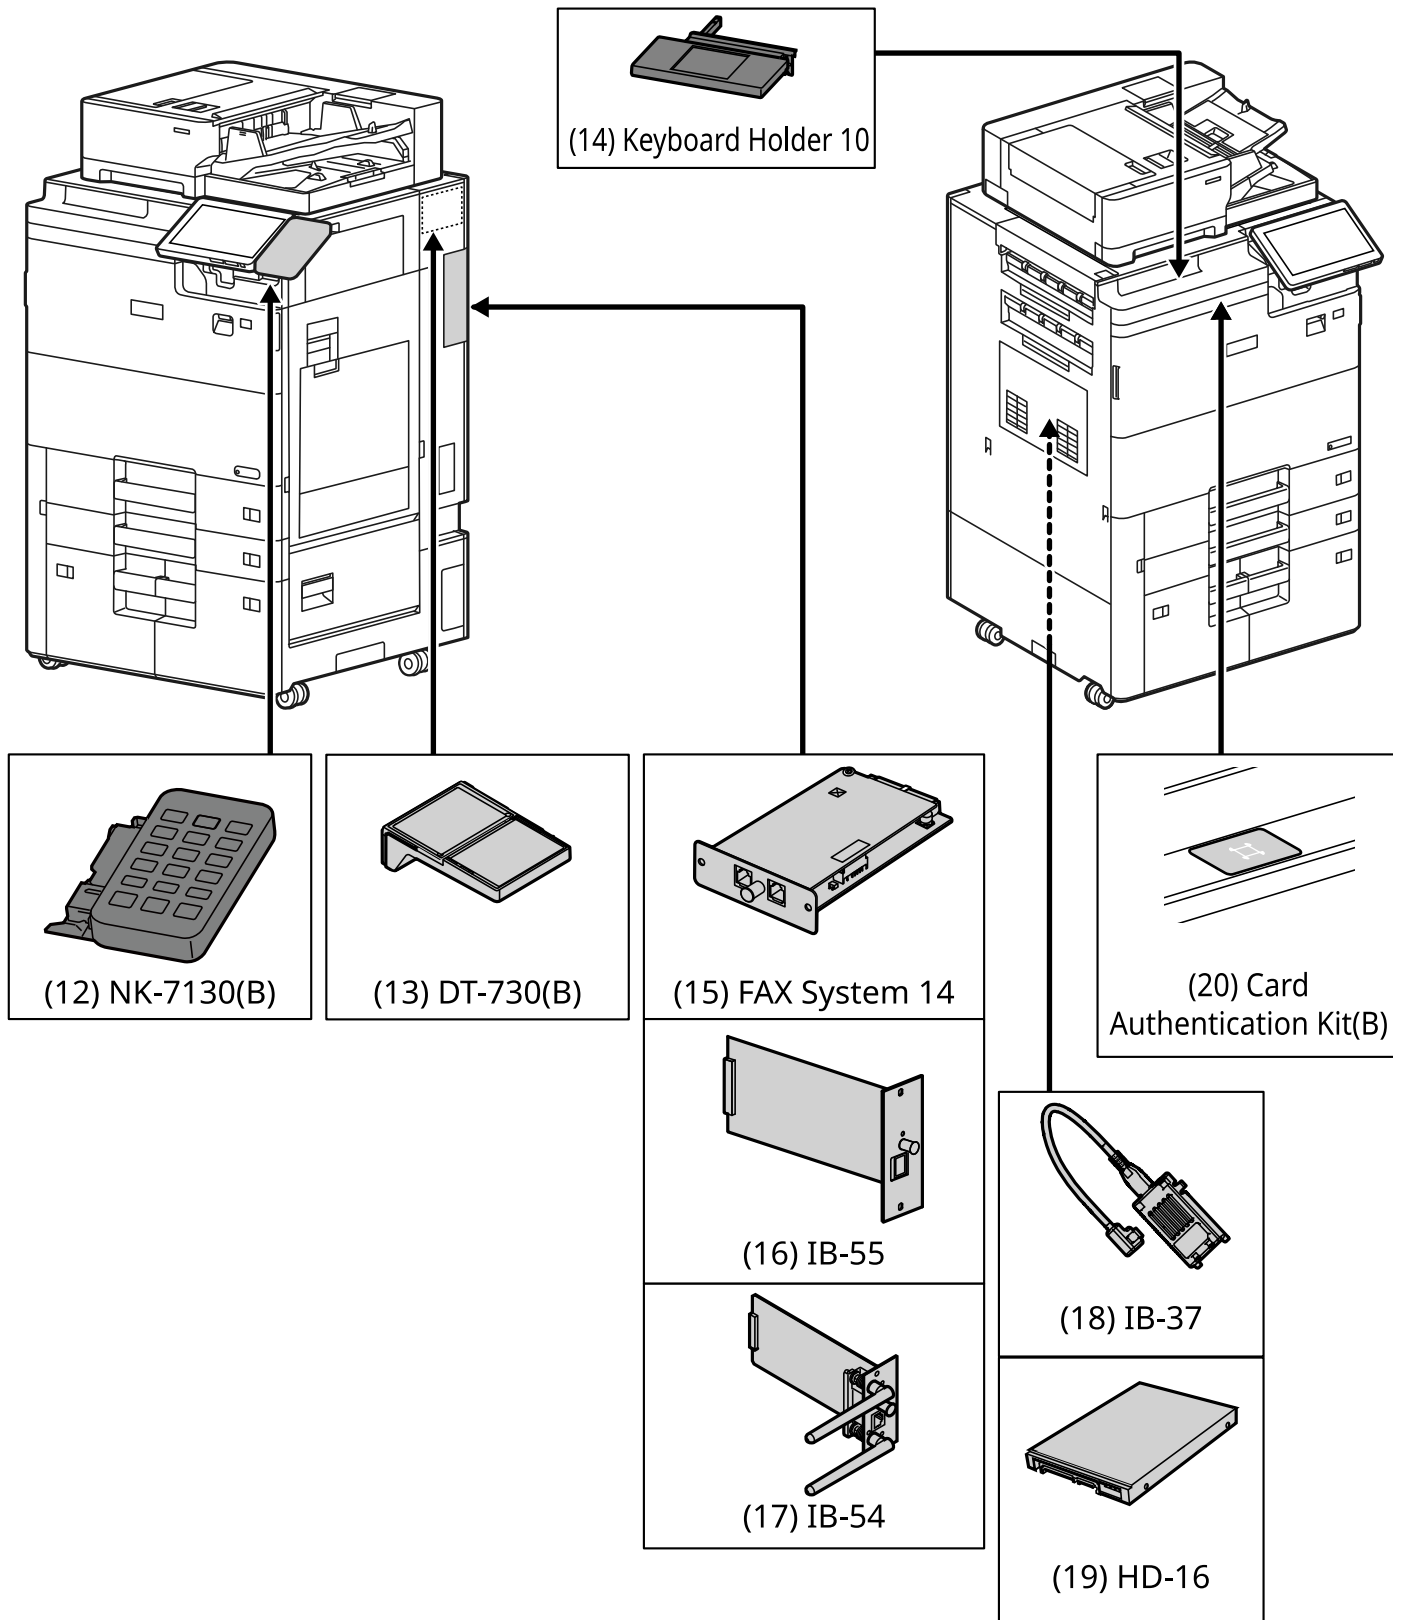

Software option
(20) Internet FAX Kit(A)
(21) UG-33
(22) UG-34
(23) USB Keyboard

(1) MT-7200 "Mailbox"

Makes it easy to sort output into separate trays. Installing this option adds 7 output trays. When multiple computer users share the printer, each user can print to a specified tray. Installs on the Finisher. It cannot be used when an Inserter is installed.

NOTE

To deliver output to the mail box, change the Paper Output selection on the operation panel or in the printer driver, or change in the default settings.

➔ [Paper Output \(page 6-34\)](#)

(2) DF-7200 "65-sheet Staple Finisher"

This is a large-capacity 4,000-sheet Finisher capable of holding large print runs and of separating and offsetting multiple copies of a printout into individual copies. It can also staple or hole-punch (optional) the offset printouts.

(3) DF-7210 "100-sheet Staple Finisher"

This is a large-capacity 4,000-sheet Finisher capable of holding large print runs and of separating and offsetting multiple copies of a printout into individual copies. It can also staple or hole-punch (optional) the offset printouts.

(4) IS-7200 "Inserter"

This device can automatically insert index tab paper or previously printed-on paper. It can be installed when a Finisher is installed. It cannot be used when a Mailbox is installed.

(5) PH-7200/PH-7220/PH-7230 "Punch Unit"

Attaches to the Document Finisher and is used to punch holes.

(6) ZF-7200 "Z-Fold Unit"

Folds printed output at the center or in tri-fold to enable the creation of simple booklets. Installs on the Finisher.

(7) BF-7200 "Folding Unit"

Folds printed output at the center or in tri-fold to enable the creation of simple booklets. Installs on the Finisher.

(8) PF-7200 "Side Feeder (3,000-sheet)"

In addition to the machine's cassettes, you can also install an optional side feeder (3,000-sheet) capable of holding up to 3,000 sheets of A4, B5 or Letter paper.

➔ [Loading in the Side Feeder \(3,000-sheet\) \(page 3-18\)](#)

(9) PF-7210 "Side Feeder (3,500-sheet)"

In addition to the machine's cassettes, you can also install an optional side feeder (3,500-sheet) capable of holding up to 3,500 sheets of same type of cassette as Cassette.

➔ [Loading in the Side Feeder \(3,500-sheet\) \(page 3-20\)](#)

(10) Banner Guide 12 "Banner Tray"

This tray enables continuous feeding of banner paper. Up to 10 sheets of banner paper can be loaded. To attach the tray and load paper, refer to the following:

➔ [Using the Banner Tray \(Option\) \(page 4-15\)](#)

(11) Copy tray(D) "Copy tray"

These are attached to the left side of the machine when the optional Finisher is not used. There are two trays: the Upper Left Tray and the Lower Left Tray.

(12) NK-7130(B) "Optional Numeric Keypad"

The numeric keypad is added to the operation panel. If the optional numeric keypad is installed, numeric keys do not appear on the touch panel.

(13) DT-730 (B) "Document Table"

Place original or other documents when using the machine.

(14) Keyboard Holder 10 "Keyboard Holder"

A USB keyboard connected to the machine can be placed here.

(15) FAX System 14 "FAX Kit"

By installing the FAX kit, fax send/receive is enabled. Also, it is possible to use it as a network fax, by using it with a computer. When two FAX kits are installed, the units can be connected to two different telephone lines which will enable quicker message transmission to a number of recipients. If one of the lines is dedicated to receiving, the busy line time can be reduced.

➔ **FAX Operation Guide**

(16) IB-53 "Network Interface Kit"

The Network Interface Kit provides a high-speed connection for the Gigabit-per-second interface.

It also supports only the least functions in the standard utilities.

➔ **IB-50 User's Manual**

(17) IB-54 "Wireless Network Interface Kit"

This is a wireless LAN interface card which supports the wireless LAN specifications IEEE 802.11ac (max. 867 Mbps) and IEEE 802.11a/b/g/n for IB-54 or IEEE 802.11n (max. 144.4 Mbps) and IEEE 802.11b/g for IB-55. In addition, network printing is possible without using the wireless LAN router because Wi-Fi Direct is supported. This supports only the least functions in the standard utilities.

➔ **IB-51 User's Manual**

(18) IB-37"Wireless Network Interface Kit"

This is a wireless LAN interface card which supports the wireless LAN specifications IEEE 802.11ac (max. 433.3 Mbps) and IEEE 802.11a/b/g/n for IB-37 or IEEE 802.11n (max. 72.2 Mbps) and IEEE 802.11b/g for IB-38. In addition, network printing is possible without using the wireless LAN router because Wi-Fi Direct is supported.

(19) HD-16 "Hard Disk"

With Hard Disk installed in the machine, received data can be rasterized and stored on this Hard Disk. This enables high-speed printing of multiple copies using an electric sort function.

(20) Card Authentication Kit(B) "Card Authentication Kit"

User login administration can be performed using ID cards. To do so, it is necessary to register ID card information on the previously registered local user list. For more information about how to register this information, refer to the following:

➔ **Card Authentication Kit(B) Operation Guide**

(21) Internet FAX Kit(A) "Internet FAX Kit"

Activating the Internet FAX Kit sends and receives faxes via the Internet without using a phone line. It can only be added when the FAX Kit is installed.

(22) UG-33 "ThinPrint Option"

This application allows print data to be printed directly without a print driver.

(23) UG-34 "Emulation Upgrade Kit"

Enables emulation whereby the machine operates using commands for other printers. Installing this option enables IBM Proprinter, Line Printer, and EPSON LQ-850 emulation.

(24) USB Keyboard "USB Keyboard"

A USB keyboard can be used to enter information into the text fields on the operation panel. A special mount is also available to install the keyboard on the machine. Please contact your dealer or service representative for information on keyboards that are compatible with your machine before you purchase one.

Applications

Overview of the Applications

The applications listed below are installed on this machine.

Item	Application Name
INTERNET FAXKIT(A)	Internet FAX Kit
UG-33	ThinPrint Option ^{*1}
UG-34	Emulation Upgrade Kit
CARD AUTHENTICATIONKIT(B)	Card Authentication Kit

*1 This can be used on a trial basis for a limited time.



CAUTION

When starting [Data Encryption/Overwrite] and after that replacing the main board by service personnel, the box files and fax received data stored in the SSD, hard disk, and machine's memory are deleted and can not be restored.



NOTE

- Restrictions such as the number of times the application can be used during the trial period differ depending on the application.
- If you change the date/time while using the trial version of an application, you will no longer be able to use the application.

Starting Application Use

1 Display the screen.

[Home] key > [...] > [System Menu] > [Add/Delete Application] > "Optional Function" [Optional Function List]



NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 Select the desired application > [Activate]

You can view detailed information on the selected application by selecting [⋮] (information icon).

3 Enter the license key > [Official]

Some applications do not require you to enter a license key. If the license key entry screen does not appear, go to Step 4.

To use the application as a trial, select [Trial] without entering the license key.

4 Select [Yes] in the confirmation screen.

NOTE

- If you started the Data Encryption/Overwrite or Thin Print option and entered the license key, turn the power OFF/ON.
- Icons of activated application are displayed in the Home screen.

Checking Details of Application

1 Display the screen.

[Home] key > [...] > [System Menu] > [Add/Delete Application] > "Optional Function" [Optional Function List]

NOTE

If the User Authentication screen appears, log in with a user who has the privilege to configure this setting. If you do not know your login User Name or Password, please contact your Administrator.

2 Select [] (information icon) for the application whose detailed information you want to check.

You can view detailed information on the selected application.

The table below lists the item you can view.

Item
Function Name
License
Remaining Counts
Expiration Date
Status

Extend the trial period.

Select [Extend].

Character Entry Method

To enter characters for a name, use the on-display keyboard in the touch panel following the steps as explained below.


NOTE

Keyboard Layout

"QWERTY", "QWERTZ" and "AZERTY" are available as keyboard layouts the same as a PC keyboard. Select the **[System Menu/Counter]** key, **[Device Settings]**, **[Keyboard]** and then **[Keyboard Layout]** to choose the desired layout. "QWERTY" layout is used here as an example. You may use another layout following the same steps.

Entry Screens


Lower-case Letter Entry Screen

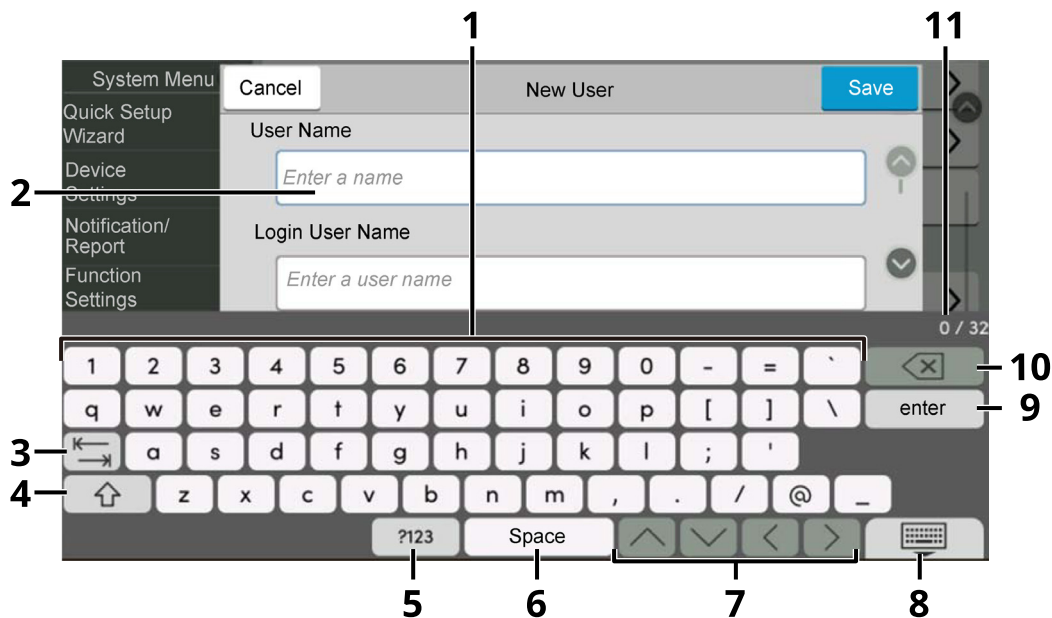

No.	Display/Key	Description
1	Keyboard	Select the character to enter.
2	Input box	Enter characters in the selected box.
3	Tab key	Select to move to the next input box.
4	Shift key	Select to switch between upper case and lower case.
5	[?123] / [Character]	Select the characters that are entered.
6	[Space]	Select to insert a space.
7	[Cursor]	Select to move the cursor on the display.
8	Close key	Select to close the entry screen.
9	[Enter]	Select to finalize entry and return to the screen before the entry.
10	Backspace key	Select to delete a character to the left of the cursor.
11	Input / Limit display	Displays maximum number of characters and the number of characters entered.


Upper-case Letter Entry Screen

Select the Shift key.

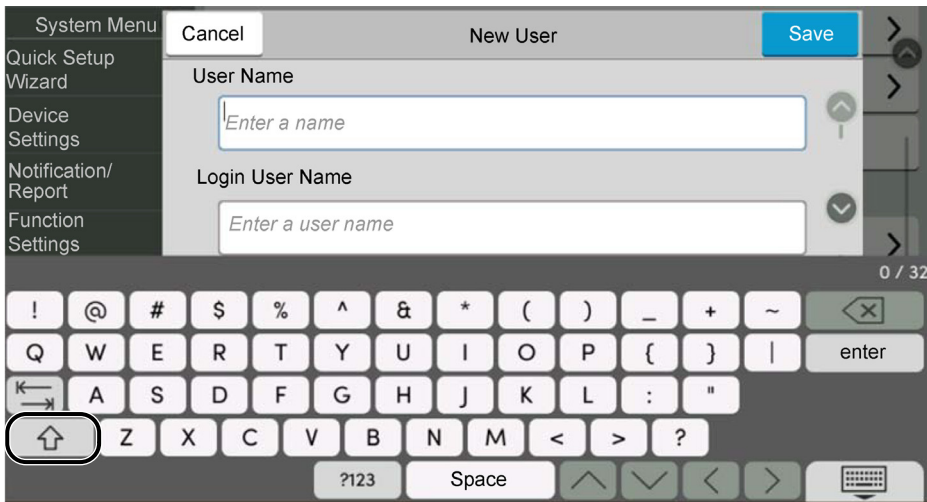

Number/Symbol Entry Screen



Select [?123].

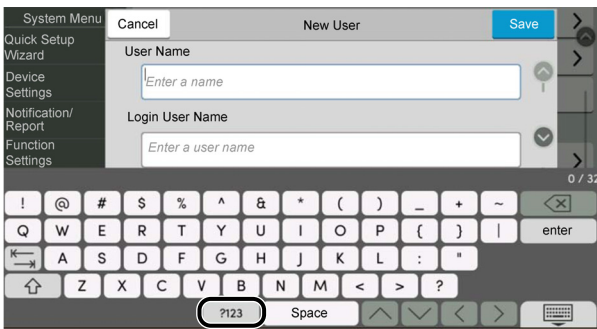

Entering Characters


Follow the steps below to enter 'List #1' for an example.

1 Enter 'List', (space).

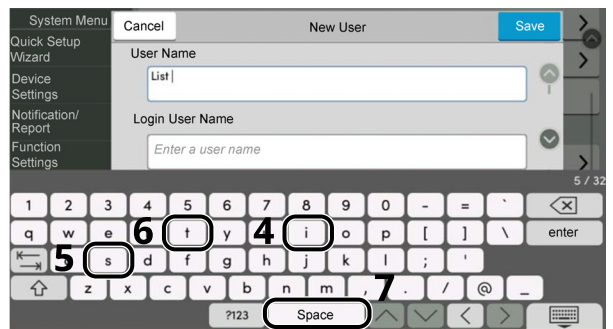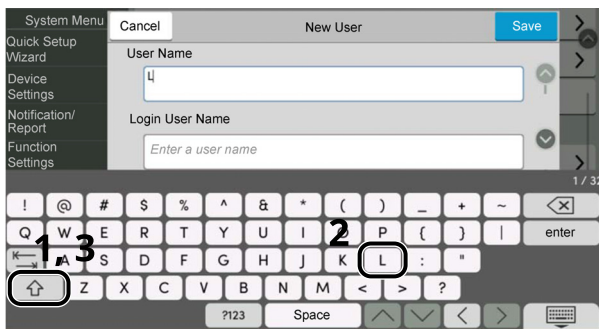

To switch between upper case and lower case, select the Shift key.

2 Enter '#' and '1'.

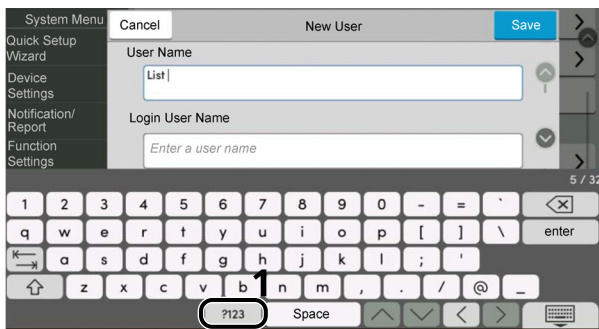

To enter numbers or symbols, select [#123].

3 Check that the entry is correct.



Check that the entry is correct. Select [enter].

Paper

This section explains the paper sizes and types that can be used in the paper source.

For details on the sizes, types, and number of sheets of paper that can be loaded in each paper tray, refer to the following:

➔ [Specifications \(page 11-20\)](#)

Basic Paper Specifications

This machine is designed to print on standard copy paper as used in regular ('dry') copiers and page printers such as laser printers. It also supports a variety of other types of paper that conform to the specifications given in this appendix.

Be careful when choosing paper. Paper unsuitable for the machine may cause jams or may be wrinkled.

Supported Paper

Use standard copy paper for regular copiers or laser printers. The printing quality will be affected by the quality of paper. Poor quality paper may result in unsatisfactory output.

Basic Paper Specifications that can be Used with This Machine

The following table lists the specifications of paper that is supported with this machine. Refer to the subsequent sections for further details.

Criteria	Specifications
Weight	Cassettes: 52 to 300 g/m ²
	Multipurpose tray: 52 to 300 g/m ² , 209g/m ² (Hagaki (Cardstock))
Dimensional accuracy	±0.7 mm
Squareness of corners	90° ±0.2°
Moisture content	4 to 6%
Pulp content	80% or more

NOTE

Some recycled paper does not meet requirements for use with this machine as listed in the Basic Paper Specifications shown below, such as moisture or pulp content. For this reason, we recommend purchasing a small amount of recycled paper as a sample for testing prior to use. Choose recycled paper that gives the best printing results and contains low levels of paper dust.

We are not responsible for the problems occurred from the use of paper that does not conform to our specifications.

Choosing the Appropriate Paper

This section describes guidelines for choosing paper.

Condition

Avoid using paper with bent corners or that is curled, dirty, or torn. Do not use paper that has a rough surface or paper fiber lint, or that is especially delicate. Use of paper in any of these conditions will not only deliver poor copies but may also cause jams and shorten the useful life of the machine. Choose paper with a smooth and even surface; however, avoid coated paper or paper with a treated surface as it may damage the drum or fusing unit.

Ingredients

Do not use paper such as paper that has been coated or surface-treated or paper that contains plastic or carbon. Those types of paper may produce harmful fumes from the heat of printing and may damage the drum.

Be sure to use the standard paper that contains at least 80% pulp, i.e., not more than 20% of the total paper content consists of cotton or other fibers.

Smoothness

The paper surface should be smooth, but it must be uncoated. With paper that is too smooth and slippery, several sheets may accidentally be supplied at once, causing jams.

Basis Weight

In countries that use the metric system, basis weight is the weight in grams of one sheet of paper one square meter in area. In the United States, basis weight is the weight in pounds of one ream (500 sheets) of paper cut to the standard size (or trade size) for a specific grade of paper. Paper that is too heavy or too light may be supplied incorrectly or cause paper jams, which may cause excessive wear of the machine. Mixed paper weight (i.e., thickness) may cause several sheets to be supplied at once accidentally and may also cause blurring or other printing problems if the toner fails to adhere correctly.

Moisture Content

Paper moisture content is the ratio of moisture to dryness expressed as a percentage. Moisture affects how the paper is supplied, the electrostatic chargeability of the paper, and how the toner adheres.

Paper moisture content varies depending on the relative humidity in the room. High relative humidity causes paper to become damp, making the edges expand so it appears wavy. Low relative humidity causes paper to lose moisture, making the edges tighten and weakening print contrast.

Wavy or tight edges may cause the paper to slip when it is supplied. Try to keep the moisture content between 4 to 6%.

To maintain the right level of moisture content, bear in mind the following considerations.

- Store paper in a cool, well-ventilated place.
- Store paper flat and unopened in the package. Once the package is opened, reseal it if the paper is not to be used for a while.
- Store paper sealed in the original package and box. Put a pallet under the carton to keep it raised above the floor. Especially during rainy seasons keep the paper a sufficient distance away from wooden or concrete floors.
- Before using paper that has been stored, keep it at the proper moisture level for at least 48 hours.
- Do not store paper where it is exposed to heat, sunlight, or dampness.

Other Paper Specifications

Porosity: The density of the paper fibers.

Stiffness: Paper must be stiff enough or it may buckle in the machine, causing jams.

Curl: Most paper naturally tends to curl after the package is opened. When paper passes through the fixing unit, it curls upward slightly. To deliver flat printouts, load the paper so that the curl faces towards the bottom of the paper tray.

Static electricity: During printing, paper is electrostatically charged so that the toner adheres. Choose paper that can be discharged quickly so that copies do not cling together.

Whiteness: Paper whiteness affects print contrast. Use whiter paper for sharper, brighter copies.

Quality: Machine problems may occur if sheet sizes are not uniform or if corners are not square, edges are rough, sheets are uncut, or edges or corners are crushed. In order to prevent these problems, be especially careful when you cut the paper yourself.

Packaging: Choose paper that is properly packaged and stacked in boxes. Ideally, the packaging itself should have been treated with a coating to inhibit moisture.

Specially treated paper: We do not recommend printing onto the following types of paper, even if it conforms to the basic specifications. When you use these kinds of paper, purchase a small amount first as a sample to test.

- Glossy paper
- Watermarked paper
- Paper with an uneven surface
- Perforated paper

Paper Sizes that can be Used with This Machine

Paper of the following sizes is supported by the machine.

Measurements in the table take into account a ± 0.7 mm dimensional accuracy for length and width. Corner angles must be $90^\circ \pm 0.2^\circ$.

- A3 (297 × 420 mm)
- A4 (297 × 210 mm)
- A5 (210 × 148 mm)
- A6 (148 × 105 mm)
- B4 (257 × 364 mm)
- B5 (257 × 182 mm)
- B6 (182 × 128 mm)
- 216×340 mm
- 13×19.2" (330.2 × 487.7 mm)^{*1}
- 13×19" (330.2 × 482.6 mm)^{*1}
- SRA3 (320 × 450 mm)
- Ledger
- Letter
- Legal
- Statement
- Executive (7-1/4 × 10-1/2")
- 12×18" (304.8 × 457 mm)
- Oficio II
- Folio (210 × 330 mm)
- 8K (273 × 394 mm)^{*1}
- 16K (273 × 197 mm)
- ISO B5 (176 × 250 mm)
- Envelope #10 (4-1/8 × 9-1/2")
- Envelope #9 (3-7/8 × 8-7/8")
- Envelope #6 3/4 (3-5/8 × 6-1/2")
- Envelope Monarch (3-7/8 × 7-1/2")
- Envelope DL (110 × 220 mm)
- Envelope C5 (162 × 229 mm)
- Envelope C4 (229 × 324 mm)
- Hagaki (Cardstock) (100 × 148 mm)
- Oufuku hagaki (Return postcard) (148 × 200 mm)
- Kakugata 2 (240 × 332 mm)^{*1}
- Youkei 4 (105 × 235 mm)
- Youkei 2 (114 × 162 mm)
- Nagagata 3 (120 × 235 mm)
- Younaga 3 (120 × 235 mm)^{*2}
- Nagagata 4 (90 × 205 mm)^{*3}
- 3R (89 × 127 mm)^{*3}
- Custom
 - Cassette 1: 93 × 148 to 330 × 457 mm
 - Cassette 2: 93 × 148 to 330 × 488 mm
 - Cassette 5: 100 × 148 to 330 × 487 mm
 - Multipurpose Tray: 89 × 127 to 330 × 488 mm

*1 This paper cannot be used in cassette 1.

*2 This paper can be used in the optional Side Feeder (3,500 sheet) or Multipurpose Tray.

*3 This paper can be used in Multipurpose Tray.

Special Paper

This section describes printing onto special paper and print media.

The following paper and media can be used.

- Transparencies
- Preprinted paper
- Bond paper
- Recycled paper
- Thin paper
- Letterhead
- Colored paper
- Prepunched paper
- Envelopes
- Hagaki (Cardstock)
- Thick paper
- Labels
- Coated
- High-quality paper
- Index tab dividers (136 to 256 g/m²)

When using these paper and media, choose those that are designed specifically for copiers or page printers (such as laser printers). Use the multipurpose tray for transparencies, cardstocks, labels, coated paper and index tab dividers.

Choosing Special Paper

Although special paper that meets the following requirements can be used with the machine, print quality will vary considerably due to differences in the construction and quality of special paper. Thus, special paper is more likely than regular paper to cause printing problems. Before purchasing special paper in volume, try testing a sample to ensure the print quality is satisfactory. General precautions when printing onto special paper are given below. Note that we are not responsible for any harm to the user or damage to the machine caused by moisture or specifications of special paper.

Select a cassette or multipurpose tray for special paper.

Transparencies

Transparencies must be able to withstand the heat of printing. Transparencies must meet the following conditions.

Heat resistance	Must withstand at least 190°C
Thickness	0.100 to 0.110 mm
Material	Polyester
Dimensional accuracy	±0.7 mm
Squareness of corners	90° ±0.2°

To avoid problems, use the multipurpose tray for transparencies and load transparencies with the long side facing the machine.


If transparencies jam frequently at output, try pulling the leading edge of sheets gently as they are ejected.

Label

Be sure to feed labels from the multipurpose tray.

For selecting labels, use extreme care so that the adhesive may not come in direct contact with any part of the machine and that the labels are not easily peeled from the carrier sheet. Adhesives that stick to the drum or rollers and peeled labels remaining in the machine may cause a failure.


When printing onto labels, you must be liable for the print quality and possible trouble.

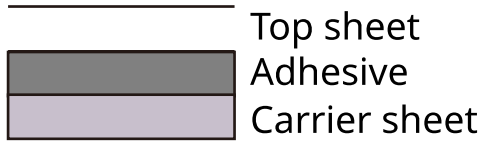

Labels consist of three layers as shown in the illustration. The adhesive layer contains materials that are easily affected by the force applied in the machine. The carrier sheet bears the top sheet until the label is used. This composition of labels may cause more problems.

The label surface must be covered completely with the top sheet. Gaps between labels may cause peeling of labels, resulting in a serious failure.


Some label paper has large margins on the top sheet. When using such paper, do not peel these margins from the carrier sheet before completing output.

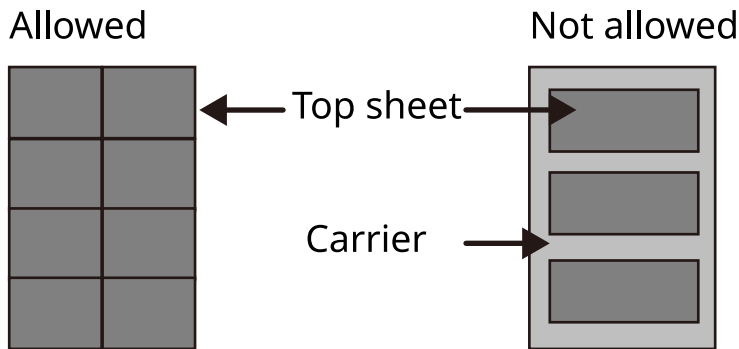

Use label paper that conforms to the following specifications.

Top sheet weight	44 to 74 g/m ²
Basis weight (overall paper weight)	104 to 151 g/m ²
Top sheet thickness	0.086 to 0.107 mm
Overall paper thickness	0.115 to 0.145 mm
Moisture content	4 to 6 % (composite)

Hagaki (Cardstock)

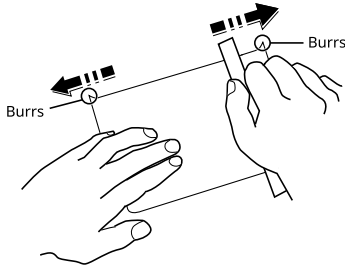

Before loading Hagaki (Cardstock) into the multipurpose tray, fan them and align the edges. If the Hagaki (Cardstock) paper is curled, straighten it before loading. Printing onto curled Hagaki (Cardstock) may cause jams.

Use unfolded Oufuku hagaki (Return postcard) (available at post offices). Some Hagaki (Cardstock) may still have rough edges developed by a paper cutter on the back side. Remove any such rough edges by placing the Hagaki (Cardstock) on a flat surface and rubbing the edges gently a few times with a ruler.

Envelopes

Envelopes should be fed from the MP tray with the print-side down or the cassette and the optional paper feeder with the print-side up.



NOTE

Do not load paper above the load limits located on the paper width guide of the cassette and the optional paper feeder.

Due to the structure of envelopes, printing evenly over the entire surface may not be possible in some cases. Thin envelopes in particular may be wrinkled by the machine in some cases as they pass through. Before purchasing envelopes in volume, try testing a sample to ensure the print quality.

Storing envelopes for a long period may cause them to become wrinkled. Thus, keep the package sealed until you are ready to use them.

Keep the following points in mind.

- Do not use envelopes with exposed adhesive. In addition, do not use the type of envelope in which the adhesive is exposed after the top layer is peeled off. Serious damage may be caused if the paper covering the adhesive comes off in the machine.
- Do not use envelopes with certain special features. For example, do not use envelopes with a grommet for winding a string to close the flap or envelopes with an open or film-covered window.
- If paper jams occur, load fewer envelopes at once.

Thick Paper

Before loading thick paper, fan it and align the edges. Some thick paper may still have rough edges developed by a paper cutter on the back side. Remove any such rough edges just as with Hagaki (Cardstock) by placing the paper on a flat surface and rubbing the edges gently a few times with a ruler. Printing onto paper with rough edges may cause jams.



NOTE

If the paper is not supplied correctly even after it is smoothed, load the paper with the leading edge raised a few millimeters.

Colored Paper

Colored paper must conform to the specifications.

➔ [Basic Paper Specifications \(page 11-12\)](#)

In addition, the pigments in the paper must be able to withstand the heat of printing (up to 200°C or 392°F).

Preprinted Paper

Preprinted paper must conform to the specifications.

➔ [Basic Paper Specifications \(page 11-12\)](#)

The colored ink must be able to withstand the heat of printing. It must be resistant to silicone oil as well. Do not use paper with a treated surface such as glossy paper used for calendars.

Recycled Paper

Recycled paper must conform to the specifications; however, its whiteness may be considered separately.

➔ [Basic Paper Specifications \(page 11-12\)](#)



NOTE

Before purchasing recycled paper in volume, try testing a sample to ensure satisfactory print quality.

Coated Paper

Coated paper is created by treating the surface of the base paper with a coating that provides higher printing quality than plain paper. Coated paper is used for particularly high quality printing.

The surface of high-quality or medium-quality paper is coated with special agents that improve ink adhesion by making the paper surface smoother. These agents are used either to coat both sides of the paper or just one side. The coated side appears slightly glossy.



IMPORTANT

When printing on coated paper in very humid environments, ensure that the paper is kept dry as moisture may cause sheets to stick together when they are fed into the machine. If printing in very humid environments, set coated paper for one sheet each.

Specifications

 **IMPORTANT**

Specifications are subject to change without notice.

 **NOTE**

For more information on using the FAX, refer to the following:

➔ [FAX Operation Guide](#)

Machine

Item		Description
Type		Console
Printing Method		Electrophotography by semiconductor laser
Paper Weight	Cassette	52 to 300 g/m ²
	Multipurpose Tray	52 to 300 g/m ²
Paper Type	Cassette	Plain, Rough, Vellum, Thin, Recycled, Preprinted, Bond, Cardstock, Color, Prepunched, Letterhead, Envelope, Thick, High Quality, Custom 1 to 8 (Duplex: Same as Simplex)
	Multipurpose Tray	Plain, Transparency (OHP film), Rough, Vellum, Labels, Recycled, Preprinted, Bond, Cardstock, Color, Prepunched, Letterhead, Envelope, Thick, High Quality, Coated, Index Tab Dividers, Custom 1 to 8
Paper Size	Cassette 1	A3, A4, A5, A6, B4, B5, B6, 216×340mm, SRA3, Ledger, Letter, Legal, Statement, Executive, 12×18", Oficio II, Folio, 8K, 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Envelope C4, Hagaki (Cardstock), Oufuku Hagaki (Return postcard), Youkei 4, Youkei 2, Nagagata 3, Custom (93 × 148 mm to 330 × 457 mm)
	Cassette 2	A3, A4, A5, A6, B4, B5, B6, 216×340 mm, 13"×19.2", 13" × 19", SRA3, Ledger, Letter, Legal, Statement, Executive, 12×18", Oficio II, Folio, 8K, 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Envelope C4, Hagaki (Cardstock), Oufuku Hagaki (Return postcard), Kakugata 2, Youkei 4, Youkei 2, Nagagata 3, Custom (93 × 148 mm to 330 × 488 mm)
	Cassette 3, 4	A4, B5, Letter
	Multipurpose Tray	A3, A4, A5, A6, B4, B5, B6, 216×340 mm, 13" × 19.2", 13" × 19", SRA3, Ledger, Letter, Legal, Statement, Executive, 12×18", Oficio II, Folio, 8K, 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Envelope C4, Hagaki (Cardstock), Oufuku Hagaki (Return postcard), Kakugata 2, Youkei 4, Youkei 2, Younaga 3, Nagagata 3, Nagagata 4, 3R Custom (89 × 127 mm to 330 × 488 mm) Banner sheet (210 × 488.1 to 330.2 × 1,220 mm/8.26" × 19.22" to 13" × 48.03")
Printable Area		Print margin for top, bottom and both sides is 4 mm or less

Item		Description
Warm-up Time (23°C/73.4°F, 60%)	Power on	120V TASKalfa MZ10500i: 50 seconds or less TASKalfa MZ9500i: 30 seconds or less TASKalfa MZ8500i: 30 seconds or less TASKalfa MZ7500i: 30 seconds or less 230V TASKalfa MZ10500i: 50 seconds or less TASKalfa MZ9500i: 30 seconds or less TASKalfa MZ8500i: 30 seconds or less TASKalfa MZ7500i: 30 seconds or less
	Low Power	10 seconds or less
	Sleep	120V TASKalfa MZ10500i: 50 seconds or less TASKalfa MZ9500i: 30 seconds or less TASKalfa MZ8500i: 30 seconds or less TASKalfa MZ7500i: 30 seconds or less 230V TASKalfa MZ10500i: 50 seconds or less TASKalfa MZ9500i: 30 seconds or less TASKalfa MZ8500i: 30 seconds or less TASKalfa MZ7500i: 30 seconds or less
Paper Capacity	Cassette1, 2	680 sheets (64 g/m ²)* ¹ 550 sheets (80 g/m ²)* ¹
	Cassette3, 4	1,750 sheets (64 g/m ²)* ¹ 1,500 sheets (80 g/m ²)* ¹
	Multipurpose Tray	300 sheets (A4/Letter or smaller) (64 g/m ²) 250 sheets (A4/Letter or smaller) (80 g/m ²), 55 sheets (larger than A4/Letter) (64 g/m ²) 50 sheets (larger than A4/Letter) (80 g/m ²) 1 sheet (Banner sheet (210 × 488.1 to 330.2 × 1,220 mm/8.26" × 19.22" to 13" × 48.03")) (136 to 163 g/m ²)
Output Tray Capacity	Upper Left Tray	100 sheets (64 g/m ²)
	Lower Left Tray	250 sheets (64 g/m ²)
	Right Tray	77 sheets (64 g/m ²)
Image Write System		Semiconductor laser and electrophotography
Memory		7.0 GB
Large Capacity Storage		256 GB

Item		Description
Interface	Standard	USB Interface Connector: 1 (Super-Speed USB) Network interface: 1 (10 BASE-T/100 BASE-TX/1000 BASE-T (IPv6, IPv4, IPSec), 802.3a supported) USB Port: 4 (Hi-Speed USB) Wireless LAN: 1
	Option	eKUIO: 2 ^{*2} Fax: 2 ^{*3}
Operating Environment	Temperature	10 to 32.5°C/50 to 90.5°F
	Humidity	10 to 80%
	Altitude	3,500 m/11,482 ft maximum
	Brightness	1,500 lux maximum
Dimension (W × D × H) (without Document Processor)		23.71 " × 26.19" × 31.11 " 685 × 660 × 1,227 mm
Weight (without toner container)		152 kg
Space Required (W × D) (Using multipurpose tray)		40.75" × 25.98" 1,035 × 660 mm
Power Source		120V 12 A+ 8.0 A 230V 10 A
Options		➔ Optional Equipment (page 11-2)

*1 Up to upper limit height line in the cassette.

*2 When two optional interface are installed, a fax line can not be installed.

*3 When IB-53 or IB-54 is installed, only one fax line can be installed.

Copy Functions

Item		Description	
Copy Speed	TASKalfa MZ10500i	A4/Letter	105 sheets/min
		A4-R/Letter-R	73 sheets/min
		A3/Ledger	52 sheets/min
		B4	63 sheets/min
		Legal	63 sheets/min
		B5	105 sheets/min
		B5-R	73 sheets/min
		A5-R	52 sheets/min
		A5	105 sheets/min
		A6-R	52 sheets/min
	TASKalfa MZ9500i	A4/Letter	95 sheets/min
		A4-R/Letter-R	66 sheets/min
		A3/Ledger	47 sheets/min
		B4	57 sheets/min
		Legal	57 sheets/min
		B5	95 sheets/min
		B5-R	66 sheets/min
		A5-R	47 sheets/min
		A5	95 sheets/min
		A6-R	47 sheets/min
	TASKalfa MZ8500i	A4/Letter	85 sheets/min
		A4-R/Letter-R	59 sheets/min
		A3/Ledger	42 sheets/min
		B4	51 sheets/min
		Legal	51 sheets/min
		B5	85 sheets/min
		B5-R	59 sheets/min
		A5-R	42 sheets/min
		A5	85 sheets/min
		A6-R	42 sheets/min
	TASKalfa MZ7500i	A4/Letter	75 sheets/min
		A4-R/Letter-R	52 sheets/min
		A3/Ledger	37 sheets/min
		B4	45 sheets/min
		Legal	45 sheets/min
		B5	75 sheets/min
		B5-R	52 sheets/min
		A5-R	37 sheets/min
		A5	75 sheets/min
		A6-R	37 sheets/min
First Copy Time (A4, place on the platen, feed from Cassette)		3.7 seconds or less	

Item	Description
Zoom Level	Manual mode: 25 to 400%, 1% increments Auto mode: Preset Zoom
Continuous Copying	1 to 9,999 sheets
Resolution	1200 × 1200 dpi (multi-bit: 4800 dpi equivalent × 1200 dpi)
Supported Original Types	Sheet, Book, 3-dimensional objects (maximum original size: A3/Ledger)
Original Feed System	Fixed

Printer Functions

Item	Description	
Printing Speed	TASKalfa MZ10500i 13×19.2" 12×18"	36 sheets/min 52 sheets/min
	TASKalfa MZ9500i 13×19.2" 12×18"	33 sheets/min 47 sheets/min
	TASKalfa MZ8500i 13×19.2" 12×18"	29 sheets/min 42 sheets/min
	TASKalfa MZ7500i 13×19.2" 12×18"	26 sheets/min 37 sheets/min
		Other than the above size, specifications are the same as those of Copy Speed.
First Print Time (A4, feed from Cassette)	TASKalfa MZ9500i/TASKalfa MZ8500i/TASKalfa MZ7500i 4.1 seconds or less TASKalfa MZ10500i 3.9 seconds or less	
Resolution	1200 × 1200 dpi (multi-bit: 4800 dpi equivalent × 1200 dpi)	
Operating System	Windows11, Windows Server 2016, Windows Server 2019, and Windows Server 2022 Mac OS X v10.9 or higher	
Interface	USB Interface Connector: 1 (Super-Speed USB) Network interface: 1 (10 BASE-T/100 BASE-TX/1000 BASE-T (IPv6, IPv4, IPSec), 802.3a supported) Optional Interface (Option): 2 (For IB-53/IB-54 mounting) Wireless LAN: 1	
Page Description Language	PRESCRIBE	
Emulations	PCL6 (PCL XL, PCL 5e), KPDL3 (PostScript3 compatible), PDF, XPS/OpenXPS, PPML, XJDF/XJMF	

Scanner Functions

Item	Description
Resolution	1200 dpi × 1200 dpi ^{*1} , 600 dpi × 600 dpi, 400 dpi × 400 dpi, 200 dpi × 400 dpi, 300 dpi × 300 dpi, 200 dpi × 200 dpi, 200 dpi × 100 dpi
File Format	TIFF, JPEG, XPS, Open XPS, PDF (MMR/JPEG compression), High compressive PDF, OCR Text Recognition (Option), MS Office file (Option), OOXML (Option), OOXML (OCR) (Option)
Scanning Speed (A4 landscape, 300 dpi, Image quality: Text/Photo original)	1-sided B/W 150 Images/min 2-sided B/W 300 Images/min
Interface	Ethernet (1000 BASE-T/100 BASE-TX/10 BASE-T)
Transmission System	SMB, SMTP, FTP, FTP over TLS, USB, TWAIN ^{*2} , WIA ^{*2} , eSCL, DFS

*1 TWAIN driver, WIA driver only

*2 Available Operating System: Windows 11, Windows Server 2016, Windows Server 2019, and Windows Server 2022

Document Processor

Item	Description
Original Feed Method	Automatic feed
Supported Original Types	Sheet originals
Paper Size	Maximum: A3/Ledger 11.69" × 17"/297 × 432 mm Minimum: A6 4.13" × 5.82"/105 × 148 mm (Straight path tray: 2.13" × 3.35"/54 × 85 mm)
Paper Weight	1-sided: 35 to 220 g/m ² 2-sided: 50 to 220 g/m ² Straight path tray: 35 to 500 g/m ²
Loading Capacity	500 sheets (50 to 80 g/m ²) ^{*1} maximum (Straight path tray: 50 Sheets (35 to 500 g/m ²) maximum)
Dimensions (W × D × H)	23.15" × 19.77" × 5.24" 588 × 502 × 133 mm
Weight	Approx. 15.22 lbs./Approx. 6.9 kg

*1 Up to upper limit height line in the document processor.

Side Feeder (3,000-sheet)

Item	Description
Paper Supply Method	Feed & reverse roller method No. Sheets: 3,000, 80 g/m ²
Paper Size	A4,B5, Letter
Supported Paper	Paper weight: 60 to 300 g/m ² Media types: Plain, Recycled, Special paper
Dimensions (W × D × H)	13.82" × 23.04" × 18.47" 351 × 585 × 469 mm
Weight	Approx. 58.5 lbs. / Approx. 26.5 kg

Side Feeder (3,500-sheet)

Item	Description
Paper Supply Method	Feed & reverse roller method No. Sheets: 3,500, 80 g/m ²
Paper Size	A3, A4, A5, A6, B4, B5, B6, 216×340 mm, 13" x 19.2", 13" x 19", SRA3, Ledger, Letter, Legal, Statement, Executive, 12×18", Oficio II, Folio, 8K, 16K, ISO B5, Envelope #10, Envelope DL, Envelope C5, Envelope C4, Hagaki (Cardstock), Oufuku Hagaki (Return postcard), Kakugata 2, Youkei 4, Youkei 2, Nagagata 3, Younaga 3, Custom (100 × 148 mm to 330 × 487 mm)
Supported Paper	Paper weight: 52 to 300 g/m ² Media types: Plain, Recycled, Special paper
Dimensions (W × D × H)	31.62" × 25.52" × 22.64" 803 × 648 × 542 mm
Weight	Approx. 114.7 lbs. / Approx. 52 kg

65-sheet Staple Finisher

Item		Description	
Number of Trays		2 trays	
Paper Size (80 g/m²)	Tray A (Non-Stapling)	A3, B4, B5-R, 216×340 mm, SRA3, Ledger, Legal, Executive, 12×18", Oficio II, Folio, 8K: Height 227 mm (Equivalent to 1,500 sheets) A4-R, A4, B5, Letter-R, Letter, 16K-R, 16K: Height 512 mm (Equivalent to 4,000 sheets) A5-R, Statement-R: Height 91 mm (Equivalent to 500 sheets)	
	Tray B	A3, A4-R, A4, A5-R, A6-R, B4, B5-R, B5, B6-R, 216×340 mm, SRA3, Ledger, Letter-R, Letter, Legal, Statement-R, Executive, 12×18", Oficio II, Folio, 8K, 16K-R, 16K, ISO B5, Envelope C4, Cardstock, Oufuku hagaki (Return postcard), Youkei 4, Youkei 2: Height 45 mm (Equivalent to 200 sheets)	
	Tray C	A4, B5, Letter, 16K: 50 sheets	
Supported Paper Weight		52 to 300 g/m ² (106 to 300 g/m ² : cover only)	
Stapling	Maximum Number	A3, B4, Ledger, Legal, 12×18", 8K	30 sheets (52 to 105 g/m ²) 2 cover sheet only (106 to 300 g/m ²)
		A4-R, A4, B5-R, B5, Letter-R, Letter, 16K-R, 16K	70 sheets (52 to 74 g/m ²) 65 sheets (75 to 90 g/m ²) 55 sheets (91 to 105 g/m ²) 2 cover sheet only (106 to 300 g/m ²)
	Media types	Plain, Preprinted, Bond, Recycled, Thin, Vellum, Letterhead, Color, Prepunched, Thick, Coated, High Quality, Custom 1 to 8	
Dimensions (W × D × H)		27.21" × 24.49" × 41.34" 691 × 621.8 × 1,050 mm	
Weight		Approx. 116.9 lbs. / Approx. 53 kg	
Space Required (W × D) (When pulling the tray)		31.9" × 24.49" 810 × 621.8 mm	

100-sheet Staple Finisher

Item		Description	
Number of Trays		2 trays	
Paper Size (80 g/m²)	Tray A (Non-Stapling)	A3, B4, B5-R, 216×340 mm, SRA3, Ledger, Legal, Executive, 12×18", Oficio II, Folio, 8K: Height 227 mm (Equivalent to 1,500 sheets) A4-R, A4, B5, Letter-R, Letter, 16K-R, 16K: Height 512 mm (Equivalent to 4,000 sheets) A5-R, Statement-R: Height 91 mm (Equivalent to 500 sheets)	
	Tray B	A3, A4-R, A4, A5-R, A6-R, B4, B5-R, B5, B6-R, 216×340 mm, SRA3, Ledger, Letter-R, Letter, Legal, Statement-R, Executive, 12×18", Oficio II, Folio, 8K, 16K-R, 16K, ISO B5, Envelope C4, Cardstock, Oufuku hagaki (Return postcard), Youkei 4, Youkei 2: Height 45 mm (Equivalent to 200 sheets)	
	Tray C	A4, B5, Letter, 16K: 50 sheets	
Supported Paper Weight		52 to 300 g/m ² (106 to 300 g/m ² : cover only)	
Stapling	Maximum Number	A3, B4, 216×340 mm, Ledger, Legal, 12×18", Oficio II, 8K	50 sheets (52 to 90 g/m ²) 35 sheets (91 to 105 g/m ²) 2 cover sheet only (106 to 300 g/m ²)
		A4-R, A4, B5-R, B5, Letter-R, Letter, 16K-R, 16K	100 sheets (52 to 90 g/m ²) 70 sheets (91 to 105 g/m ²) 2 cover sheet only (106 to 300 g/m ²)
	Media types	Plain, Transparency (OHP film), Preprinted, Bond, Recycled, Thin, Vellum, Letterhead, Color, Prepunched, Thick, Coated, High Quality, Index tab sheets, Custom 1 to 8	
Dimensions (W × D × H) (When storing the tray)		27.21" × 24.49" × 41.34" 691 × 621.8 × 1,050 mm	
Weight		Approx. 121.3 lbs. / Approx. 55 kg	
Space Required (W × D) (When pulling the tray)		31.9" × 24.49" 810 × 621.8 mm	

Punch Unit (For Finisher)

Item			Description
Paper Size	Inch	2 Hole	A3, A4-R, A4, A5-R, B4, B5-R, B5, Ledger, Letter-R, Letter, Legal, Statement-R, 13"×19.2", 13"×19", SRA3, 12×18", Folio, 8K, 16K, 16K-R
		3 Hole	A3, A4, Letter, Ledger, 13"×19.2", 13"×19", 12×18", 8K, 16K
	cm	2 Hole	A3, A4-R, A4, A5-R, B4, B5-R, B5, Ledger, Letter-R, Letter, Legal, Statement-R, 12×18", Folio, 8K, 16K, 16K-R
		4 Hole	A3, A4, Letter, Ledger, 13"×19.2", 13"×19", 12×18", 8K, 16K
Paper Weight			52 - 300 g/m ²
Media types			Plain, Rough, Vellum, Thin, Preprinted, Bond, Recycled, Letterhead, Color, Thick, Coated, High Quality, Custom 1 to 8

Mailbox (For Finisher)

Item	Description
Number of Trays	7 trays
Paper Size (80 g/m²)	A3, B4, Folio, Ledger, Legal: 50 sheets A4-R, A4, A5-R, B5-R, B5, 216×340 mm, Letter-R, Letter, Statement-R, Executive, Oficio II, 16K-R, 16K: 100 sheets
Dimensions (W × D × H)	15.20" × 19.49" × 21.26" 386 x 495 x 540 mm
Weight	Approx. 22.1 lbs. / Approx. 10 kg

Folding Unit (For Finisher)

Item	Description	
Sizes	Bi-Fold	A3, B4, A4-R, Ledger, Legal, Letter-R, Oficio II, 8K
	Saddle Stitch	A3, B4, A4-R, Ledger, Letter-R, Legal, Oficio II, 8K
	Tri-Fold	A4-R, Letter-R
Number of Sheets	Bi-Fold	5 sheets (52 to 90 g/m ²) 3 sheets (91 to 105 g/m ²) 1 sheet (106 to 256 g/m ²)
	Saddle Stitch	20 sheets (52 to 90 g/m ²) 13 sheets (91 to 105 g/m ²) 1 cover sheet only (106 g/m ² or heavier)
	Tri-Fold	5 sheets (52 to 90 g/m ²) 3 sheets (91 to 105 g/m ²)
Maximum Number for Storage (80 g/m²)	Bi-Fold	5 sheets or less per set: 20 sets 6 to 10 sheets per set: 10 sets 11 to 20 sheets per set: 10 sets
	Saddle Stitch	5 sheets or less per set: 30 sets 6 to 10 sheets per set: 20 sets 11 to 20 sheets per set: 10 sets
	Tri-Fold	1 sheet per set: 50 sets 2 to 5 sheets per set: 25 sets
Media types	Bi-Fold	Plain, Recycled, Preprinted, Bond, Color, Prepunched, Letterhead, Thick, Coated, High Quality, Custom 1 to 8
	Saddle Stitch	Plain, Recycled, Preprinted, Bond, Color, Prepunched, Letterhead, Thick, Coated, High Quality, Custom 1 to 8
	Tri-Fold	Plain, Recycled, Preprinted, Bond, Color, Prepunched, Letterhead, Coated, High Quality, Custom 1 to 8

Z-Fold (For Finisher)

Item	Description	
Sizes	Engineering Fold (Half Z-Fold)	A3, B4, A4R, 11×17, 8.5×14, 8.5×11R, 8K
	Bi-Fold	A3, B4, A4, A4R, B5R, 11×17, 8.5×14, 8.5×11, 8.5×11R, 8K, 12×18, 13×19, 13×19.2, SRA3
	Tri-Fold	A3, A4R, B4, 11×17, 8.5×14, 8.5×11R
	Z-Fold	A3, A4R, B4, 11×17, 8.5×14, 8.5×11R
Number of Sheets	Engineering Fold (Half Z-Fold)	1 sheet
	Bi-Fold	
	Tri-Fold	
	Z-Fold	
Paper Weight	Engineering Fold (Half Z-Fold)	64~105 g/m ²
	Bi-Fold	
	Tri-Fold	
	Z-Fold	

Banner Tray

Item	Description
Max. number of sheets	10 sheets (Multipurpose tray)
Paper length	210 to 304.8 mm (8.26" to 12")
Paper width	Max. 1,220.0 mm (48.03")
Paper Type	Paper weight: 136 to 163 g/m ² Paper type: Heavy 2
Dimensions (W × D × H)	15.78" × 15.67" × 7.63" 400.6 × 397.8 × 193.6 mm
Weight	Approx. 1.2 lbs. / Approx. 0.5 kg

Inserter Tray (For Finisher)

Item	Description
Number of Trays	2 tray
Paper Size	A3, A4-R, A4, A5-R, B4, B5-R, B5, Folio, SRA3, 13"×19.2", 13"×19", Computer Form, Ledger, Letter-R, Letter, Legal, Statement, 12×18", Executive, Oficio II, 8K, 16K, 16K-R, ISO B5, Custom 1~4 (140 × 210 ~ 330 × 487 mm)
Paper Type	Plain, Thin, Vellum, Recycled, Preprinted, Bond, Color, Prepunched, Letterhead, Thick, High Quality, Index Tab Dividers, Custom 1-8
Dimensions (W × D × H)	22.25" × 23.43" × 11.30" 565 × 595 × 287 mm
Weight	Approx. 37.5 lbs. / Approx. 17 kg



NOTE

Consult your dealer or service representative for recommended paper types.

Backing up your data

If the SSD, HDD, or memory of this machine installed in the machine failed for any reason, the files in the Custom box, fax received data and various settings saved there will be deleted and cannot be restored. To prevent erasing data, make regular backups as follows.

Backing up your data using KYOCERA Net Viewer

Use KYOCERA Net Viewer to save the following data registered in this machine to your PC regularly.

- System Settings
- Network Settings
- User List
- Address Book
- Custom Box Settings (Except for the file in the Custom Box)

➔ [Migrating the Address Book \(page 2-80\)](#)

Backing up your data using Command Center RX

Use Command Center RX to save the data saved in the Custom Box and Fax Box to your PC regularly. This subsection describes the procedure for backing up the data in the Custom Box. You can back up the fax box using the same procedure.

1 Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
Click in the following order to check the machine's IP address and the host name.
[Device Information] in the home screen > [Identification/Wired Network]
- 3 Click the number or name of Custom Box which stores the documents.

2 Download the documents.

- 1 Select the document data you want to download to your computer.
Only one document data can be downloaded at a time.
- 2 Click [Download] icon. The selected file is shown in "Selected Files".
- 3 Specify [Color Selection] and [File Format] as necessary.
- 4 Click [Download].

Backing up your date using USB Drive

You can copy the data saved in the Custom Box and FAX Box to a USB drive. You can save multiple document data at once.

➔ [Copying Documents in Custom Box to USB Drive \(page 5-65\)](#)

Functions List of Security Quick Setup

The functions configured in each level of Security Quick Setup are as follows. After selecting the security level, configure the security function according to your operating environment.

TLS

Level 1	Level 2	Level 3
On	On	On

Serverside Settings

Can only be set with Command Center RX.

TLS Version

Level 1	Level 2	Level 3
TLS1.2, TLS1.3	TLS1.2, TLS1.3	TLS1.2, TLS1.3

Effective Encryption

Level 1	Level 2	Level 3
AES, AES-GCM, CHACHA20/ POLY1305	AES-GCM, CHACHA20/POLY1305	AES-GCM, CHACHA20/POLY1305

Hash

Level 1	Level 2	Level 3
SHA-2(256/384)	SHA-2(256/384)	SHA-2(256/384)

IPP Security

Level 1	Level 2	Level 3
Secure (IPPS)	Secure (IPPS)	Secure (IPPS)

HTTP Security

Level 1	Level 2	Level 3
Secure (HTTPS)	Secure (HTTPS)	Secure (HTTPS)

Enhanced WSD Security

Level 1	Level 2	Level 3
Secure (Enhanced WSD over TLS)	Secure (Enhanced WSD over TLS)	Secure (Enhanced WSD over TLS)

eSCL Security

Level 1	Level 2	Level 3
Secure (eSCL over TLS)	Secure (eSCL over TLS)	Secure (eSCL over TLS)

REST Security

Level 1	Level 2	Level 3
Secure Only (REST over TLS)	Secure Only (REST over TLS)	Secure Only (REST over TLS)

Clientside Settings

Can only be set with Command Center RX.

TLS Version

Level 1	Level 2	Level 3
TLS1.2, TLS1.3	TLS1.2, TLS1.3	TLS1.2, TLS1.3

Effective Encryption

Level 1	Level 2	Level 3
AES, AES-GCM, CHACHA20/ POLY1305	AES-GCM, CHACHA20/POLY1305	AES-GCM, CHACHA20/POLY1305

Hash

Level 1	Level 2	Level 3
SHA-2(256/384)	SHA-2(256/384)	SHA-2(256/384)

IPv4 Settings (Wired Network)

Can only be set with Command Center RX.

DNS over TLS

Level 1	Level 2	Level 3
Off	Auto	On

Certificate Auto Verification

Level 1	Level 2	Level 3
Validity Period	Validity Period	Validity Period

Hash

Level 1	Level 2	Level 3
SHA-2(256/384)	SHA-2(256/384)	SHA-2(256/384)

IPv4 Settings (Wireless Network)

Can only be set with Command Center RX.

DNS over TLS

Level 1	Level 2	Level 3
Off	Auto	On

Certificate Auto Verification

Level 1	Level 2	Level 3
Validity Period	Validity Period	Validity Period

Hash

Level 1	Level 2	Level 3
SHA-2(256/384)	SHA-2(256/384)	SHA-2(256/384)

IPv6 Settings (Wired Network)

Can only be set with Command Center RX.

DNS over TLS

Level 1	Level 2	Level 3
Off	Auto	On

Certificate Auto Verification

Level 1	Level 2	Level 3
Validity Period	Validity Period	Validity Period

Hash

Level 1	Level 2	Level 3
SHA-2(256/384)	SHA-2(256/384)	SHA-2(256/384)

IPv6 Settings (Wireless Network)

Can only be set with Command Center RX.

DNS over TLS

Level 1	Level 2	Level 3
Off	Auto	On

Certificate Auto Verification

Level 1	Level 2	Level 3
Validity Period	Validity Period	Validity Period

Hash

Level 1	Level 2	Level 3
SHA-2(256/384)	SHA-2(256/384)	SHA-2(256/384)

Send Protocols: FTP Client (Transmission)

Can only be set with Command Center RX.

Certificate Auto Verification

Level 1	Level 2	Level 3
Validity Period	_*1	_*1

*1 If you select [**Level 2**] or [**Level 3**] in "Security Quick Setup", this setting will disappear.

Hash

Level 1	Level 2	Level 3
SHA-2(256/384)	_*1	_*1

*1 If you select [**Level 2**] or [**Level 3**] in "Security Quick Setup", this setting will disappear.

Other Protocols: HTTP (Client)

Can only be set with Command Center RX.

Certificate Auto Verification

Level 1	Level 2	Level 3
Validity Period	Validity Period	Validity Period

Hash

Level 1	Level 2	Level 3
SHA-2(256/384)	SHA-2(256/384)	SHA-2(256/384)

Other Protocols: SOAP

Can only be set with Command Center RX.

Use Default Settings

Level 1	Level 2	Level 3
On	On	On

Other Protocols: LDAP

Can only be set with Command Center RX.

Use Default Settings

Level 1	Level 2	Level 3
Off	Off	Off

Send Protocols: SMTP (E-mail TX)

Can only be set with Command Center RX.

Certificate Auto Verification

Level 1	Level 2	Level 3
Validity Period	Validity Period	Validity Period

Hash

Level 1	Level 2	Level 3
SHA-2(256/384)	SHA-2(256/384)	SHA-2(256/384)

E-mail: POP3 User Settings

Can only be set with Command Center RX.

Certificate Auto Verification

Level 1	Level 2	Level 3
Validity Period	Validity Period	Validity Period

Hash

Level 1	Level 2	Level 3
SHA-2(256/384)	SHA-2(256/384)	SHA-2(256/384)

Print protocols

SMB Server Protocol

Level 1	Level 2	Level 3
Off	Off	Off

LPD

Level 1	Level 2	Level 3
On	On	Off

FTP Server (Reception)

Level 1	Level 2	Level 3
On	Off	Off

IPP

Level 1	Level 2	Level 3
On	Off	Off

IPP over TLS

Level 1	Level 2	Level 3
On	On	On

Raw

Level 1	Level 2	Level 3
On	On	Off

ThinPrint

Level 1	Level 2	Level 3
On	Off	Off

ThinPrint over TLS

Level 1	Level 2	Level 3
On	_ *1	_ *1

*1 If you select [Level 2] or [Level 3] in "Security Quick Setup", this setting will disappear.

WSD Print

Level 1	Level 2	Level 3
On	Off	Off

POP3 (E-mail RX)

Level 1	Level 2	Level 3
Off	Off	Off

Send Protocols**FTP Client (Transmission)**

Level 1	Level 2	Level 3
On	Off	Off

SMB

Level 1	Level 2	Level 3
On	On	Off

WSD Scan

Level 1	Level 2	Level 3
On	Off	Off

eSCL

Level 1	Level 2	Level 3
On	Off	Off

eSCL over TLS

Level 1	Level 2	Level 3
On	On	Off

Other Protocols**SNMPv1/v2c**

Level 1	Level 2	Level 3
On	On	Off

SNMPv3

Level 1	Level 2	Level 3
Off	Off	Off

HTTP

Level 1	Level 2	Level 3
On	Off	Off

HTTPS

Level 1	Level 2	Level 3
On	On	On

Enhanced WSD

Level 1	Level 2	Level 3
On	Off	Off

Enhanced WSD (TLS)

Level 1	Level 2	Level 3
On	On	On

LDAP

Level 1	Level 2	Level 3
Off	Off	Off

LLTD

Level 1	Level 2	Level 3
Off	Off	Off

REST

Level 1	Level 2	Level 3
On	Off	Off

REST over TLS

Level 1	Level 2	Level 3
On	On	On

VNC (RFB)

Level 1	Level 2	Level 3
Off	Off	Off

VNC (RFB) over TLS

Level 1	Level 2	Level 3
Off	Off	Off

Enhanced VNC (RFB) over TLS

Level 1	Level 2	Level 3
On	Off	Off

TCP/IP: Bonjour Settings**Bonjour**

Level 1	Level 2	Level 3
On	On	Off

Network Settings

Wi-Fi Direct Settings

Level 1	Level 2	Level 3
Off	Off	Off

Connectivity

Bluetooth Settings

Level 1	Level 2	Level 3
On	On	On

NFC

Level 1	Level 2	Level 3
Off	Off	Off

Interface Block

USB Host

Level 1	Level 2	Level 3
Unblock	Unblock	Block

USB Device

Level 1	Level 2	Level 3
Unblock	Unblock	Block

USB Drive

Level 1	Level 2	Level 3
Unblock	Unblock	Block

Optional Interface 1

Level 1	Level 2	Level 3
Unblock	Unblock	Block

Optional Interface 2

Level 1	Level 2	Level 3
Unblock	Unblock	Block

Energy Saver/Timer

Auto Panel Reset

Level 1	Level 2	Level 3
On	On	On

User Account Lockout Setting

Lockout

Level 1	Level 2	Level 3
On	On	On

Job Status/Job Logs Settings

Display Jobs Detail Status

Level 1	Level 2	Level 3
Show All	Show All	Hide All (Display only when Administrator)

Display Jobs Log

Level 1	Level 2	Level 3
Show All	Show All	Hide All (Display only when Administrator)

Display Fax Log

Level 1	Level 2	Level 3
Show All	Show All	Hide All (Display only when Administrator)

Edit Restriction

Address Book

Level 1	Level 2	Level 3
Off	Off	Administrator only

One-Touch Key

Level 1	Level 2	Level 3
Off	Off	Administrator only

Prevent Mis-sending Settings

Destination Check before Send

Level 1	Level 2	Level 3
On	On	On

Entry Check for New Dest.

Level 1	Level 2	Level 3
On	On	On

Destination Check on Selecting

Level 1	Level 2	Level 3
On	On	On

New Destination Entry

Level 1	Level 2	Level 3
Permit	Permit	Prohibit

New destination entry (fax)

Level 1	Level 2	Level 3
Permit	Permit	_*1

*1 If you select [Level 3] in "Security Quick Setup", this setting will disappear.

Recall Destination

Level 1	Level 2	Level 3
Prohibit	Prohibit	Prohibit

Broadcast

Level 1	Level 2	Level 3
Permit	Permit	Prohibit

Destination History

Level 1	Level 2	Level 3
Permit	Permit	Prohibit

History Settings

Login History

Level 1	Level 2	Level 3
Off	On	On

Device Log History

Level 1	Level 2	Level 3
Off	On	On

Secure Comm. Error Log

Level 1	Level 2	Level 3
Off	On	On

Glossary

Accessibility

The machine is designed featuring good accessibility even for the elderly and those who are physically challenged or visually impaired. The angle of the touch panel is adjustable.

Apple Talk

AppleTalk offers file sharing and printer sharing and it also enables you to utilize application software that is on another computer on the same AppleTalk network.

Auto Form Feed Timeout

During data transmission, the machine may sometimes have to wait until receiving the next data. This is the auto form feed timeout. When the preset timeout passes, the machine automatically prints output. However, no output is performed if the last page has no data to be printed.

Auto-IP

Auto-IP is a module that enables dynamic IPv4 addresses to be assigned to a device on startup. However, DHCP requires a DHCP server. Auto-IP is a server-less method of choosing an IP address. IP addresses between 169.254.0.0 to 169.254.255.255 are reserved for Auto-IP and assigned automatically.

Auto Paper Selection

A function to automatically select paper in the same size as originals when printing.

Auto Sleep

A mode designed for electrical power saving, activated when the machine is left unused or there is no data transfer for a specific period. In Sleep mode, power consumption is kept to a minimum.

Bonjour

Bonjour, also known as zero-configuration networking, is a service that automatically detects computers, devices and services on an IP network. Bonjour, because an industry-standard IP protocol is used, allows devices to automatically recognize each other without an IP address being specified or DNS server being set. Bonjour also sends and receives network packets by UDP port 5353. If a firewall is enabled, the user must check that UDP port 5353 is left open so that Bonjour will run correctly. Some firewalls are set up so as to reject only certain Bonjour packets. If Bonjour does not run stably, check the firewall settings and ensure that Bonjour is registered on the exceptions list and that Bonjour packets are accepted. If you install Bonjour on Windows XP Service Pack 2 or later, the Windows firewall will be set up correctly for Bonjour.

Custom Box

The Custom Box function stores print data for each individual user on the printer and allows the user to print single or multiple copies of the stored data later using the printer's operation panel.

Default Gateway

This indicates the device, such as a computer or router, that serves as the entrance/exit (gateway) for accessing computers outside the network that you are on. When no specific gateway is designated for a destination IP address, data is sent to the host designated as the Default Gateway.

DHCP (Dynamic Host Configuration Protocol)

Dynamic Host Configuration Protocol (DHCP) that automatically resolves IP addresses, subnet masks, and gateway addresses on a TCP/IP network. DHCP minimizes the load of network management employing a large number of client computers because it relieves individual clients including printers from the IP address being assigned.

DHCP (IPv6)

DHCP (IPv6) is the next-generation of the Internet's Dynamic Host Configuration Protocol and supports IPv6. It extends the BOOTP startup protocol that defines the protocols used for transferring configuration information to hosts on the network. DHCP (IPv6) permits the DHCP server to use its expanded functionality to send configuration parameters to an IPv6 node. Because the network addresses that can be used are allocated automatically, the IPv6 node management workload is reduced in systems where the administrator has to exercise close control over IP address allocation.

dpi (dots per inch)

A unit for resolution, representing the number of dots printed per inch (25.4 mm).

EcoPrint Mode

A printing mode that helps save toner. Copies made in this mode are thus lighter than normal.

Emulation

The function to interpret and execute other printers' page description languages. The machine emulates operation of PCL6, KPD3 (PostScript 3 compatible).

Enhanced WSD

Kyocera's proprietary web services.

FTP (File Transfer Protocol)

A protocol to transfer files on the TCP/IP network, whether the Internet or an intranet. Along with HTTP and SMTP/POP, FTP is now frequently used on the Internet.

Grayscale

A computer color expression. Displayed images of this sort are typically composed of shades of gray, varying from black at the weakest intensity to white at the strongest, without any other colors. Gray levels are displayed in numerical levels: that is, white and black only for 1 bit; 256 gray levels (including white and black) for 8 bits; and 65,536 gray levels for 16 bits.

Help

If you are unsure of how to operate the machine, would like more information on its functions or are having problems getting the machine to work properly, select [?] (Help) to view a detailed explanation on the touch panel.

IP Address

An Internet protocol address is a unique number that represents a specific computer or related device on the network. The format of an IP address is four sets of numbers separated by dots, e.g. 192.168.110.171. Each number should be between 0 and 255.

IPP

IPP (Internet Printing Protocol) is a standard that uses TCP/IP networks such as the Internet to enable print jobs to be sent between remote computers and printers. IPP is an extension of the HTTP protocol used to view websites and enables printing to be carried out via routers on printers in remote locations. It also supports the HTTP authentication mechanisms along with TLS server and client authentication as well as encryption.

Job Box

The Job Box function stores print data on the printer and allows users to print single or multiple copies of the stored data later using the printer's operation panel.

KPDL (Kyocera Page Description Language)

Kyocera's PostScript page description language compatible with Adobe PostScript Level 3.

Multipurpose (MP) Tray

The paper supply tray on the front side of the machine. Use this tray instead of the cassettes when printing onto envelopes, Hagaki (Cardstock), transparencies, or labels.

NetBEUI (NetBIOS Extended User Interface)

An interface, developed by IBM in 1985, as an update from NetBIOS. It enables more advanced functions on smaller networks than other protocols such as TCP/IP, etc. It is not suitable for larger networks due to lack of routing capabilities to choose the most appropriate routes. NetBEUI has been adopted by IBM for its OS/2 and Microsoft for its Windows as a standard protocol for file sharing and printing services.

Outline font

With outline fonts, character outlines are represented with numerical expressions and fonts can be enlarged or reduced in different ways by changing the numeric values of those expressions. Printing remains clear even if you enlarge fonts, since the characters are defined with outlines represented with numerical expressions. You can specify the font size in steps of 0.25 points up to 999.75 points.

PDF/A

This is "ISO 19005-1. Document management - Electronic document file format for long-term preservation - Part 1: Use of PDF (PDF/A)", and is a file format based on PDF 1.4. It has been standardized as ISO 19005-1, and is a specialization of PDF, which has been mainly used for printing, for long-term storage. A new part, ISO 19005-2 (PDF/A-2), is currently being prepared.

POP3 (Post Office Protocol 3)

A standard protocol to receive E-mail from the server in which the mail is stored on the Internet or an intranet.

PostScript

A page description language developed by Adobe Systems. It enables flexible font functions and highly-functional graphics, allowing higher quality printing. The first version called Level 1 was launched in 1985, followed by Level 2 that enabled color printing and two-byte languages (e.g. Japanese) in 1990. In 1996, Level 3 was released as an update for the Internet access and PDF format as well as gradual improvements in implementation technologies.

PPM (prints per minute)

This indicates the number of A4 size printouts made in one minute.

Printer Driver

The software to enable you to print data created on any application software. The printer driver for the machine is downloaded from our website. Install the printer driver on the computer connected to the machine.

RA (Stateless)

The IPv6 router communicates (transmits) information such as the global address prefix using ICMPv6. This information is the Router Advertisement (RA).

ICMPv6 stands for Internet Control Message Protocol, and is a IPv6 standard defined in the RFC 2463 "Internet Control Message Protocol (ICMPv6) for the Internet Protocol Version 6 (IPv6) Specification".

RAM Disk

Using part of the printer's memory as a virtual disk, you can set any amount of memory from overall printer memory as a RAM disk in order to use features such as electronic sorting (shortening print time).

Send as E-mail

A function to send the image data stored in the machine as an E-mail attachment. E-mail addresses can be selected from the list or entered at each time.

SMTP (Simple Mail Transfer Protocol)

A protocol for E-mail transmission over the Internet or an intranet. It is used for transferring mail between mail servers as well as for sending mail from clients to their servers.

Status Page

The page lists machine conditions, such as the memory capacity, total number of prints and scans, and paper source settings.

Subnet Mask

The subnet mask is a way of augmenting the network address section of an IP address.

A subnet mask represents all network address sections as 1 and all host address sections as 0. The number of bits in the prefix indicates the length of the network address. The term "prefix" refers to something added to the beginning and, in this context, indicates the first section of the IP address. When an IP address is written, the length of the network address is indicated by the prefix length after a forward slash (/). For example, "24" in the address "133.210.2.0/24". In this way, "133.210.2.0/24" denotes the IP address "133.210.2.0" with a 24-bit prefix (network section). This new network address section (originally part of the host address) made possible by the subnet mask is referred to as the subnet address. When you enter the subnet mask, be sure to set the "DHCP" setting to "Off".

TCP/IP (Transmission Control Protocol/Internet Protocol)

TCP/IP is a suite of protocols designed to define the way computers and other devices communicate with each other over a network.

TCP/IP (IPv6)

TCP/IP (IPv6) is based on the current Internet protocol, TCP/IP (IPv4). IPv6 is the next-generation Internet protocol and expands the available address space, which resolves the problem of the lack of addresses under IPv4, while also introducing other improvements such as additional security functionality and the capacity to prioritize data transmission.

TWAIN (Technology Without An Interesting Name)

A technical specification for connecting scanners, digital cameras, and other image equipment to computers. The TWAIN compatible devices enable you to process image data on any relevant application software. TWAIN is adopted on a large amount of graphic software (e.g. Adobe Photoshop) and OCR software.

USB (Universal Serial Bus) 2.0

A USB interface standard for Hi-Speed USB 2.0. The maximum transfer rate is 480 Mbps. This machine is equipped with USB 2.0 for high-speed data transfer.

WIA (Windows Imaging Acquisition)

A function to import images supported after Windows Me/XP from digital cameras and other peripheral devices. This function replaces what TWAIN used to do. The feature is provided as a part of Windows functions and improves ease of operation, so that you import images directly to My Computer without using any application.

WPS (Wi-Fi Protected Setup)

WPS is a network security standard created by Wi-Fi Alliance, to make it easy to connect with the wireless devices and set up the Wi-Fi Protected Access. The WPS-supported services can connect to the wireless access points by pushing a button or entering passphrases.

Index

Numerics

- 100-sheet Staple Finisher 11-4
- 2-sided/Book Original 6-75
- 65-sheet Staple Finisher 11-4

A

- Accessibility 11-46
- Accessibility Functions 2-29
- Address Book 3-59
 - Adding 3-59, 3-67
 - Contact 3-59, 3-69
 - Deleting 3-66, 3-76
 - Editing and Deleting 3-65, 3-75
 - Group 3-64, 3-74
- Adjustment/Maintenance 8-92
 - Correct Paper Curl 8-94
 - Image Adjustment 8-92
 - Others 8-95
- AirPrint 4-19
- AppleTalk 11-46
- Application 5-10
- Applications 11-7
- Auto Detect Original Size 8-12
- Auto Drum Refresh 8-94
- Auto Error Clear 8-26
- Auto Form Feed Timeout 11-46
- Auto Image Rotation 6-70
 - Default 8-37
- Auto Panel Reset 8-8
- Auto Paper Selection 11-46
- Auto Sleep 2-46, 11-46
- Auto-IP 11-46
 - Settings 8-60, 8-62
- Automatic 2-Sided Print Function 1-13

B

- Background Density Adjustment 6-67, 8-92
 - Default 8-37, 8-39
- Backing up your data 11-32
- Banner Tray 11-4
 - Using 4-15
- Bates Stamp 6-61
- Bluetooth Settings 8-74
- Bonjour 11-46
 - Settings 8-68
- Booklet 6-43
- Border Erase 6-41
- Border Erase (Copy) 8-37
- Border Erase/Full Scan (Fax) 8-39
- Border Erase/Full Scan (Send/Store) 8-39

C

- Cables 2-6
- Calibration by Mediatype 8-94
- Canceled before Sending 8-29
- Card Authentication Kit 11-6

- Cassette
 - Loading Envelopes or Cardstock 3-7, 3-23
 - Loading Paper 3-4
 - Paper Size and Media Type 3-27
- Cassette 1 2-2
- Cassette 1 (to 4) Settings 3-27, 8-14
- Cassette 2 2-2
- Cassette 3 2-2
- Cassette 4 2-2
- Cassette 5 2-5
- Cassette Settings 3-27
- Centering 6-40
- Character Entry Method 11-9
- Checking the CO2 Emission Chart 7-17
- Checking the Counter 2-65
- Checking the Remaining Amount of Toner 7-16, 7-17
- Cleaning 10-2
 - Document Processor 10-2
 - Glass Platen 10-2
 - Slit Glass 10-3
- Cleaning Cloth Compartment 2-2
- Clear Set. after Job Started 8-35
- Clear Settings after Job Started 8-24
- CO2 Emission Chart 8-56
- Coated Paper 11-19
- Collate/Offset 6-29
 - Default 8-37
- Color
 - Calibration by Mediatype 8-94
 - Saturation 6-68
- Color Selection 6-66
 - Default 8-39
- Colored Paper 11-19
- Combine 6-38
- Command Center RX 2-69
- Communication Protocol
 - Protocol Settings 8-68
- Confidential Document Detection Setting 8-83
- Connecting
 - LAN Cable 2-8
 - Power Cable 2-9
 - USB cable 2-9
- Connection Method 2-6
- Connectivity 8-74
- Continuous Scan 6-70
 - Default 8-37, 8-39
- Contrast 6-69, 8-92
- Control Section of the Finisher 2-5
- Conventions Used in This Guide xxvii
- Copy 5-15
- Copy Settings
 - Auto Image Rotation Action 8-38
 - Original Size of Undetected Original 8-38
 - Paper Size for Small Original 8-38
- Copy Speed 11-23
- Copy tray 11-5

Counting the Number of Pages Printed

- Count by Paper Size [9-40](#)
- Counter [2-65](#)
- Each Job Account [9-42](#)
- Print Accounting Report [9-43](#)
- Total Accounting [9-42](#)

Cover [6-51](#)

Create Department Address Book [3-67](#)

Custom Box [11-46](#)

- Deleting Documents [5-67](#)
- Editing and Deleting Custom Box [5-59](#)
- Printing Documents [5-61](#)
- Send [5-63](#)
- Storing Documents [5-60](#), [5-62](#)

Custom Original Size [8-13](#)

Custom Paper Settings [8-17](#)

D

Data Overwrite Method [8-80](#)

Data Sanitization [8-79](#)

Data Security [8-78](#)

Date Format [8-8](#)

Date/Time [8-7](#)

- Date Format [8-8](#)
- Date/Time [8-7](#)
- Time Zone [8-8](#)

Default

- 2-sided/Book Original [8-41](#)
- Auto % Priority [8-38](#)
- Auto Image Rotation (Copy) [8-37](#)
- Background Density Adj. (Copy) [8-37](#)
- Background Density Adj. (Send/Store) [8-39](#)
- Border Erase Default [8-35](#)
- Border Erase to Back Page [8-35](#)
- Clear Settings after Job Started [8-35](#)
- Collate/Offset [8-37](#)
- Color Selection (Send/Store) [8-39](#)
- Color TIFF Compression [8-40](#)
- Color Type [8-39](#)
- Continuous Scan (Copy) [8-37](#)
- Continuous Scan (Fax) [8-39](#)
- Continuous Scan (Send/Store) [8-39](#)
- DP Read Action [8-35](#)
- Duplex [8-38](#)
- EcoPrint [8-37](#)
- Email Subject/Body [8-40](#)
- Erase Shadowed Areas (Copy) [8-38](#)
- Erase Shadowed Areas (Send) [8-40](#)
- Erase Shadowed Areas (Store) [8-41](#)
- Fax TX Resolution [8-39](#)
- File Format [8-39](#)
- File Name Entry [8-35](#)
- File Separation [8-40](#)
- High Comp. PDF Image [8-40](#)
- iFax Subject/Body [8-40](#)
- Image Quality (File Format) [8-40](#)
- JPEG/TIFF Print [8-37](#)
- Margin [8-37](#)
- OCR Output Format [8-40](#)
- OCR Text Recognition [8-40](#)
- OCR Text Recognition Action [8-40](#)
- Org. Image (Send/Store) [8-39](#)
- Original Image (Copy) [8-37](#)
- Original Orientation (Copy) [8-36](#)
- Original Orientation(Send/Store) [8-39](#)
- PDF/A [8-40](#)
- Prevent Bleed-through (Copy) [8-37](#)
- Prevent Bleed-through (Send/Store) [8-39](#)
- Primary OCR Language [8-40](#)
- Repeat Copy [8-37](#)
- Reserve Next Priority [8-38](#)
- Scan Resolution [8-39](#)
- Skip Blank Page (Copy) [8-37](#)
- Skip Blank Page (Send/Store) [8-39](#)
- System Stamp [8-35](#)
- Toner Save Level (EcoPrint) [8-37](#)
- XPS Fit to Page [8-37](#)
- Zoom [8-35](#)

Default Gateway [11-46](#)

- Settings [8-60](#), [8-62](#)

Default Screen [8-10](#)

Delete after Printed [6-88](#)

Delete after Transmitted [6-88](#)

Density [6-64](#), [8-92](#)

- Destination
 - Adding a Destination 3-59, 3-67
 - Address Book 5-43
 - Check before Send 8-41
 - Checking and Editing 5-48
 - Confirmation Screen of Destinations 5-48
 - Destination Check on Selecting 8-41
 - Entry Check for New Dest. 8-41
 - Multi Sending 5-38
 - Narrow Down 8-44
 - One Touch Key 3-77
 - Primary Address Book 8-45
 - Sort 8-44
 - Device Information 7-13
 - Device Security Settings 8-77
 - Administrator Authentication on Firm Update 8-77
 - Job Status/Job Logs Settings 8-77
 - Remote Printing 8-77
 - Software Verification 8-77
 - Unusable Time 8-77
 - Device Settings 8-7
 - Error Handling 8-25
 - Function Key Assignment 8-24
 - Keyboard 8-7
 - Language/System of Units 8-7
 - Numeric Keypad 8-7
 - Operation Assist 8-24
 - Original/Scan Settings 8-12
 - Paper Feeding 3-27, 8-14
 - Paper Output 8-23
 - Sound 8-11
 - Toner Settings 8-27
 - Device Status Notification 8-29
 - Low Toner Alert Level 8-29
 - DHCP 11-47
 - Settings 8-60, 8-62
 - DHCP (IPv6) 11-47
 - Settings 8-61, 8-63
 - Different Width Originals 8-13
 - Digital Signature Email 6-87
 - Direct Printing from Web 8-52
 - Display Brightness 8-10
 - Display Settings 8-10
 - Default Screen 8-10
 - Display Brightness 8-10
 - Quick Setup Registration (Box Print) 8-11
 - Quick Setup Registration (Copy) 8-10
 - Quick Setup Registration (Send) 8-10
 - Quick Setup Registration (Sending from Box) 8-11
 - Quick Setup Registration (Storing in Box) 8-10
 - Show Power Off Message 8-10
 - Wallpaper 8-10
 - Disposing of the Punch Waste 10-17
 - Disposing of the Staple Waste (100-sheet Staple Finisher) 10-15
 - DNS over TLS 8-60, 8-61, 8-62, 8-63
 - DNS Server Address
 - Settings 8-60, 8-61, 8-62, 8-63
 - Document Box
 - Basic Operation 5-53
 - Custom Box 5-51
 - Job Box 4-20, 5-51
 - Removable Memory Box 5-51
 - Document Processor 2-2
 - Loading Originals 5-4
 - Originals Not Supported by the Document Processor 5-4
 - Originals Supported by the Document Processor 5-4
 - Part Names 2-2
 - Document Table 11-5
 - Domain Name
 - Settings 8-62, 8-63
 - DP Read Action 8-35
 - dpi 11-47
 - Duplex 6-48
- ## E
- EcoPrint 6-66, 11-47
 - Default 8-37
 - Printer 8-50
 - Edit Destination
 - Address Book 3-67
 - Common Address Book 3-59
 - Contact 3-59, 3-69
 - Group 3-64, 3-74
 - One Touch Key 3-77
 - E-mail
 - POP3 8-43
 - SMTP (E-mail TX) 8-43
 - Email 8-29
 - Email Encrypted TX 6-86
 - E-mail Settings 2-73
 - E-mail Subject/Body 6-85
 - Email Subject/Body
 - Default 8-40
 - Email/Folder 8-29
 - Emulation 11-47
 - Selection 8-50
 - Emulation Upgrade Kit 11-6
 - Encrypted PDF Password 6-89
 - Energy Saver Recovery Level 2-47, 8-9
 - Energy Saver/Timer 8-8
 - Auto Panel Reset 8-8
 - EnergySaver RecoveryLevel 8-9
 - Interrupt Clear Timer 8-10
 - Low Power Timer 8-8
 - Panel Reset Timer 8-8
 - Ping Timeout 8-10
 - Power Off Rule 8-9
 - Power Off Timer 8-9
 - Sleep Level 8-8
 - Sleep Rules 8-8
 - Sleep Timer 8-8
 - Weekly Timer Settings 8-9
 - Energy Saving Control Function 1-13
 - Energy Star (ENERGY STAR®) Program 1-13

- Enhanced VNC over TLS
 - Protocol Settings [8-67](#)
 - Enhanced WSD [11-47](#)
 - Protocol Settings [8-66](#)
 - TWAIN/WIA [8-55](#)
 - Enhanced WSD over SSL
 - TWAIN/WIA [8-56](#)
 - Enhanced WSD over TLS
 - Protocol Settings [8-66](#)
 - Enlarged Display [2-29](#)
 - Entering Numbers [2-26](#)
 - Entry
 - File Name [6-72](#)
 - Subject [6-85](#)
 - Envelope Feed Guide [3-7](#)
 - Envelopes [11-18](#)
 - Environment [1-3](#)
 - Erase Colors [6-69](#)
 - Erase Shadowed Areas [6-43](#)
 - Error Handling [8-25](#)
 - Auto Error Clear [8-26](#)
 - Continue or Cancel Error Job [8-26](#)
 - Duplexing Error [8-25](#)
 - Error Job Skip [8-26](#)
 - Finished Pages Exceeded [8-25](#)
 - Finishing Error [8-25](#)
 - Inserted Paper Mismatch [8-25](#)
 - No Staple Error [8-25](#)
 - Paper Jam before Staple [8-26](#)
 - Paper Mismatch Error [8-25](#)
 - Punch Waste Full Error [8-25](#)
 - Staple Waste Full Error [8-26](#)
 - eSCL
 - Protocol Settings [8-66](#)
 - eSCL over TLS
 - Protocol Settings [8-67](#)
- F**
- Favorites [5-7](#)
 - Deleting [5-9](#)
 - Editing [5-9](#)
 - Recalling [5-8](#)
 - Registering [5-8](#)
 - Fax [8-29](#)
 - Fax Communication Report [8-30](#)
 - FAX Kit [11-5](#)
 - FAX RX Result Report [8-29](#)
 - Fax Server [8-74](#)
 - FAX Server Send [5-40](#)
 - File
 - Format [6-77](#)
 - PDF [6-79](#)
 - Separation [6-84](#)
 - File Format [6-77](#)
 - Default [8-39](#)
 - File Management Utility Connection [5-35](#)
 - File Name Entry [6-72](#)
 - Default [8-35](#)
 - File Separation [6-84](#)
 - Default [8-40](#)
 - File Size Confirmation [6-88](#)
 - Finisher
 - Manual Staple [5-76](#)
 - Finisher Tray B [3-42](#)
 - Firmware [8-95](#)
 - Firmware Update [8-95](#)
 - First Copy Time [11-23](#)
 - First Print Time [11-24](#)
 - Fold [6-27](#)
 - Folding Tray [2-5](#)
 - Folding Unit [11-4](#)
 - Form Overlay
 - Storing a Form [5-69](#)
 - Front Cover [2-2](#)
 - FTP [11-47](#)
 - FTP Client (Transmission)
 - Protocol Settings [8-43, 8-64](#)
 - FTP Encrypted TX [6-86](#)
 - FTP Server (Reception)
 - Protocol Settings [8-64](#)
 - Function Key Assignment [2-19, 8-24](#)
 - Function Settings [8-35](#)
 - Address Book [8-44](#)
 - CO2 Emission Chart [8-56](#)
 - Copy/Print [8-41](#)
 - Document Box [8-52](#)
 - Email [8-43](#)
 - Fax Memory RX Box [8-53](#)
 - Fax/iFax [8-44](#)
 - Function Defaults [8-35](#)
 - Home [8-53](#)
 - Internet Browser [8-54](#)
 - Job Box [8-53](#)
 - Manual Staple [8-55](#)
 - One-Touch Key [8-45](#)
 - Printer [8-50](#)
 - RX/Forward Rules/Fax Box [8-49](#)
 - Send and Forward [8-45](#)
 - Send/Store [8-41](#)
 - Sending Job - Folder [8-43](#)
 - Status [8-54](#)
 - TWAIN/WIA [8-55](#)
 - WSD [8-44](#)
 - Functions List of Security Quick Setup [11-33](#)
- G**
- Glossary [11-46](#)
 - Grayscale [11-47](#)
 - Group Authorization Settings [9-17](#)
 - Group Authorization [9-17](#)
 - Group List [9-17](#)
 - Guest Authorization Settings [9-19](#)
 - Guest Authorization [9-19](#)
 - Guest Property [9-19](#)
 - Guides Provided with the Machine [XXV](#)
- H**
- Hagaki (Cardstock) [11-18](#)
 - Handles [2-2](#)
 - Hard Disk [11-6](#)

Hard Disk/SSD Initialization 8-78

Help 11-47

Help Screen 2-28

History Settings 8-31

Device Log History Settings 8-32

Login History Settings 8-32

Secure Comm. Error Log 8-33

Sending Log History 8-31

Home

Customize Desktop 2-16

Customize Taskbar 2-16

Wallpaper 2-16

Home Screen 2-14

Host Name 8-57, 8-69

HTTP

Protocol Settings 8-66

HTTPS

Protocol Settings 8-66

HyPAS Application 8-95

I

ID Card Copy/Scan 6-35

ID Card Settings

Additional Authentication 9-26

Keyboard Login 9-25

iFax

Protocol Settings 8-64

Image Adjustment

Auto Color Correction 8-93

Auto Drum Refresh 8-94

Background Density Adjustment 8-92

Calibration by Mediatype 8-94

Calibration Cycle 8-93

Contrast 8-92

Correcting Black Lines 8-93

Density 8-92

Sharpness Adjustment 8-92

Tone Curve Adjustment 8-94, 10-48

Image Preview at DP Jam 8-26

Image Repeat 6-57

Insert Sheets/Chapters 6-56

Insert tray 3-30, 8-16

Install

Macintosh 2-58

Software 2-51

Windows 2-52

Interface Block Setting 8-76

Internet Browser 8-54

Instructions for use 5-74

Internet FAX Kit 11-6

IP Address 11-47

Settings 8-60, 8-62

IP Filter (IPv4)

Settings 8-69

IP Filter (IPv6)

Settings 8-69

IPP 11-48

Protocol Settings 8-65

IPP over TLS

Protocol Settings 8-65

IPSec 8-69

J

Job

Available Status 7-2

Canceling 7-11

Checking History 7-9

Checking Status 7-2

Detailed Information 7-8

Detailed Information of Histories 7-10

Details of the Status Screens 7-3

Displaying History Screen 7-10

Displaying Status Screens 7-2

Pause and Resumption 7-11

Sending the Log History 7-10, 8-31

Job Accounting 9-29

Adding an Account 9-32

Apply Limit 9-45

Copy/Printer Count 9-46

Count by Paper Size 9-40

Counting the Number of Pages Printed 9-41

Default Counter Limit 9-39

Deleting an Account 9-34

Editing an Account 9-34

Enabling Job Accounting 9-31

FAX Driver 9-38

Login 9-44

Logout 9-44

Overview of Job Accounting 9-29

Print Accounting Report 9-43

Printing 9-35

Restricting the Use of the Machine 9-33

TWAIN 9-36

WIA 9-37

Job Accounting/Authentication

Authentication Security 9-4

Job Accounting 9-29

Unknown User Settings 9-47

User Login 9-2

Job Box 11-48

Deletion of Job Retention 8-53

Form for Form Overlay 5-69

Form Overlay 5-69

Private Print Box 4-21

Proof and Hold Box 4-25

Quick Copy Box 4-24

Quick Copy Job Retention 8-53

Repeat Copy Job Retention 8-53

Specifying the Job Box from a Computer and
Storing the Job 4-20

Stored Job Box 4-22

Universal Print 4-27

Job Finish Notice 6-71

Job Finish Notice Setting 8-29

JPEG/TIFF Print 6-90

Default 8-37

K

Keyboard 8-7

Keyboard Holder 11-5

Keyboard Layout 8-7
KPD L 11-48

L

Label 11-17
LAN Cable 2-6
 Connecting 2-8
LAN Interface 8-64
Language/System of Units 8-7
Large Capacity Feeder
 Loading Paper 3-11
LDAP
 Protocol Settings 8-66
Legal Information 1-11
Limited Use of This Product 1-10
Loading Originals 5-2
 Loading Originals in the Document Processor 5-4
 Placing Originals on the Platen 5-2
Loading Paper 10-9
Local Authorization 9-14
Login 2-30
Logout 2-31
Low Power Timer 8-8
Low Toner Alert 8-27
Lower Left Tray 2-2
LPD
 Protocol Settings 8-65

M

Mailbox 11-4
Management 9-1
Manual Setting (IPv6) 8-61, 8-63
Manual Staple 5-76, 8-55
Margin 6-40
 Default 8-37
Margin/Centering 6-40
Media Type Setting 8-18
Memo Page 6-55
Memory Diagnostics 8-95
Message Banner Print 8-51
Message Board Settings 8-30
Mirror Image 6-71
Mixed Size Originals 6-23
 Combinations 6-24
 Copy Size 6-25
Mixed Size Stapling 6-32
Monotype Imaging License Agreement 1-12
Mopria 4-19
Motion Sensor 2-44, 8-9
MP Tray Settings 3-29, 8-15
Multi Sending 5-38
Multipurpose Tray 2-2, 2-3, 11-48
 Loading Index Paper 3-17

N

Negative Image 6-71
NetBEUI 11-48
Network Interface 2-6
Network Interface Connector 2-4

Network Interface Kit 11-5
Network Settings 8-57
 Bonjour 8-68
 IP Filter (IPv4) 8-69
 IP Filter (IPv6) 8-69
 IPSec 8-69
 Ping 8-68
 Protocol Settings 8-64
 Proxy 8-57
 Restart Network 8-69
 Wi-Fi Direct 8-57
 Wi-Fi Settings 8-58
 Wired Network Settings 8-62

NFC

 Printing 4-19
 Settings 2-43, 8-74
Notice 1-2
Notification/Report 8-27
 Device Status Notification 8-29
 Fax Communication Report 8-30
 History Settings 8-31
 Message Board Settings 8-30
 Printing Report/List 8-27
 Result Report Settings 8-29
Numeric Keypad 8-7

O

Offset Documents by Job 8-23
Offset One Page Documents 8-23
One Touch Key
 Adding 3-77
 Editing and Deleting 3-78
Operation Assist 8-24
 Clear Settings after Job Started 8-24
 Orientation Confirmation 8-24
 Preset Limit 8-24
Operation Panel 2-2
Option
 100-sheet Staple Finisher 11-4
 65-sheet Staple Finisher 11-4
 Banner Tray 11-4
 Card Authentication Kit 11-6
 Copy tray 11-5
 Document Table 11-5
 Emulation Upgrade Kit 11-6
 FAX Kit 11-5
 Folding Unit 11-4
 Hard Disk 11-6
 Internet FAX Kit 11-6
 Keyboard Holder 11-5
 Mailbox 11-4
 Network Interface Kit 11-5
 Optional Numeric Keypad 11-5
 Overview 11-2
 Punch Unit 11-4
 Side Feeder (3,000-sheet) 11-4
 Side Feeder (4,000-sheet) 11-4
 ThinPrint Option 11-6
 Wireless Network Interface Kit 11-5
Option Interface Slot 2-4

- Optional Keyboard Type 8-7
 - Optional Network 8-69
 - Host Name 8-69
 - Restart Network 8-73
 - Wi-Fi Direct 8-70
 - Wired Network Settings 8-73
 - Wireless Network 8-71
 - Optional Numeric Keypad 11-5
 - Org. Image
 - Default 8-39
 - Orientation Confirmation 8-24
 - Original
 - Auto Detect 8-12
 - Custom Original Size 8-13
 - Size **xxix**
 - Original Eject Table 2-2
 - Original Image 6-64
 - Default 8-37
 - Original Loaded Indicator 2-2
 - Original Orientation 6-26
 - Default 8-36, 8-39
 - Original Size 6-20
 - Original Size Indicator Plates 2-2
 - Original Stopper 2-2, 5-6
 - Original Table 2-2
 - Original Width Guides 2-2
 - Original/Scan Settings 8-12
 - Auto Detect Original Size 8-12
 - Custom Original Size 8-13
 - Prevent Light Reflection 8-13
 - Outline font 11-48
- P**
- Page # 6-53
 - Panel Reset Timer 8-8
 - Paper
 - Appropriate Paper 11-13
 - Auto Paper Selection 8-22
 - Checking the Remaining Amount of Paper 7-16
 - Custom Paper Size 8-17
 - Default Paper Source 8-21
 - Loading Cardstock 3-7, 3-16, 3-23
 - Loading Envelopes 3-7, 3-16, 3-23
 - Loading in the Large Capacity Feeder 3-11
 - Loading in the Side Feeder 3-18, 3-20
 - Loading Index Paper 3-17
 - Loading Paper 3-2
 - Loading Paper in the Cassette 1 3-4
 - Paper Selection 8-21
 - Paper Source for Cover 8-22
 - Separator Paper Source 8-22
 - Show Paper Setup Message 8-21
 - Size and Media Type 11-12
 - Special Paper 11-16
 - Special Paper Action 8-22
 - Specifications 11-12
 - Paper Feed Mode 8-51
 - Paper Feed Settings 8-21
 - Paper Feeding 3-27, 8-14
 - Cassette 1 (to 4) Settings 3-27, 8-14
 - Custom Paper Settings 8-17
 - Inserter tray 3-30, 8-16
 - Media Type Setting 8-18
 - MP Tray Settings 3-29, 8-15
 - Paper Feed Settings 8-21
 - Show Paper Setup Message 8-21
 - Paper Jams 10-54
 - 100-sheet Staple Finisher (Inner) 10-84
 - 100-sheet Staple Finisher (Tray A) 10-86
 - 100-sheet Staple Finisher (Tray B) 10-90
 - 4,000-sheet Finisher (Tray C) 10-74
 - 65-sheet Staple Finisher (Inner) 10-84
 - 65-sheet Staple Finisher (Tray A) 10-86
 - 65-sheet Staple Finisher (Tray B) 10-90
 - Cassette 1 10-57
 - Cassette 2 10-59
 - Cassette 3 10-61
 - Cassette 4 10-63
 - Cassette 5 (3,000-sheet) 10-66
 - Cassette 5 (4,000-sheet) 10-67
 - Document Processor 10-78
 - Folding Tray (65-sheet Staple Finisher/100-sheet Staple Finisher) 10-101
 - Folding Unit (65-sheet Staple Finisher/100-sheet Staple Finisher) 10-94
 - Jam Location Indicators 10-54
 - Lower Left Tray 10-76
 - Mailbox 10-93
 - Multipurpose Tray 10-69
 - Right Cover 1 10-70
 - Right Cover 2 10-73
 - Right Tray 10-77
 - Upper Left Tray 10-74
 - Paper Length Guide 2-3, 3-4
 - Paper Output 8-23
 - Offset Documents by Job 8-23
 - Offset One Page Documents 8-23
 - Paper Selection 6-21
 - Paper Width Adjusting Tab 2-3
 - Paper Width Auxiliary Guides 2-3
 - Paper Width Guide 2-3, 3-5
 - Part Names 2-2
 - Password 8-58
 - PDF/A 11-48
 - PIN Login 9-27
 - Ping 8-68
 - Platen 2-2
 - POP3 11-48
 - PostScript 11-48
 - Power Cable
 - Connecting 2-9
 - Power Management 1-13
 - Power Off 2-10
 - Power Off Rule 8-9
 - Power Off Timer 2-47, 8-9
 - Power On 2-10
 - Power Switch 2-2
 - PPM 11-48

- Precautions for Use [1-4](#)
- Preprinted Paper [11-19](#)
- Preset Limit [8-24](#)
- Prevent Bleed-thru [6-68](#)
 - Default [8-37, 8-39](#)
- Prevent Light Reflection [8-13](#)
- Prevent Original Skewing [8-13](#)
- Primary Network (Client) [8-75](#)
- Print Report
 - Data Sanitization Report [8-29](#)
- Print Settings [4-2, 4-18](#)
- Printer
 - Copies [8-50](#)
 - CR Action [8-51](#)
 - Duplex [8-50](#)
 - EcoPrint [8-50](#)
 - Emulation [8-50](#)
 - Form Feed TimeOut [8-50](#)
 - Job Name [8-51](#)
 - KIR [8-52](#)
 - LF Action [8-51](#)
 - Message Banner Print [8-51](#)
 - MP Tray Priority [8-51](#)
 - Orientation [8-50](#)
 - Override A4/Letter [8-50](#)
 - Paper Feed Mode [8-51](#)
 - Print setting [4-2](#)
 - Printing Job Terminator [8-52](#)
 - Resolution [8-52](#)
 - Toner Save Level (EcoPrint) [8-50](#)
 - User Name [8-51](#)
 - Wide A4 [8-51](#)
- Printer Driver [11-49](#)
 - Changing the Default Printer Driver Settings [4-3](#)
 - Help [4-3](#)
- Printing Documents Stored in Removable USB Memory [5-71](#)
- Printing from PC [4-4](#)
 - Non-standard Sized Paper [4-6](#)
 - Standard Sized Paper [4-4](#)
- Printing Report/List [8-27](#)
 - Font List [8-28](#)
 - Network Status [8-27](#)
 - Optional Network Status [8-28](#)
 - Print Accounting Report [8-28](#)
 - Service Status [8-27](#)
 - Status Page [8-27](#)
- Printing Speed [11-24](#)
- Priority Override [6-72](#)
- Proof Copy [5-17](#)
- Protocol Settings [8-64](#)
- Punch [6-32](#)
- Punch Unit [11-4](#)

Q

- Quick Setup Registration (Box Print) [8-11](#)
- Quick Setup Registration (Copy) [8-10](#)
- Quick Setup Registration (Send) [8-10](#)
- Quick Setup Registration (Sending from Box) [8-11](#)
- Quick Setup Registration (Storing in Box) [8-10](#)

- Quick Setup Wizard [2-48](#)

R

- RA (Stateless) [11-49](#)
 - Settings [8-61, 8-63](#)
- RAM Disk [11-49](#)
- Raw
 - Protocol Settings [8-65](#)
- Recipient Format [8-29](#)
- Recycled Paper [11-19](#)
- Regarding Trade Names [1-11](#)
- Regular Maintenance [10-2](#)
 - Cleaning [10-2](#)
 - Disposing of the Punch Waste [10-17](#)
 - Loading Paper [10-9](#)
 - Replace the Waste Toner Box [10-7](#)
 - Toner Container Replacement [10-4](#)
- Remote Operation [10-26](#)
- Remote Printing [8-52](#)
- Repeat Copy
 - Default [8-37](#)
 - Printing [6-72](#)
 - Repeat Copy Job Retention [8-53](#)
- Replace the Waste Toner Box [10-7](#)
- Replacing Staples
 - 100-sheet Staple Finisher [10-11](#)
 - 65-sheet Staple Finisher [10-10](#)
 - Folding Unit [10-13](#)
- Reserve Next Priority [8-38](#)
- Resolution [6-84, 8-52, 11-24](#)
- Resource Saving - Paper [1-13](#)
- Responding to Messages [10-28](#)
- REST
 - Protocol Settings [8-67](#)
- REST over TLS
 - Protocol Settings [8-68](#)
- Restart Entire Device [8-75, 8-76](#)
- Restart Network [8-69, 8-73](#)
- Result Report Settings [8-29](#)
- Right Cover 1 [2-2](#)
- Right Cover 1 Lever [2-2](#)
- Right Cover 2 [2-3](#)
- Right Cover 2 Lever [2-3](#)
- Right Tray [2-3, 3-41](#)

S

- Safety Conventions in This Guide [1-2](#)
- Same Width Originals [8-13](#)
- Saturation [6-68](#)
- Saving Documents to USB Memory [5-72](#)
- Scan Resolution [6-84](#)
 - Default [8-39](#)
- Scan to Folder Setup Tool for SMB [3-54](#)
- Security Level [8-75](#)
- Security Precautions when Using Wireless LAN [1-10](#)
- Security Quick Setup [8-75](#)

- Security Settings 8-75
 - Authentication Security 8-90
 - Confidential Document Detection Setting 8-83
 - Data Security 8-78
 - Device Security Settings 8-77
 - Interface Block Setting 8-76
 - Network 8-91
 - System Stamp 8-85
 - Unknown User Settings 8-91
- Send and Forward
 - File format 8-47
 - PDF Encryption Functions 8-48
- Send and Print 6-85
 - Printing 6-85
 - Storing 6-85
- Send and Store 6-85
- Send as E-mail 5-19, 11-49
- Send Result Report 8-29
- Send to Folder (FTP) 5-19
- Send to Folder (SMB) 5-19
- Send/Store
 - Broadcast 8-41
 - Default Screen 8-41
 - Destination Check before Send 8-41
 - Destination Check on Selecting 8-41
 - Entry Check for New Dest. 8-41
 - New Destination Entry 8-41
 - Recall Destination 8-41
- Sending 5-19
 - Preparation for Sending a Document to a PC 3-44
- Sending Size 6-76
- Setting Date and Time 2-32
- Sharpness 6-67
- Sharpness Adjustment 8-92
- Shortcuts
 - Adding 5-13
 - Editing and Deleting Shortcuts 5-14
- Show Paper Setup Message 8-21
- Show Power Off Message 8-10
- Side Feeder (3,000-sheet) 11-4
 - Loading Paper 3-18
- Side Feeder (4,000-sheet) 11-4
 - Loading Paper 3-20
- Silent Mode 8-94
- Simple Login 2-31
- Simple Login Settings
 - Simple Login 9-22
 - Simple Login Setup 9-23
- Skip Blank Page 6-74
 - Default 8-37, 8-39
- Sleep 2-46
- Sleep Level 8-8
 - Energy Saver 8-8
 - Quick Recovery 8-8
- Sleep Rules 8-8
- Sleep Rules (models for Europe) 2-46
- Sleep Timer 8-8
- Slit Glass 2-2
- SMB Client (Transmission)
 - Protocol Settings 8-43, 8-64
- SMTP 11-49
- SMTP Auth and Sender Address 8-43
- SNMPv1/v2c
 - Protocol Settings 8-66
- SNMPv3
 - Protocol Settings 8-66
- Solving Malfunctions 10-19
- Sound 8-11
- Specifications 11-20
 - 100-sheet Staple Finisher 11-28
 - 65-sheet Staple Finisher 11-27
 - Banner Tray 11-30
 - Copy Functions 11-23
 - Document Processor 11-25
 - Folding Unit (For 4,000-sheet Finisher) 11-29
 - Insert tray 11-31
 - Machine 11-20
 - Mailbox (For 4,000-sheet Finisher) 11-29
 - Printer Functions 11-24
 - Punch Unit (For
 - 1,000-sheet/4,000-sheet/100-sheet Staple Finisher) 11-28
 - Scanner Functions 11-25
 - Side Feeder (3,000-sheet) 11-26
 - Side Feeder (3,500-sheet) 11-26
 - Z-Fold (For Finisher) 11-30
- Staple 6-30
- Staple Jam
 - 100-sheet Staple Finisher 10-107
 - 65-sheet Staple Finisher 10-105
 - Folding Unit (65-sheet Staple Finisher/ 100-sheet Staple Finisher) 10-110
- Staple/Punch 6-30
- Status Monitor 4-29
 - Accessing 4-29
 - Exiting 4-29
 - Notification Settings 4-32
- Status Page 11-49
- Status/Job Cancel 7-1
- Storing Size 6-89
- Subnet Mask 11-49
 - Settings 8-60, 8-62
- Supplies
 - Checking the Remaining Amount 7-16, 7-17
- Support Tray Section of the Multipurpose Tray 2-3
- Symbols 1-2
- System Initialization 8-95

- System Menu 8-2
 - Add/Delete Application 8-91
 - Adjustment/Maintenance 8-92
 - Date/Time 8-7
 - Device Settings 8-7
 - Display Settings 8-10
 - Energy Saver/Timer 8-8
 - Function Settings 8-35
 - Job Accounting/Authentication 8-91
 - Network Settings 8-57
 - Notification/Report 8-27
 - Operation Method 8-2
 - Quick Setup Wizard 2-48
 - Security Settings 8-75
- System Stamp 8-85
 - Default 8-35
- System/Network
 - Security Level 8-75
- T**
- TCP/IP 11-49
 - Settings 8-60, 8-62
- TCP/IP (IPv4)
 - Settings 2-33, 8-60, 8-62
- TCP/IP (IPv6) 11-47
 - Settings 8-61, 8-63
- Thick Paper 11-18
- Thin Print over TLS
 - Protocol Settings 8-65
- ThinPrint
 - Protocol Settings 8-65
- ThinPrint Option 11-6
- Time Zone 8-8
- TLS
 - Security Settings 8-91
- Tone 8-11
- Tone Curve Adjustment 8-94, 10-48
- Toner Container (Black) 2-4
- Toner Container Cover 2-4
- Toner Container Replacement 10-4
- Toner Settings 8-27
 - Low Toner Alert 8-27
- Touch Panel 2-12
- Transparencies 11-16
- Tray 1 to 7 2-5
- Tray A 2-5
- Tray B 2-5
- Tray C 2-5
- Troubleshooting 10-19
- TWAIN 11-50
 - Setting TWAIN Driver 2-62
- U**
- Universal Print 4-9
- Unknown User Settings
 - Unknown ID Job 9-47
 - User Property 9-48
- Upper Left Cover 2-2
- Upper Left Tray 2-2
- USB 11-50
 - USB Cable 2-6
 - Connecting 2-9
 - USB Drive
 - Printing 5-71
 - Remove 5-73
 - USB Interface 2-6
 - USB Interface Connector 2-4
 - USB Memory
 - Save 5-72
 - USB Memory Slot 2-2
 - USB Port 2-4
 - User Login Administration 9-2
 - Adding a User 9-6
 - Changing User Properties 9-8
 - Enabling User Login Administration 9-3
 - FAX Driver 9-13
 - Group Authorization Settings 9-17
 - Guest Authorization Settings 9-19
 - ID Card Settings 9-25
 - Local Authentication 9-14
 - Login 2-30
 - Logout 2-31
 - Obtain NW User Property 9-21
 - Overview of User Login Administration 9-2
 - Password Policy Settings 9-5
 - PIN Code Authentication 9-27
 - Printing 9-10
 - Server Settings 9-15
 - Simple Login Settings 9-22
 - TWAIN 9-11
 - User Account Lockout Setting 9-4
 - WIA 9-12
 - Using MultiCrop Scan 5-36
- V**
- VNC (RFB)
 - Protocol Settings 8-67
- VNC (RFB) over TLS
 - Protocol Settings 8-67
- W**
- Waste Toner Box 2-4
- Waste Toner Box Cover 2-4
- Weekly Timer Settings 2-47, 8-9
- White space 6-55
- WIA 11-50
 - Setting WIA Driver 2-64
- Wide A4 8-51
- Wi-Fi
 - Settings 2-35, 8-58
- Wi-Fi Direct
 - Printing 4-19
 - Settings 2-41, 8-57, 8-70
- Wireless Connection 1-9
- Wireless Network
 - Settings 2-35, 8-71
- Wireless Network Interface Kit 11-5
- WPS (Wi-Fi Protected Setup) 11-50
- WSD Print
 - Protocol Settings 8-44, 8-64

WSD Scan [5-33](#)

Protocol Settings [8-44](#), [8-64](#)

X

XPS Fit to Page [6-90](#)

Default [8-37](#)

Z

Zoom [6-36](#)

Default [8-35](#)

**QUALITY
CERTIFICATE**

This machine has passed
all quality controls and
final inspection.

For the Kyocera contact in your region, see Sales Sites sections here.
<https://www.kyoceradocumentsolutions.com/company/directory.html>